


NOTES:

- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

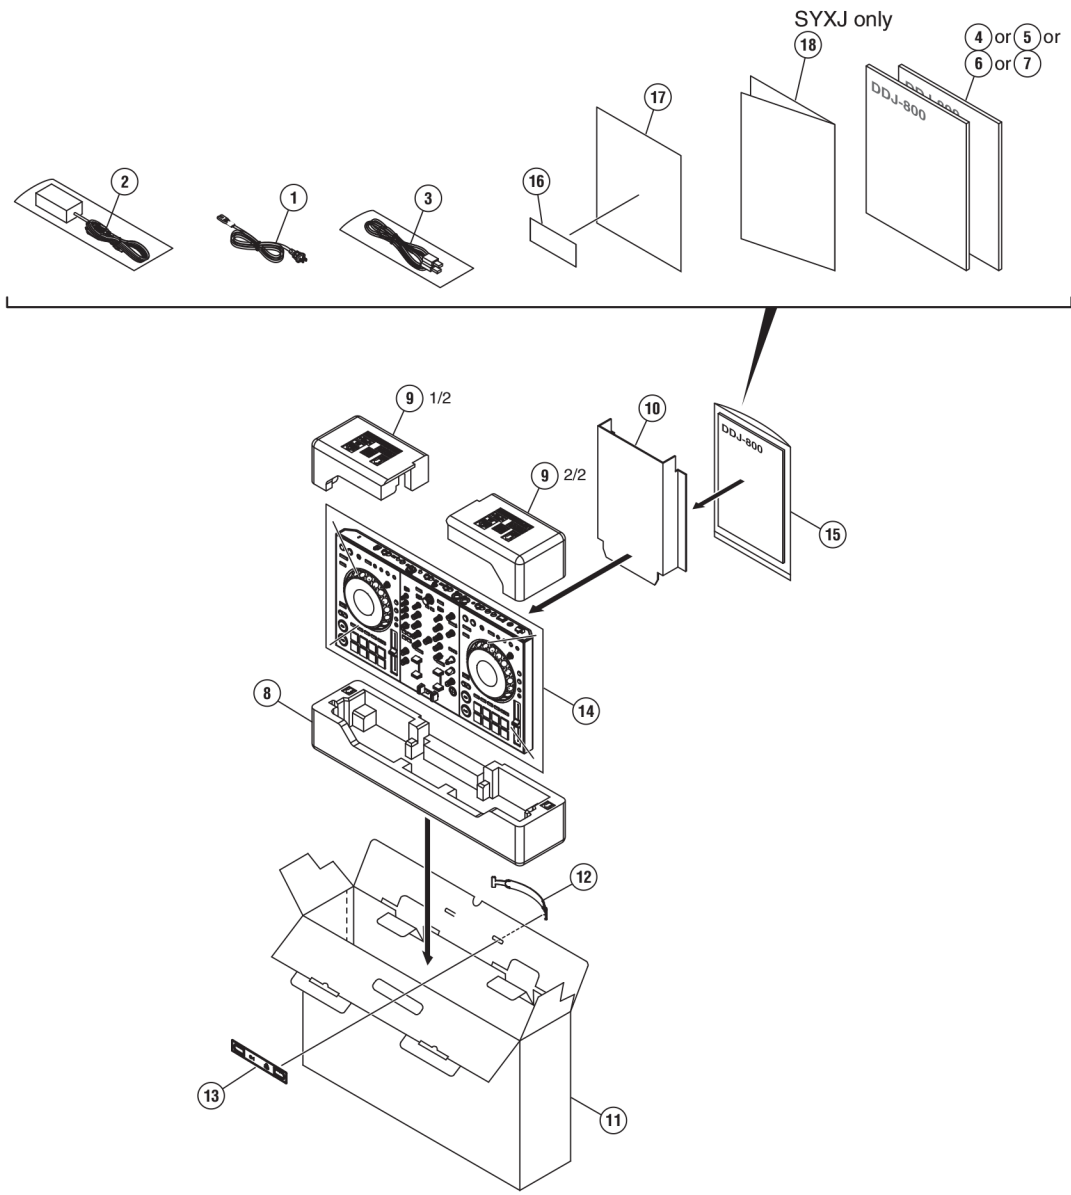

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
⚠	1 Power Cord	See Contrast table (2)	8	Packing Pad	DHA1989	
⚠	2 AC Adapter	See Contrast table (2)	9	Packing Pad	DHA1990	A
	3 USB Cable	DDE1150	10	Partition	DHC1106	
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)	11	Packing Case	See Contrast table (2)	
			12	Handle	DEC3783	
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Spacer	DEC3784	
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Packing Sheet	RHC1023	
	7 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP	15 Polyethylene Bag	AHG7117	
			NSP	16 rekordbox dj license key card	DXA2304	
			NSP	17 Leaflet	DRM1410	
			NSP	18 Warranty	See Contrast table (2)	B

(2) CONTRAST TABLE

DDJ-800/FWLPWXJ, SYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-800 /FWLPWXJ	DDJ-800 /SYXJ	DDJ-800 /UXJCB	DDJ-800 /XJCN	
⚠	1	Power Cord	ADG1154	ADG1154	XDG3052	ADG7079	
⚠	2	AC Adapter	DWR1578	DWR1576	DWR1576	DWR1578	C
	4	Operating Instructions (Quick Start Guide)(En, Es)	DRH1527	Not used	Not used	Not used	
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru)	Not used	DRH1526	Not used	Not used	
	6	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	Not used	DRH1525	Not used	
	7	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	Not used	DRH1529	
	11	Packing Case	DHG3662	DHG3662	DHG3662	DHG3663	
NSP	18	Warranty	Not used	DRY1270	Not used	Not used	

9.2 BOTTOM SECTION

A


B

C



D

E

F

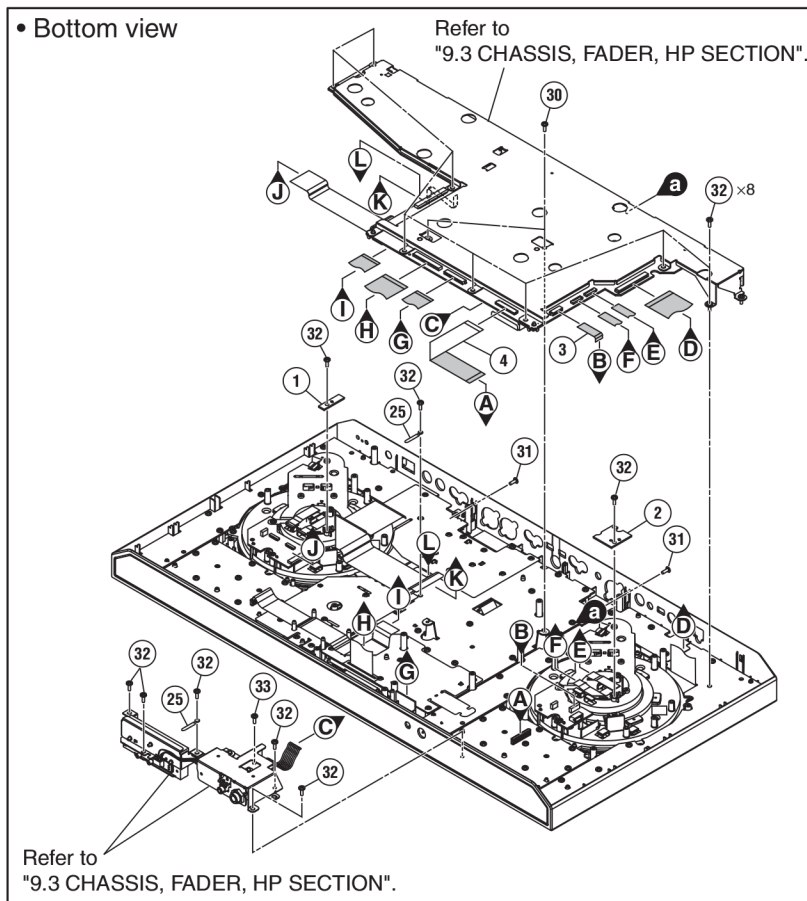

 Refer to "9.4 CONTROL PANEL (1/2) SECTION".

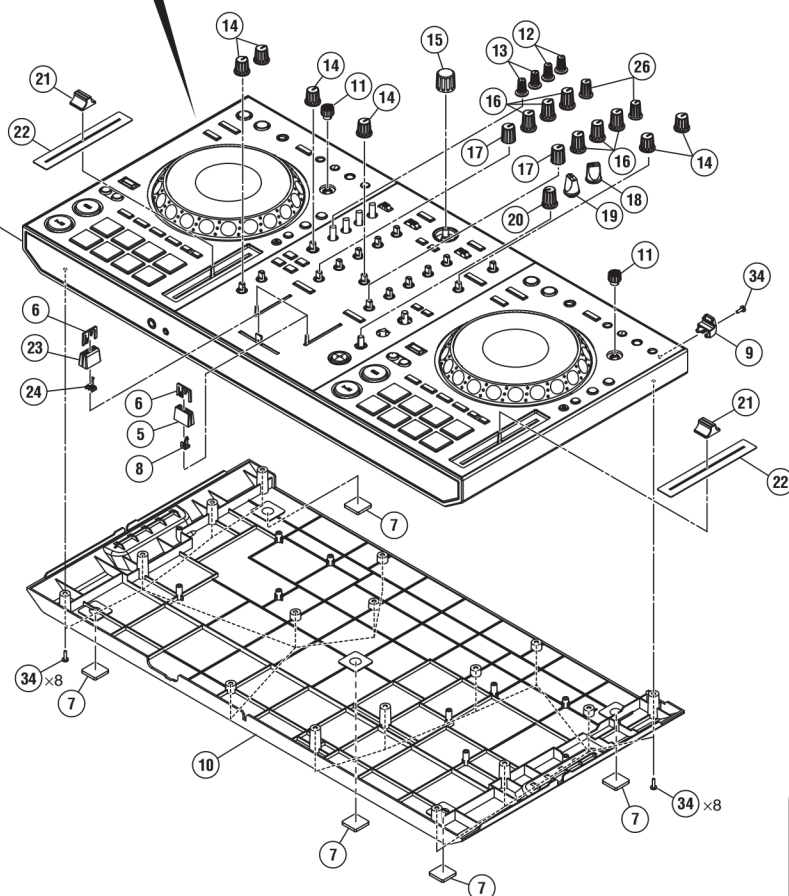

BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JOGH Assy	DWX4223	
2	JGLH Assy	DWX4224	A
3	FFC	DDD1888	
4	FFC	DDD1889	
5	Slider Knob 1	DAC2684	
6	Slider Knob 2	DAC2685	
7	Leg	DEC3816	
8	Stopper/SLD	DNK6009	
9	Hook	DNK6755	
⚠ 10	Chassis	DNK6814	
11	Knob/CFC	DAA1326	B
12	Knob	DAA1395	
13	Knob	DAA1396	
14	Knob	DAA1360	
15	Dial Knob	DAA1246	
16	Knob	DAA1361	
17	Knob	DAA1366	
18	Select Knob	DAA1205	
19	FX Sel Knob	DAA1213	
20	Knob	DAA1368	C
21	Knob/SLD	DNK5981	
22	Slide Sheet 1C	DAH2404	
23	Knob	DAC3238	
24	Stopper	DNK6440	
25	Cord Clamper (Steel)	RNH-184	
26	Knob	DAA1441	
27	•••••		
28	•••••		
29	•••••		D
30	Screw	BBZ30P060FTC	
31	Screw	BBZ30P080FTB	
32	Screw	BPZ30P080FNI	
33	Screw	BPZ30P100FTB	
34	Screw	BPZ30P120FTB	

E

F

CHASSIS, FADER, HP SECTION PARTS LIST

Mark No.	Description	Part No.
CHASSIS SECTION		
1	MAIN Assy	DWX4194
2	AOUT Assy	DWX4200
3	FFC	DDD1892
4	FFC	DDD1893
5	FFC	DDD1895
6	Connector Assy	PF07PP-C05
7	Cushion	DEC3830
8	Earth Terminal	DKE1015
9	Stay	DNH3388
10	Shield Plate	DNH3398
11	Power Knob	DAC2306
12	Nut (M12)	NKX2FNI
13	Washer	WA32F100Q050
14	Spring Lock Washer	WS40FNI
15	Screw	BBZ30P060FTC
16	Screw	BPZ30P080FTB
17	Screw (M3*5)	DBA1340
18	Screw	PPZ30P080FTB
19		
20		
FADER SECTION		
21	CRFD Assy	DWX4206
22	Slider	DNK6426
NSP 23	Cushion	DEC3356
24	Lever	DNH3211
25	Guide Bar	VLL1514
26	Stay	DNF2053
27	Holder	DNK6425
28	Cable Tie	ZCA-SKB90BK
29	Screw	BPZ20P050FTC
30	Screw	CPZ26P080FTC
31	Screw	BBZ30P060FTC
32		
33		
HP SECTION		
34	HPJK Assy	DWX4203
35	Connector Assy	PF03PP-B07
36	Stay	DNH3389
37	Nut M12	DBN1018
38	Screw	BBZ30P060FTC

A

B

C

D


E

F


9.4 CONTROL PANEL (1/2) SECTION

A • Bottom view

● BFX Section

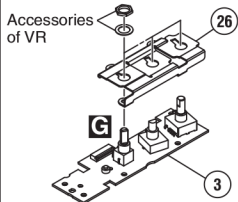

● Mixer Section

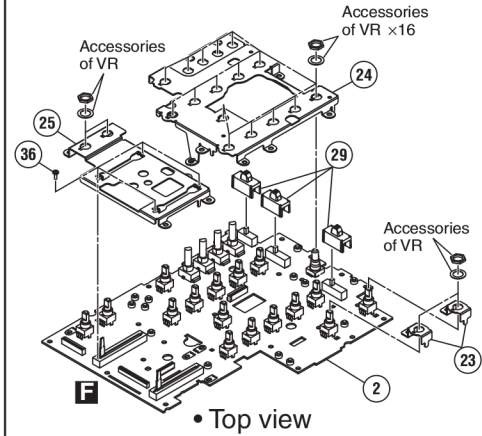


Refer to
"9.6 JOG DIAL (1/2)
SECTION".

Refer to
"9.6 JOG DIAL (1/2)
SECTION".

Refer to
"9.5 CONTROL PANEL (2/2) SECTION".

*: Be sure to use two sheets (DEC3672) in a stack.
Because the feeling of operation changes only with one sheet.

 *: シート (DEC3672) は必ず 2 枚重ねて使用してください。
1 枚だけだと操作感が変わってしまいます。



CONTROL PANEL (1/2) SECTION PARTS LIST

Mark No.	Description	Part No.
1	OLED Assy	DWX4208
2	MXRB Assy	DWX4195
3	BFXB Assy	DWX4196
4	DCKL Assy	DWX4199
5	DCKR Assy	DWX4201
6	PADL Assy	DWX4204
7	PADR Assy	DWX4205
8	LVMT Assy	DWX4207
9	OLED Assy (Service)	DEA1084
10	FFC	DDD1885
11	FFC	DDD1890
12	FFC	DDD1891
13	FFC	DDD1894
14	FFC	DDD1896
15	FFC	DDD1897
16	Sheet	DEC3672
17	Sheet	DEC3673
18		
19	Shield Sheet	DEC3812
20	Shield Sheet	DEC3819
21	Sheet	DEC3817
22	Sheet	DEC3818
23	Stay	DNF2039
24	Stay	DNH3385
25	Stay	DNH3386
26	Stay	DNH3387
27	Packing	DEC3642
28	Sheet	DEC3795
29	SW Cap	DAC2753
30	Button	DEB2035
31		
32		
33	Screw	BPZ20P040FTB
34	Screw	BPZ30P080FNI
35	Screw	BPZ30P100FTB
36	Screw	PMH20P040FTC

A

B

C

D


E

F


1 2 3 4

9.5 CONTROL PANEL (2/2) SECTION

A • Bottom view

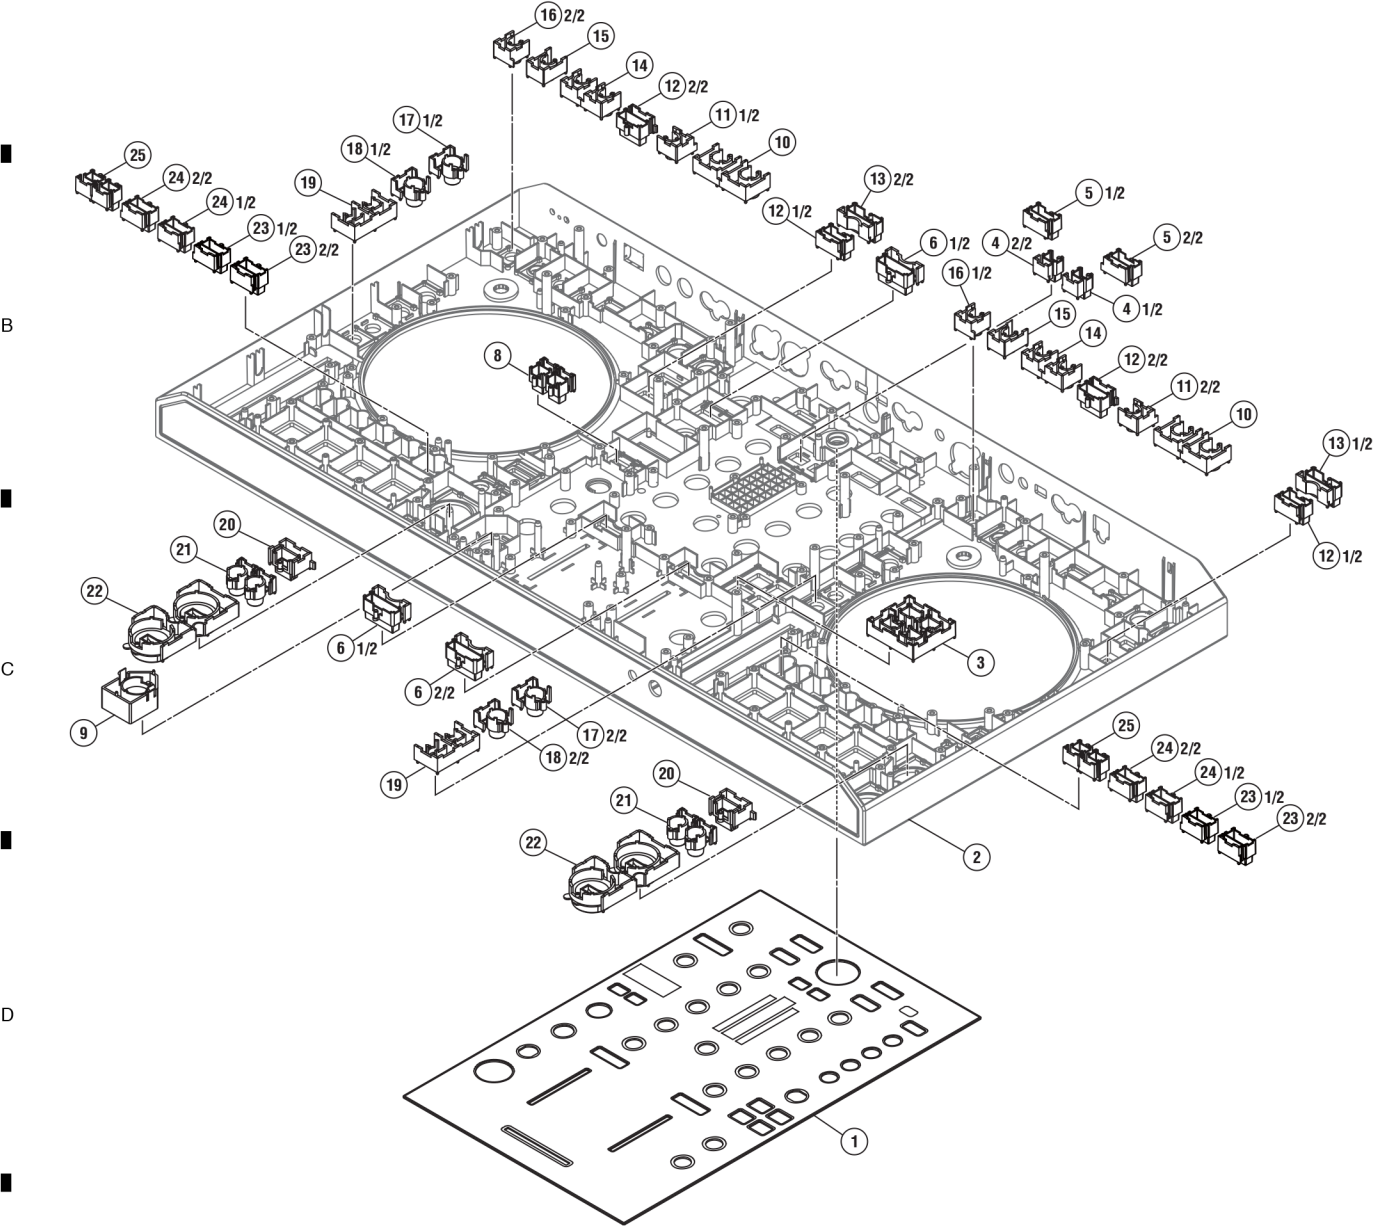

•The position of the divided parts / 分割部品に取り付け位置

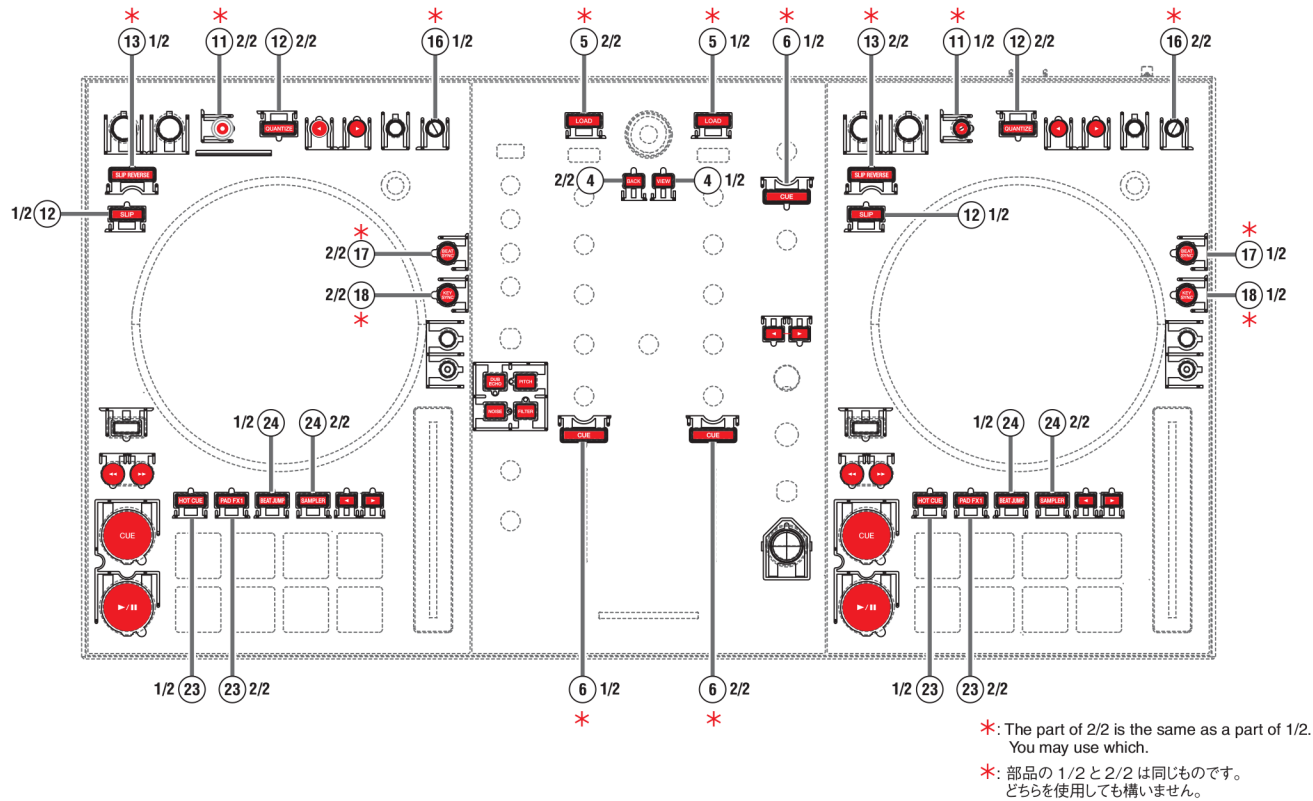

CONTROL PANEL (2/2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Plate	DAH3224	16	Button/TMP	DAC2845
2	Control Panel	DNK6813	17	Button	DAC3369
3	Button	DAC3426	18	Button	DAC3432
4	Button	DAC3427	19	Button	DAC3146
5	Button	DAC3428	20	Button	DAC3288
6	Button	DAC3219	21	Button	DAC3363
7	•••••		22	Button	DAC3433
8	Button	DAC3372	23	Button	DAC3434
9	Button	DAC3141	24	Button	DAC3435
10	Button/LOP	DAC3074	25	Button	DAC3436
11	Button/MT	DAC2875			
12	Button	DAC3430			
13	Button	DAC3359			
14	Button/CAL	DAC3020			
15	Button/DLT	DAC3021			

9.6 JOG DIAL (1/2) SECTION

• Bottom view

A



B

C

D

E

F


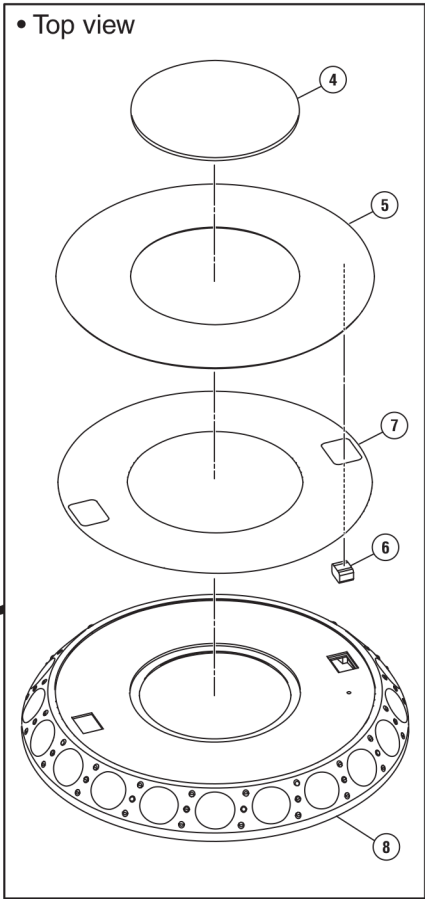
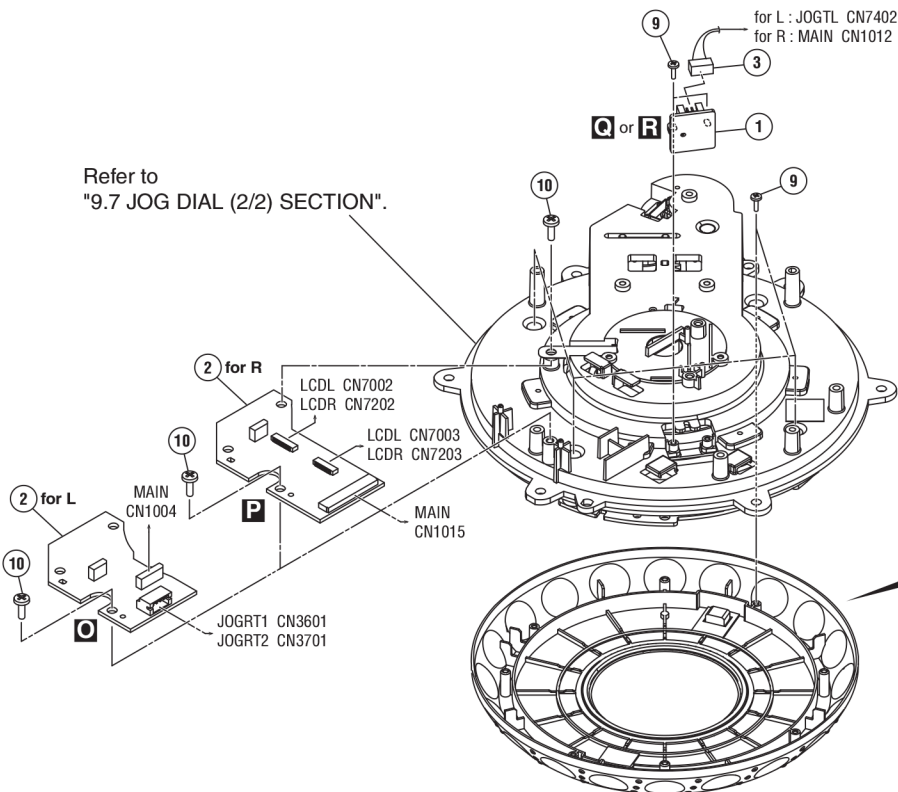


JOG DIAL (1/2) SECTION PARTS LIST

Mark No.	Description	Part No.
1	JOGRT1 Assy	DWX4197
1	JOGRT2 Assy	DWX4198
2	JOGTL Assy (for L)	DWX4211
2	JOGTR Assy (for R)	DWX4212
3	Connector Assy (for R)	PF04PP-B17
3	Connector Assy (for L)	PF04PP-B15
4	Window	DAH3233
5	Plate	DAH3234
6	Gasket/JOG	DEC3562
7	DS Tape	DEH1096
8	JOG Dial	DNK6822
9	Screw	BPZ20P060FTC
10	Screw	BPZ30P080FTC

5 6 7 8

9.7 JOG DIAL (2/2) SECTION

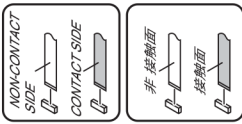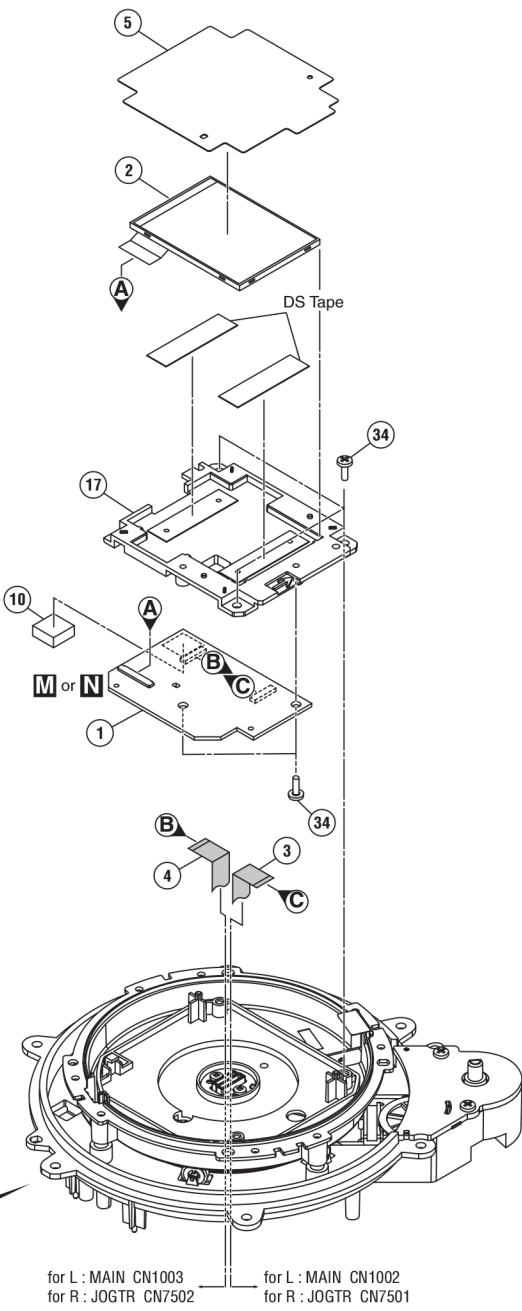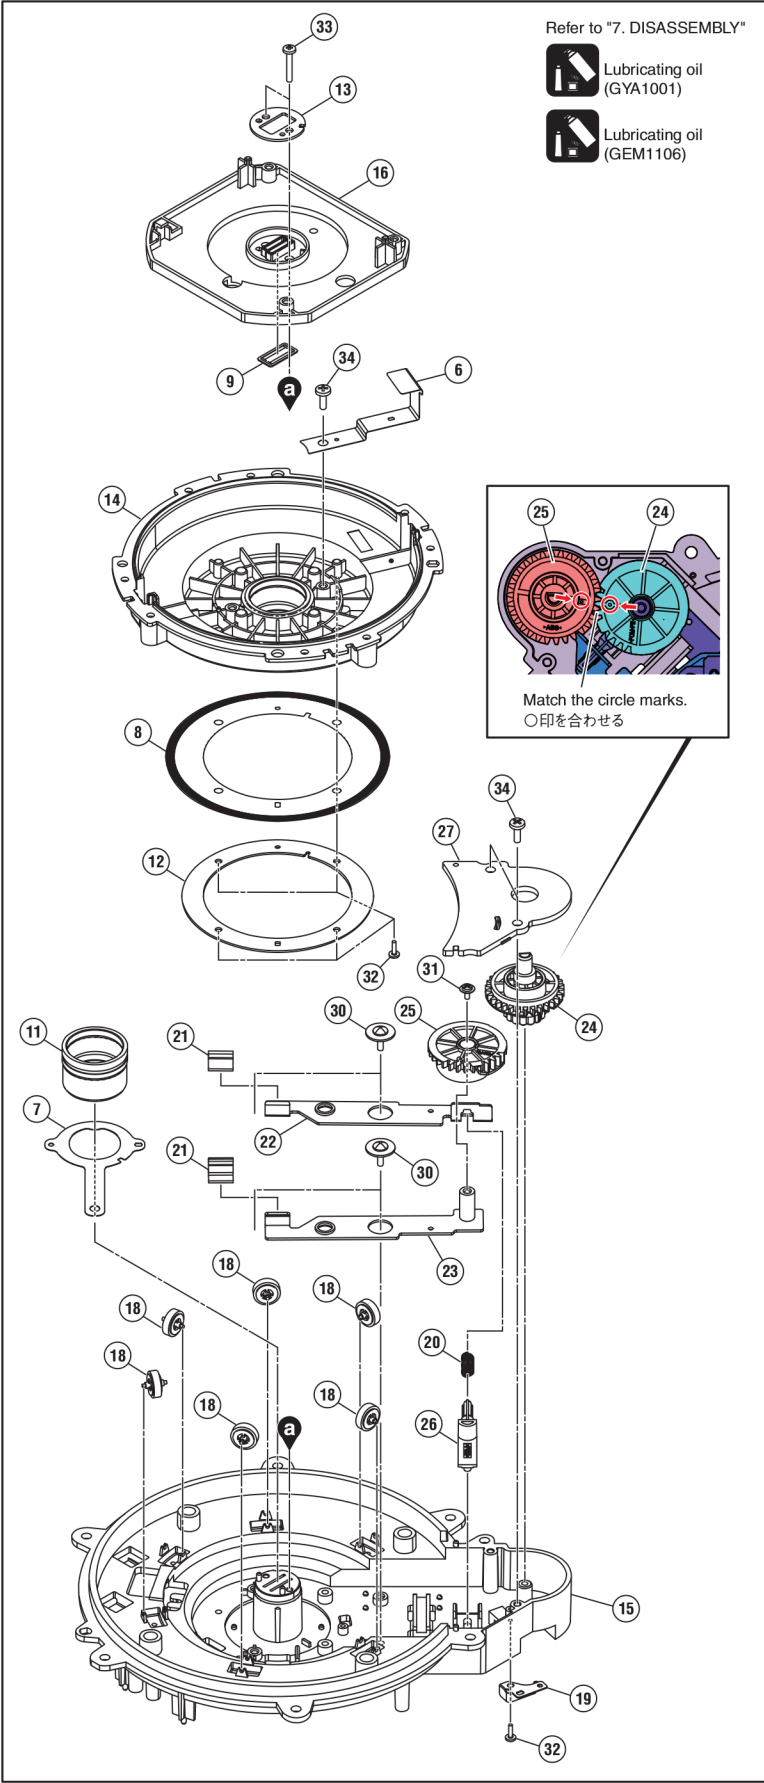

JOG DIAL (2/2) SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	LCDL Assy	DWX4209
	1	LCDR Assy	DWX4210
	2	TFT LCD	DWX4226
	3	FFC (for L)	DDD1911
	3	FFC (for R)	DDD1886
	4	FFC (for L)	DDD1912
	4	FFC (for R)	DDD1887
	5	Sheet (for L)	DEC3815
	5	Sheet (for R)	DEC3832
B	6	Leaf Spring	DBK1391
	7	Leaf Spring	DBK1392
	8	Slit/JOG	DEC3515
	9	Packing	DEC3820
	10	Cushion	DEC3831
C	11	Shaft	DLA2266
	12	Bracket/SLT	DNH3168
	13	Cover	DNH3391
	14	JOG Dial	DNK6820
	15	Base	DNK6821
D	16	Holder	DNK6829
	17	Holder	DNK6830
	18	Roller	DXB2178
	19	Leaf Spring	DBK1393
	20	Coil Spring	DBH1823
E	21	Felt	DED1188
	22	Lever	DNH3392
	23	Lever	DNH3393
	24	Gear	DNK6823
	25	Cam	DNK6824
F	26	Pin	DNK6825
	27	Cover	DNK6826
	28	•••••	
	29	•••••	
	30	DM Screw (FTC)	DBA1260
G	31	Screw	AMZ30P060FTC
	32	Screw	BPZ20P060FTC
	33	Screw	BPZ26P160FTC
	34	Screw	BPZ30P080FTC