


1234

9. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

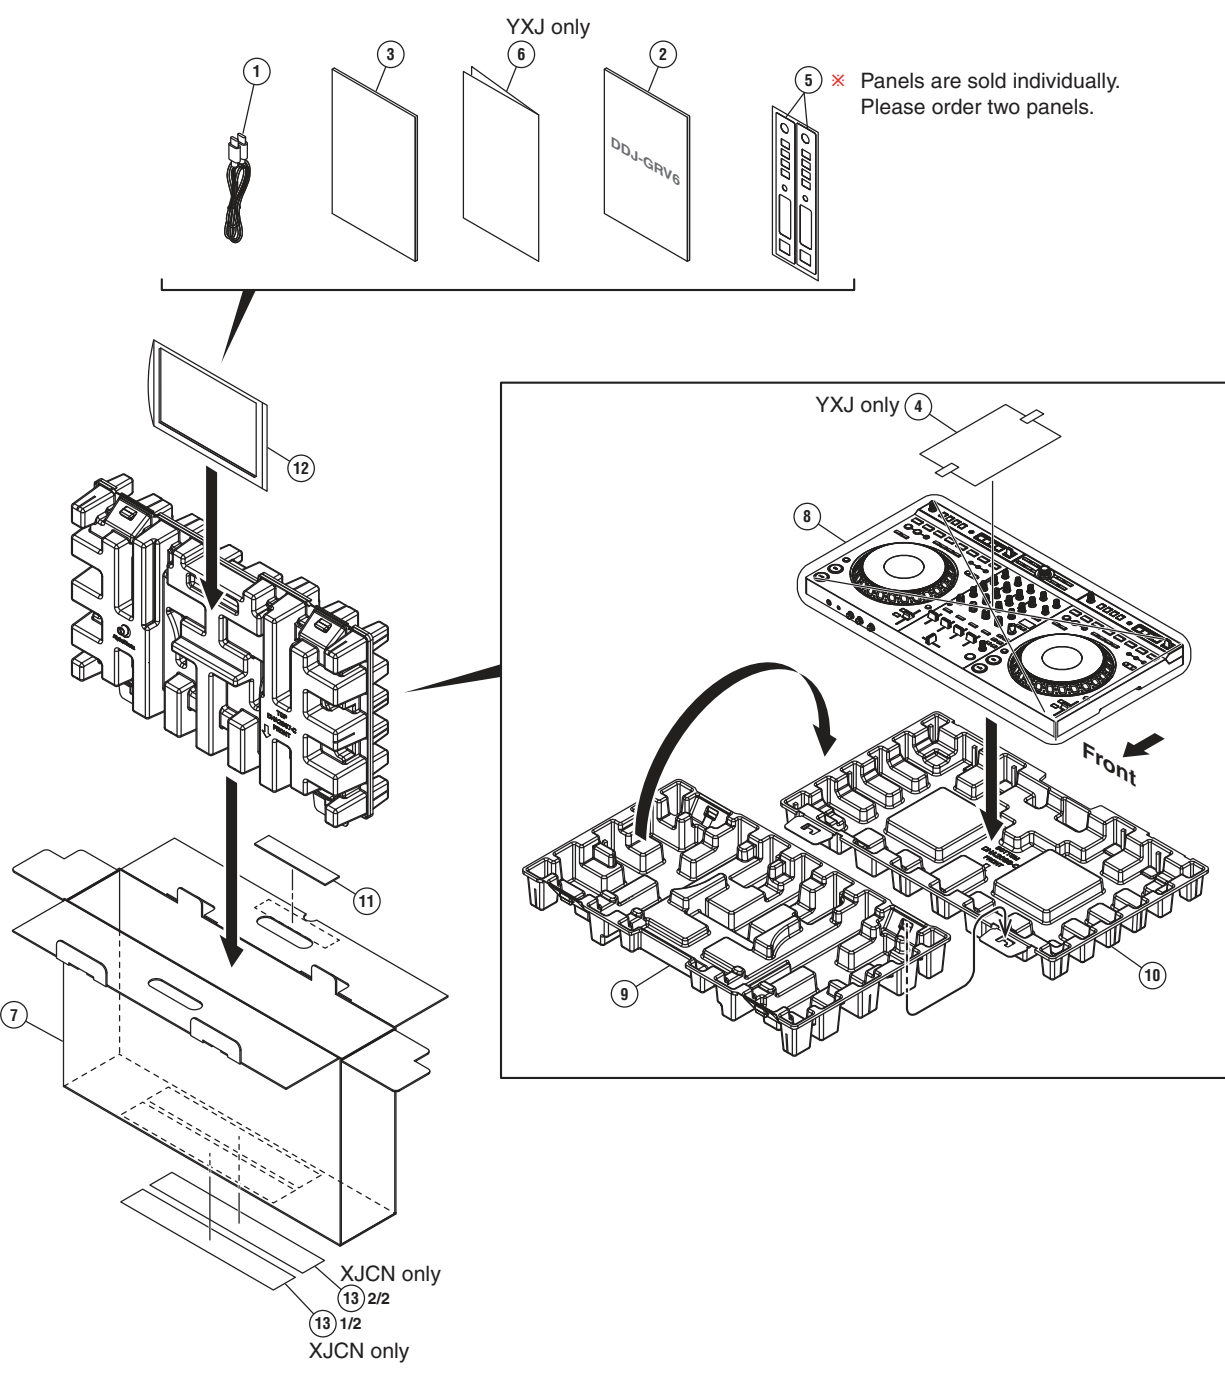

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	USB cable	DDE1158
2	Quick Start Guide	See Contrast table (2)
3	Precautions for Use	See Contrast table (2)
4	Leaflet	See Contrast table (2)
5	Overlay sheet	DAH3463
NSP 6	Warranty	See Contrast table (2)
7	Packing Case	DHG3948
8	Mirror Mat (1200*1000)	DHL1169
9	Packing Pad	DHA2067
10	Packing Pad	DHA2068
11	Plate	DHC1122
NSP 12	Poly Bag	DHL1207
13	Label	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-GRV6/YXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-GRV6/YXJ	DDJ-GRV6/XJCN
NSP	2	Quick Start Guide	DRH1806	DRH1817
	3	Precautions for Use	DRH1807	DRH1818
	4	Leaflet	DRH1797	Not used
	6	Warranty	DRY1280	Not used
	13	Label	Not used	DRW3108

9.2 EXTERIOR and CHASSIS SECTION

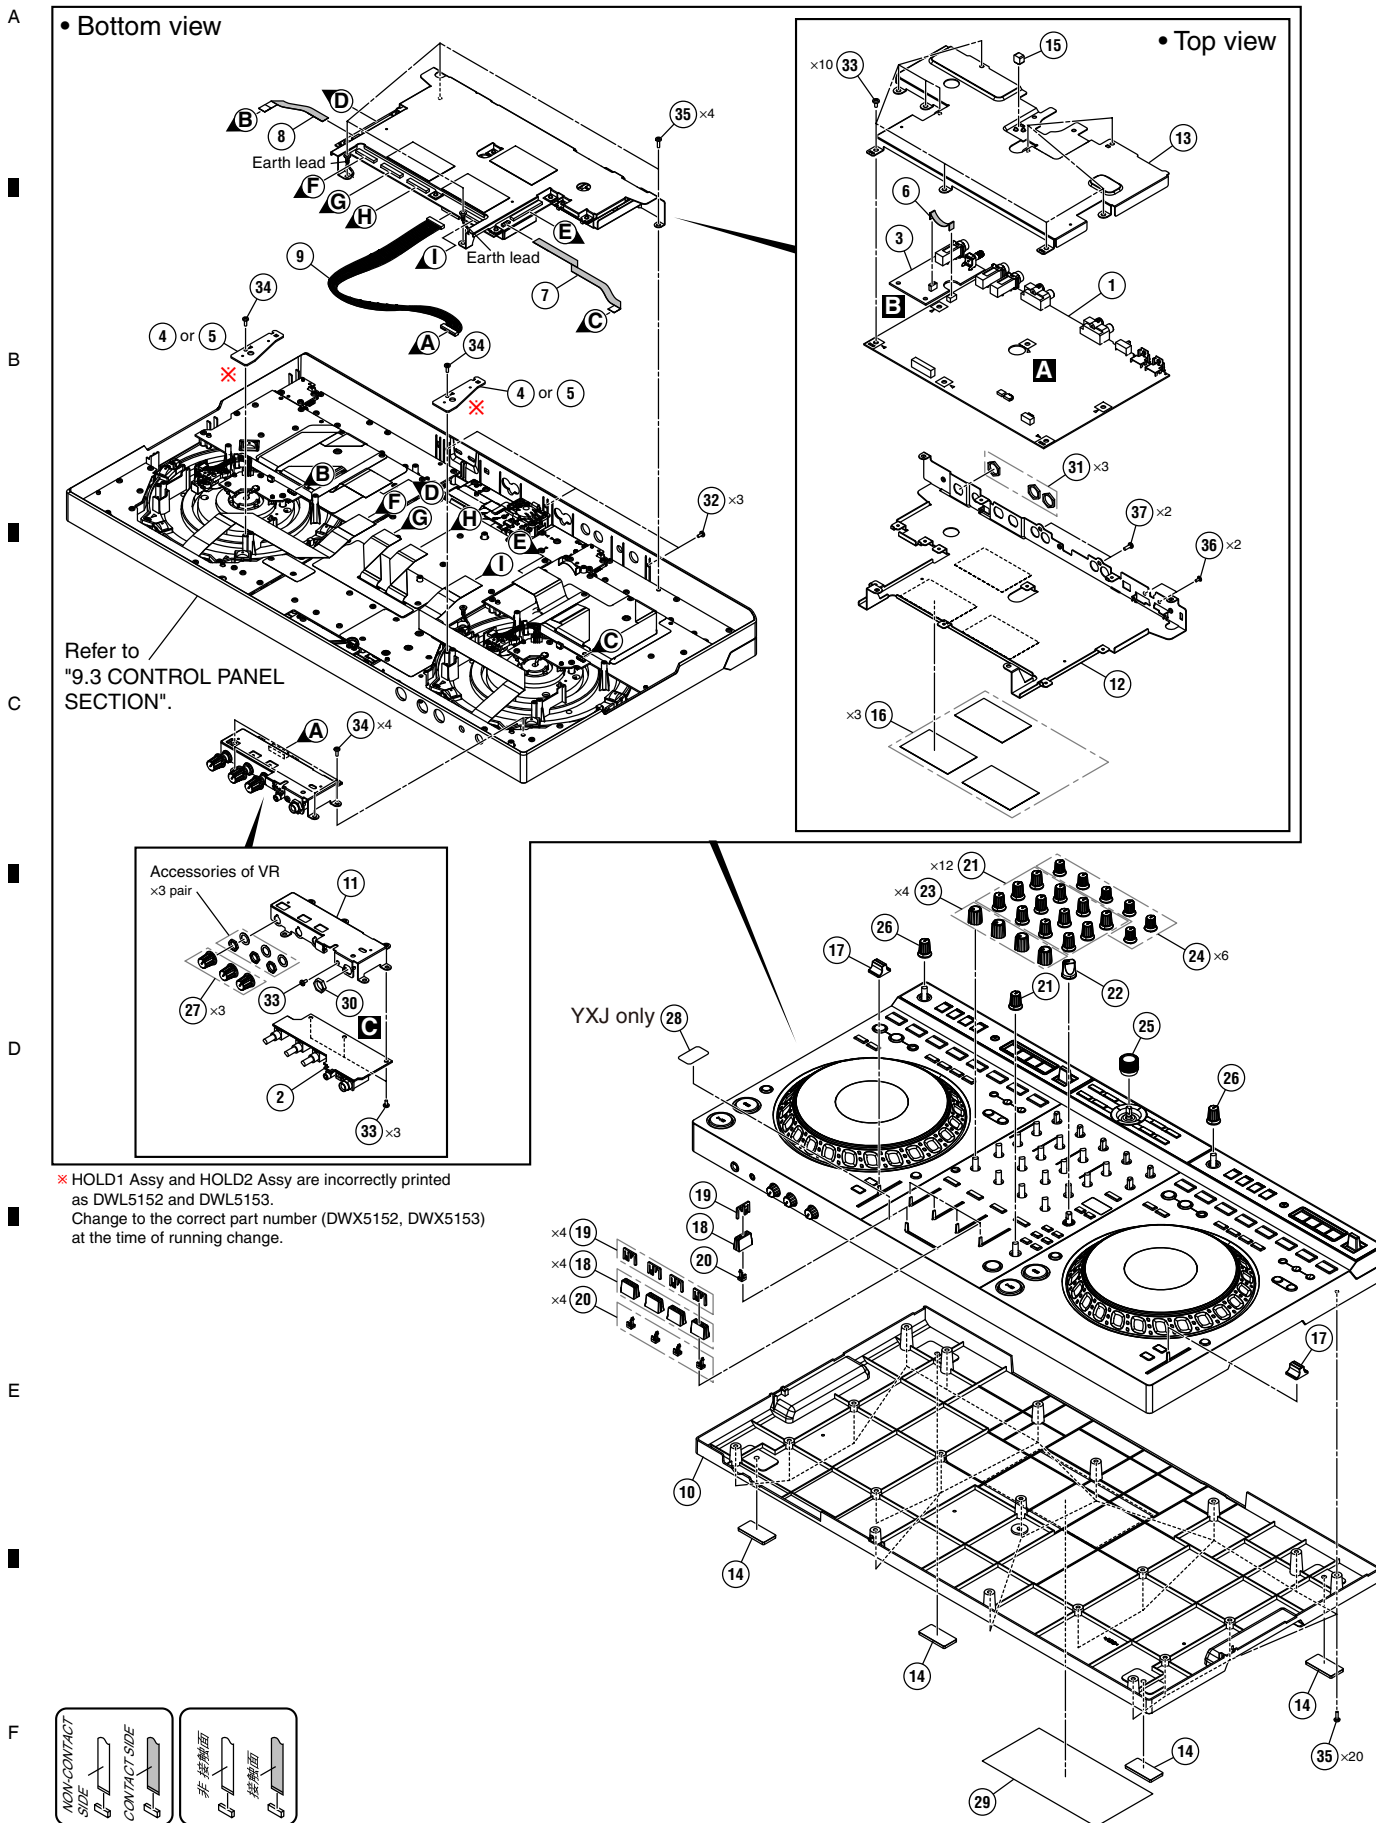

(1) EXTERIOR and CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MAIN Assy	DWX5062	21	Knob	DAA1492
2	HPJK Assy	DWX5070	22	Knob	DAA1493
3	MIC Assy	DWX5080	23	Knob	DAA1494
4	HOLD1 Assy	DWX5152	24	Knob	DAA1495
5	HOLD2 Assy	DWX5153	25	Knob	DAA1497
6	FFC	DDD2221	26	Knob	DAA1496
7	FFC	DDD2223	27	Knob	DAA1432
8	FFC	DDD2227	NSP 28	Label	See Contrast table (2)
9	Parallel Jumper	PF11HH-B32A	NSP 29	Name Label	See Contrast table (2)
⚠ 10	Chassis	DNK7217	30	Nut	DBN1028
11	Stay	DNH3636	31	Nut	NKX2FTC
12	Stay	DNH3637	32	Screw	BBZ30P060FTB
13	Stay	DNH3638	33	Screw	BBZ30P060FTC
14	Sheet/Leg	DEC3534	34	Screw	BPZ30P080FTC
15	Gasket	DEC4129	35	Screw	BPZ30P100FTB
16	Sheet	DEC4211	36	Screw(M3*5)	DBA1340
17	Knob	DNK6769	37	Screw	PPZ30P080FTB
18	Knob	DAC3539			
19	Slider Knob 2	DAC2685			
20	Stopper/SLD	DNK6009			



(2) CONTRAST TABLE

DDJ-GRV6/YXJ and XJCN are constructed the same except for the following:


Mark	No.	Symbol and Description	DDJ-GRV6/YXJ	DDJ-GRV6/XJCN
NSP	28	Label	DRW3080	Not used
NSP	29	Name Label	DAL1407	DAL1409

9.3 CONTROL PANEL (1/2) SECTION


A • Bottom view

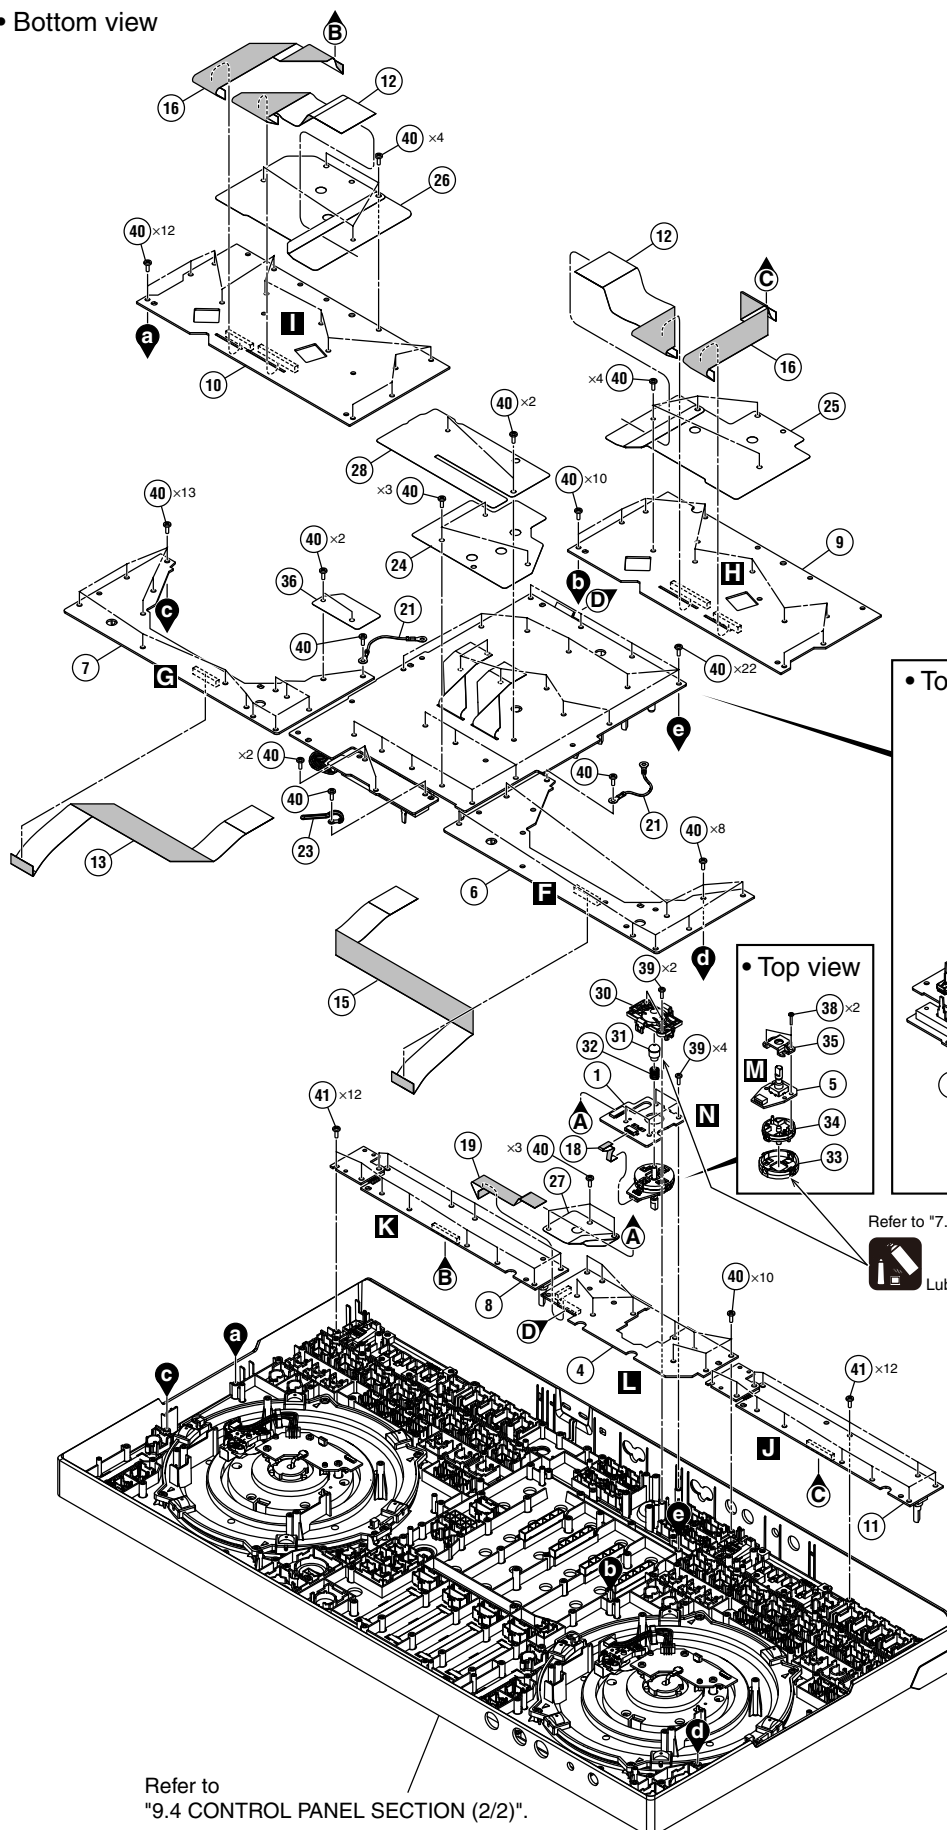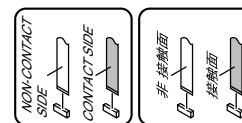

• Top view

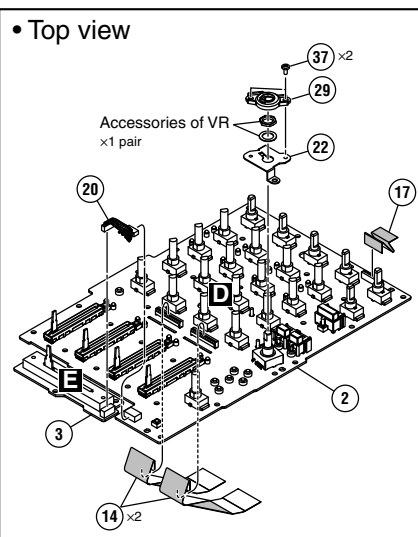

• Top view

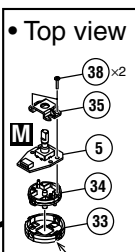

Refer to
"9.4 CONTROL PANEL SECTION (2/2)".

CONTROL PANEL (1/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	JTACT Assy	DWX5097	
2	MIXER Assy	DWX5063	A
3	CRFD Assy	DWX5072	
4	LOAD Assy	DWX5071	
5	JKNOB Assy	DWX5096	
6	PLAY1 Assy	DWX5077	■
7	PLAY2 Assy	DWX5078	
8	GRV2 Assy	DWX5074	
9	DECKL Assy	DWX5068	
10	DECKR Assy	DWX5073	
11	GRV1 Assy	DWX5069	B
12	FFC	DDD2222	
13	FFC	DDD2224	
14	FFC	DDD2225	
15	FFC	DDD2226	■
16	FFC	DDD2228	
17	FFC	DDD2229	
18	FFC	DDD2230	
19	FFC	DDD2231	
20	Parallel Jumper	PF05HH-B05A	C
21	Earth Lead Unit	DE005VC0	
22	Stay	DNH3635	
23	Cord Clamper	DEX1025	
24	Sheet	DEC4166	
25	Sheet	DEC4167	■
26	Sheet	DEC4168	
27	Sheet	DEC4169	
28	Sheet	DEC4186	
29	Holder	DNK7222	D
30	Cover	DNK7221	
31	Stopper	DNK7141	
32	Coil Spring	DBH1846	
33	Base	DNK7140	■
34	Base	DNK7139	
35	Holder	DNK7225	
36	Sheet	DEC4205	
37	Screw	BBZ30P060FTC	
38	Screw	BPZ20P100FTC	E
39	Screw	BPZ26P080FTC	
40	Screw	BPZ30P080FTC	
41	Screw	BPZ30P100FTB	■

9.4 CONTROL PANEL (2/2) SECTION

A • Bottom view


B


C

D

E


F

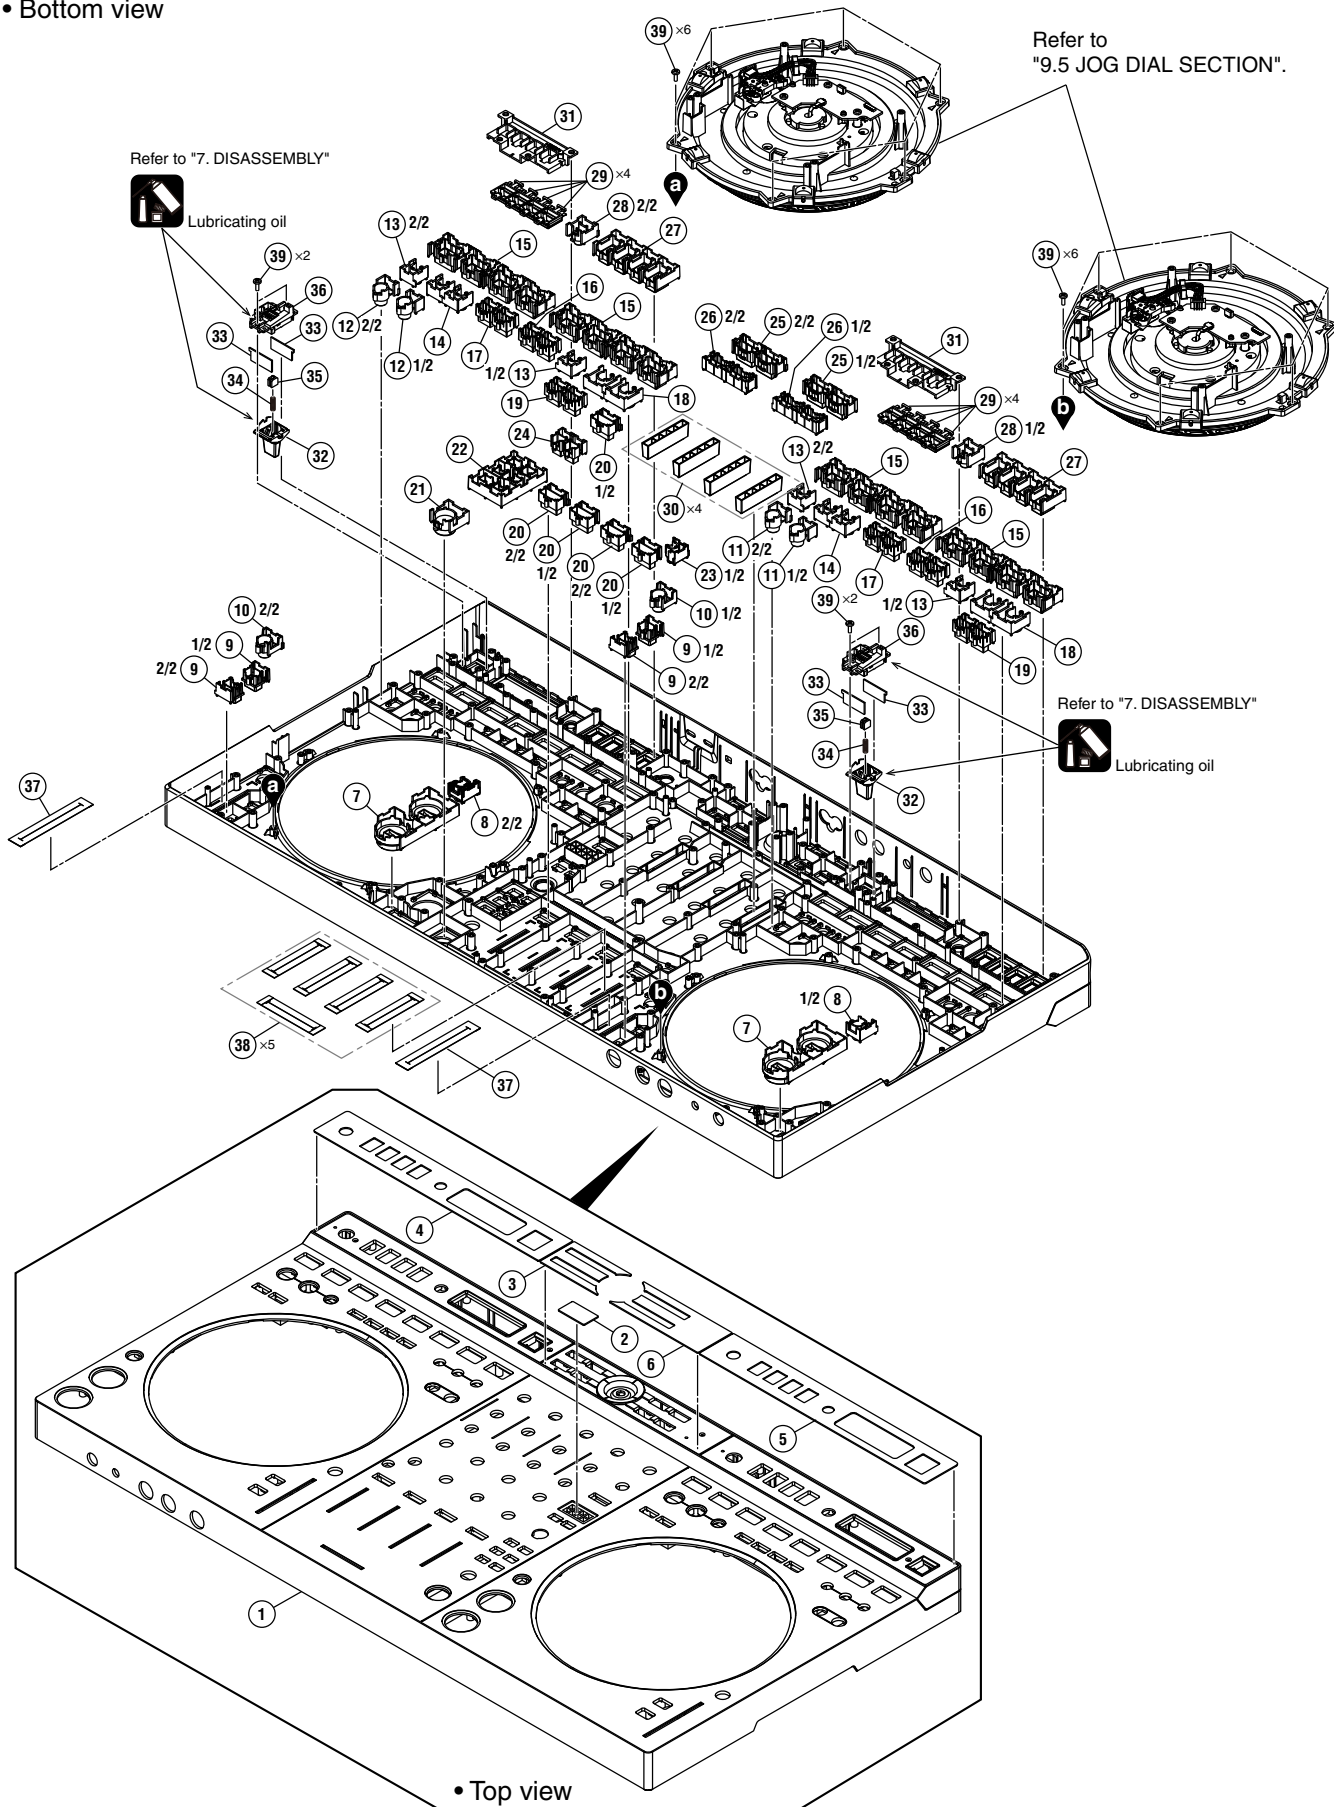

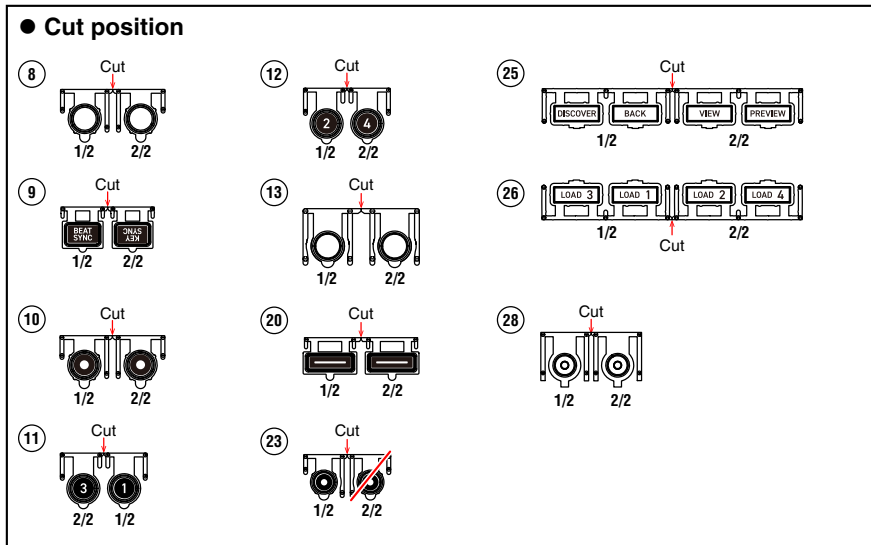

CONTROL PANEL (2/2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
⚠	1 Control Panel	DNK7216	21 Button	DAC3777	
	2 Plate	DAH3446	22 Button	DAC3761	
	3 Plate	DAH3447	23 Button	DAC3786	
	4 Plate	DAH3448	24 Button	DAC3381	
	5 Plate	DAH3449	25 Button	DAC3762	
	6 Panel	DAH3452	26 Button	DAC3764	
	7 Button	DAC3753	27 Button	DAC3766	
	8 Button	DAC3754	28 Button	DAC3646	
	9 Button	DAC3769	29 Button	DAC3767	
	10 Button	DAC3604	30 Lens	DNK7223	
	11 Button	DAC3755	31 Holder	DNK7220	
	12 Button	DAC3756	32 Lever	DAC3768	
	13 Button/TMP	DAC2845	33 Brake	DEC3948	
	14 Button/CAL	DAC3020	34 Lever Spring	DBH1702	
	15 Button	DAC3757	35 Lever Cap	DNK5344	
	16 Button	DAC3758	36 Base	DNK6470	
	17 Button	DAC3772	37 Packing/TMP	DEC3392	
	18 Button	DAC3774	38 Sheet	DEC3795	
	19 Button	DAC3787	39 Screw	BPZ30P080FTC	
	20 Button	DAC3760			

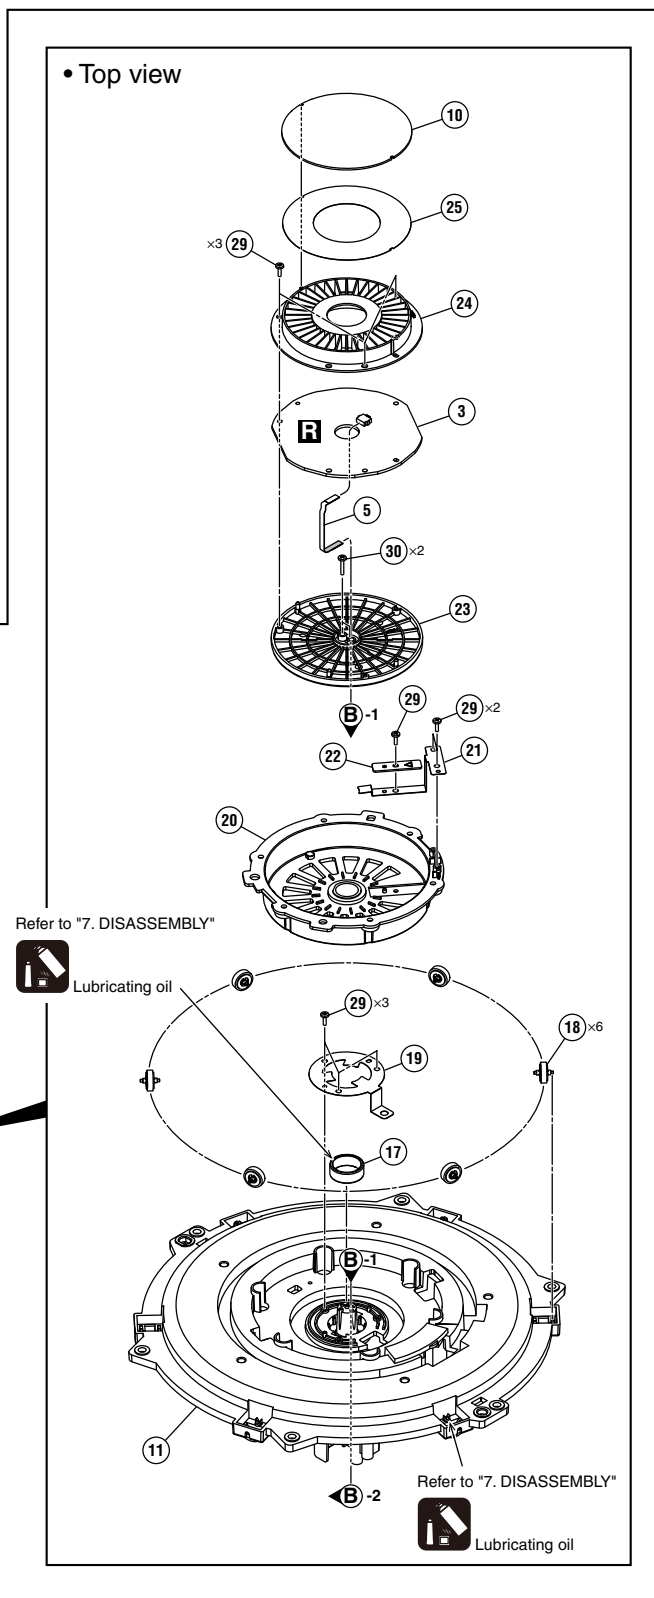

JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	JOGRT1 Assy	DWX5075
2	JOGRT2 Assy	DWX5076
3	JLED Assy	DWX5064
4	TCH Assy	DWX5066
5	FFC	DDD1986
6	Holder	VEC1355
7	Jog Dial	DNK7218
8	Plate	DAH3450
9	Window	DAH3307
10	Sheet	DEC4165
11	Holder	DNK7219
12	Gear	DNK6942
13	Plate	DEC3700
14	Sheet	DEC3979
15	Load Spring	DBH1676
16	Adjuster	DNK6956
17	Sleeve	DLA2278
18	Roller	DXB2178
19	Plate	DBK1400
20	Jog Dial	DNK6939
21	Leaf Spring	DBK1399
22	Plate	DNH3465
23	Holder	DNK6958
24	Reflector	DNK6941
25	Light-D Sheet	DEC3953
26	Gasket	DEC4056
27	DS Tape	DEH1112
28	Washer	WA41D070D025
29	Screw	BPZ20P060FTC
30	Screw	BPZ20P100FTC
31	Screw	BPZ30P080FTC
32	Screw (FE)	DBA1461

A

B

C

D

E

F