


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

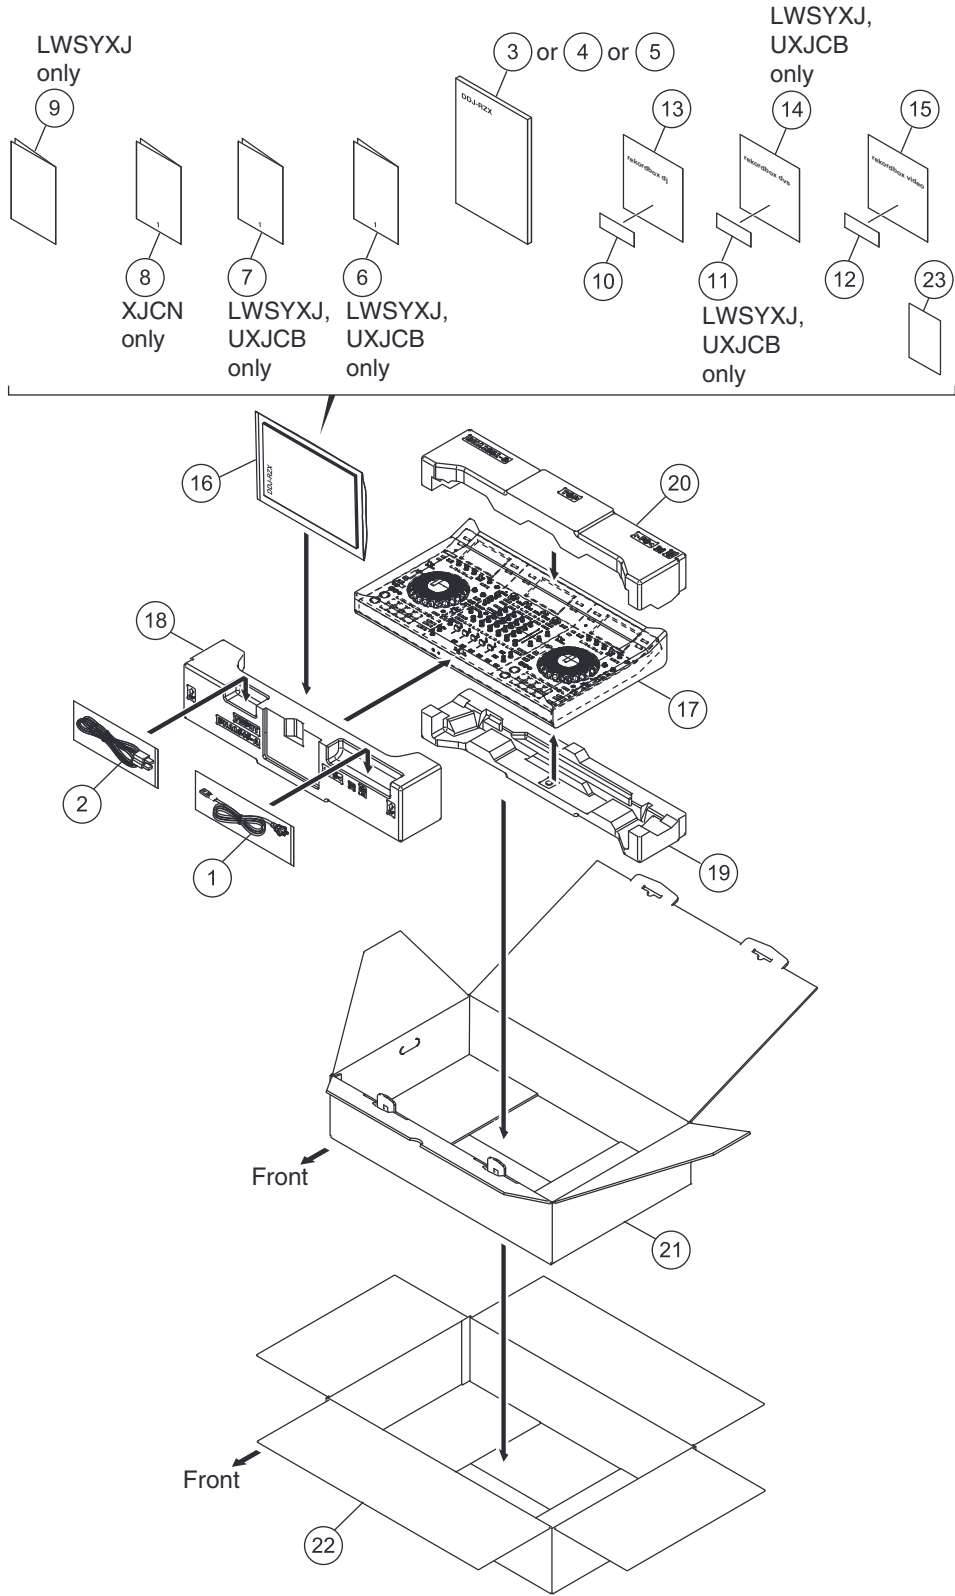

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
⚠	1 Power Cord	See Contrast table (2)	NSP 9	Warranty	See Contrast table (2)	
	2 USB Cable	DDE1128	NSP 10	rekordbox dj license key card	DXA2304	A
	3 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 11	rekordbox dvs license key card	See Contrast table (2)	
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 12	rekordbox video license key card	DXA2323	
			NSP 13	Software license notice	DRM1410	
			NSP 14	Leaflet	See Contrast table (2)	
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 15	Leaflet	DRM1415	
	6 License Caution	See Contrast table (2)	NSP 16	Polyethylene Bag	AHG7117	
	7 License Caution	See Contrast table (2)		17 Mirror Mat	DHL1201	
	8 License Caution	See Contrast table (2)		18 Pad	DHA1949	
				19 Pad	DHA1950	B
				20 Pad	DHA1951	
				21 Packing Case	See Contrast table (2)	
				22 Carton	See Contrast table (2)	
			NSP 23	Other Card	See Contrast table (2)	

(2) CONTRAST TABLE

DDJ-RZX/LWSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RZX /LWSYXJ	DDJ-RZX /UXJCB	DDJ-RZX /XJCN
⚠	1	Power Cord	ADG1244	DDG1108	DDG1114
	3	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	DRH1344	Not used
	4	Operating Instructions (Quick Start Guide) (En, Fr, De, It, NI, Es, Pt, Ru)	DRH1345	Not used	Not used
	5	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1347
	6	License Caution (En, Fr, De, It, NI, Es, Pt, Ru, Ja, Zhtw)	DRH1387	DRH1387	Not used
	7	License Caution (Fr)	DRH1388	DRH1388	Not used
	8	License Caution (Zhtw, Ko)	Not used	Not used	DRH1389
NSP	9	Warranty	DRY1270	Not used	Not used
NSP	11	rekordbox dvs license key card	DXA2322	DXA2322	Not used
NSP	14	Leaflet	DRM1414	DRM1414	Not used
	21	Packing Case	DHG3468	DHG3466	DHG3472
	22	Carton	DHG3469	DHG3467	DHG3473
NSP	23	Other Card	Not used	DRM1413	Not used

A



D



(1) CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	MAIN Assy	DWX3822	26	Chassis	DNK6535	
2	JACB Assy	DWX3797	NSP 27	PCB Holder	PNW1706	A
3	MTRM Assy	DWX3799	28	Holder	VEC1355	
4	MCJK Assy	DWX3809	29	Bezel	DAH3098	
5	PSWB Assy	DWX3808	30	Bezel	DAH3099	
⚠ 6	SW POWER SUPPLY Assy	DWR1548	31	Bezel	DAH3100	
7	HOLD1 Assy	DWX3889	32	Knob/RSW	DAA1308	
8	HOLD2 Assy	DWX3890	33	Cord Clamper (Steel)	RNH-184	
⚠ 9	AC Inlet	DKP3980	34	Plate	See Contrast table (2)	
10	FFC	DDD1788	35	•••••		
11	FFC	DDD1741	36	•••••		B
12	Crimp Connector	DKP3981	37	Nut (M12)	NKX2FNI	
13	Connector Assy	PF03PP-C40	38	Washer	DBF1005	
14	Nylon Rivet	AEC1671	39	Screw	BBZ30P060FTC	
15	Power Knob	DAC2306	40	Screw	BBZ30P080FTB	
16	Heat Cond Sheet	DEB2020	41	Screw	BPZ30P080FNI	
17	Sheet/LEG	DEC3534	42	Screw	BPZ30P080FTB	
18	Sheet	DEC3618	43	Screw	BPZ30P140FTB	
19	Sheet	DEC3677	44	Screw	BSZ30P060FTB	
20	Earth Terminal	DKE1015	45	DM Screw (FTC)	DBA1260	C
21	Chassis	DNA1460	46	Screw (M3*5)	DBA1340	
22	Rest	DNF1983	47	Screw	IBZ30P080FTB	
23	Shield Case	DNF1984	48	Screw	PMH40P080FTC	
24	Cover	DNH3254	49	Screw	PPZ30P080FTB	
25	Bracket	DNH3255	50	Screw	BBZ30P100FTB	

(2) CONTRAST TABLE


DDJ-RZX/LWSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RZX /LWSYXJ	DDJ-RZX /UXJCB	DDJ-RZX /XJCN
	34	Plate	DAK1006	DAK1006	DAK1008


9.3 DISPLAY SECTION

A ■ Center

■ Left and Right

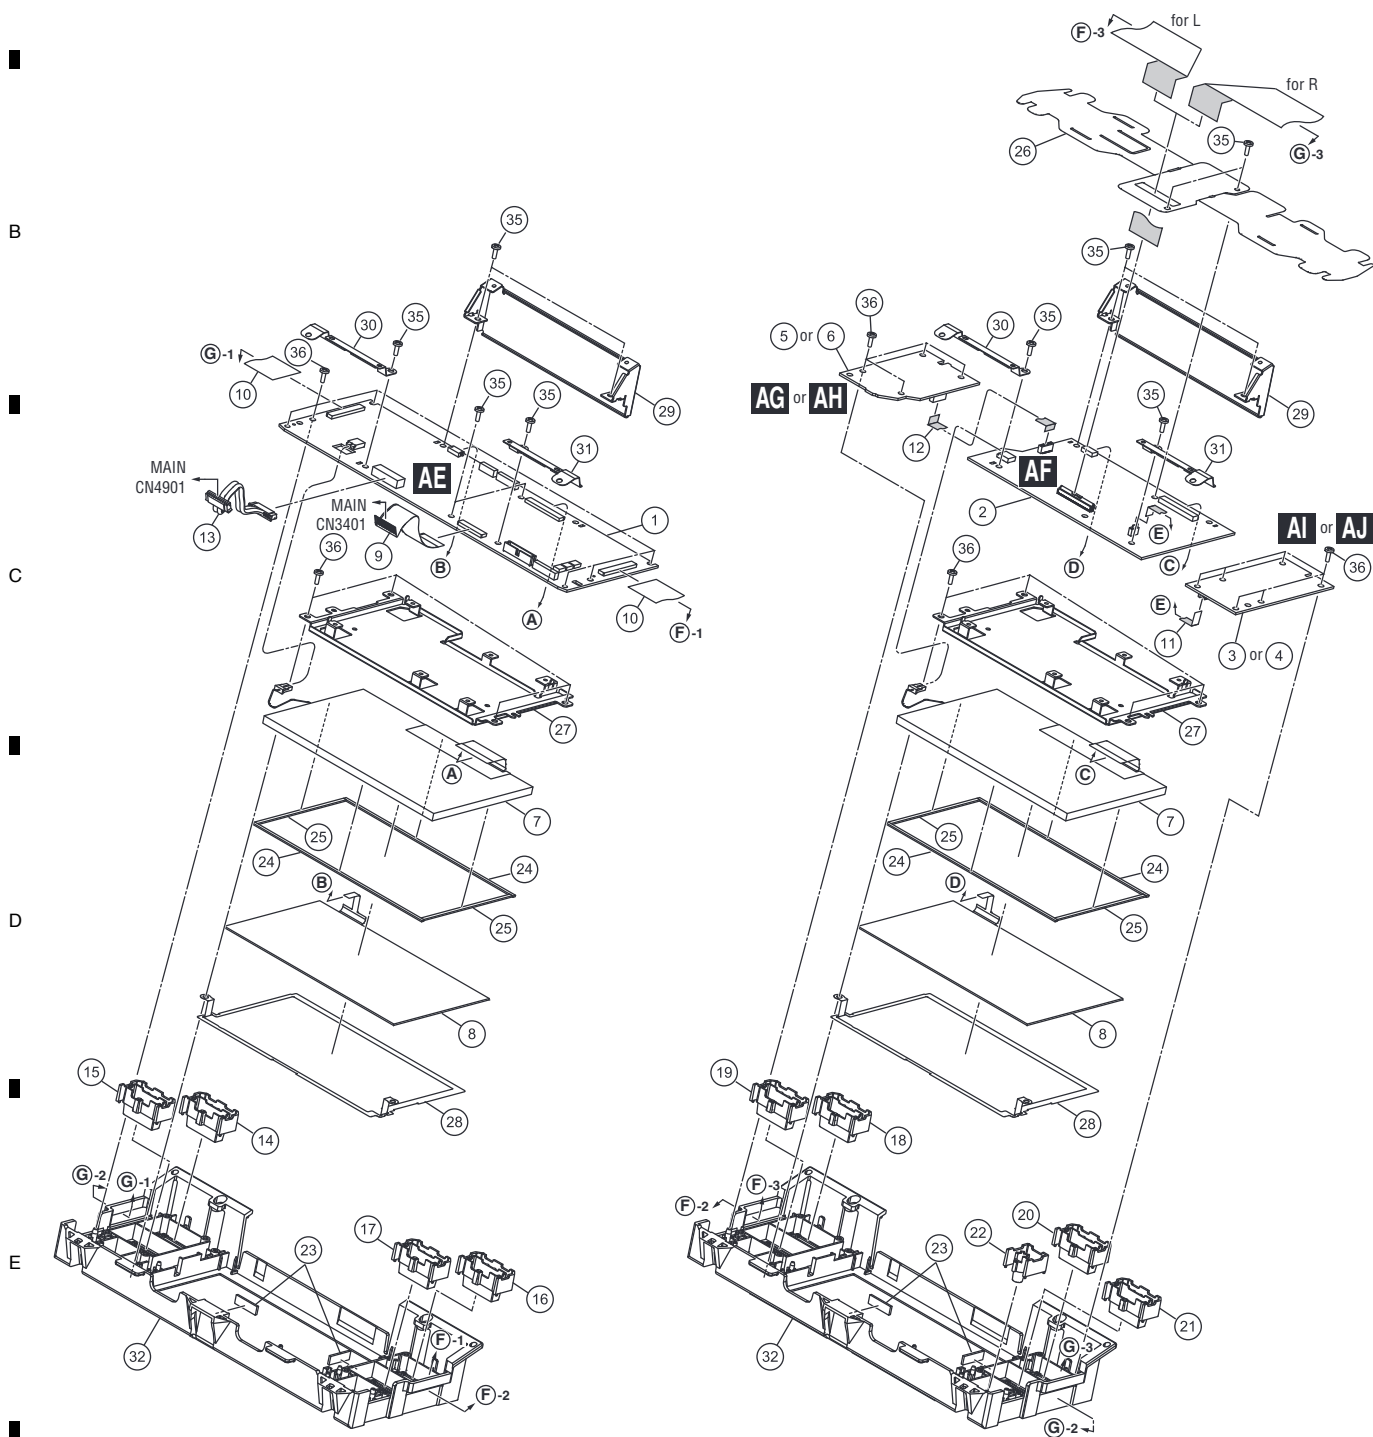


• Bottom view

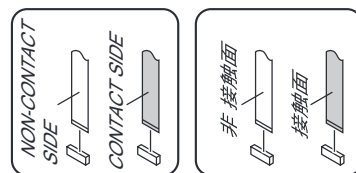

DISPLAY SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	LCDM Assy	DWX3828	
2	LCDP Assy	DWX3791	A
3	MSL1 Assy	DWX3884	
4	MSL2 Assy	DWX3885	
5	XYM1 Assy	DWX3886	
6	XYM2 Assy	DWX3887	■
7	TFT LCD	CWX4352	
8	Touch Panel	DSX1128	
9	FFC	DDD1703	
10	FFC	DDD1740	
11	FFC	ADD7783	B
12	10P FFC	DDD1533	
13	Shielded Conn-Cable	DDA1075	
14	Button	DAC3170	
15	Button	DAC3172	■
16	Button	DAC3175	
17	Button	DAC3176	
18	Button	DAC3173	
19	Button	DAC3174	
20	Button	DAC3177	C
21	Button	DAC3178	
22	Button	DAC3171	
23	Packing/LCD	DEC3565	
24	Packing/L	DEC3568	
25	Packing/S	DEC3569	■
26	Sheet	DEC3678	
27	Bracket	DNF1991	
28	Plate/GND	DNH3173	
29	Angle	DNH3256	D
30	Angle	DNH3277	
31	Angle	DNH3278	
32	Holder	DNK6612	
33			■
34			
35	Screw	BBZ30P080FTB	
36	Screw	BPZ30P080FNI	E

9.4 CONTROL PANEL SECTION (1/5)

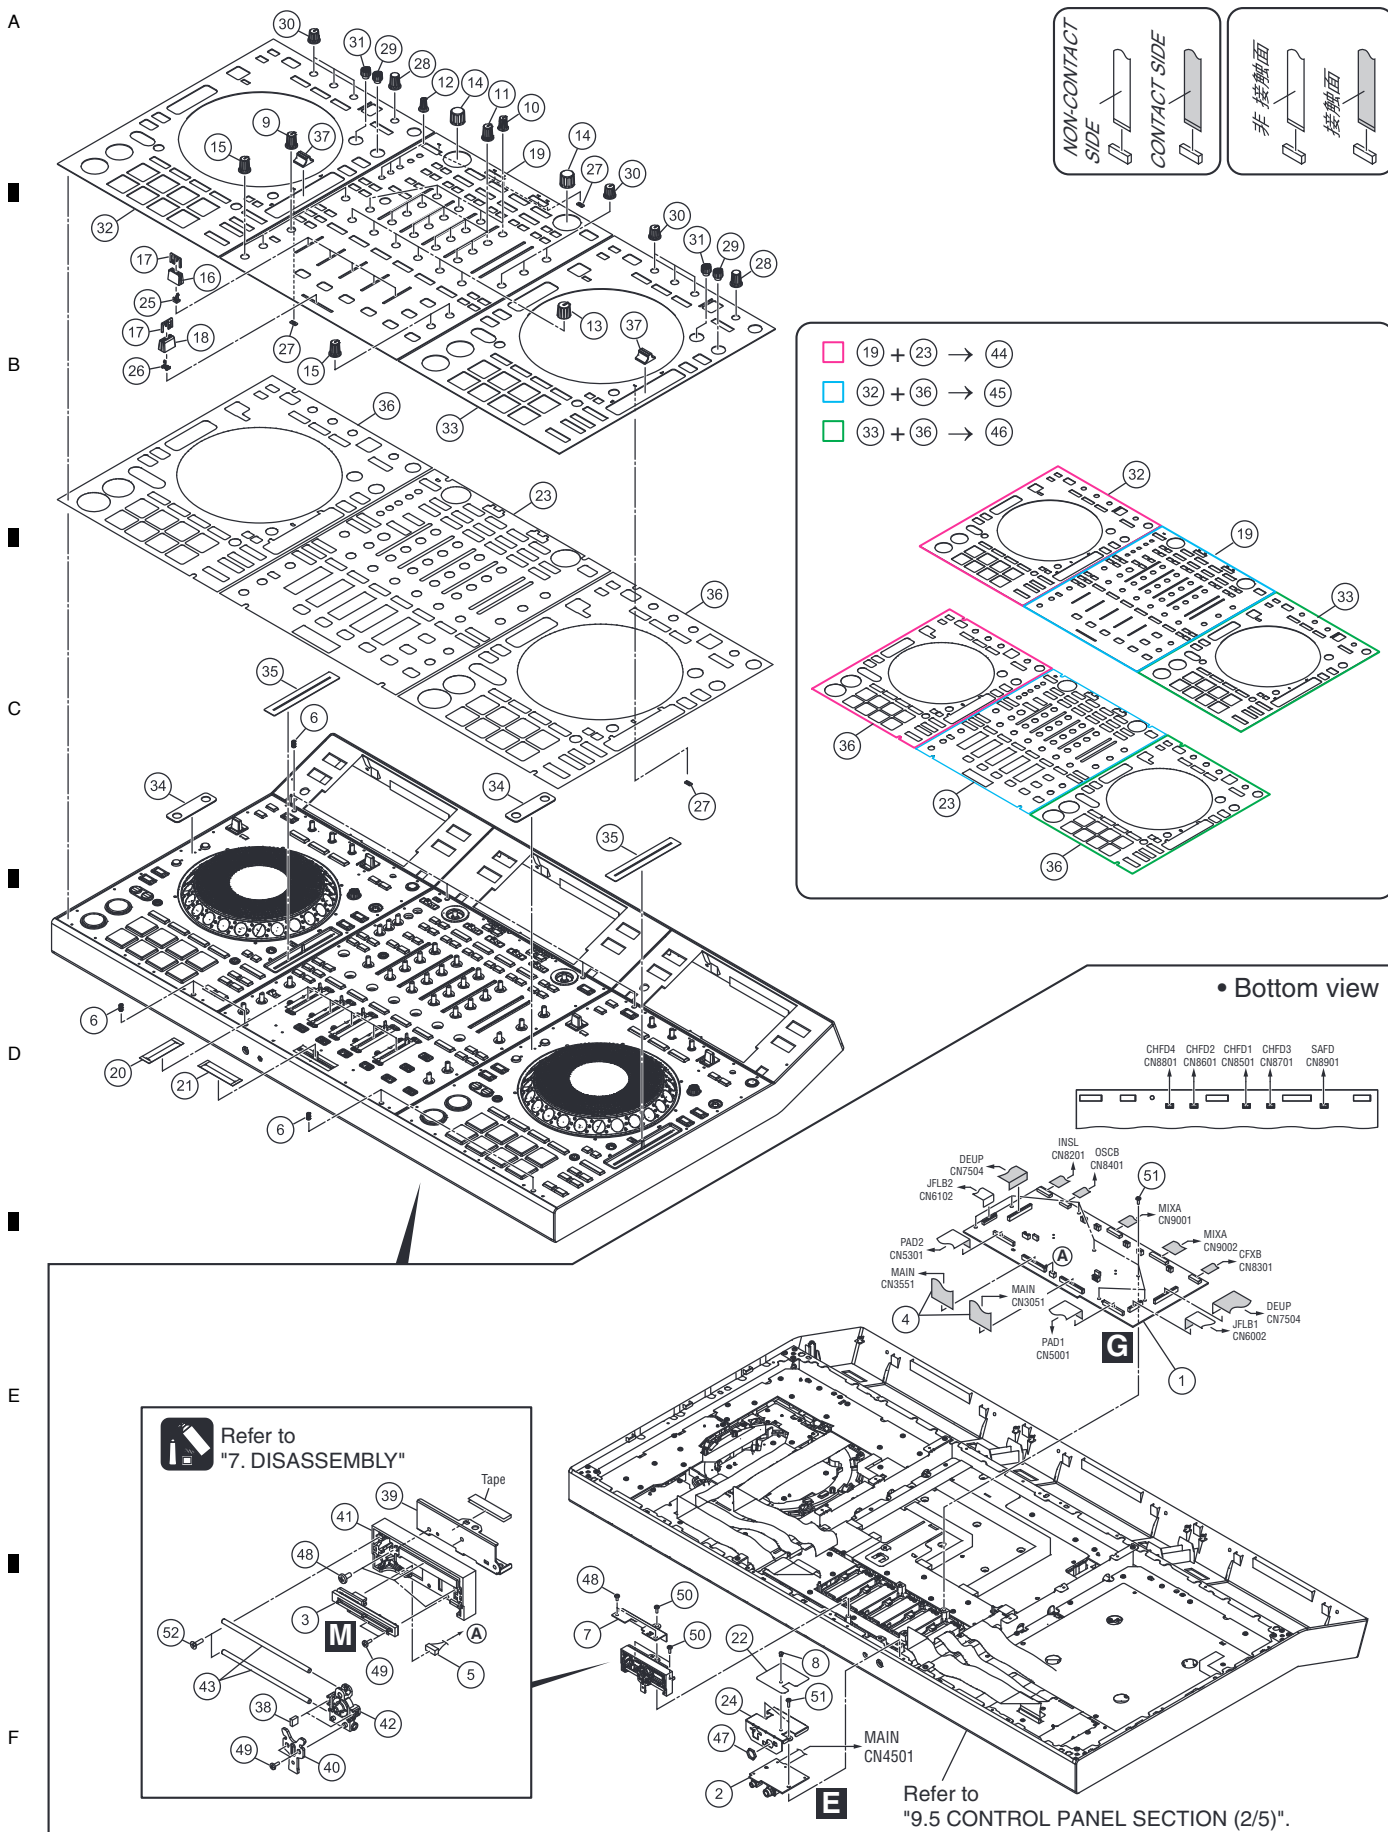


CONTROL PANEL SECTION (1/5) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	STMO Assy	DWX3824	46	•••••	DEA1058	
2	HPJK Assy	DWX3810	47	Nut (M12)	NKX2FNI	A
3	CRFD Assy	DWX3817	48	Screw	BBZ30P060FTC	
4	FFC	DDD1751	49	Screw	BPZ20P050FTC	
5	Connector Assy	PF03PP-B05	50	Screw	BPZ30P080FNI	
6	Coil Spring	DBH1813	51	Screw	BPZ30P100FTC	■
7	Holder	DNF2005	52	Screw	CPZ26P080FTC	
8	Nylon Rivet	AEC1671				
9	Knob (RES)	DAA1250				
10	Knob/CH	DAA1300				
11	Knob/RSW	DAA1305				B
12	Knob/RSW	DAA1307				
13	Knob/FRE	DAA1309				
14	Knob/BRS	DAA1342				
15	Knob	DAA1368				■
16	Slider Knob 1	DAC2684				
17	Slider Knob 2	DAC2685				
18	Knob	DAC3238				
19	Plate	DAH3101				
20	Fader Packing	DEC3355				C
21	Packing	DEC3642				
22	Sheet	DEC3705				
23	DS Tape	DEH1087				
24	Stay	DNF1992				■
25	Slider Knob Stopper	DNK5888				
26	Stopper	DNK6440				
27	Lens	DNK6621				
28	Rotary SW Knob (C)	DAA1180				
29	Knob/CFC	DAA1326				D
30	Knob	DAA1370				
31	Adjust Knob Black	DAC2528				
32	Plate	DAH3102				
33	Plate	DAH3116				■
34	Plate	DAH3106				
35	Sheet	DAH3112				
36	DS Tape	DEH1086				
37	Knob/SLD	DNK5981				
NSP 38	Cushion	DEC3356				E
39	Stay	DNF1942				
40	Lever	DNH3211				
41	Holder	DNK6425				
42	Slider	DNK6426				■
43	Guide Bar	VLL1514				
44	•••••	DEA1056				
45	•••••	DEA1057				

9.5 CONTROL PANEL SECTION (2/5)


A • Bottom view

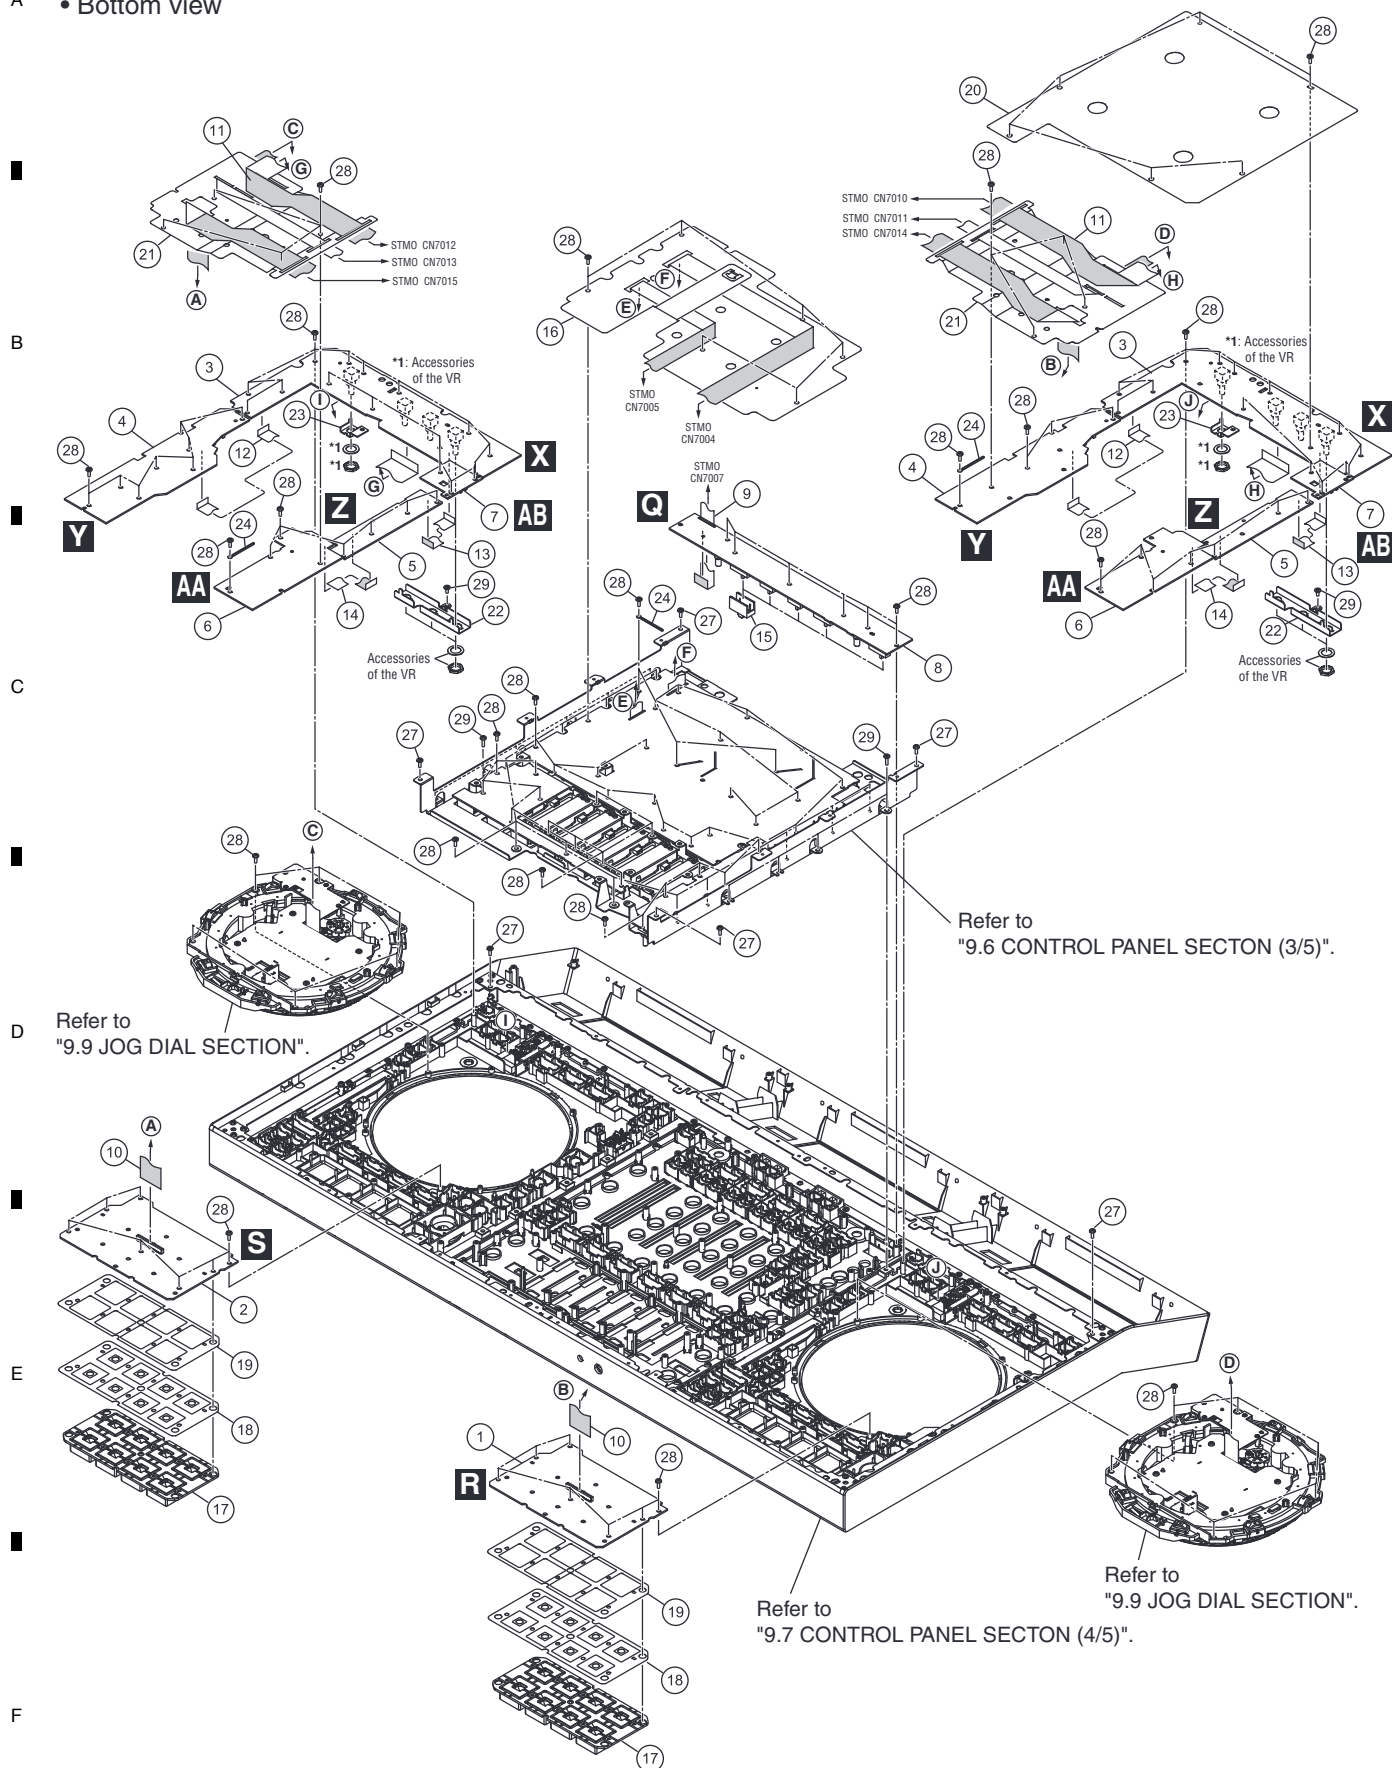

CONTROL PANEL SECTION (2/5) PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	PAD1 Assy	DWX3818	
2	PAD2 Assy	DWX3819	A
3	DEUP Assy	DWX3811	
4	SLDB Assy	DWX3812	
5	DUAL Assy	DWX3813	
6	PLAY Assy	DWX3814	■
7	REVB Assy	DWX3826	
8	INSL Assy	DWX3800	
9	FFC	DDD1742	
10	FFC	DDD1745	
11	FFC	DDD1747	B
12	FFC	DDD1748	
13	FFC	DDD1749	
14	12P FFC	DDD1507	
15	Cap	DAC3136	
16	Sheet	DEC3682	■
17	Button/PAD	DEB2005	
18	Sensor	DEC3656	
19	Spacer	DEC3667	
20	Sheet	DEC3683	C
21	Sheet	DEC3684	
22	Stay	DND1306	
23	Stay	DNF2004	
24	Cord Clamper (Steel)	RNH-184	
25			■
26			
27	Screw	BBZ30P060FTC	
28	Screw	BPZ30P080FNI	
29	Screw	BPZ30P100FTC	D

 4



Greasing must be performed at a total of 8 points, 2 points each for the upper and bottom places of each shaft. (0.4 to 1 mg per point × 8 points)
After applying grease, move the slider base back and forth from one end to the other for approximately 10 to 20 strokes, in order to fully spread the grease.


グリス塗布位置は各シャフト上下2箇所ずつ計8箇所です。
(1ポイント当たり 0.4~1 mg ×8ポイント)
グリス塗布後はスライダーベースを動かして(フルストローク)
摺動部にグリスを十分にまじせてください。
(動かす回数の目安は10~20往復)

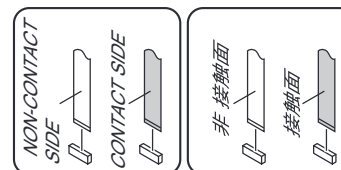





E

F19

9.7 CONTROL PANEL SECTION (4/5)

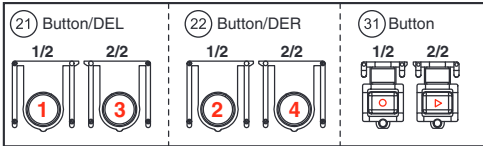

Screw tightening order ネジの締め順

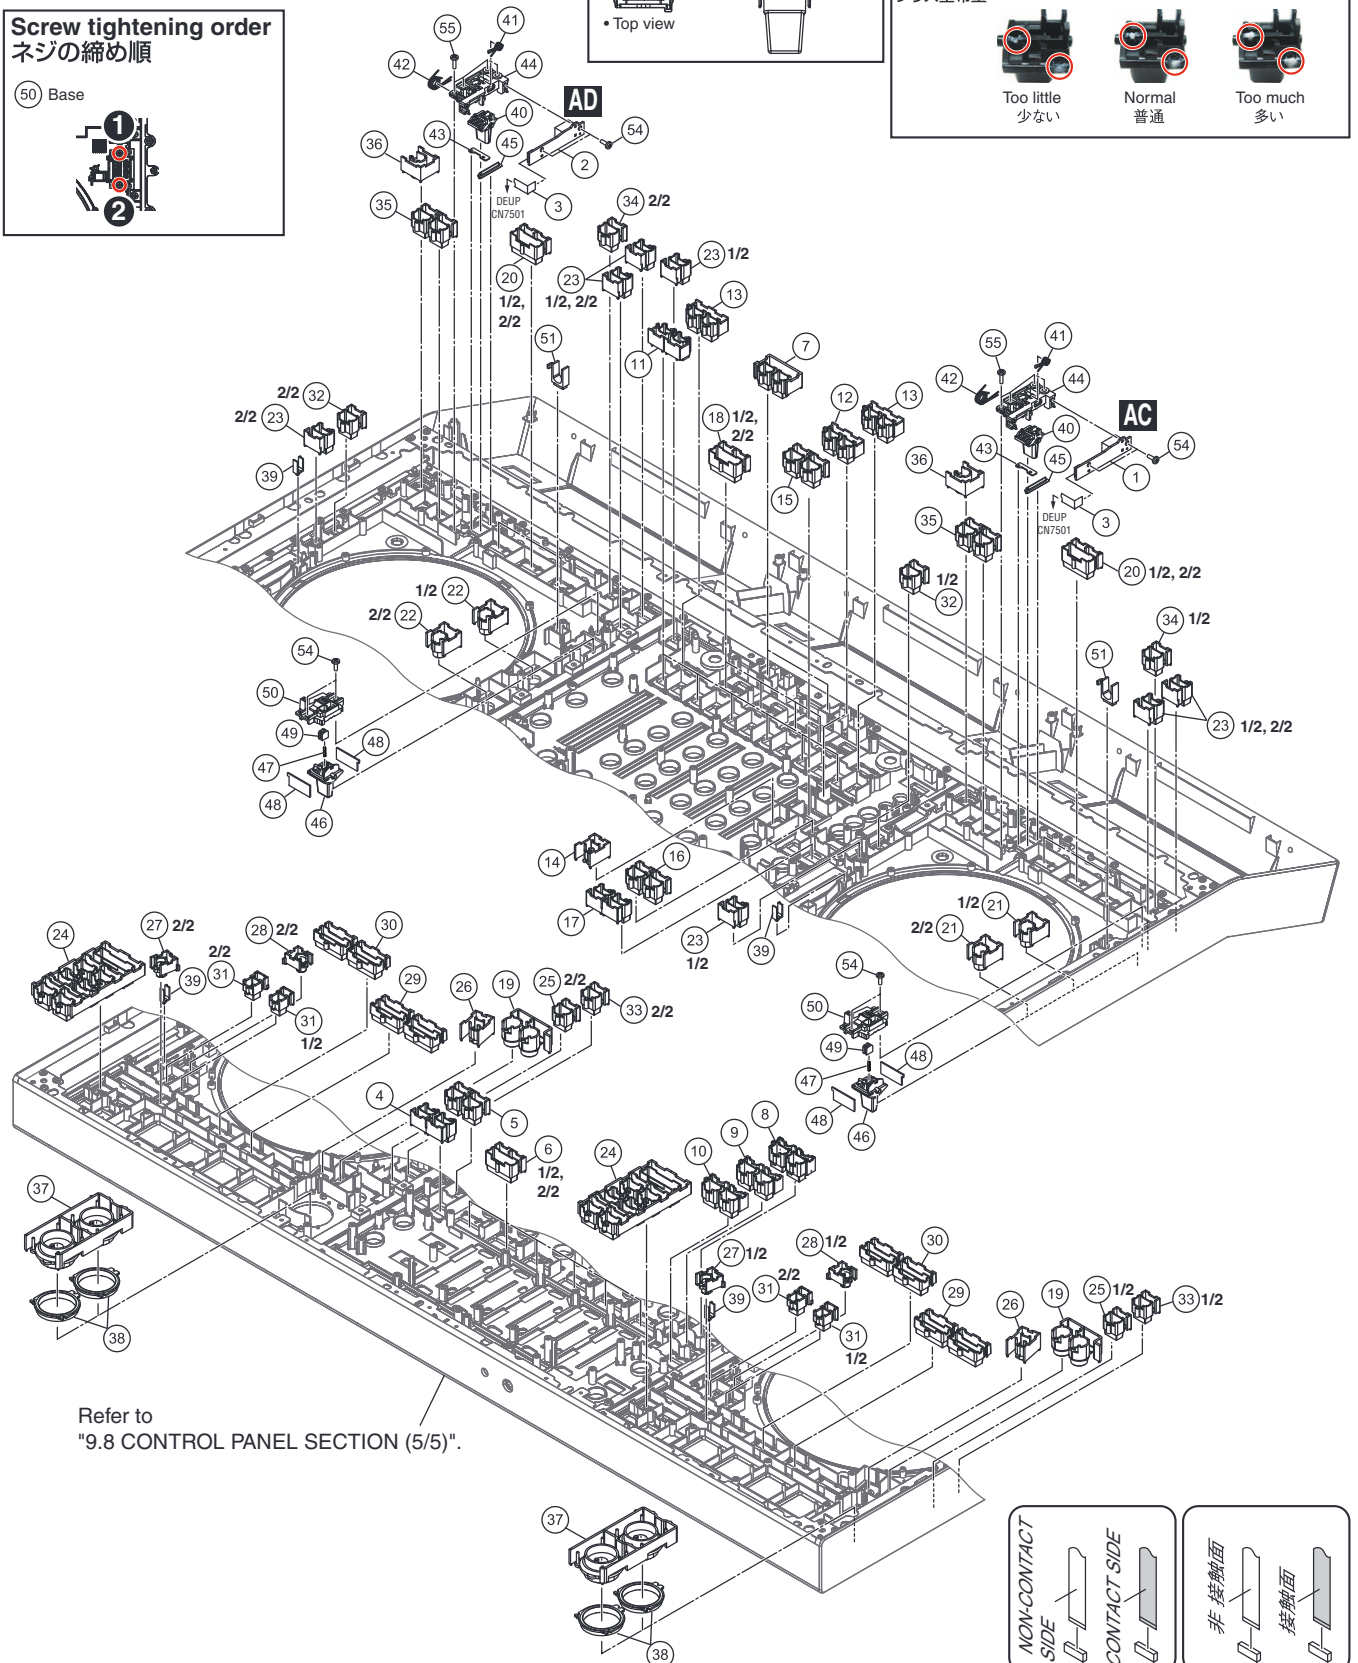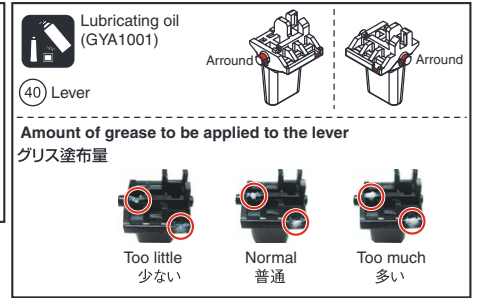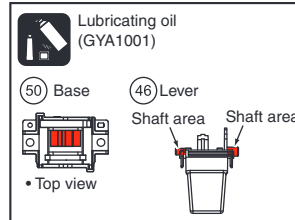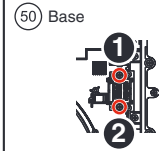


1 2 3 4

CONTROL PANEL SECTION (4/5) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	RFX1 Assy	DWX3820	46	Lever	DAC3097
	2	RFX2 Assy	DWX3821	47	Lever Spring	DBH1702
	3	FFC	DDD1752	48	Brake	DEC3634
	4	Button/FX2	DAC2986	49	Lever CAP	DNK5344
	5	Button	DAC3154	50	Base	DNK6470
	6	Button	DAC3155	51	Lens	DNK6622
	7	Button	DAC3156	52	•••••	
	8	Button	DAC3166	53	•••••	
	9	Button	DAC3179	54	Screw	BPZ30P080FNI
	10	Button	DAC3180	55	Screw	BPZ30P100FTC
B	11	Button	DAC3167			
	12	Button	DAC3186			
	13	Button	DAC3187			
	14	Button	DAC3193			
	15	Button	DAC3223			
	16	Button	DAC3181			
	17	Button	DAC3182			
	18	Button	DAC3224			
	19	Button/BSY	DAC2810			
	20	Button/ON	DAC2991			
C	21	Button/DEL	DAC3000			
	22	Button/DER	DAC3001			
	23	Button	DAC3125			
	24	Button	DAC3128			
	25	Button	DAC3239			
	26	Button	DAC3194			
	27	Button	DAC3185			
	28	Button	DAC3184			
	29	Button	DAC3196			
	30	Button	DAC3204			
D	31	Button	DAC3168			
	32	Button	DAC3225			
	33	Button	DAC3240			
	34	Button	DAC3228			
	35	Button	DAC3226			
	36	Button	DAC3227			
	37	Button	DXB2174			
	38	Ring Rens (PLAY)	DNK5315			
	39	Lens/TMP	DNK6307			
	40	Lever	DAC2804			
E	41	Torsion Spring/LVR	DBH1790			
	42	Torsion Spring/PRS	DBH1791			
	43	Cushion	DEB1999			
	44	Holder/LVR	DNK6025			
	45	Lens	DNK6620			
F						

Screw tightening order
ネジの締め順

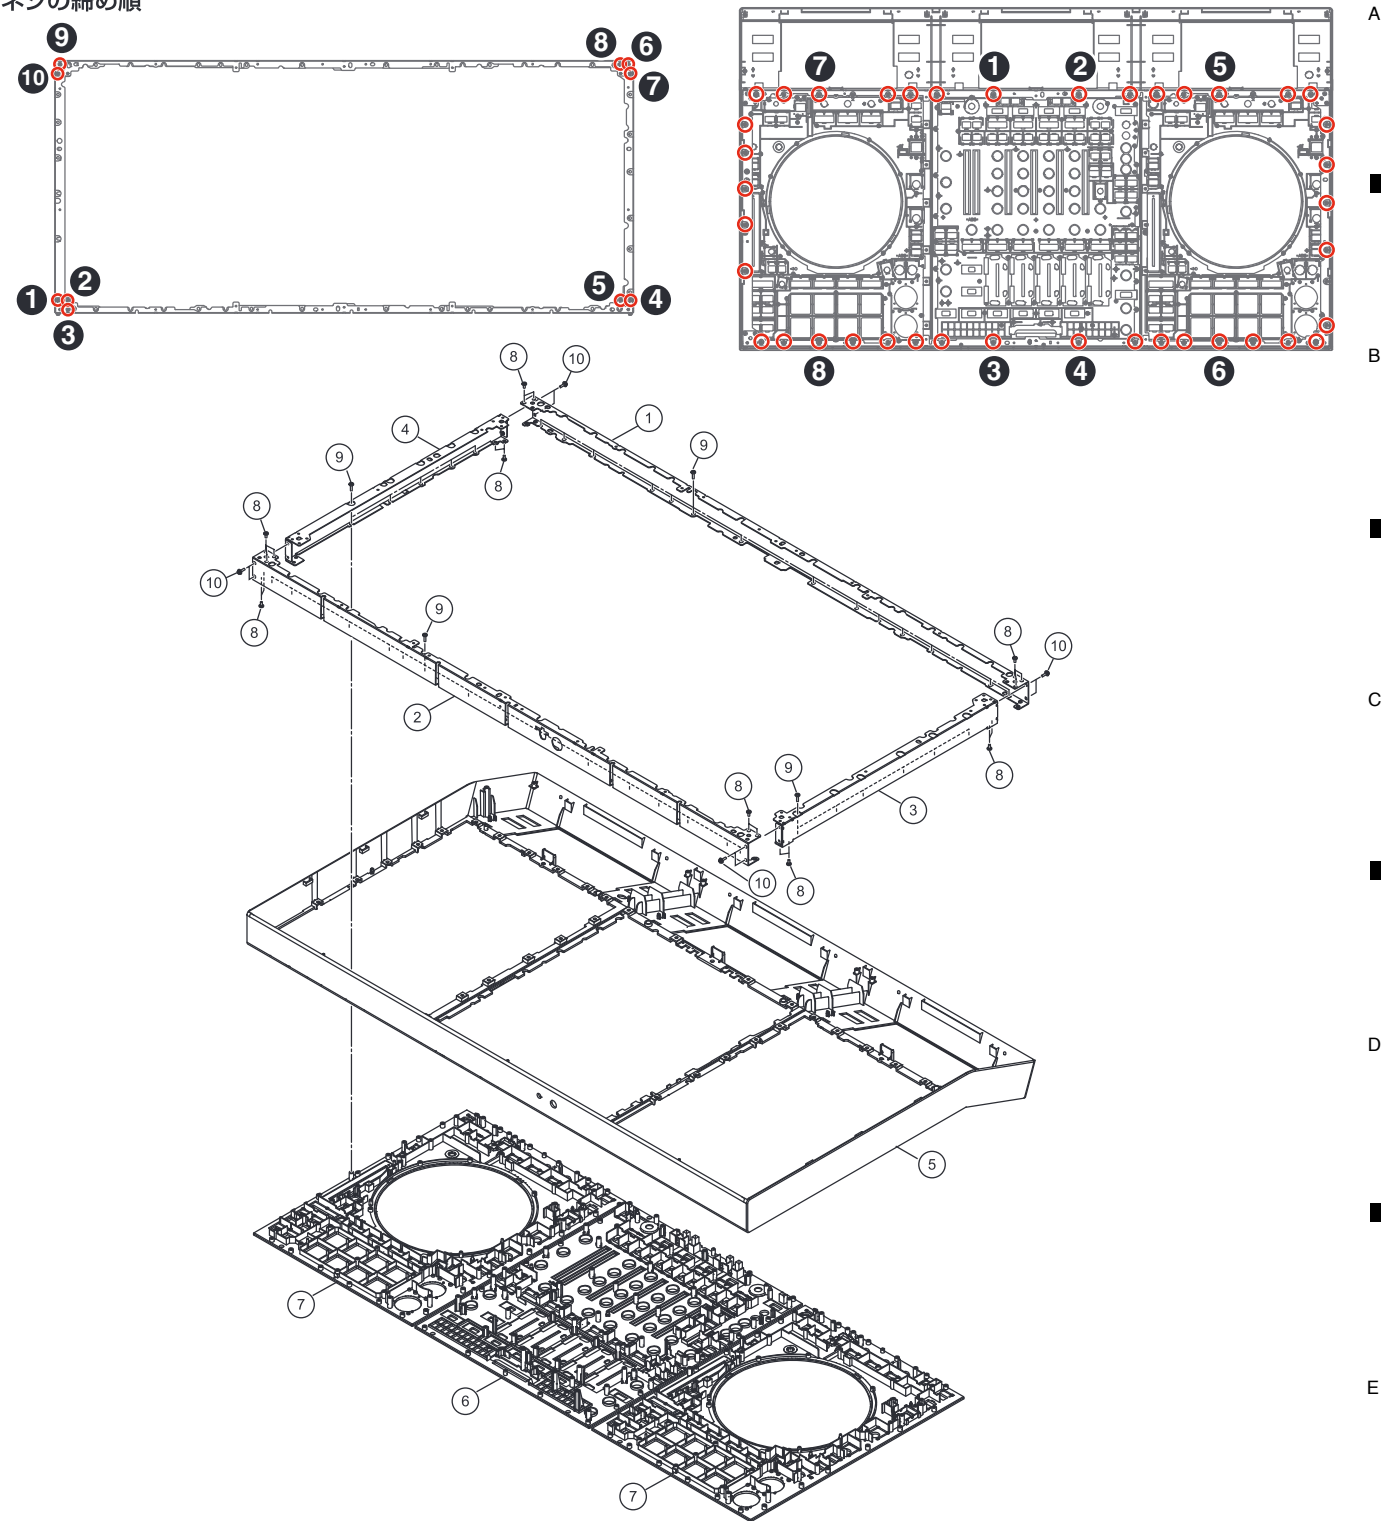

CONTROL PANEL SECTION (5/5) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Frame	DNH3260	6	Panel	DNK6614
2	Frame	DNH3261	7	Panel	DNK6615
3	Frame	DNH3262	8	Screw	BBZ30P060FTC
4	Frame	DNH3263	9	Screw	BPZ30P100FTC
5	Frame	DNK6613	10	Screw	PMB30P060FTC

△



