


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

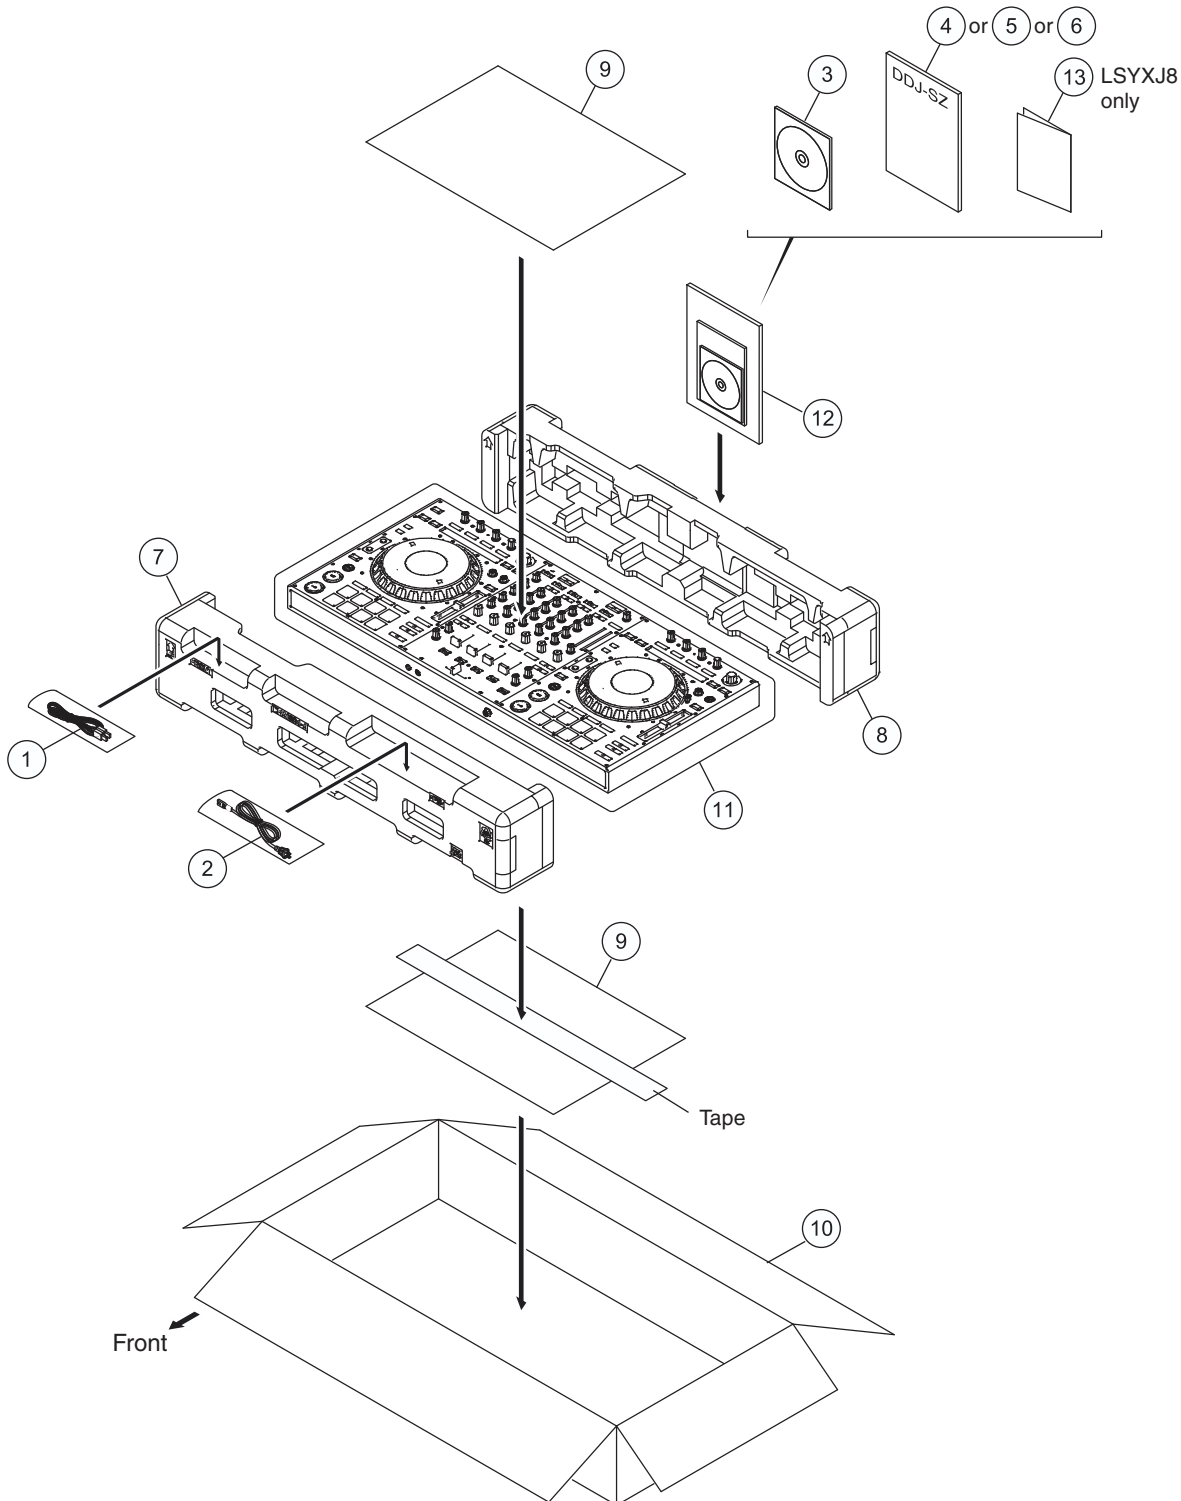

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	USB Cable	DDE1128
	2	Power Cord	See Contrast table (2)
	3	CD-ROM (Installation Disc)	DXX2754
	4	Operating Instructions (Basic Edition)	See Contrast table (2)
	5	Operating Instructions (Basic Edition)	See Contrast table (2)
	6	Operating Instructions (Basic Edition)	See Contrast table (2)
	7	Pad/F	DHA1904
	8	Pad/R	DHA1905
	9	Packing Board/ACC	DHC1084
	10	Packing Case	See Contrast table (2)
	11	Mirror Mat (1200*1000)	DHL1169
NSP	12	Polyethylene Bag	AHG7117
NSP	13	Warranty Card	See Contrast table (2)

(2) CONTRAST TABLE


DDJ-SZ/UXJCB, LSYXJ8 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SZ /UXJCB	DDJ-SZ /LSYXJ8	DDJ-SZ /XJCN5
⚠	2	Power Cord	DDG1108	ADG1244	DDG1114
	4	Operating Instructions (Basic Edition)(En)	DRH1247	Not used	Not used
	5	Operating Instructions (Basic Edition)(En, Fr, De, It, NI, Es, Pt, Ru)	Not used	DRH1249	Not used
	6	Operating Instructions (Basic Edition)(Zhcn)	Not used	Not used	DRH1250
	10	Packing Case	DHG3305	DHG3304	DHG3308
NSP	13	Warranty Card	Not used	ARY7158	Not used

9.2 TOP and CHASSIS SECTION

*Note:

These parts (41) are used DAA1210 for the products of the first production lot.

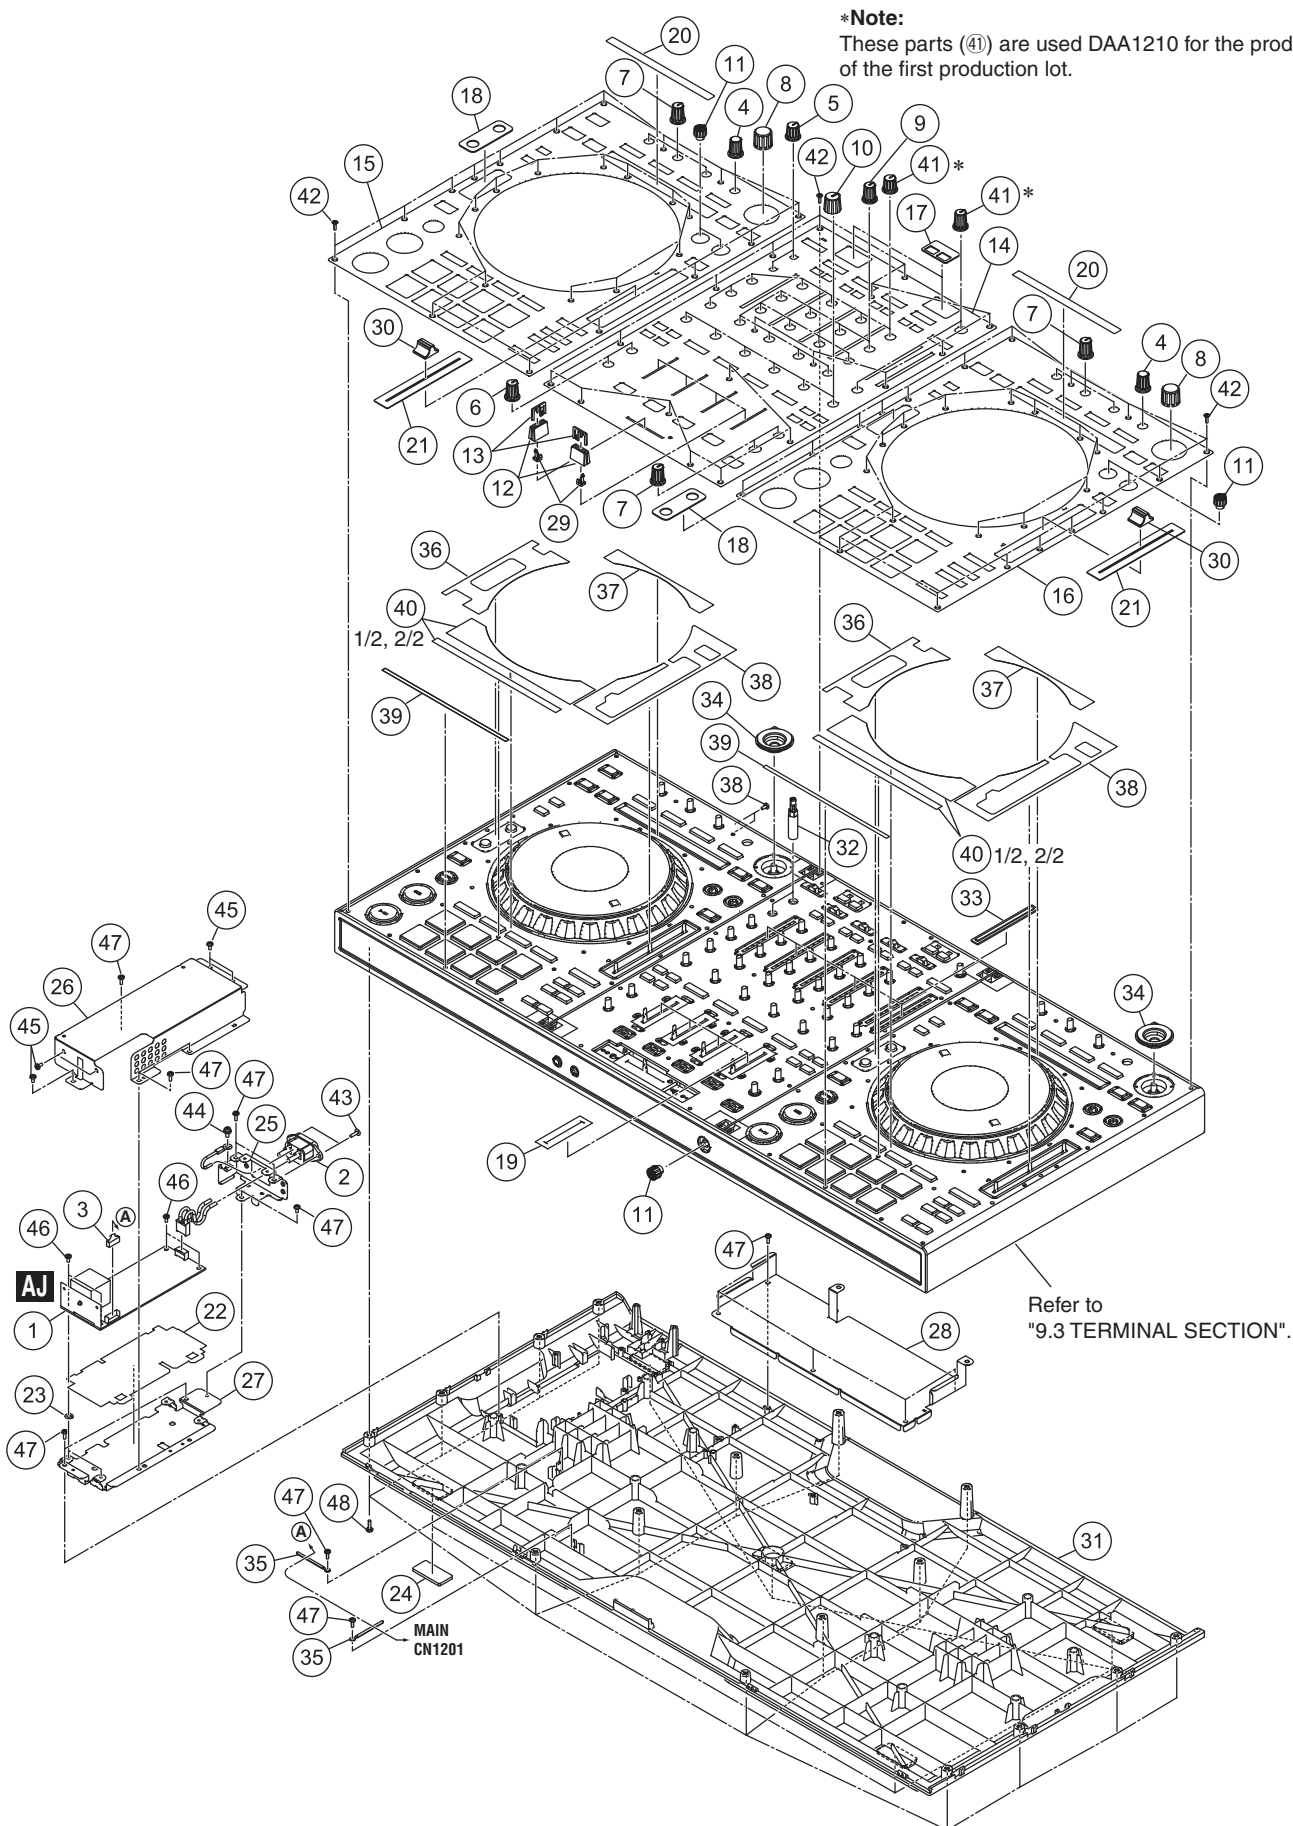

TOP and CHASSIS SECTION PARTS LIST

Mark	No.	Description	Part No.	
⚠	1	POWER SUPPLY Assy	DWR1463	
⚠	2	AC Inlet/3P	DKP3954	A
	3	Crimp Connector/6P	DKP3956	
	4	Rotary Sw Knob (C)	DAA1180	
	5	Knob (MA)	DAA1210	
	6	Knob (Black)	DAA1212	■
	7	Rotary Knob (BN)	DAA1220	
	8	Dial Knob	DAA1259	
	9	Knob/RSW	DAA1305	
	10	Knob/FRE	DAA1309	
	11	Knob/CFC	DAA1326	B
	12	Slider Knob 1	DAC2684	
	13	Slider Knob 2	DAC2685	
	14	Plate/MIX	DAH2976	
	15	Plate/DEL	DAH2982	■
	16	Plate/DER	DAH2983	
	17	Panel/USB	DAH2984	
	18	Panel/DEC	DAH2986	
	19	Fader Packing	DEC3355	
	20	Sheet/CDC	DEC3532	C
	21	Sheet/TMP	DEC3541	
	22	Barrier/SWP	DEC3553	
	23	Washer/PWR	DEC3554	
	24	Sheet/LEG	DEC3557	■
	25	Bracket/ACI	DNF1932	
	26	Shield Case/U	DNH3142	
	27	Shield Case/L	DNH3143	
	28	Shield Plate	DNH3155	
	29	Slider Knob Stopper	DNK5888	D
	30	Knob/SLD	DNK5981	
	31	Chassis	DNK6286	
	32	Shaft/EXT	DNK6305	
	33	Lens/LVL	DNK6306	■
	34	Ring/BRS	DNK6312	
	35	Cord Clamper (Steel)	RNH-184	
	36	DS Tape/ALL	DEH1048	
	37	DS Tape/ALT	DEH1049	
	38	DS Tape/ALR	DEH1050	E
	39	DS Tape/ALB	DEH1051	
	40	DS Tape/PAJ	DEH1056	
	41	Knob/SHR	DAA1333	
	42	Screw	CPZ26P080FTB	■
	43	Screw	IBZ30P080FTB	
	44	Screw	PMH40P080FTC	
	45	Screw	BBZ30P060FTB	
	46	Screw	BBZ30P080FTB	F
	47	Screw	BPZ30P080FNI	
	48	Screw	BPZ30P100FTB	

9.3 TERMINAL SECTION

A

B

C


D

E

F

Refer to
"9.4 CONTROL PANEL SECTION".

*1: Washer and Nut
Accessories of VR

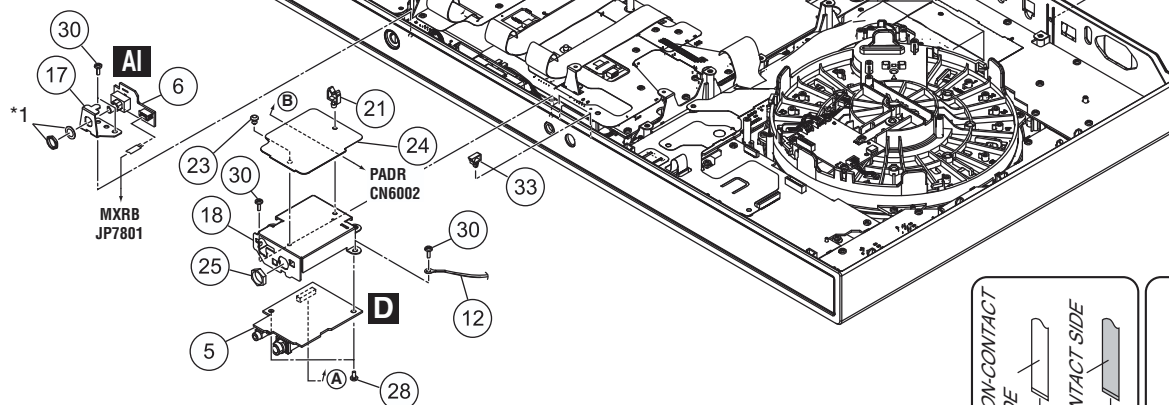

TERMINAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	MAIN Assy	DWX3535	
2	USBB Assy	DWX3555	A
3	AIJK Assy	DWX3536	
4	AOJK Assy	DWX3537	
5	HPJK Assy	DWX3538	
6	CRFCV Assy	DWX3547	
7	PSWB Assy	DWX3560	
8	STRB Assy	DWX3585	
9	Shielded Conn-Cable	DDA1048	
10	FFC/23P	DDD1658	
11	FFC/25P	DDD1659	B
12	Earth Lead Wire	DE012VC0	
13	Earth Terminal	DKE1015	
14	Power Knob	DAC2306	
15	Sheet/LEG	DEC3534	
16	Bracket/TRM	DNF1933	
17	Stay/CFC	DNF1935	
18	Stay/HP	DNF1937	
19	Plate/MGD	DNH3139	
20	Shield Plate/USB	DNH3156	C
21	Holder	VEC1355	
22	Cord Clamper (Steel)	RNH-184	
23	Push Rivet	XEC3034	
24	Barrier/HP	DEC3548	
25	Nut (M12)	NKX2FNI	
26	Spring Lock Washer	WS40FNI	
27	Screw (M3*5)	DBA1340	
28	Screw	BBZ30P060FTB	
29	Screw	BBZ30P080FTB	D
30	Screw	BPZ30P080FNI	
31	Screw	BPZ30P080FTB	
32	Screw	PPZ30P080FTB	
33	Locking Mini Clamp	DEC2439	

F



MIXER SECTION PARTS LIST

Mark No.	Description	Part No.	
1	MXRA Assy	DWX3543	
2	MXRB Assy	DWX3544	A
3	FAD1 Assy	DWX3540	
4	FAD2 Assy	DWX3541	
5	FAD3 Assy	DWX3539	
6	FAD4 Assy	DWX3542	■
7	CROSS FADER Assy	DXA2257	
8	Connector Assy	PF03PP-B12	
9	Connector Assy	PF03PP2B07	
10	Connector Assy	PF03PP4B12	
11	Connector Assy	PF03PP6B07	B
12	Slide SW Cap	DAC2400	
13	Slide SW Cap (W)	DAC2401	
14	Packing/FAD	DEC3542	
NSP 15	Guide Shaft (S)	DLA1918	■
16	Stay/MIX	DND1280	
17	Stay/CRF	DNF1936	
18	Lever Plate	DNH2954	
19	VR Stay	DNH2955	
20	Slider Base	DNK5851	C
21	Shaft Holder	DNK5852	
22	Holder	VEC1355	
23			
24			
25	Screw	BBZ30P060FTB	■
26	Screw	BPZ20P060FTC	
27	Screw	BPZ30P080FNI	
28	Screw	BSZ20P040FTB	
29	Screw	CPZ26P080FTC	D
30	Screw	PMH20P040FTC	

1 2 3 4

9.6 PANEL and BUTTON SECTION

A


B

C

D

E

F

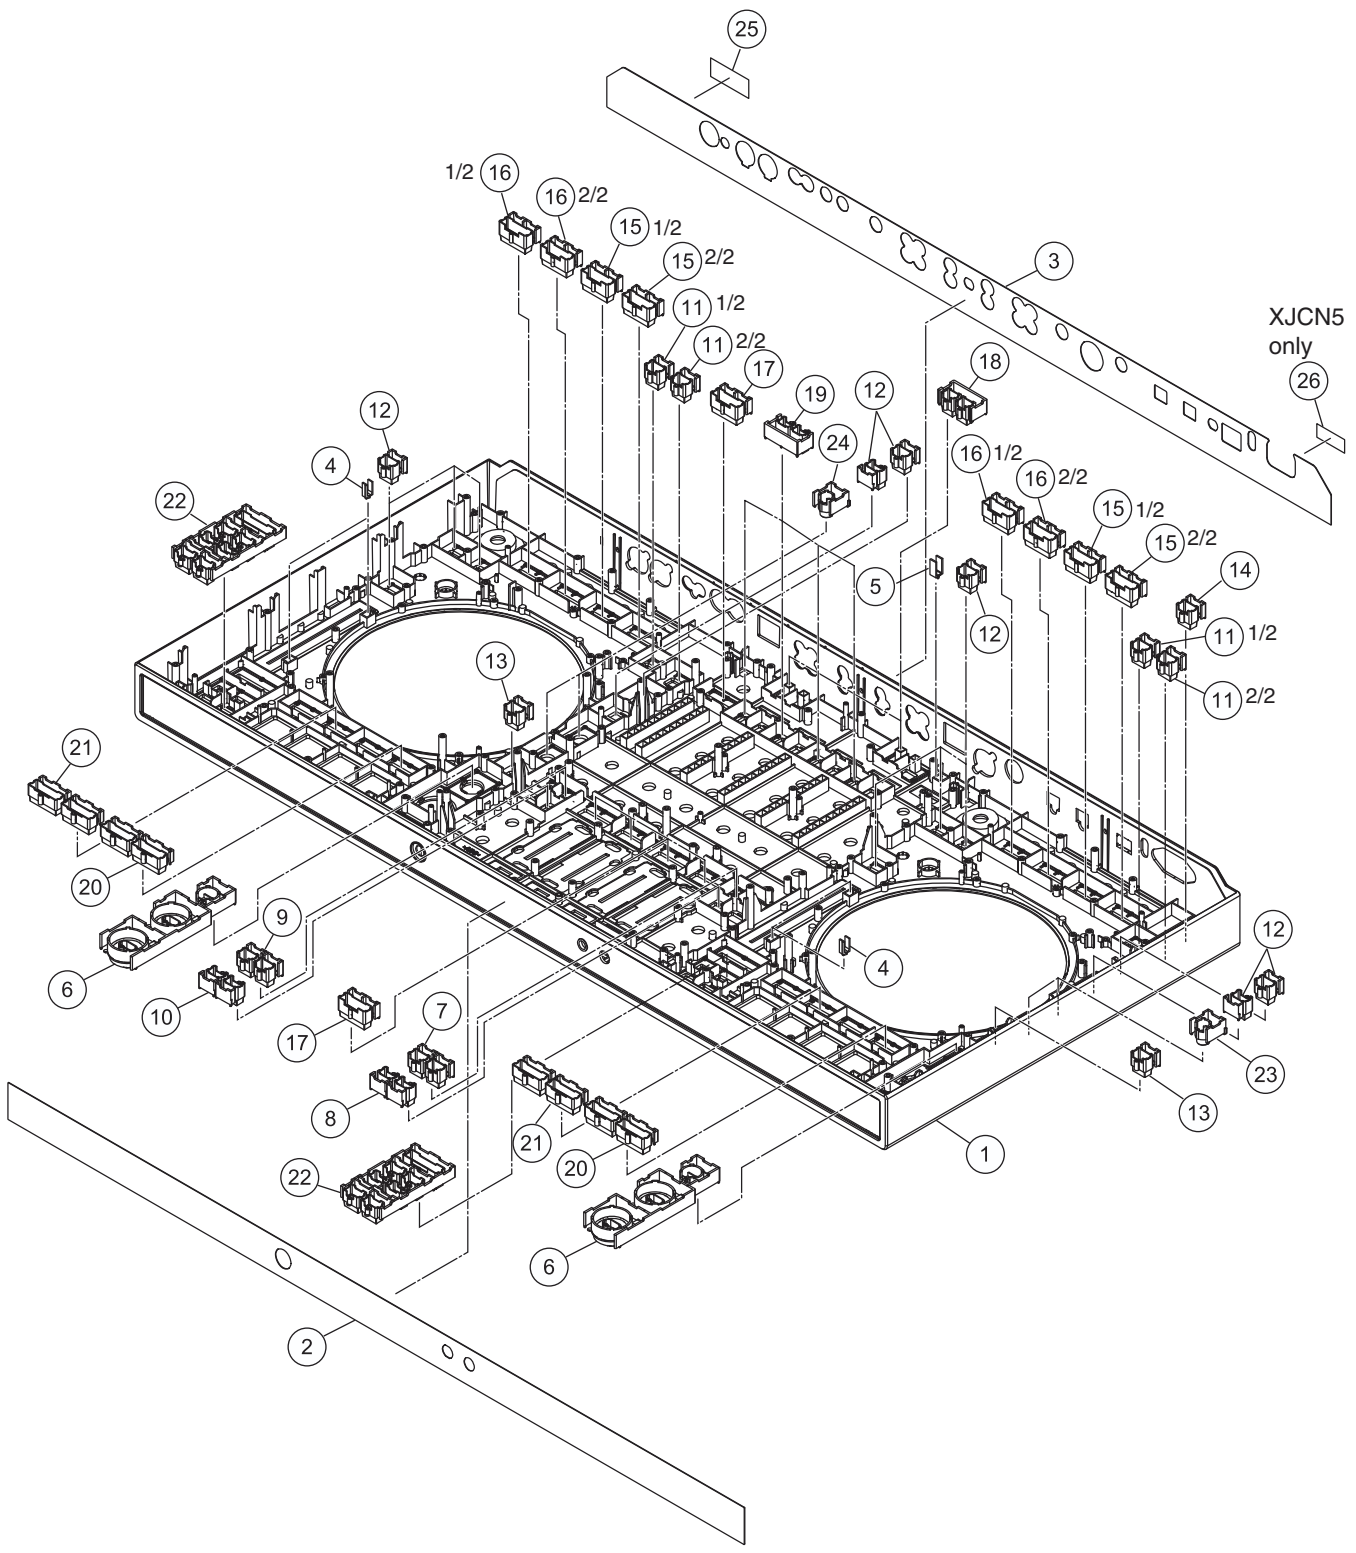

(1) PANEL and BUTTON SECTION PARTS LIST

Mark No.	Description	Part No.
1	Control Panel	DNK6285
2	Sheet/FR	DAH2991
3	Sheet	See Contrast table (2)
4	Lens/TMP	DNK6307
5	Lens/MIC	DNK6308
6	Button/PLY	DAC2982
7	Button/CX1	DAC2983
8	Button/CX2	DAC2984
9	Button/FX1	DAC2985
10	Button/FX2	DAC2986
11	Button/CEN	DAC2987
12	Button/ANY	DAC2988
13	Button/SHT	DAC2989
14	Button/PNL	DAC2990
15	Button/ON	DAC2991
16	Button/TAP	DAC2992
17	Button/CUE	DAC2993
18	Button/USB	DAC2994
19	Button/FX	DAC2995
20	Button/PM1	DAC2996
21	Button/PM2	DAC2997
22	Button/ATL	DAC2998
23	Button/DEL	DAC3000
24	Button/DEL	DAC3001
NSP 25	Serial Label (UPC)	DRW2311
NSP 26	Name Label /CSZ	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-SZ/UXJCB, LSYXJ8 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SZ /UXJCB	DDJ-SZ /LSYXJ8	DDJ-SZ /XJCN5
NSP	3	Sheet	DAH2992	DAH2992	DAH2994
	26	Name Label/CSZ	Not used	Not used	DAL1269