


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

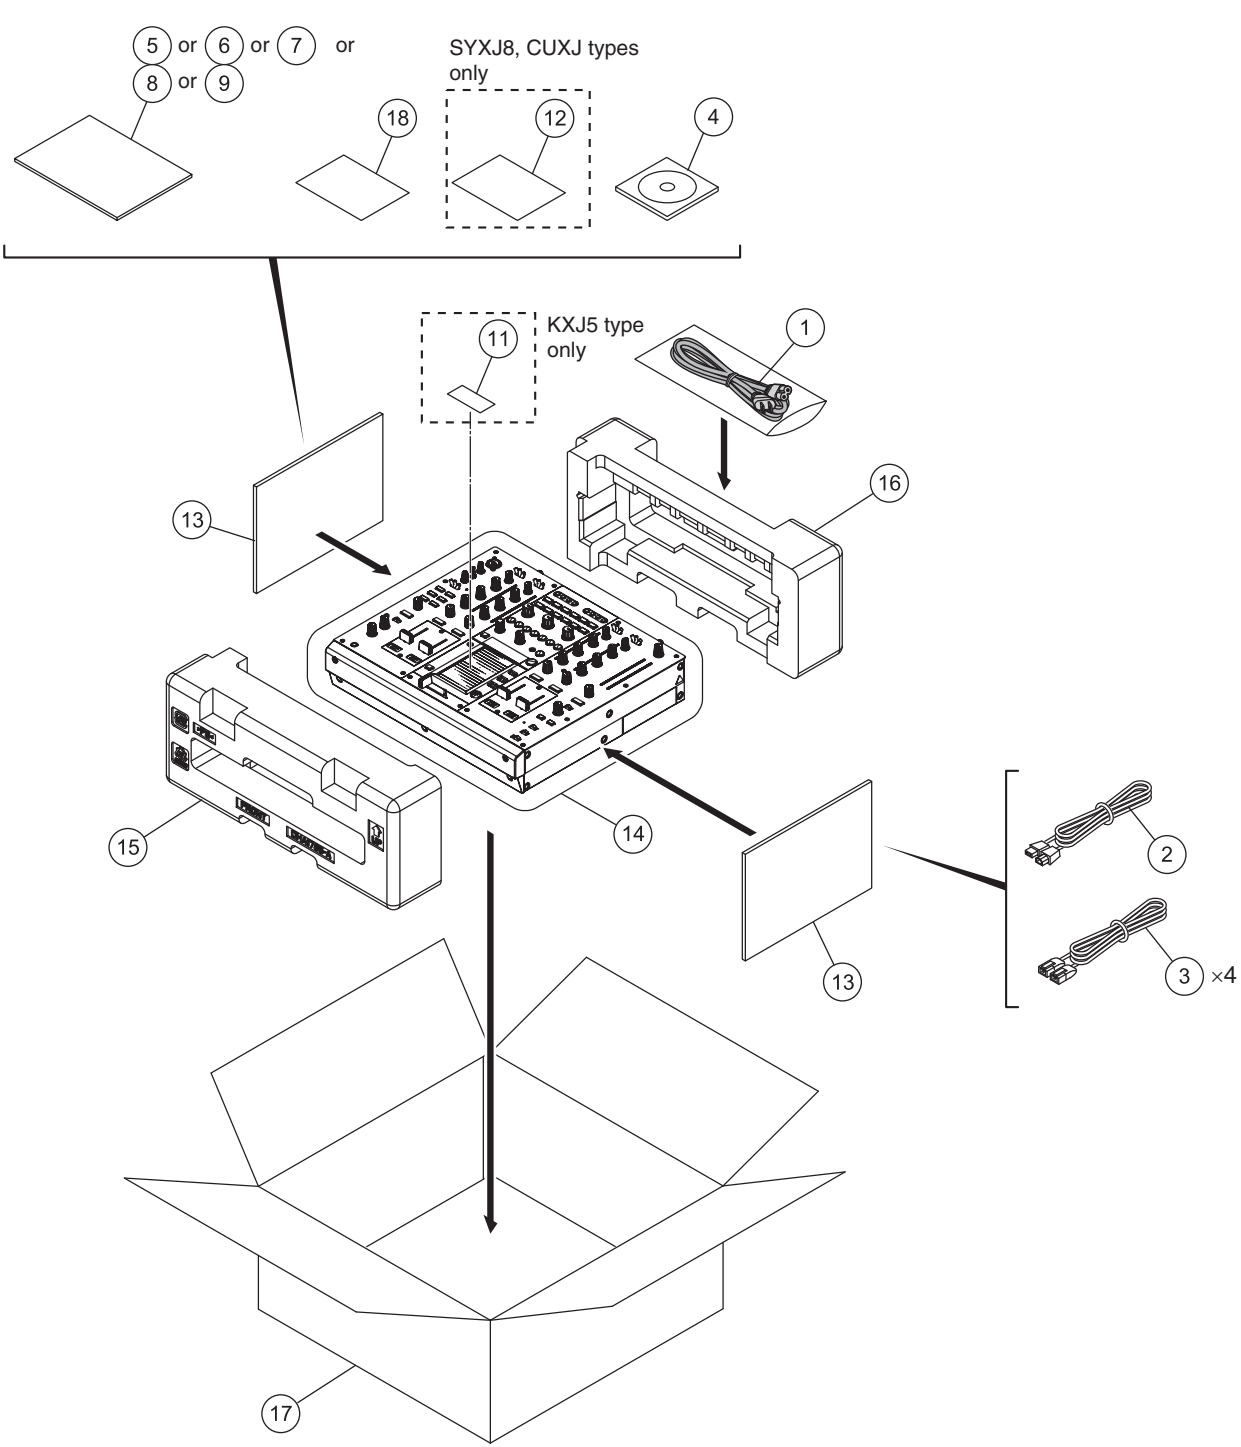

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cable	See Contrast table (2)
2	USB Cable	DDE1128
3	LAN Cable	DDE1131 or DDE1137
4	CD-ROM	DXX2603
5	Operating Instructions	See Contrast table (2)
6	Operating Instructions	See Contrast table (2)
7	Operating Instructions	See Contrast table (2)
8	Operating Instructions	See Contrast table (2)
9	Operating Instructions	See Contrast table (2)
10	•••••	
11	Recycle Label (M)	See Contrast table (2)
NSP 12	Warranty Card	See Contrast table (2)
NSP 13	Polyethylene Bag	AHG7117
14	Mirror Mat (1200 x 1000)	DHL1169
15	Pad F (DJM-2000)	DHA1785
16	Pad R (DJM-2000)	DHA1786
17	Packing Case	See Contrast table (2)
NSP 18	Flyer	See Contrast table (2)

(2) CONTRAST TABLE

DJM-2000/SYXJ8, CUXJ, LXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-2000 /SYXJ8	DJM-2000 /CUXJ	DJM-2000 /LXJ	DJM-2000 /KXJ5	DJM-2000 /AXJ5
⚠	1	Power Cable	ADG7062	DDG1028	ADG7062	XDG3066	ADG7105
	5	Operating Instructions (En, Fr, De, It, NI, Es, Ru)	DRB1497	Not used	Not used	Not used	Not used
	6	Operating Instructions (En, Fr)	Not used	DRB1496	Not used	Not used	Not used
	7	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1498	Not used	Not used
	8	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1500	Not used
	9	Operating Instructions (Zhcn, En)	Not used	Not used	Not used	Not used	DRB1499
	11	Recycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
NSP	12	Warranty Card	ARY7107	ARY7043	Not used	Not used	Not used
	17	Packing Case	DHG2953	DHG2954	DHG2955	DHG2886	DHG2885
NSP	18	Flyer	DRH1108	DRH1109	DRH1109	DRH1107	DRH1107

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	AIN1 Assy	DWX2922	26	Extension Shaft B	DNK5366	
2	TRIM1 Assy	DWX2935	27	Front Panel	DNK5371	A
3	TRIM2 Assy	DWX2936	28	Push Rivet	XEC3034	
4	AIN2 Assy	DWX2923	29	Binder	ZCA-SKB90BK	
5	TRIM3 Assy	DWX2937	NSP 30	Caution Label	See Contrast table (2)	
6	TRIM4 Assy	DWX2938	NSP 31	Name Label	See Contrast table (2)	
7	HPJK Assy	DWX2939	NSP 32	Caution Label	See Contrast table (2)	
8	HREG Assy	DWX2940	33	Rivet (Plastic)	AEC1877	
9	MCJK Assy	DWX2934	34	Flange Nut M9	DBN1008	
10	20P FFC	DDD1510	35	Flange Nut M7	DBN1011	
11	Connector Assy	PF04PP-D20	36	Flange Nut M12	DBN1012	B
12	Connector Assy	PF07EE-D10	37	Screw	BBZ30P060FTB	
13	Connector Assy	PF07EE0D12	38	Screw	BBZ30P060FTC	
14	Short Pin Plug	AKM7008	39	Screw	BCZ40P060FTB	
15	Rotary SW Knob S (B)	DAA1178	40	Screw	BPZ30P080FTB	
16	Rotary SW Knob S (C)	DAA1204	41	Screw	BPZ30P100FTB	
17	Locking Mini Clamp	DEC2439	42	Screw	BSZ40P220FTB	
18	Barrier (W)	DEC3271	43	Screw	CCZ30P080FTB	
19	TRIM Stay	DNF1813				
20	Input Stay	DNF1819				C
21	HP Stay	DNF1820				
22	Heat Sink	DNF1850				
23	Side Panel L	DNK5363				
24	Side Panel R	DNK5364				
25	Extension Shaft A	DNK5365				

(2) CONTRAST TABLE

DJM-2000/SYXJ8, CUXJ, LXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-2000 /SYXJ8	DJM-2000 /CUXJ	DJM-2000 /LXJ	DJM-2000 /KXJ5	DJM-2000 /AXJ5
NSP	30	Caution Label	Not used	DRW2429	DRW2430	DRW2432	Not used
NSP	31	Name Label	DRW2423	DRW2424	DRW2425	DRW2428	DRW2427
NSP	32	Caution Label	Not used	DRW1975	Not used	Not used	Not used

A


B

C

D

E

F

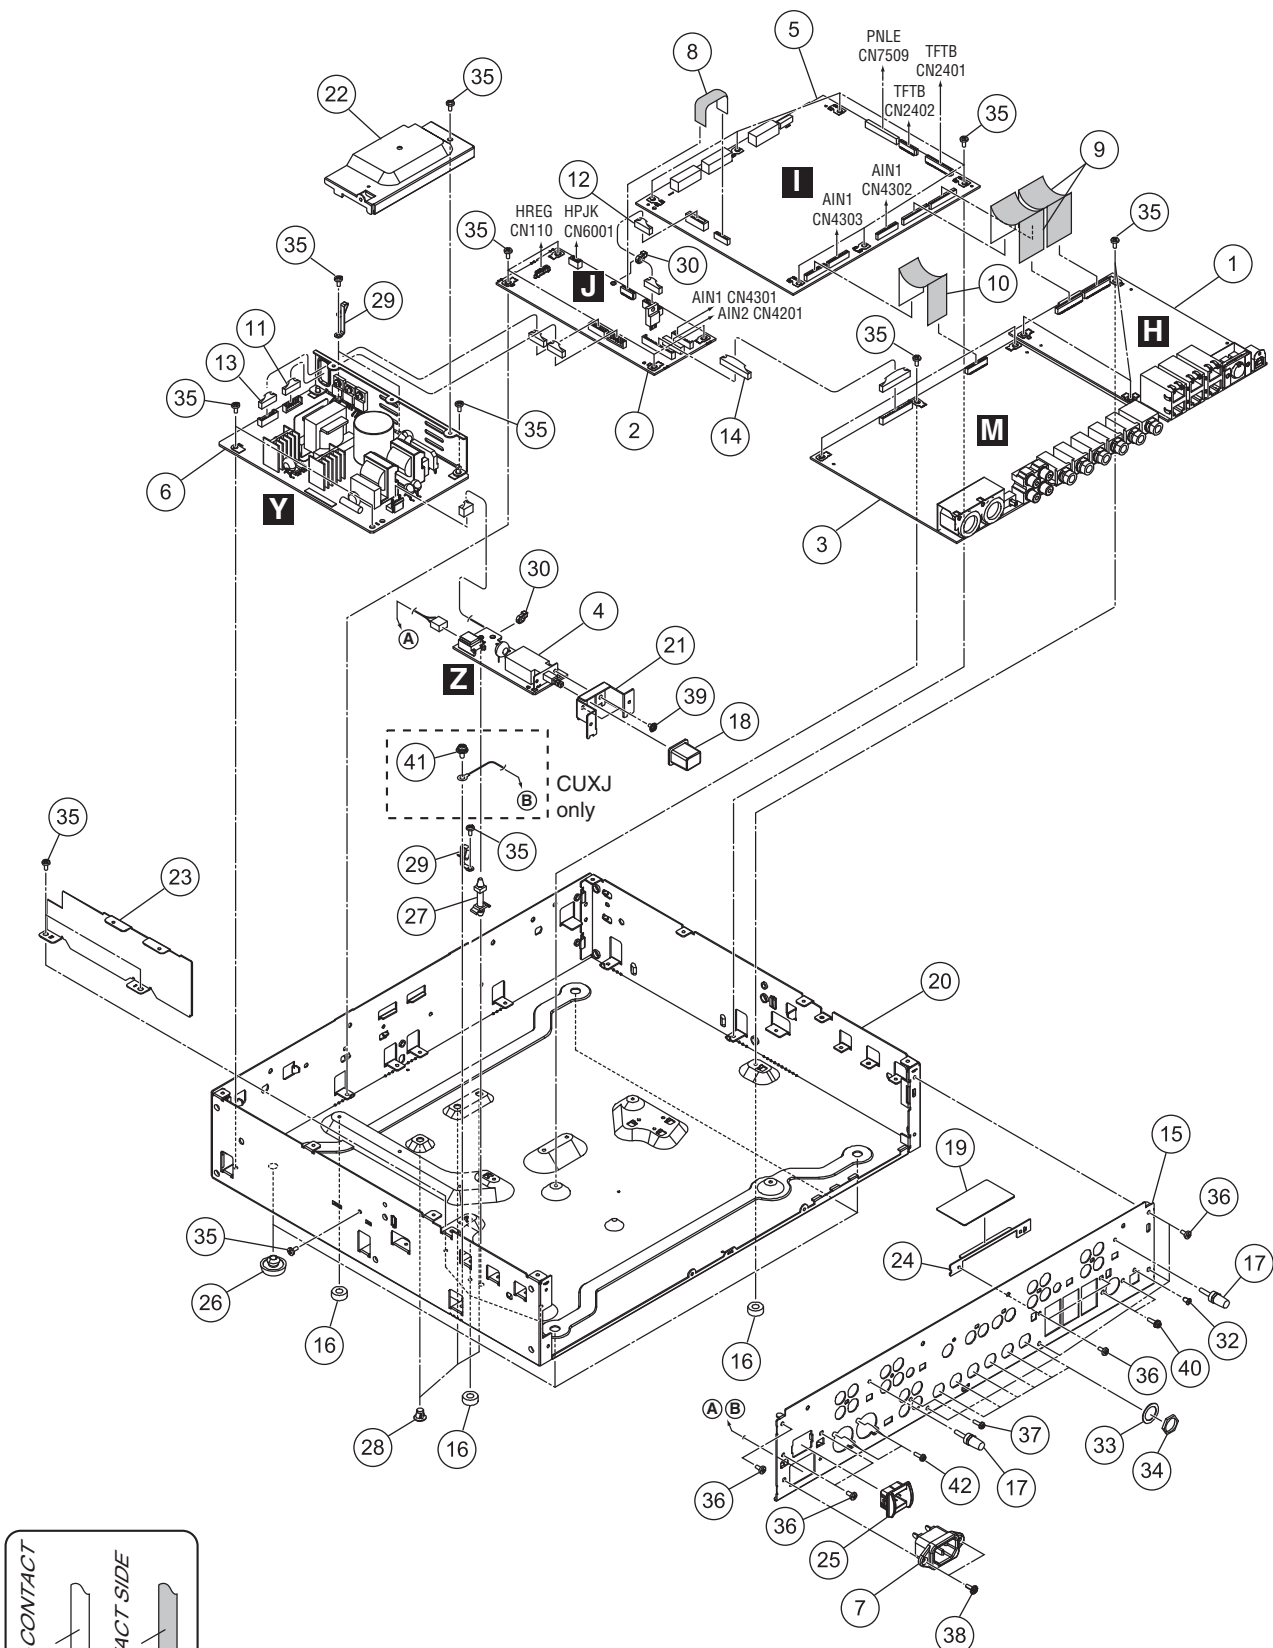

(1) BOTTOM SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
	1 PCIF Assy	DWX2925		26 Foot (Rubber)	REC-434	
	2 HAMP Assy	DWX2919	NSP 27	PC Support	VEC1584	A
	3 AOUT Assy	DWX2924	NSP 28	PC Support	VEC1749	
	4 ACSW Assy	DWX2918		29 Cord Clamper (Steel)	RNH-184	
	5 MAIN Assy	DWX2920		30 Binder	ZCA-SKB90BK	
⚠	6 POWER SUPPLY Assy	DWR1473 or DWR1492	31	•••••		
⚠	7 AC Inlet Assy	See Contrast table (2)	32	Screw (M3 x5)	DBA1340	
	8 12P FFC	DDD1507	33	Washer	DEC2920	
	9 26P FFC	DDD1509	34	Nut (M12)	NKX2FNI	
	10 20P FFC	DDD1510	35	Screw	BBZ30P060FTC	
	11 Connector Assy	PF06EE-D20	36	Screw	BBZ30P060FTB	B
	12 Connector Assy	PF08PP-D10	37	Screw	BPZ30P080FTB	
	13 Connector Assy	PF08PP-D20	38	Screw	IBZ30P080FTB	
	14 Connector Assy	PF12EE-D10	39	Screw	IMZ30P040FTC	
	15 Rear Panel	See Contrast table (2)	40	Screw	PMH30P100FTB	
NSP	16 Spacer	AEB7092	41	Screw	See Contrast table (2)	
	17 Terminal Screw	AKE-031	42	Screw	PPZ30P080FTB	
	18 Power Knob	DAC2306				
	19 Barrier (LAN)	DEC3169				
NSP	20 Chassis	DNA1362				C
	21 Bracket PSW	DNF1759				
	22 Power Shield	DNF1815				
	23 AC Shield	DNF1816				
	24 Earth Plate	DNF1858				
	25 Power Knob Guard	DNK4534				

(2) CONTRAST TABLE

DJM-2000/SYXJ8, CUXJ, LXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-2000 /SYXJ8	DJM-2000 /CUXJ	DJM-2000 /LXJ	DJM-2000 /KXJ5	DJM-2000 /AXJ5
⚠	7	AC Inlet Assy (2P)	DKP3762	Not used	DKP3762	DKP3762	DKP3762
⚠	7	AC Inlet Assy (3P)	Not used	DKP3761	Not used	Not used	Not used
	15	Rear Panel	DNC1916	DNC1917	DNC1918	DNC1921	DNC1920
	41	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used

9.4 CONTROL PANEL SECTION

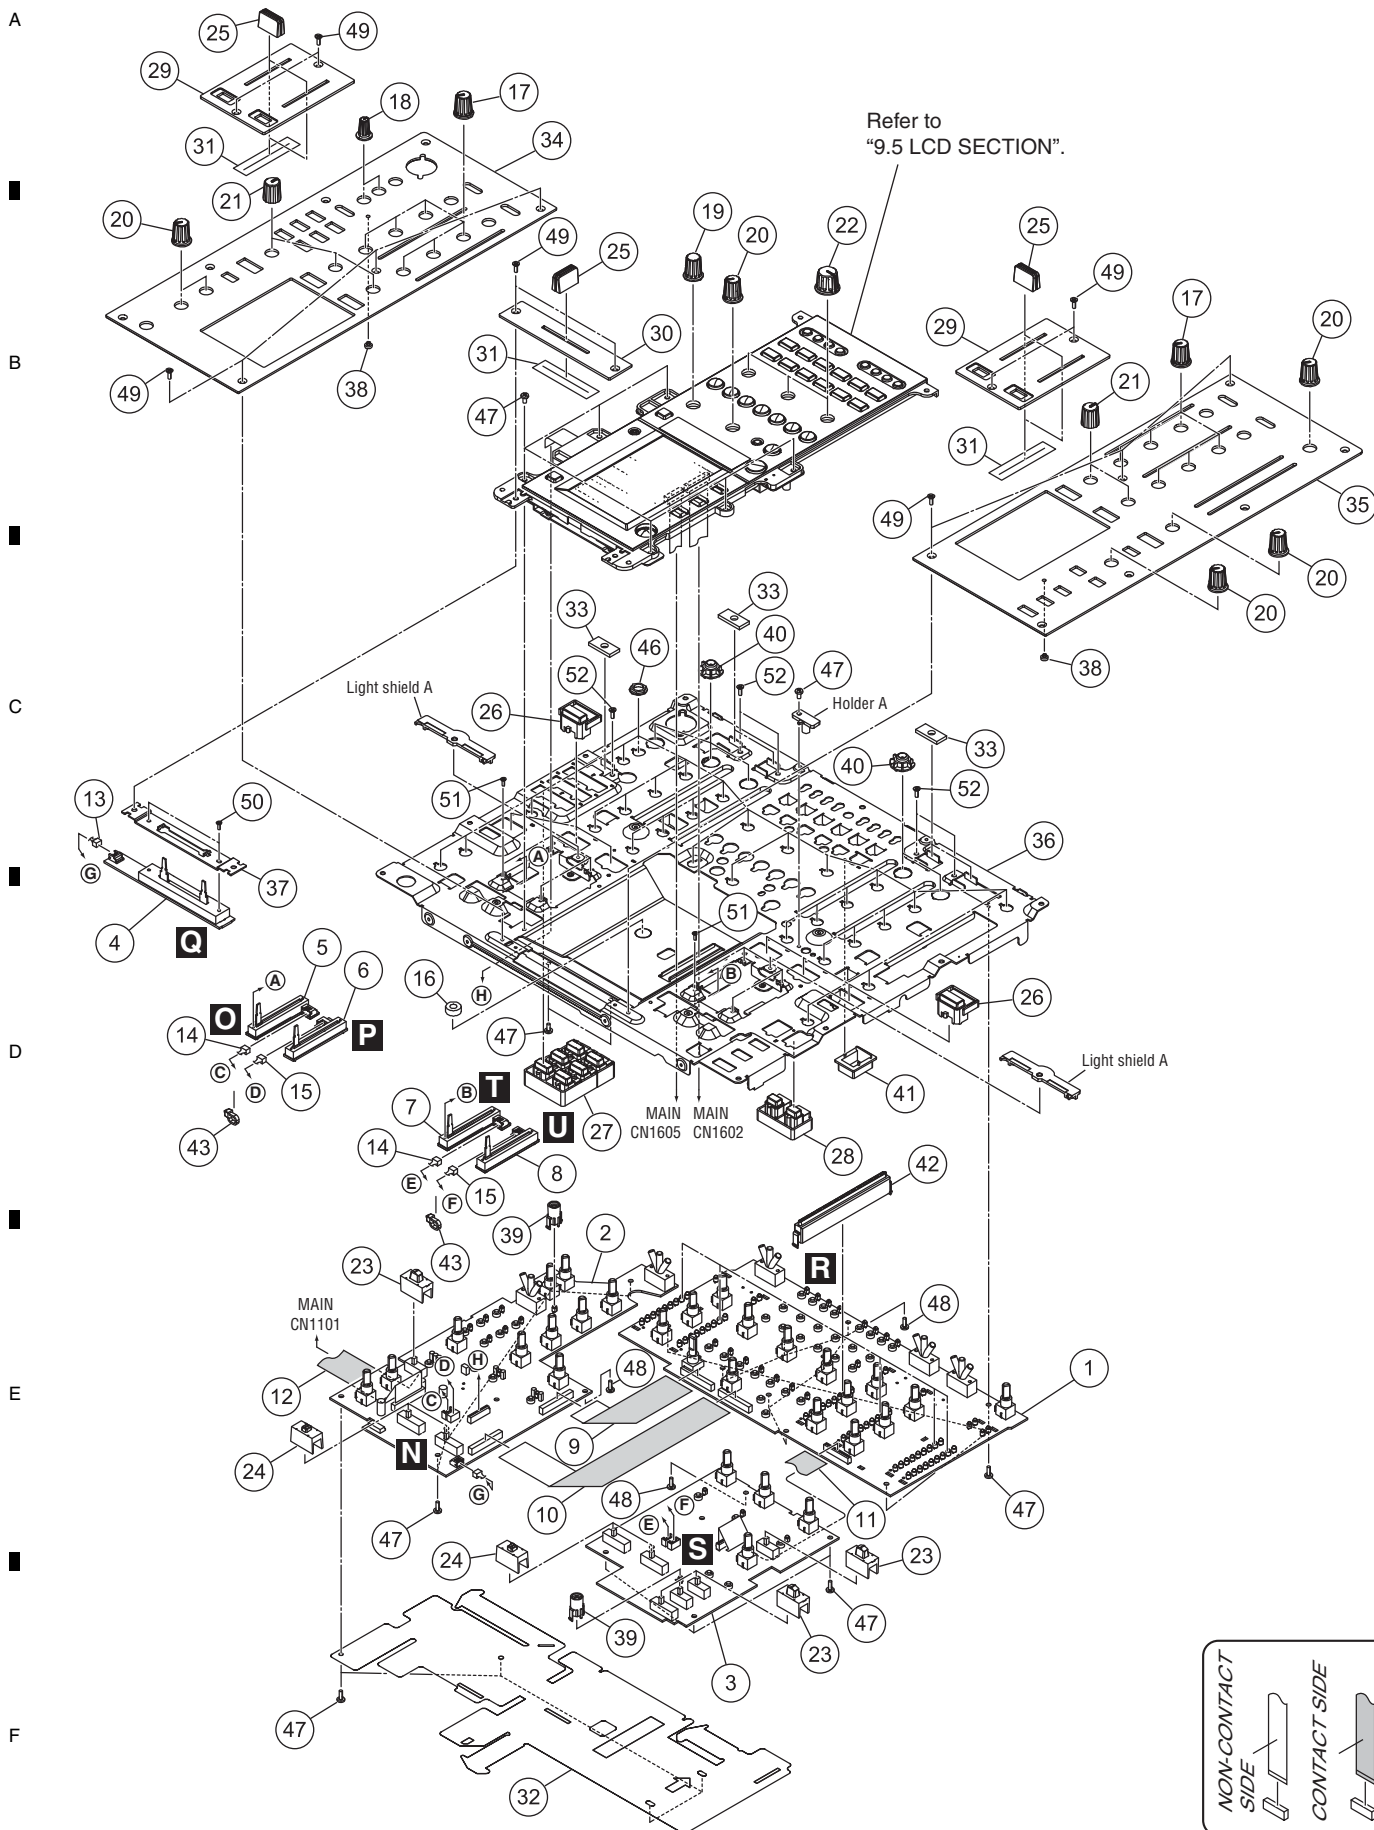

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	PNCE Assy	DWX2926	46	Flange Nut M9	DBN1008	
2	PNLE Assy	DWX2927	47	Screw	BBZ30P060FTC	A
3	PNRI Assy	DWX2928	48	Screw	BPZ30P080FTB	
4	CRFD Assy	DWX2929	49	Screw	CCZ30P080FTB	
5	CFD1 Assy	DWX2930	50	Screw	IMZ30P040FTC	
6	CFD2 Assy	DWX2931	51	Screw	PMA20P040FTC	■
7	CFD3 Assy	DWX2932	52	Screw	AMZ26P040FTC	
8	CFD4 Assy	DWX2933				
9	32P FFC	DDD1504				
10	32P FFC	DDD1505				
11	25P FFC	DDD1506				B
12	32P FFC	DDD1508				
13	Connector Assy	PF03PP-B10				
14	Connector Assy	PF04PP-B05				
15	Connector Assy	PF04PP2B05				■
NSP	16 Spacer	AEB7092				
	17 Rotary SW Knob (B)	DAA1176				
	18 Rotary SW Knob S (A)	DAA1177				
	19 Rotary SW Knob (C)	DAA1180				
	20 Rotary Knob (BN)	DAA1220				C
	21 Knob (RES)	DAA1250				
	22 Knob (FREQUENCY)	DAA1253				
	23 Slide SW Cap	DAC2400				
	24 Slide SW Cap (W)	DAC2401				■
	25 Slider Knob	DAC2501				
	26 Button (CUE)	DAC2503				
	27 Button (CFX)	DAC2510				
	28 Button (MIDI)	DAC2511				
	29 CHF Panel	DAH2691				D
	30 CRF Panel	DAH2692				
	31 Fader Packing	DEC2903				
	32 Barrier (Panel)	DEC3171				
	33 SW Packing	DED1177				■
	34 Control Panel L	DNB1168				
	35 Control Panel R	DNB1169				
	36 Panel Stay	DNF1812				
	37 CRF Stay	DNF1855				
	38 Lens	DNK4532				E
	39 Lens Holder	DNK4533				
	40 Bush	DNK5367				
	41 Light Shield	DNK5583				
	42 Level Meter Assy	DXB1882				■
	43 Binder	ZCA-SKB90BK				
	44 ●●●●●					
	45 ●●●●●					

LCD SECTION PARTS LIST

Mark No.	Description	Part No.	
1	TFTB Assy	DWX2921	
2	TPLE Assy	DWX3010	A
3	TPRI Assy	DWX3011	
4	LCD	CWX3868	
5	Touch Panel	DSX1081	
6	12P FFC	DDD1507	
7	19P FFC	DDD1513	
8	26P FFC	DDD1514	
9	16P FFC	DDD1515	
10	40P FFC	DDD1541	
11	Button (BEAT)	DAC2502	B
12	Button (TAP)	DAC2504	
13	Button (CUE) S	DAC2505	
14	Button (SETTING)	DAC2506	
15	Button (FX SEL A)	DAC2507	
16	Button (AUTO)	DAC2508	
17	Button (REMIX)	DAC2509	
18	Button (CH SEL)	DAC2512	
19	Button (FX)	DAC2513	
20	Button (FX SEL B)	DAC2597	C
21	Button (FX SEL C)	DAC2598	
22	Button (FX SEL D)	DAC2599	
23	Protect Plate	DAH2767	
24	Display Plate (PC)	DAH2768	
25	TFT Earth Spring	DBK1367	
26	Touch Panel Pad	DEC3168	
27	Touch Panel Spacer	DEC3269	
28	LCD Stay	DNF1818	
29	Center Panel	DNK5370	D
30	Cord Clamper (Steel)	RNH-184	
31	•••••		
32	•••••		
33	Screw	BBZ30P060FTC	
34	Screw	BPZ30P080FTB	