


1234

# 9. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

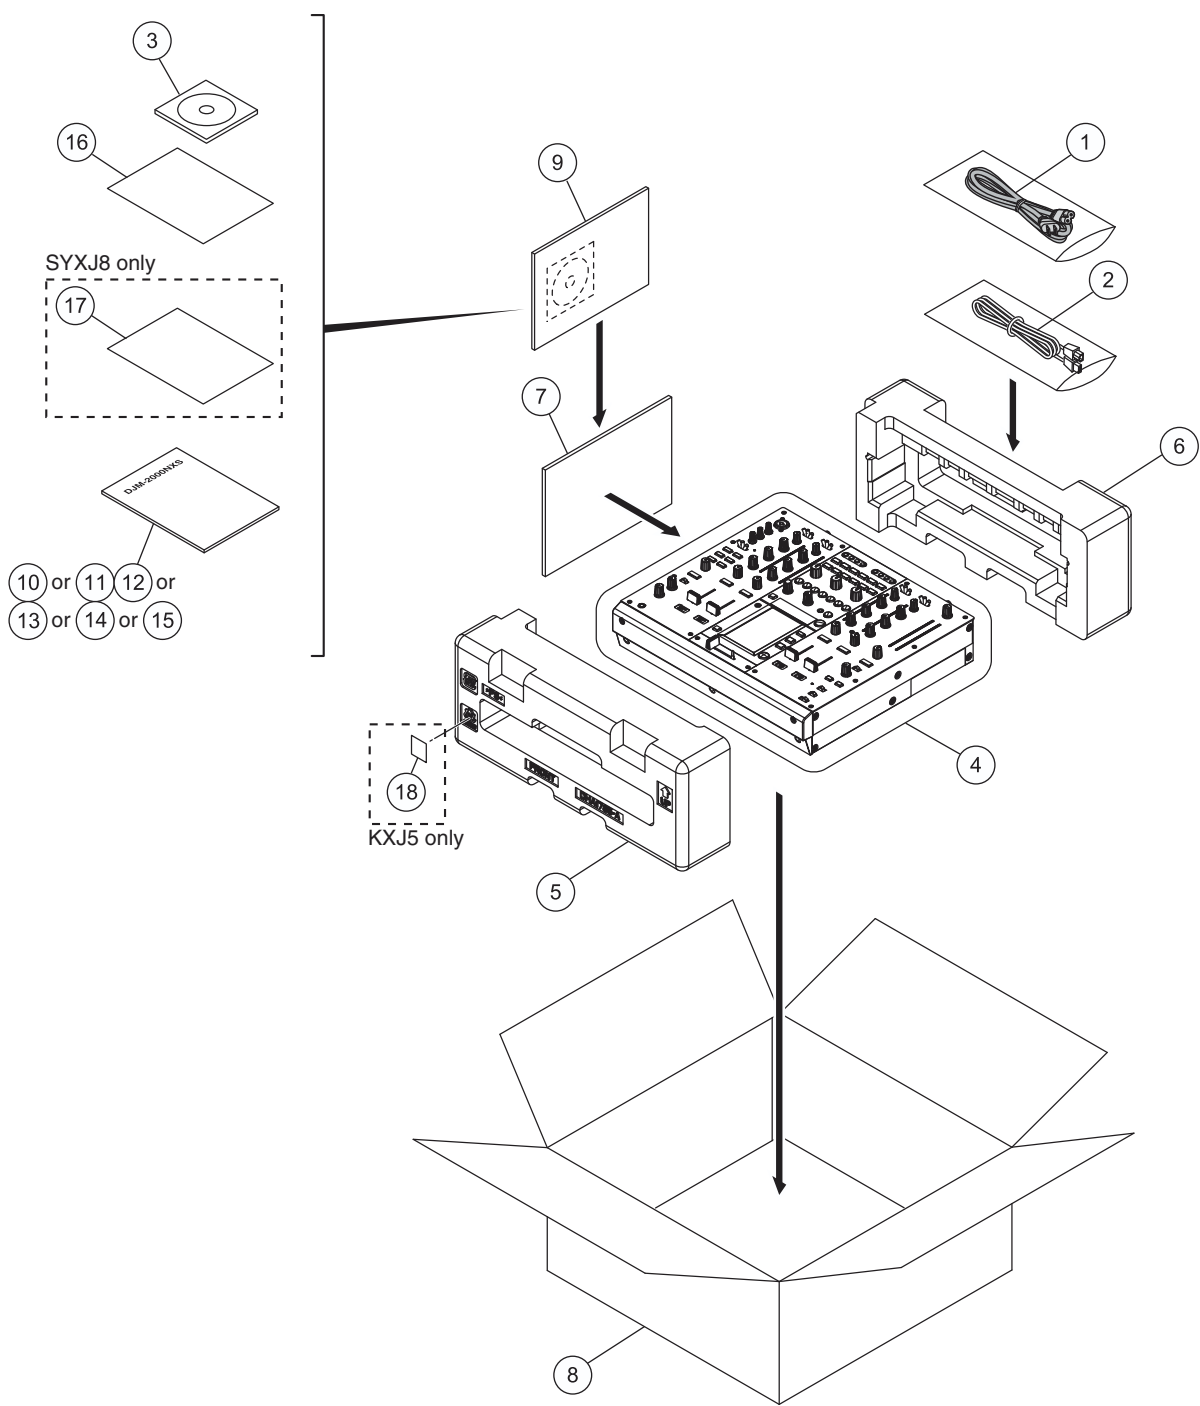

(1) PACKING SECTION PARTS LIST


| Mark | No. | Description            | Part No.               |
|------|-----|------------------------|------------------------|
| ⚠    | 1   | Power Cable            | See Contrast table (2) |
|      | 2   | USB Cable              | DDE1128                |
|      | 3   | CD-ROM                 | DXX2694                |
|      | 4   | Mirror Mat (1200*1000) | DHL1169                |
|      | 5   | Pad F (DJM-2000)       | DHA1785                |
| NSP  | 6   | Pad R (DJM-2000)       | DHA1786                |
|      | 7   | Pad/ACC                | DHA1893                |
|      | 8   | Packing Case           | See Contrast table (2) |
|      | 9   | Polyethylene Bag       | AHG7117                |
|      | 10  | Operating Instructions | See Contrast table (2) |
|      | 11  | Operating Instructions | See Contrast table (2) |
|      | 12  | Operating Instructions | See Contrast table (2) |
|      | 13  | Operating Instructions | See Contrast table (2) |
|      | 14  | Operating Instructions | See Contrast table (2) |
|      | 15  | Operating Instructions | See Contrast table (2) |
| NSP  | 16  | Leaflet                | See Contrast table (2) |
| NSP  | 17  | Warranty               | See Contrast table (2) |
| NSP  | 18  | Label/RCY              | See Contrast table (2) |

(2) CONTRAST TABLE

DJM-2000NXS/CUXJ, SYXJ8, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | DJM-2000NXS /CUXJ | DJM-2000NXS /SYXJ8 | DJM-2000NXS /LXJ | DJM-2000NXS /KXJ5 | DJM-2000NXS /XJCN5 |
|------|-----|------------------------|-------------------|--------------------|------------------|-------------------|--------------------|
| ⚠    | 1   | Power Cable            | DDG1108           | ADG7062            | ADG7062          | ADG7115           | ADG7105            |
|      | 8   | Packing Case           | DHG3177           | DHG3176            | DHG3178          | DHG3181           | DHG3180            |
|      | 10  | Operating Instructions | DRB1634           | Not used           | Not used         | Not used          | Not used           |
|      | 11  | Operating Instructions | Not used          | DRB1635            | Not used         | Not used          | Not used           |
|      | 12  | Operating Instructions | Not used          | DRB1648            | Not used         | Not used          | Not used           |
| NSP  | 13  | Operating Instructions | Not used          | Not used           | DRB1636          | Not used          | Not used           |
|      | 14  | Operating Instructions | Not used          | Not used           | Not used         | DRB1638           | Not used           |
|      | 15  | Operating Instructions | Not used          | Not used           | Not used         | Not used          | DRB1637            |
|      | 16  | Leaflet                | DRH1201           | DRH1201            | DRH1201          | DRH1200           | DRH1200            |
| NSP  | 17  | Warranty               | Not used          | ARY7158            | Not used         | Not used          | Not used           |
| NSP  | 18  | Label/RCY              | Not used          | Not used           | Not used         | DRW2541           | Not used           |

## 9.2 EXTERIOR SECTION

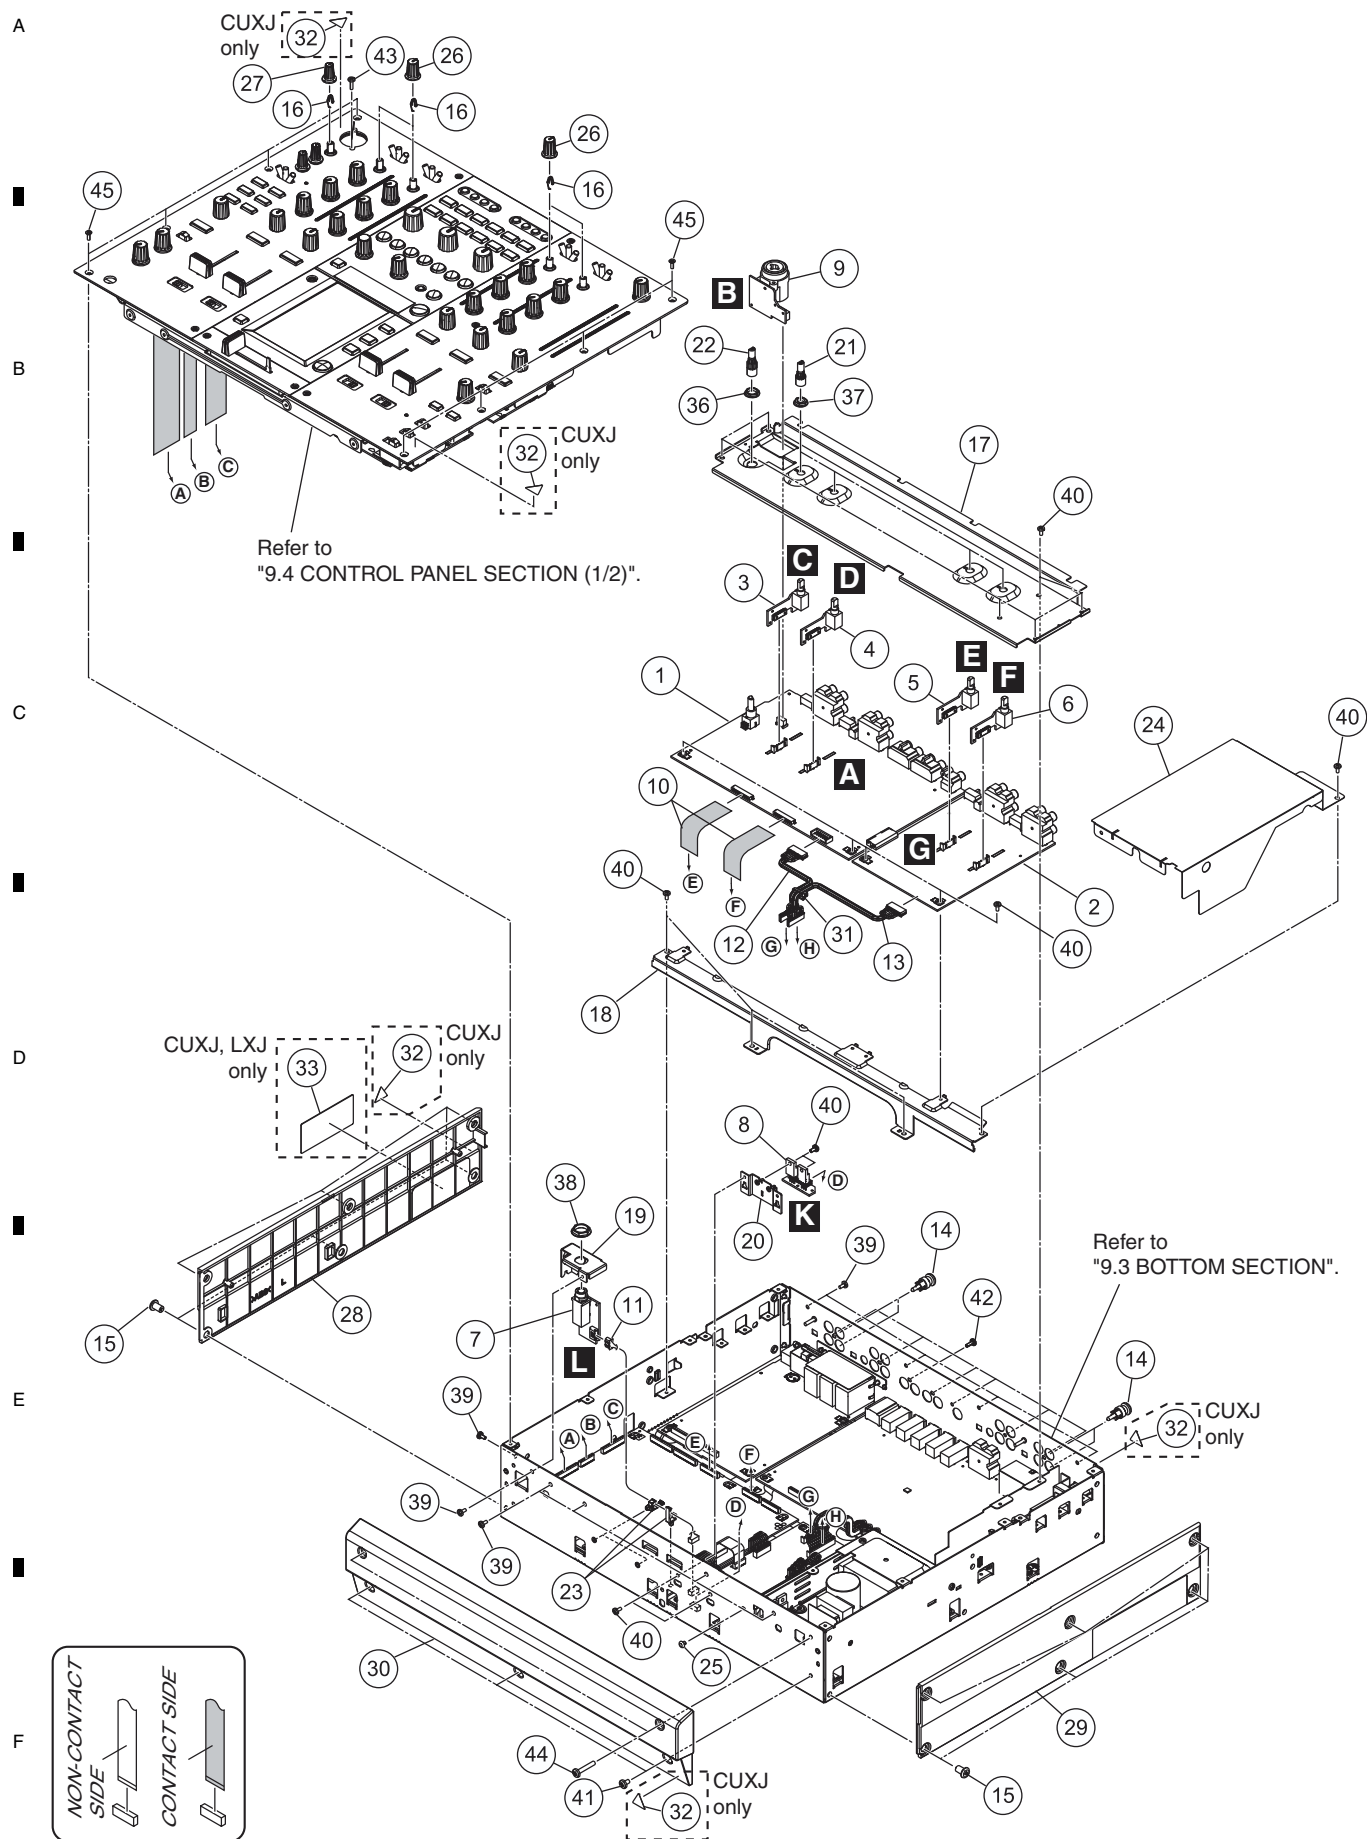

## (1) EXTERIOR SECTION PARTS LIST

| Mark No. | Description        | Part No.   | Mark No. | Description          | Part No.               |   |
|----------|--------------------|------------|----------|----------------------|------------------------|---|
| 1        | AIN1 Assy          | DWX2922    | 26       | Rotary SW Knob S (C) | DAA1204                |   |
| 2        | AIN2 Assy          | DWX2923    | 27       | Knob/RSW             | DAA1308                | A |
| 3        | TRIM1 Assy         | DWX2935    | 28       | Side Panel L         | DNK5363                |   |
| 4        | TRIM2 Assy         | DWX2936    | 29       | Side Panel R         | DNK5364                |   |
| 5        | TRIM3 Assy         | DWX2937    | 30       | Front Panel          | DNK6141                |   |
| 6        | TRIM4 Assy         | DWX2938    | 31       | Binder               | ZCA-SKB90BK            |   |
| 7        | HPJK Assy          | DWX3421    | NSP 32   | Label                | See Contrast table (2) |   |
| 8        | HREG Assy          | DWX3423    | NSP 33   | Caution Label        | See Contrast table (2) |   |
| 9        | MCJK Assy          | DWX2934    | 34       | •••••                |                        |   |
| 10       | 20P FFC            | DDD1510    | 35       | •••••                |                        |   |
| 11       | Connector Assy     | PF04PP-D20 | 36       | Flange Nut M9        | DBN1008                | B |
| 12       | Connector Assy     | PF07EE-D10 | 37       | Flange Nut M7        | DBN1011                |   |
| 13       | Connector Assy     | PF07EE0D12 | 38       | Nut M12              | DBN1018                |   |
| 14       | Plug/Pin           | DKM1024    | 39       | Screw                | BBZ30P060FTB           |   |
| 15       | Rivet (Plastic)    | AEC1877    | 40       | Screw                | BBZ30P060FTC           |   |
| 16       | Spring/VI4         | DBH1788    | 41       | Screw                | BCZ40P060FTB           |   |
| 17       | Trim Stay          | DNF1813    | 42       | Screw                | BPZ30P080FTB           |   |
| 18       | Input Stay         | DNF1819    | 43       | Screw                | BPZ30P100FTB           |   |
| 19       | HP Stay            | DNF1820    | 44       | Screw                | BSZ40P220FTB           |   |
| 20       | Heatsink           | DNF1850    | 45       | Screw                | CCZ30P080FTB           | C |
| 21       | Extension Shaft A  | DNK5365    |          |                      |                        |   |
| 22       | Extension Shaft B  | DNK5366    |          |                      |                        |   |
| 23       | Locking Mini Clamp | DEC2439    |          |                      |                        |   |
| 24       | Barrier (W)        | DEC3271    |          |                      |                        |   |
| 25       | Push Rivet         | XEC3034    |          |                      |                        |   |

## (2) CONTRAST TABLE

DJM-2000NXS/CUXJ, SYXJ8, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | DJM-2000NXS<br>/CUXJ | DJM-2000NXS<br>/SYXJ8 | DJM-2000NXS<br>/LXJ | DJM-2000NXS<br>/KXJ5 | DJM-2000NXS<br>/XJCN5 |
|------|-----|------------------------|----------------------|-----------------------|---------------------|----------------------|-----------------------|
| NSP  | 32  | Label                  | DRW1975              | Not used              | Not used            | Not used             | Not used              |
| NSP  | 33  | Caution Label          | DRW2429              | Not used              | DRW2430             | Not used             | Not used              |

# 9.3 BOTTOM SECTION

A


B

C

D

E

F

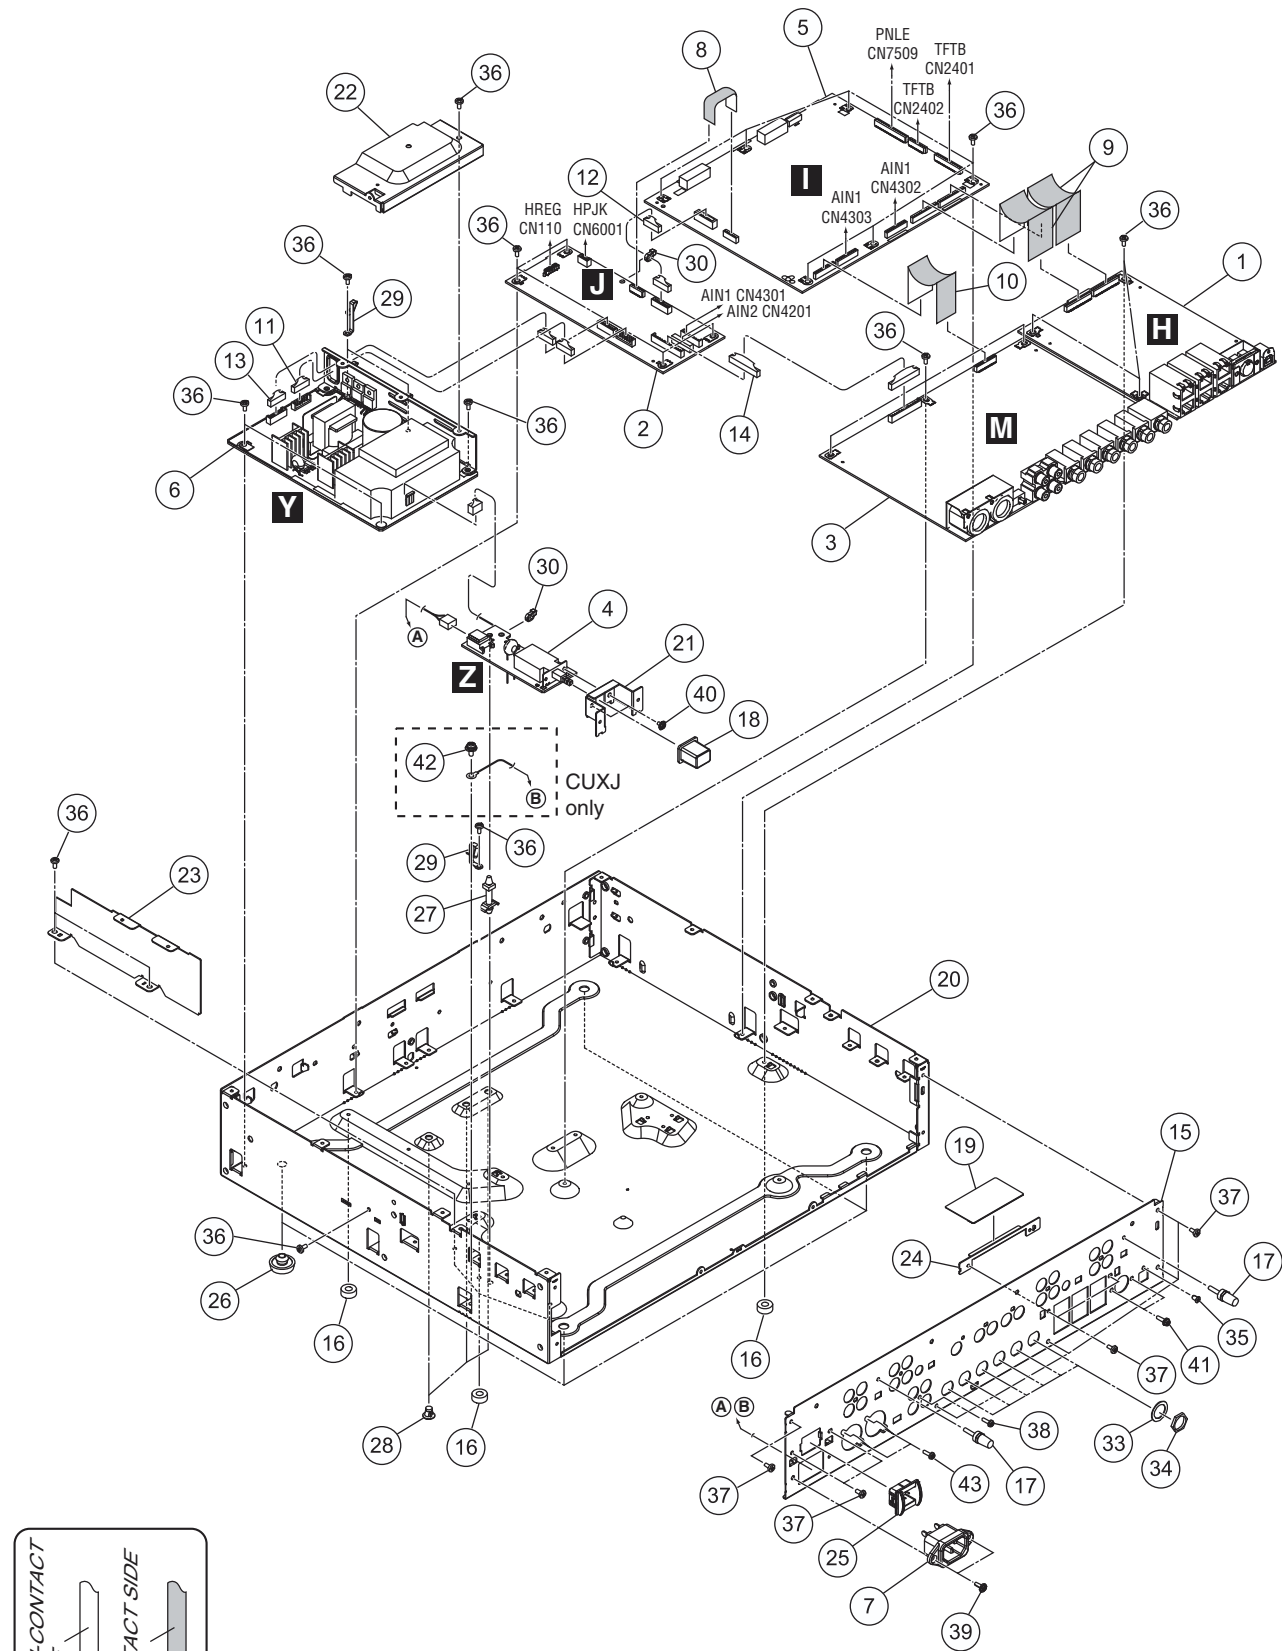

(1) BOTTOM SECTION PARTS LIST


| Mark No. | Description         | Part No.               | Mark No. | Description          | Part No.               |   |
|----------|---------------------|------------------------|----------|----------------------|------------------------|---|
|          | 1 PCIF Assy         | DWX2925                | 21       | Bracket PSW          | DNF1759                |   |
|          | 2 HAMP Assy         | DWX3422                | 22       | Power Shield         | DNF1815                | A |
|          | 3 AOUT Assy         | DWX3420                | 23       | AC Shield            | DNF1816                |   |
|          | 4 ACSW Assy         | DWX2918                | 24       | Earth Plate          | DNF1858                |   |
|          | 5 MAIN Assy         | DWX3424                | 25       | Power Knob Guard     | DNK4534                |   |
| ⚠        | 6 POWER SUPPLY Assy | DWR1492                | 26       | Foot (Rubber)        | REC-434                |   |
| ⚠        | 7 AC Inlet Assy     | See Contrast table (2) | NSP 27   | PC Support           | VEC1584                |   |
|          | 8 12P FFC           | DDD1507                | NSP 28   | PC Support           | VEC1749                |   |
|          | 9 26P FFC           | DDD1509                | 29       | Cord Clamper (Steel) | RNH-184                |   |
|          | 10 20P FFC          | DDD1510                | 30       | Binder               | ZCA-SKB90BK            |   |
|          | 11 Connector Assy   | PF06EE-D20             | 31       | •••••                |                        | B |
|          | 12 Connector Assy   | PF08PP-D10             | 32       | •••••                |                        |   |
|          | 13 Connector Assy   | PF08PP-D20             | 33       | Washer               | DEC2920                |   |
|          | 14 Connector Assy   | PF12EE-D10             | 34       | Nut (M12)            | NKX2FNI                |   |
|          | 15 Rear Panel       | See Contrast table (2) | 35       | Screw (M3*5)         | DBA1340                |   |
| NSP      | 16 Spacer           | AEB7092                | 36       | Screw                | BBZ30P060FTC           |   |
|          | 17 Terminal Screw   | AKE-031                | 37       | Screw                | BBZ30P060FTB           |   |
|          | 18 Power Knob       | DAC2306                | 38       | Screw                | BPZ30P080FTB           |   |
|          | 19 Barrier (LAN)    | DEC3169                | 39       | Screw                | IBZ30P080FTB           |   |
| NSP      | 20 Chassis          | DNA1362                | 40       | Screw                | IMZ30P040FTC           | C |
|          |                     |                        | 41       | Screw                | PMH30P100FTB           |   |
|          |                     |                        | 42       | Screw                | See Contrast table (2) |   |
|          |                     |                        | 43       | Screw                | PPZ30P080FTB           |   |

(2) CONTRAST TABLE

DJM-2000NXS/CUXJ, SYXJ8, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | DJM-2000NXS /CUXJ | DJM-2000NXS /SYXJ8 | DJM-2000NXS /LXJ | DJM-2000NXS /KXJ5 | DJM-2000NXS /XJCN5 |   |
|------|-----|------------------------|-------------------|--------------------|------------------|-------------------|--------------------|---|
| ⚠    | 7   | AC Inlet Assy/3P       | DKP3927           | Not used           | Not used         | Not used          | Not used           | D |
| ⚠    | 7   | AC Inlet Assy/2P       | Not used          | DKP3762            | DKP3762          | DKP3762           | DKP3762            |   |
|      | 15  | Rear Panel             | DNC2091           | DNC2091            | DNC2091          | DNC2091           | DNC2092            |   |
|      | 42  | Screw                  | PMH40P080FTC      | Not used           | Not used         | Not used          | Not used           |   |

## 9.4 CONTROL PANEL SECTION (1/2)

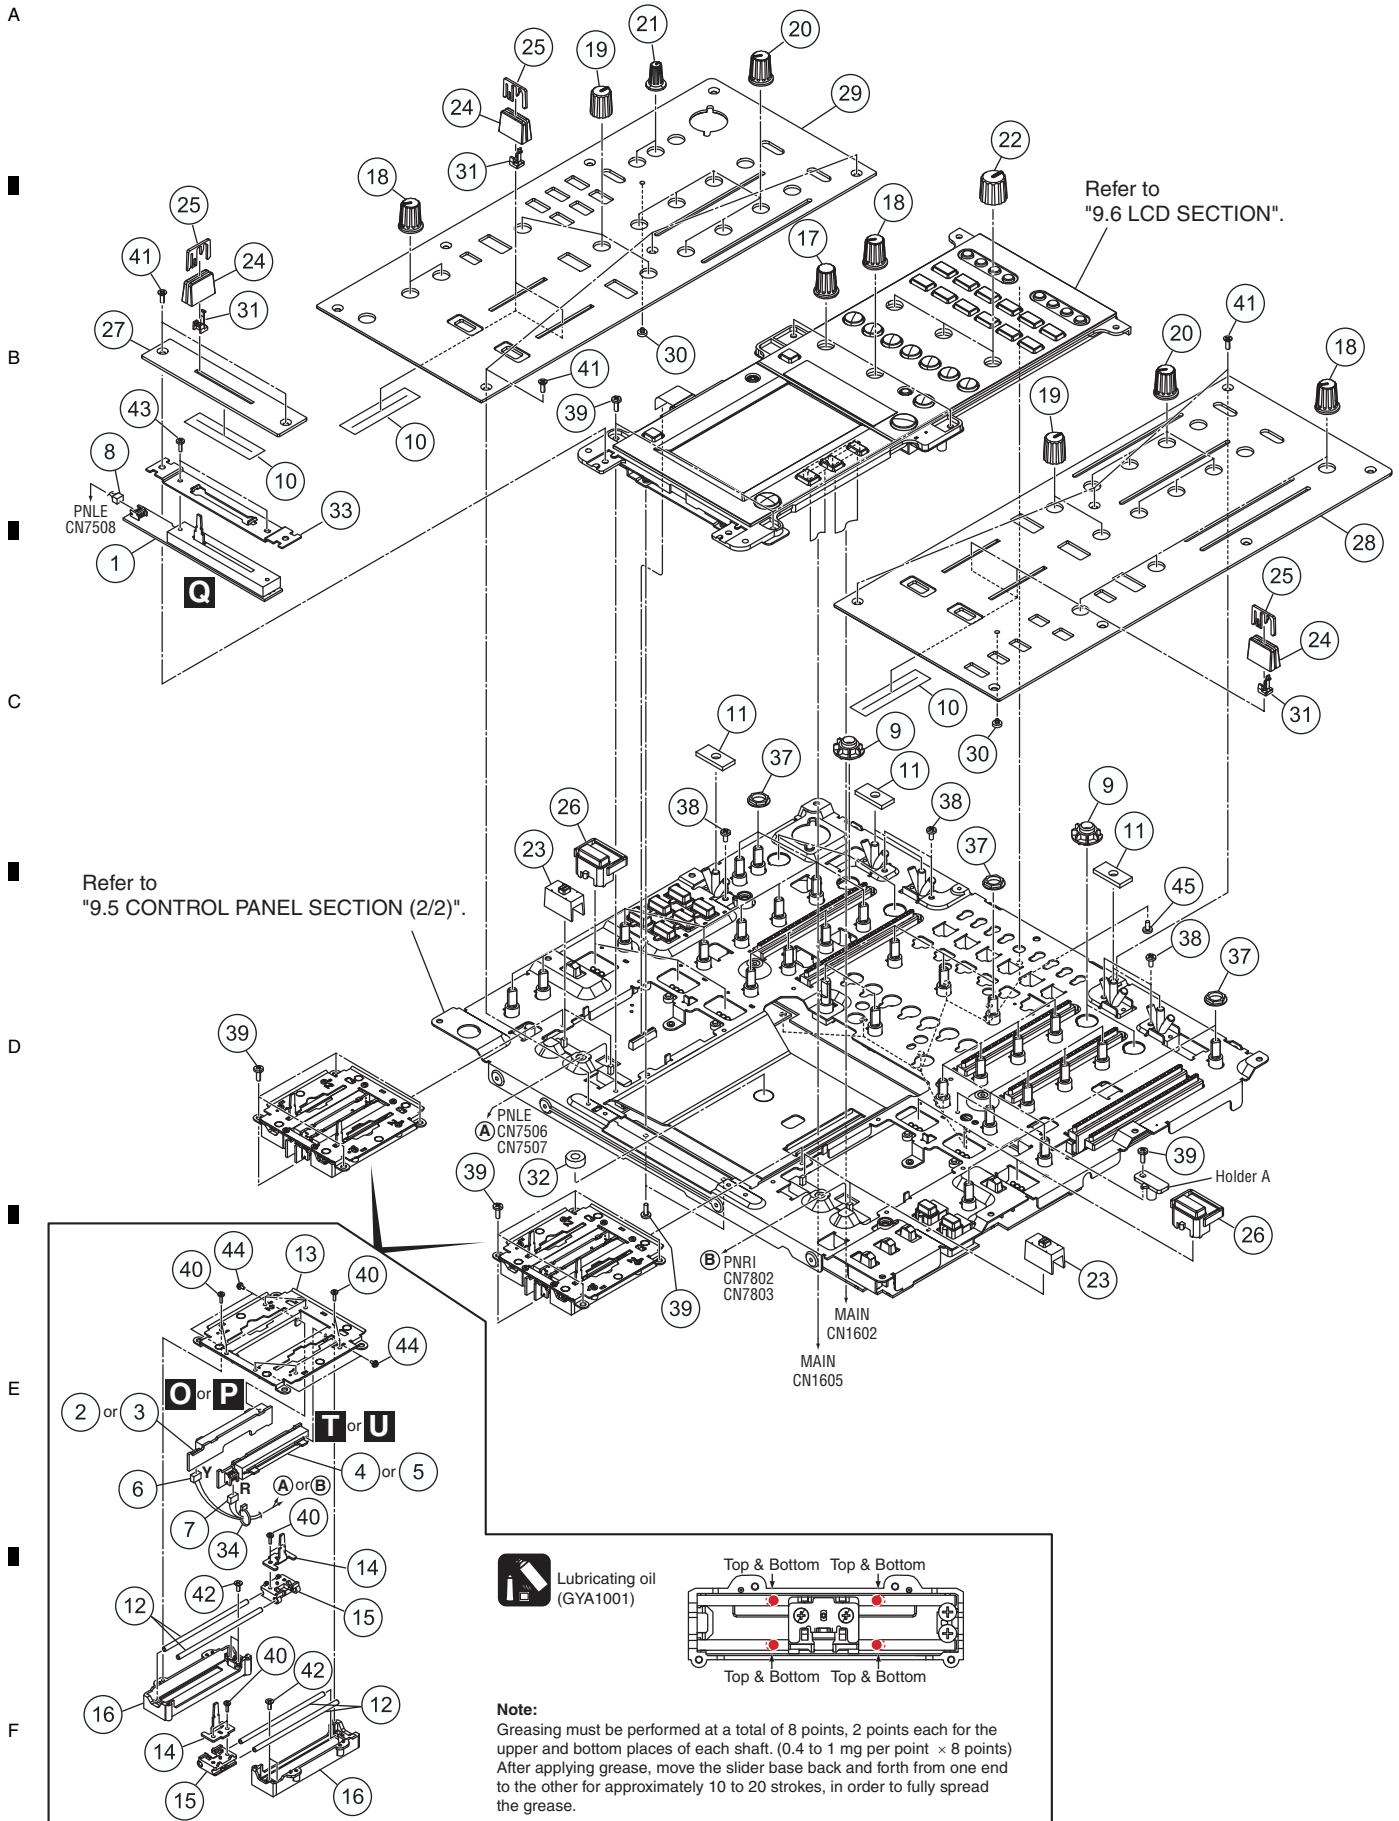

CONTROL PANEL SECTION (1/2) PARTS LIST

| Mark No. | Description            | Part No.     |   |
|----------|------------------------|--------------|---|
|          | 1 CRFD Assy            | DWX3415      |   |
|          | 2 CFD1 Assy            | DWX3416      | A |
|          | 3 CFD2 Assy            | DWX3417      |   |
|          | 4 CFD3 Assy            | DWX3418      |   |
|          | 5 CFD4 Assy            | DWX3419      |   |
|          | 6 Connector Assy       | PF03PP2B12   |   |
|          | 7 Connector Assy       | PF03PP4B12   |   |
|          | 8 Connector Assy       | PF03PP-B10   |   |
|          | 9 Bush                 | DNK5367      |   |
|          | 10 Fader Packing       | DEC2903      |   |
|          | 11 SW Packing          | DED1177      | B |
| NSP      | 12 Guide Shaft (S)     | DLA1918      |   |
|          | 13 Stay/CHF            | DNF1925      |   |
|          | 14 Lever Plate         | DNH2954      |   |
|          | 15 Slider Base         | DNK5851      |   |
|          | 16 Shaft Holder        | DNK5852      |   |
|          | 17 Rotary SW Knob (C)  | DAA1180      |   |
|          | 18 Rotary Knob (BN)    | DAA1220      |   |
|          | 19 Knob (RES)          | DAA1250      |   |
|          | 20 Knob/RSW            | DAA1305      | C |
|          | 21 Knob/RSW            | DAA1307      |   |
|          | 22 Knob/FRE            | DAA1309      |   |
|          | 23 Slide SW Cap (W)    | DAC2401      |   |
|          | 24 Slider Knob 1       | DAC2684      |   |
|          | 25 Slider Knob 2       | DAC2685      |   |
|          | 26 Button/CUE          | DAC2882      |   |
|          | 27 Panel/CRF           | DAH2913      |   |
|          | 28 Control Panel R     | DNB1205      |   |
|          | 29 Control Panel L     | DNB1206      | D |
|          | 30 Lens                | DNK4532      |   |
|          | 31 Slider Knob Stopper | DNK5888      |   |
| NSP      | 32 Spacer              | AEB7092      |   |
|          | 33 CRF Stay            | DNF1855      |   |
|          | 34 Binder              | ZCA-SKB90BK  |   |
|          | 35 .....               |              |   |
|          | 36 .....               |              |   |
|          | 37 Flange Nut M9       | DBN1008      |   |
|          | 38 Screw               | AMZ26P040FTC | E |
|          | 39 Screw               | BBZ30P060FTC |   |
|          | 40 Screw               | BPZ20P060FTC |   |
|          | 41 Screw               | CCZ30P080FTB |   |
|          | 42 Screw               | CPZ26P080FTC |   |
|          | 43 Screw               | IMZ30P040FTC |   |
|          | 44 Screw               | PMH20P040FTC |   |
|          | 45 Screw               | BPZ30P080FTB |   |

A • Bottom view


B

C

D

E

F

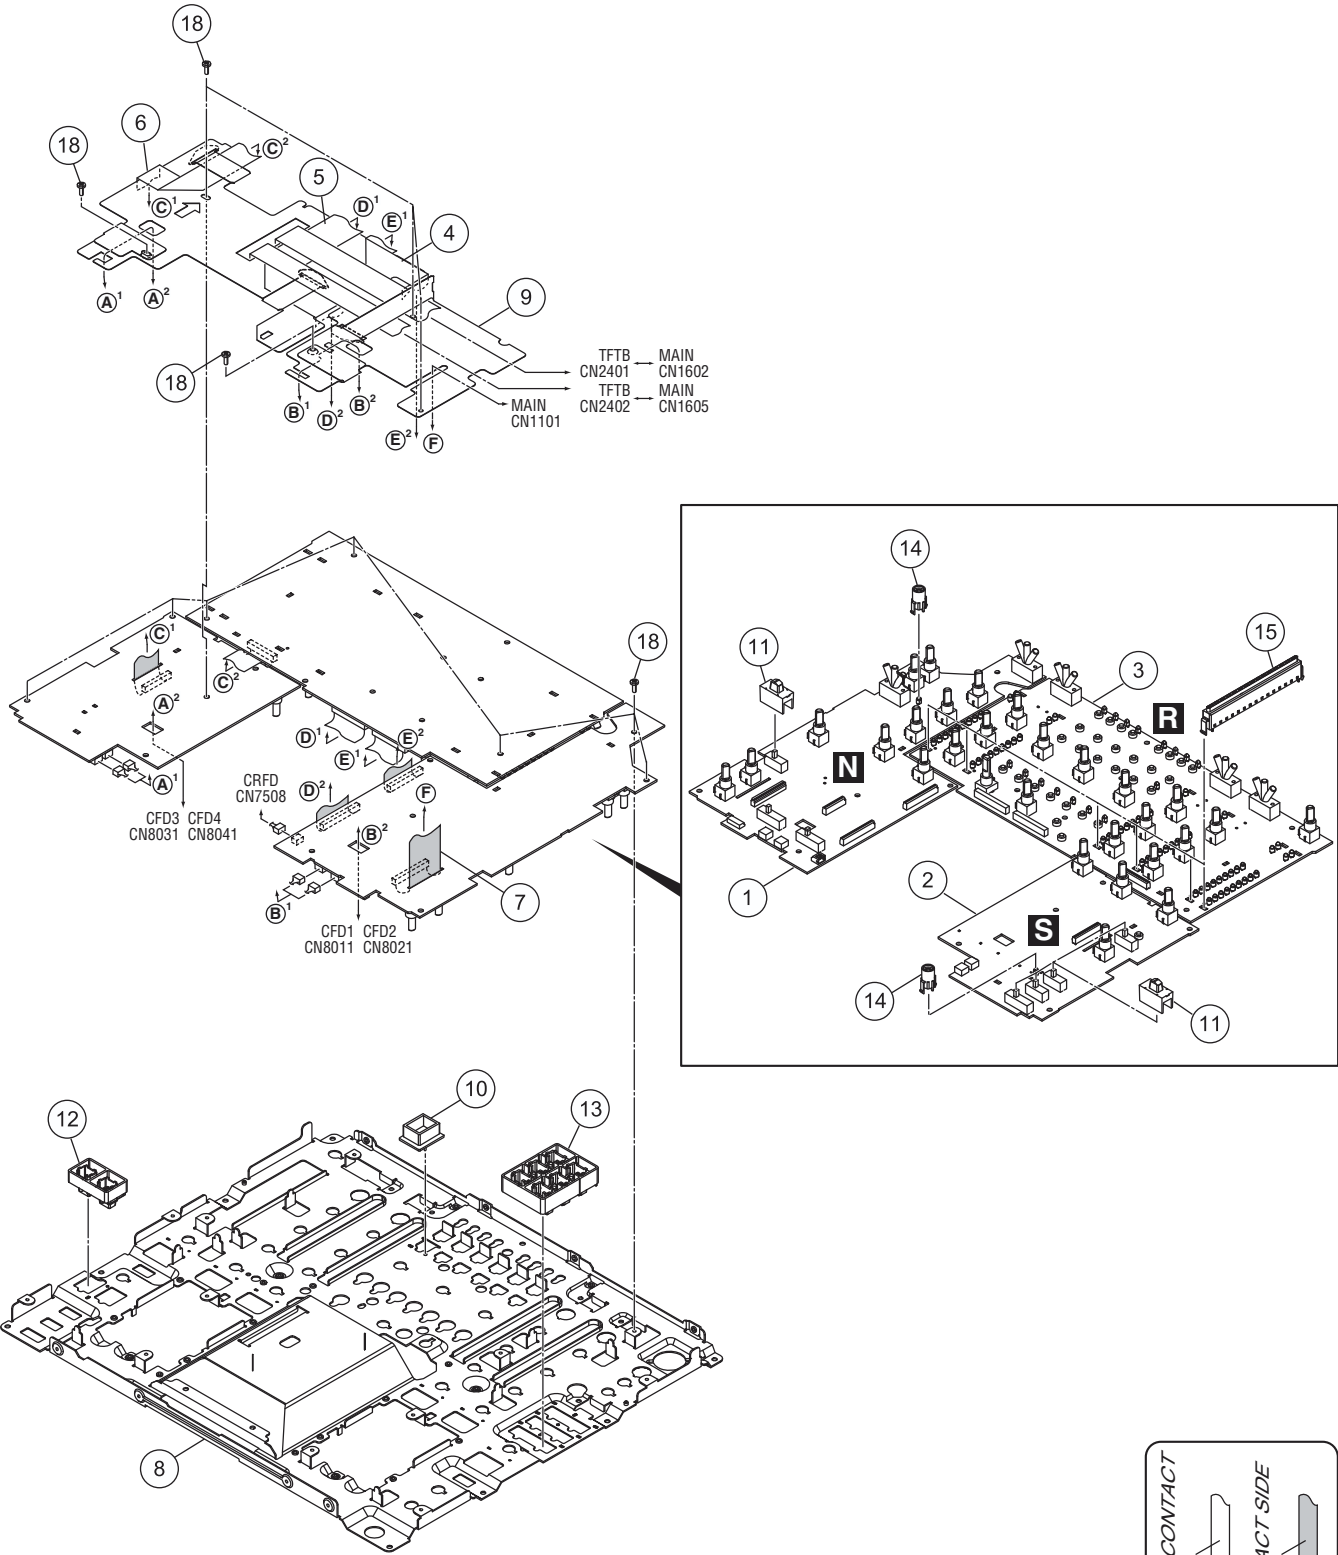


CONTROL PANEL SECTION (2/2) PARTS LIST

| Mark No. | Description      | Part No.     |   |
|----------|------------------|--------------|---|
| 1        | PNLE Assy        | DWX3413      |   |
| 2        | PNRI Assy        | DWX3414      | A |
| 3        | PNCE Assy        | DWX3426      |   |
| 4        | 32P FFC          | DDD1504      |   |
| 5        | 32P FFC          | DDD1505      |   |
|          |                  |              |   |
| 6        | 25P FFC          | DDD1506      | ■ |
| 7        | 32P FFC          | DDD1508      |   |
| NSP 8    | Panel Stay       | DND1274      |   |
| 9        | Barrier/PNL      | DMR1012      |   |
| 10       | Light Shield     | DNK5583      |   |
|          |                  |              |   |
| 11       | Slide SW Cap     | DAC2400      | B |
| 12       | Button (MIDI)    | DAC2511      |   |
| 13       | Button/CFX       | DAC2889      |   |
| 14       | Lens Holder      | DNK4533      |   |
| 15       | Lebel Meter Assy | DXB1882      |   |
|          |                  |              | ■ |
| 16       | •••••            |              |   |
| 17       | •••••            |              |   |
| 18       | Screw            | BBZ30P060FTC |   |
|          |                  |              |   |
|          |                  |              | C |
|          |                  |              |   |
|          |                  |              | ■ |
|          |                  |              |   |
|          |                  |              |   |
|          |                  |              | D |
|          |                  |              |   |
|          |                  |              | ■ |
|          |                  |              |   |
|          |                  |              |   |
|          |                  |              | E |
|          |                  |              |   |
|          |                  |              | ■ |
|          |                  |              |   |
|          |                  |              |   |
|          |                  |              | F |



## 9.6 LCD SECTION

A • Bottom view

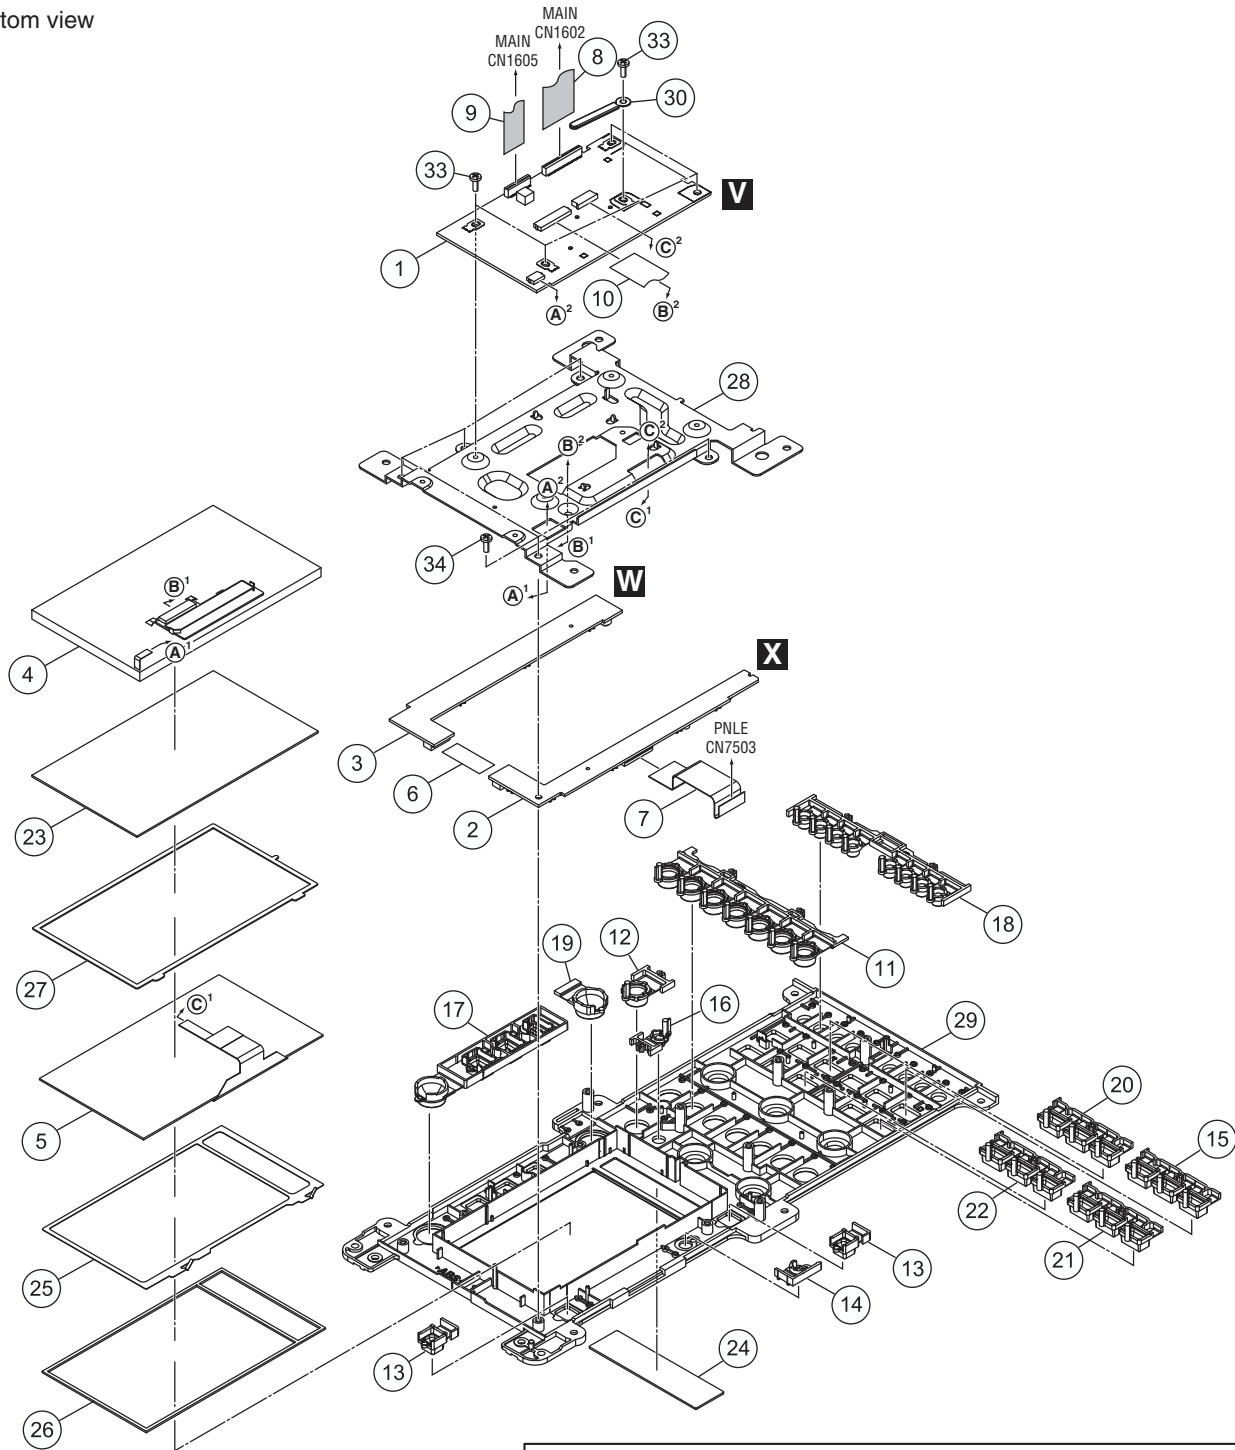

### Note:

The shape of the groups of buttons 15, 20, 21, and 22 is the same. To identify the attachment position of each group of buttons during reassembly, the initial letter of the name of the left button of a group is engraved on the back of the Center panel (No. 29).

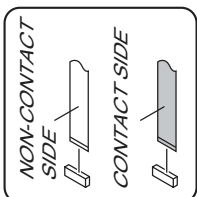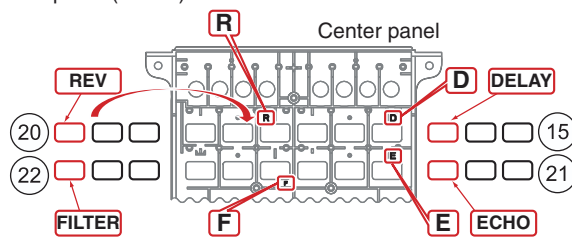

LCD SECTION PARTS LIST

| Mark No. | Description          | Part No.     |   |
|----------|----------------------|--------------|---|
| 1        | TFTB Assy            | DWX2921      |   |
| 2        | TPLE Assy            | DWX3010      | A |
| 3        | TPRI Assy            | DWX3011      |   |
| 4        | LCD                  | CWX3868      |   |
| 5        | Touch Panel          | DSX1085      |   |
| 6        | 12P FFC              | DDD1507      |   |
| 7        | 19P FFC              | DDD1513      |   |
| 8        | 26P FFC              | DDD1514      |   |
| 9        | 16P FFC              | DDD1515      |   |
| 10       | 40P FFC              | DDD1541      |   |
| 11       | Button/BEAT          | DAC2881      | B |
| 12       | Button/TAP           | DAC2883      |   |
| 13       | Button/CUES          | DAC2884      |   |
| 14       | Button (SETTING)     | DAC2506      |   |
| 15       | Button/FXA           | DAC2886      |   |
| 16       | Button (AUTO)        | DAC2508      |   |
| 17       | Button/REMIX         | DAC2888      |   |
| 18       | Button/SEL           | DAC2891      |   |
| 19       | Button (FX)          | DAC2513      |   |
| 20       | Button/FXB           | DAC2893      | C |
| 21       | Button/FXC           | DAC2894      |   |
| 22       | Button/FXD           | DAC2895      |   |
| 23       | Protect Plate        | DAH2767      |   |
| 24       | Display Plate (PC)   | DAH2768      |   |
| 25       | TFT Earth Spring     | DBK1367      |   |
| 26       | Touch Panel Pad      | DEC3168      |   |
| 27       | Touch Panel Spacer   | DEC3269      |   |
| 28       | LCD Stay             | DNF1818      |   |
| 29       | Center Panel         | DNK6140      | D |
| 30       | Cord Clamper (Steel) | RNH-184      |   |
| 31       | .....                |              |   |
| 32       | .....                |              |   |
| 33       | Screw                | BBZ30P060FTC |   |
| 34       | Screw                | BPZ30P080FTB |   |