

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

● The  mark found on some component parts indicates the importance of the safety factor of the part.


Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ▼ mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

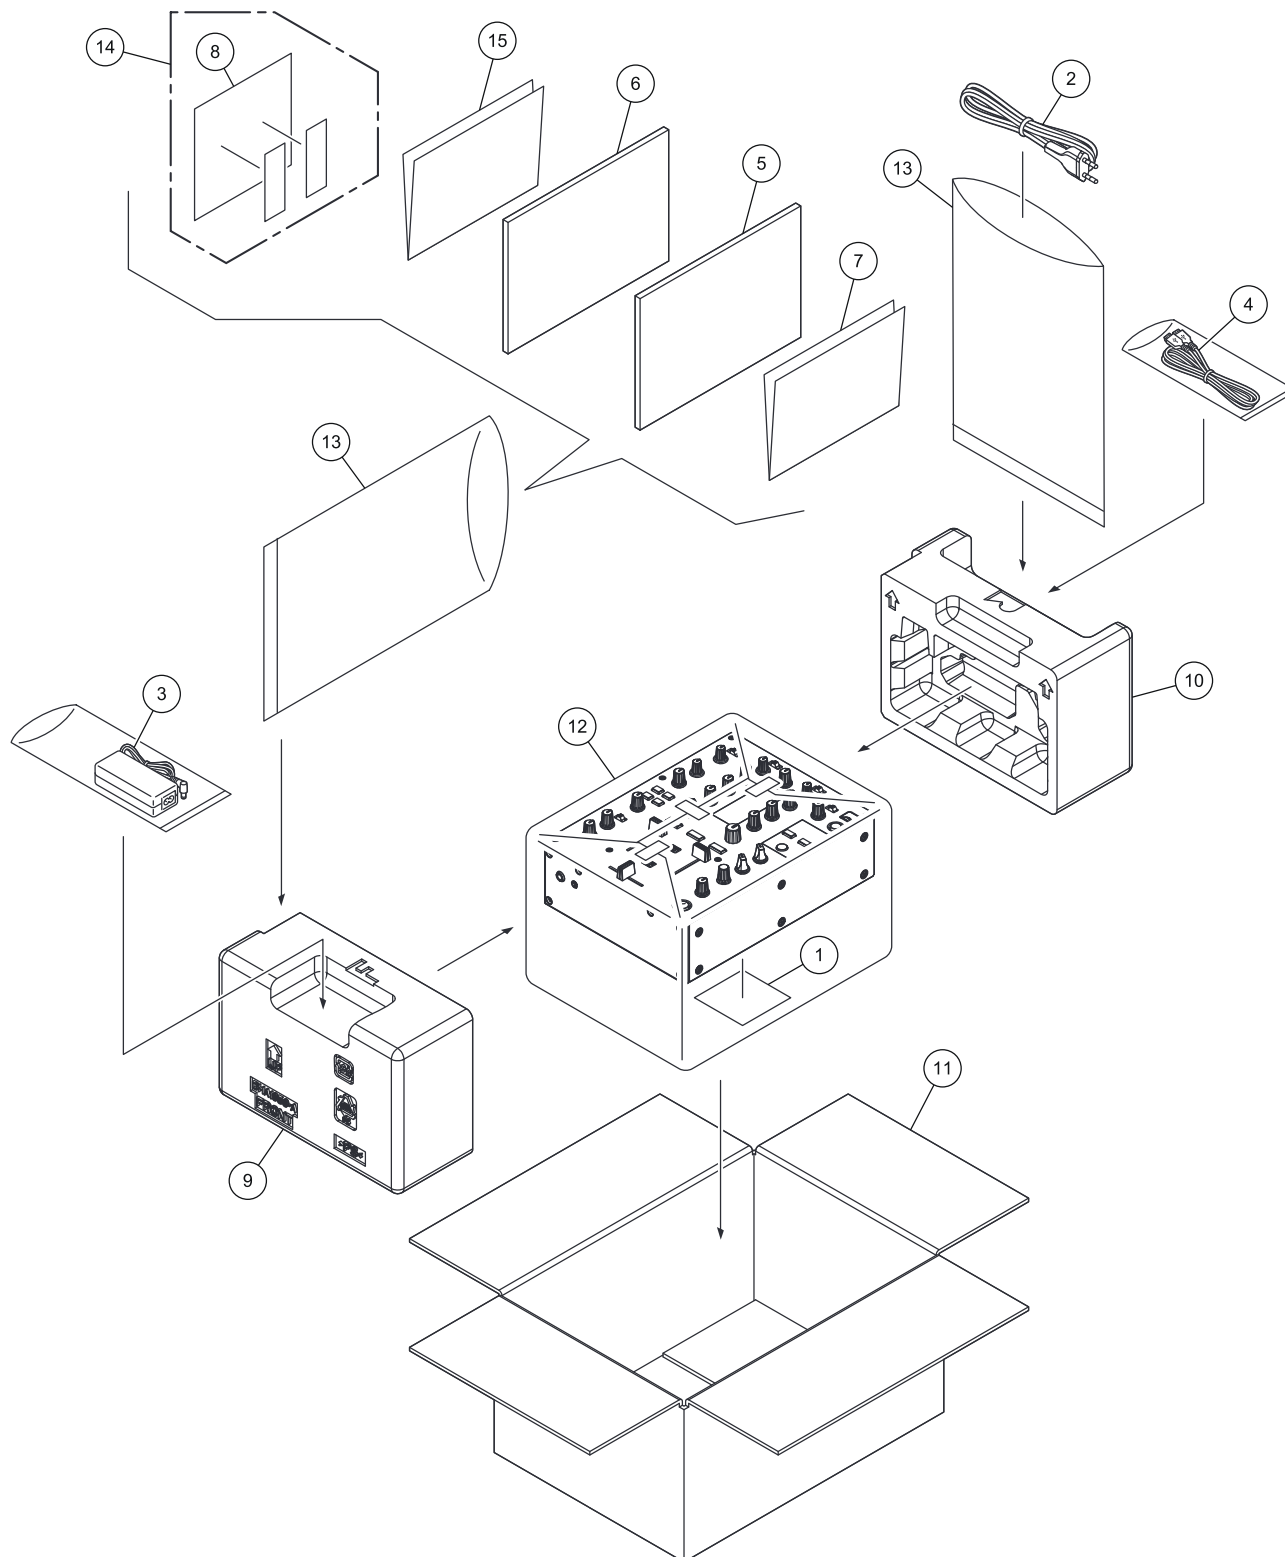

DJM-450

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1 Name Label	See Contrast table (2)	
⚠	2 Power Cord	See Contrast table (2)	A
⚠	3 AC Adapter	See Contrast table (2)	
	4 USB Cable	DDE1128	
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	■
NSP	7 Warranty Card	See Contrast table (2)	
NSP	8 Leaflet	DRM1419	
	9 Packing Pad	DHA1959	
	10 Packing Pad	DHA1960	B
	11 Packing Case	See Contrast table (2)	
	12 Sheet	RHX1006	
NSP	13 Polyethylene Bag	AHG7117	
NSP	14 License Key Card ASSY (rekordbox dj, rekordbox dvs)	DEA1064	■
NSP	15 Leaflet	See Contrast table (2)	

(2) CONTRAST TABLE


SYXJ, UXJCB, FWLPWXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	SYXJ	UXJCB	FWLPWXJ	XJCN	
⚠	1	Name Label	DRW2714	DRW2714	DRW2714	DRW2715	
	2	Power Cord	ADG1154	XDG3052	ADG1154	ADG7079	
⚠	3	AC Adapter	DWR1567	DWR1567	DWR1551	DWR1551	■
	5	Operating Instructions (Quick Start Guide)	DRH1393	DRH1395	DRH1396	DRH1397	
	6	Operating Instructions (Quick Start Guide)	DRH1394	Not used	Not used	Not used	
NSP	7	Warranty Card	DRY1270	Not used	Not used	Not used	
	11	Packing Case	DHG3496	DHG3522	DHG3523	DHG3525	
NSP	15	Leaflet	DRH1431	DRH1431	DRH1431	DRH1432	D

9.2 EXTERIOR SECTION

* Notes on assembling :


- Always attach the No.11 Panel (DNK6657) first to the CHASSIS SECTION, and then attach the No.12 Panel (DNF2012) to the CHASSIS SECTION.
- Attach the No.12 Panel (DNF2012) while lifting toward the top side (to reduce the gap between it and Control Panel.)

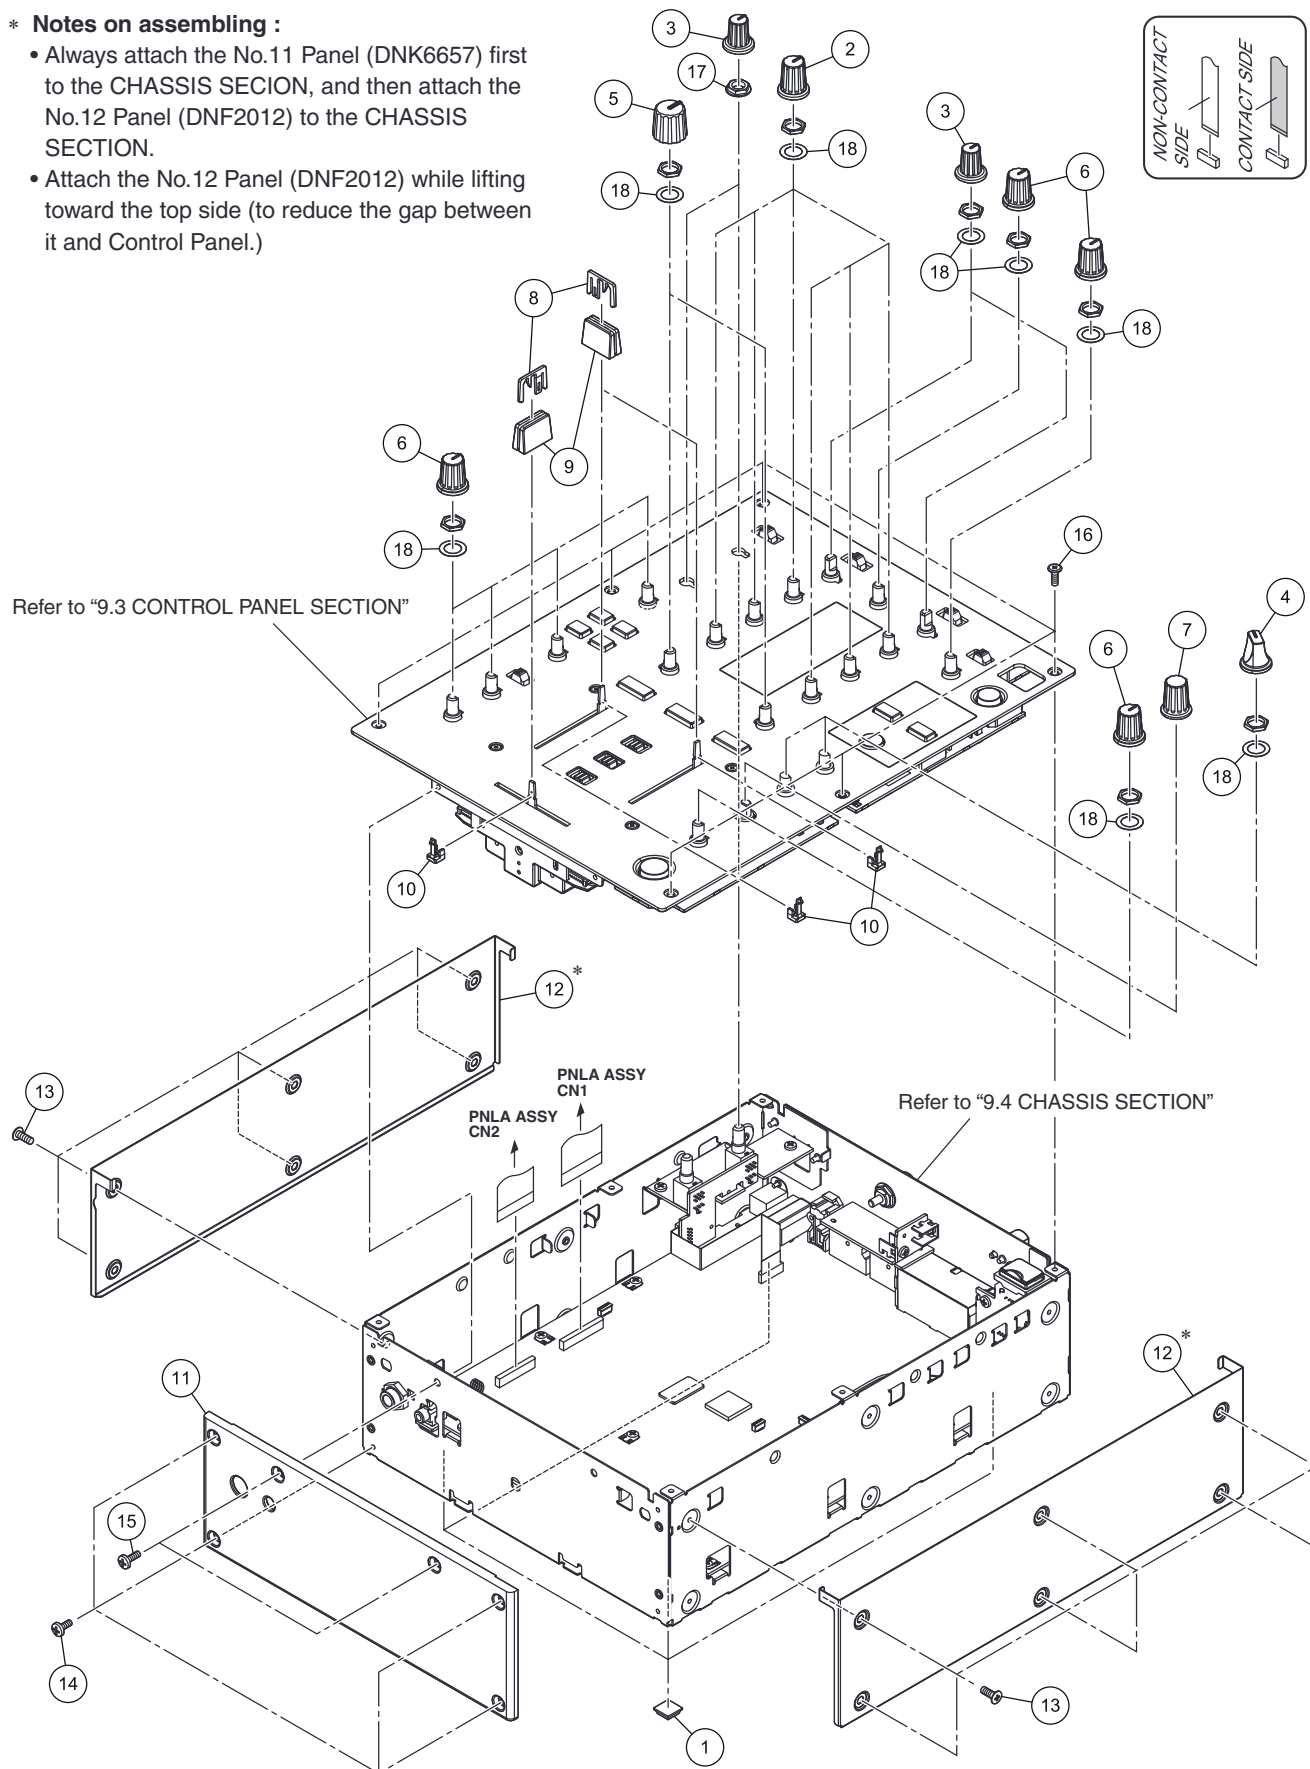

EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Rubber Foot	VEB1325	
2	Rotary VR Knob (B)	DAA1279	A
3	Knob	DAA1372	
4	Rotary SW Knob	DAA1185	
5	Knob	DAA1373	
6	Rotary VR Knob (B)	DAA1183	■
7	Knob	DAA1374	
8	Slider Knob 2	DAC2685	
9	Slider Knob 1	DAC2684	
10	Slider Knob Stopper	DNK5888	
11	Panel	DNK6657	B
12	Panel	DNF2012	
13	Screw (Fe)	DBA1290	
14	Screw	BBZ30P060FTB	
15	Screw	BBZ30P080FTB	■
16	Screw	DBA1446	
17	Flange Nut M7	DBN1011	
18	Washer	DEC3731	
			C
			■
			D
			■
			E
			■
			F


9.3 CONTROL PANEL SECTION

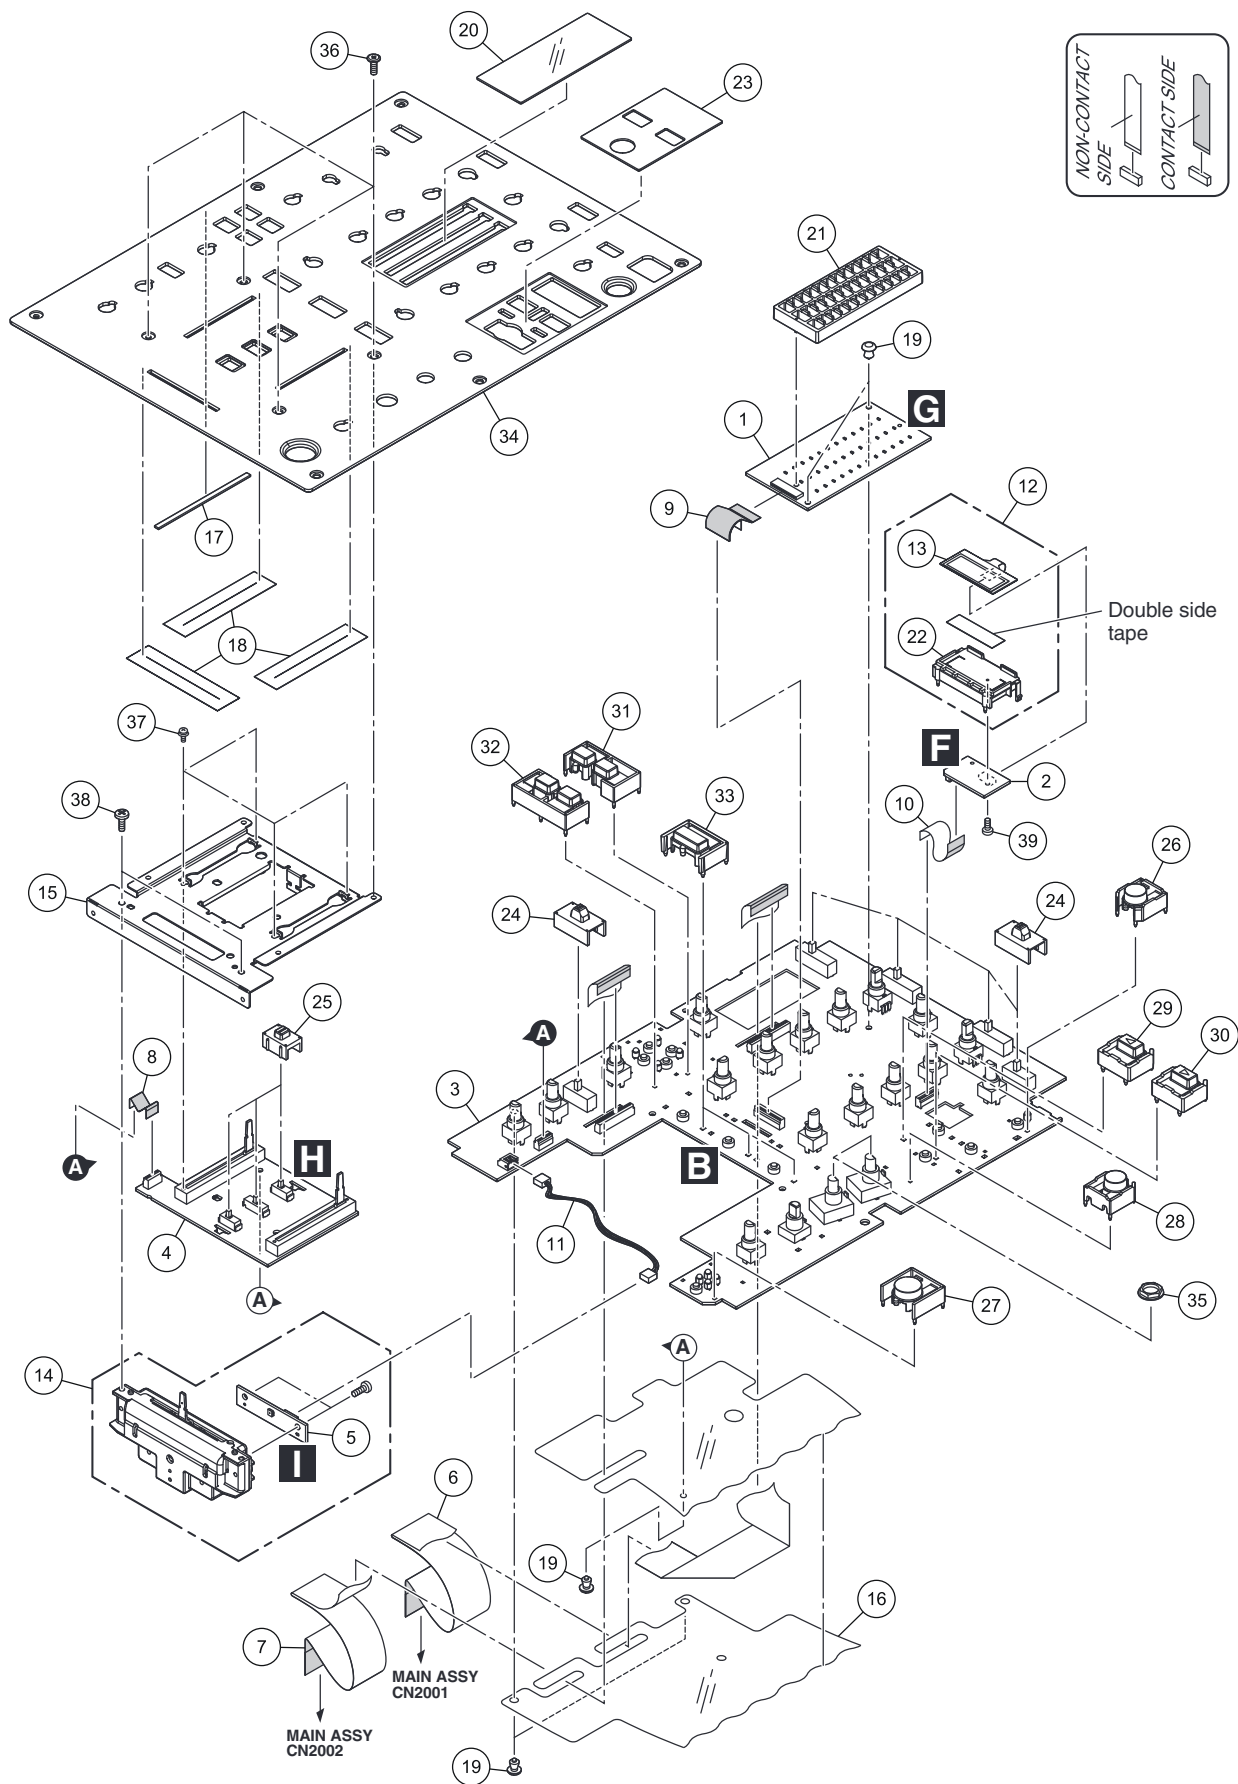

	5		6		7		8	
CONTROL PANEL SECTION PARTS LIST								
Mark No.	Description		Part No.					
	1	LEDB ASSY	DWX3938					
	2	OLED ASSY	DWX3939					A
	3	PNLA ASSY	DWX3940					
	4	FADB ASSY	DWX3942					
NSP	5	CRFD ASSY	DWX3258					
	6	FFC	DDD1790					
	7	FFC	DDD1791					
	8	FFC	DDD1792					
	9	FFC	DDD1793					
	10	FFC	DDD1794					
	11	Connector ASSY	PF03PP-B12					B
	12	OLED ASSY	DEA1065					
NSP	13	Matrix OEL	MXS4057					
	14	Cross Fader ASSY	DXA2257					
	15	Stay	DNF2011					
	16	Sheet	DEC3714					
	17	Packing/L	DEC3416					
	18	Fader Packing	DEC2903					
	19	Rivet (Plastic)	RBM-003					
	20	Plate	DAK1009					C
	21	Holder	DNK6660					
NSP	22	Holder	DNK6659					
	23	Plate	DAK1010					
	24	Cap/MIC	DAC2773					
	25	Cap/FDR	DAC2771					
	26	Button	DAC3252					
	27	Button	DAC3257					
	28	Button	DAC3248					
	29	Button	DAC3247					D
	30	Button	DAC3253					
	31	Button	DAC3249					
	32	Button	DAC3251					
	33	Button	DAC3250					
	34	Control Panel	DNB1249					
	35	Flange Nut M9	DBN1008					
	36	Screw	DBA1446					
	37	Screw	PMH20P040FTC					
	38	Screw	BPZ30P080FTC					E
	39	Screw	BPZ20P040FTB					

1 2 3 4

9.4 CHASSIS SECTION

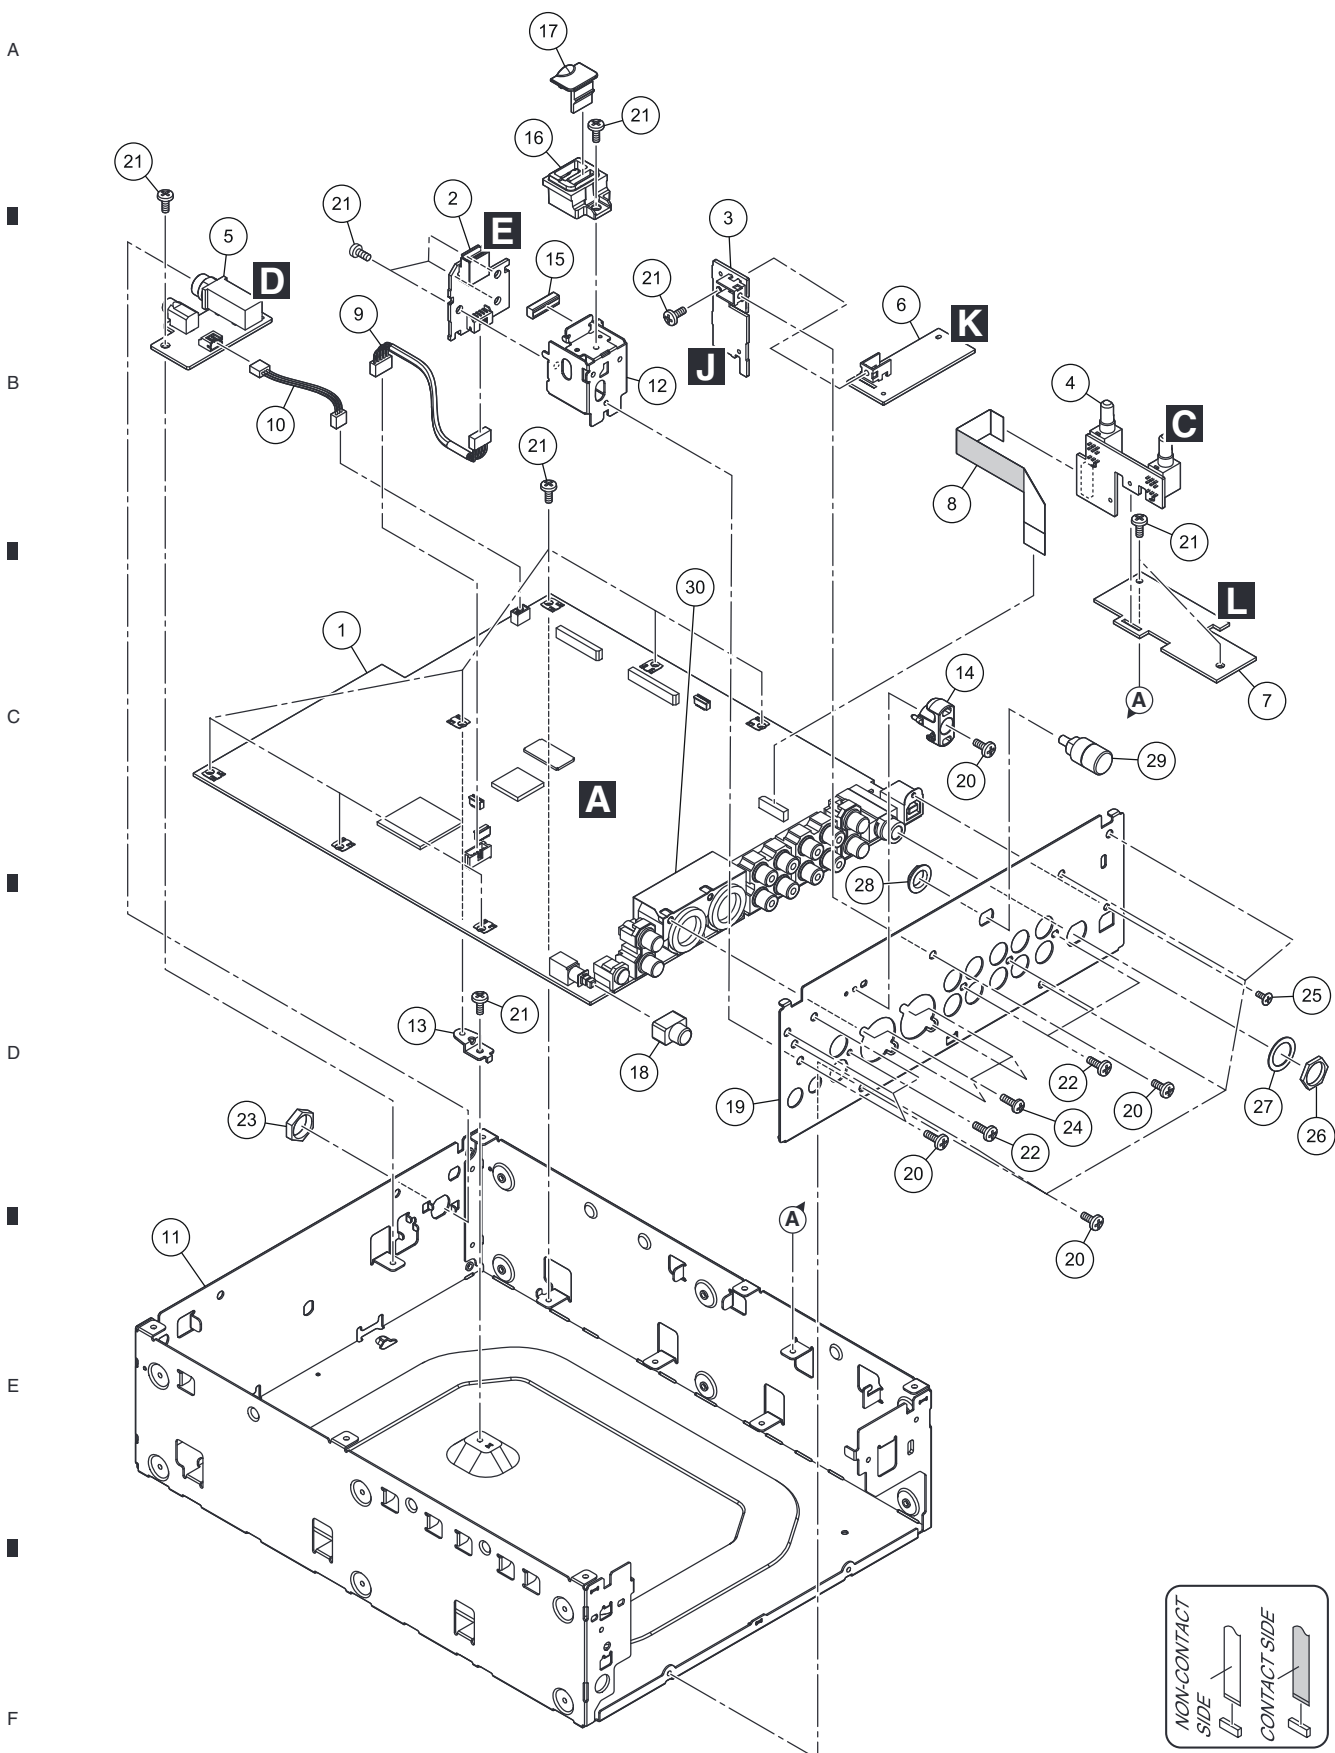

CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1 MAIN ASSY	DWX3931	
	2 USBA ASSY	DWX3937	A
	3 MPSH ASSY	DWX3943	
	4 TRIM ASSY	DWX3944	
	5 HPJK ASSY	DWX3941	
	6 PPSH ASSY	DWX3932	■
NSP	7 STAY ASSY	DWX3945	
	8 FFC	DDD1795	
	9 Shielded CONN-Cable	DDA1077	
	10 Connector ASSY	PF03PP-B07	
	11 Chassis	DNA1462	B
	12 Stay	DNF2009	
NSP	13 PCB Stay (Fe)	VNE2489	
	14 Hook	DNK6067	
	15 EMC Gasket	DEC3715	■
	16 Panel	DNK6656	
	17 USB Cover	DNK4999	
	18 Knob	DNK6607	
	19 Rear Panel	DNC2127	
	20 Screw	BBZ30P060FTB	C
	21 Screw	BBZ30P060FTC	
	22 Screw	BPZ30P080FTB	
	23 Nut M12	DBN1018	
	24 Screw	PPZ30P080FTB	■
	25 Screw (M3x5)	DBA1340	
	26 Nut	NKX2FTC	
	27 Washer	DEC2920	
	28 Flange Nut M9	DBN1008	
	29 Earth Terminal	DKE1019	D
NSP	30 Canon Shield	DNF1789	