


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
● The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

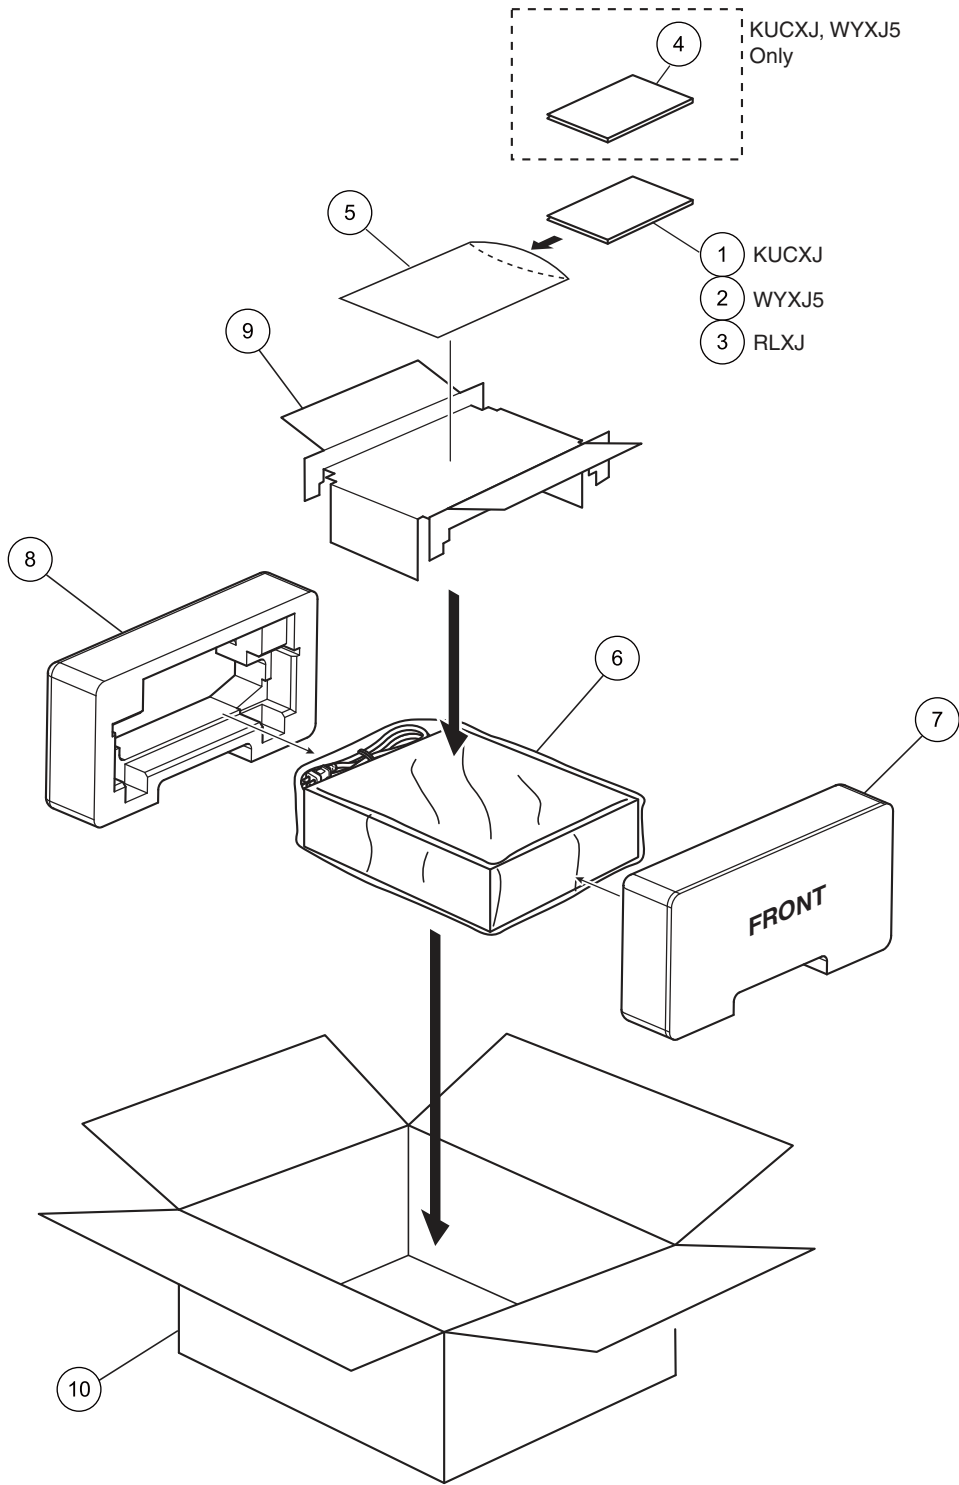

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
1	Operating Instructions (English)	See Contrast table (2)
2	Operating Instructions (English, French, German, Italian, Dutch, Spanish, Russian)	See Contrast table (2)
3	Operating Instructions (English, Spanish, Chinese)	See Contrast table (2)
NSP 4	Warranty Card	See Contrast table (2)
NSP 5	Polyethylene Bag (0.06 x 230 x 340)	AHG7117
6	Packing Sheet	AHG7010
7	Pad F	DHA1741
8	Pad R	DHA1742
9	Pad T	DHA1764
10	Carton Box	See Contrast table (2)

(2) CONTRAST TABLE

DJM-700-S/KUCXJ, WYXJ5, RLXJ, DJM-700-K/KUCXJ, WYXJ5 and RLXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-700-S /KUCXJ	DJM-700-S /WYXJ5	DJM-700-S /RLXJ	DJM-700-K /KUCXJ	DJM-700-K /WYXJ5	DJM-700-K /RLXJ
	1	Operating Instructions (English)	DRB1426	Not used	Not used	DRB1426	Not used	Not used
	2	Operating Instructions (English, French, German, Italian, Dutch, Spanish, Russian)	Not used	DRB1425	Not used	Not used	DRB1425	Not used
	3	Operating Instructions (English, Spanish, Chinese)	Not used	Not used	DRB1427	Not used	Not used	DRB1427
NSP	4	Warranty Card	ARY7043	ARY7107	Not used	ARY7043	ARY7107	Not used
	10	Carton Box	DHG2690	DHG2689	DHG2691	DHG2696	DHG2695	DHG2715

9.2 EXTERIOR SECTION

A

B

C


D

E

F

Refer to
"9.3 CONTROL PANEL SECTION".

KUCXJ
Only

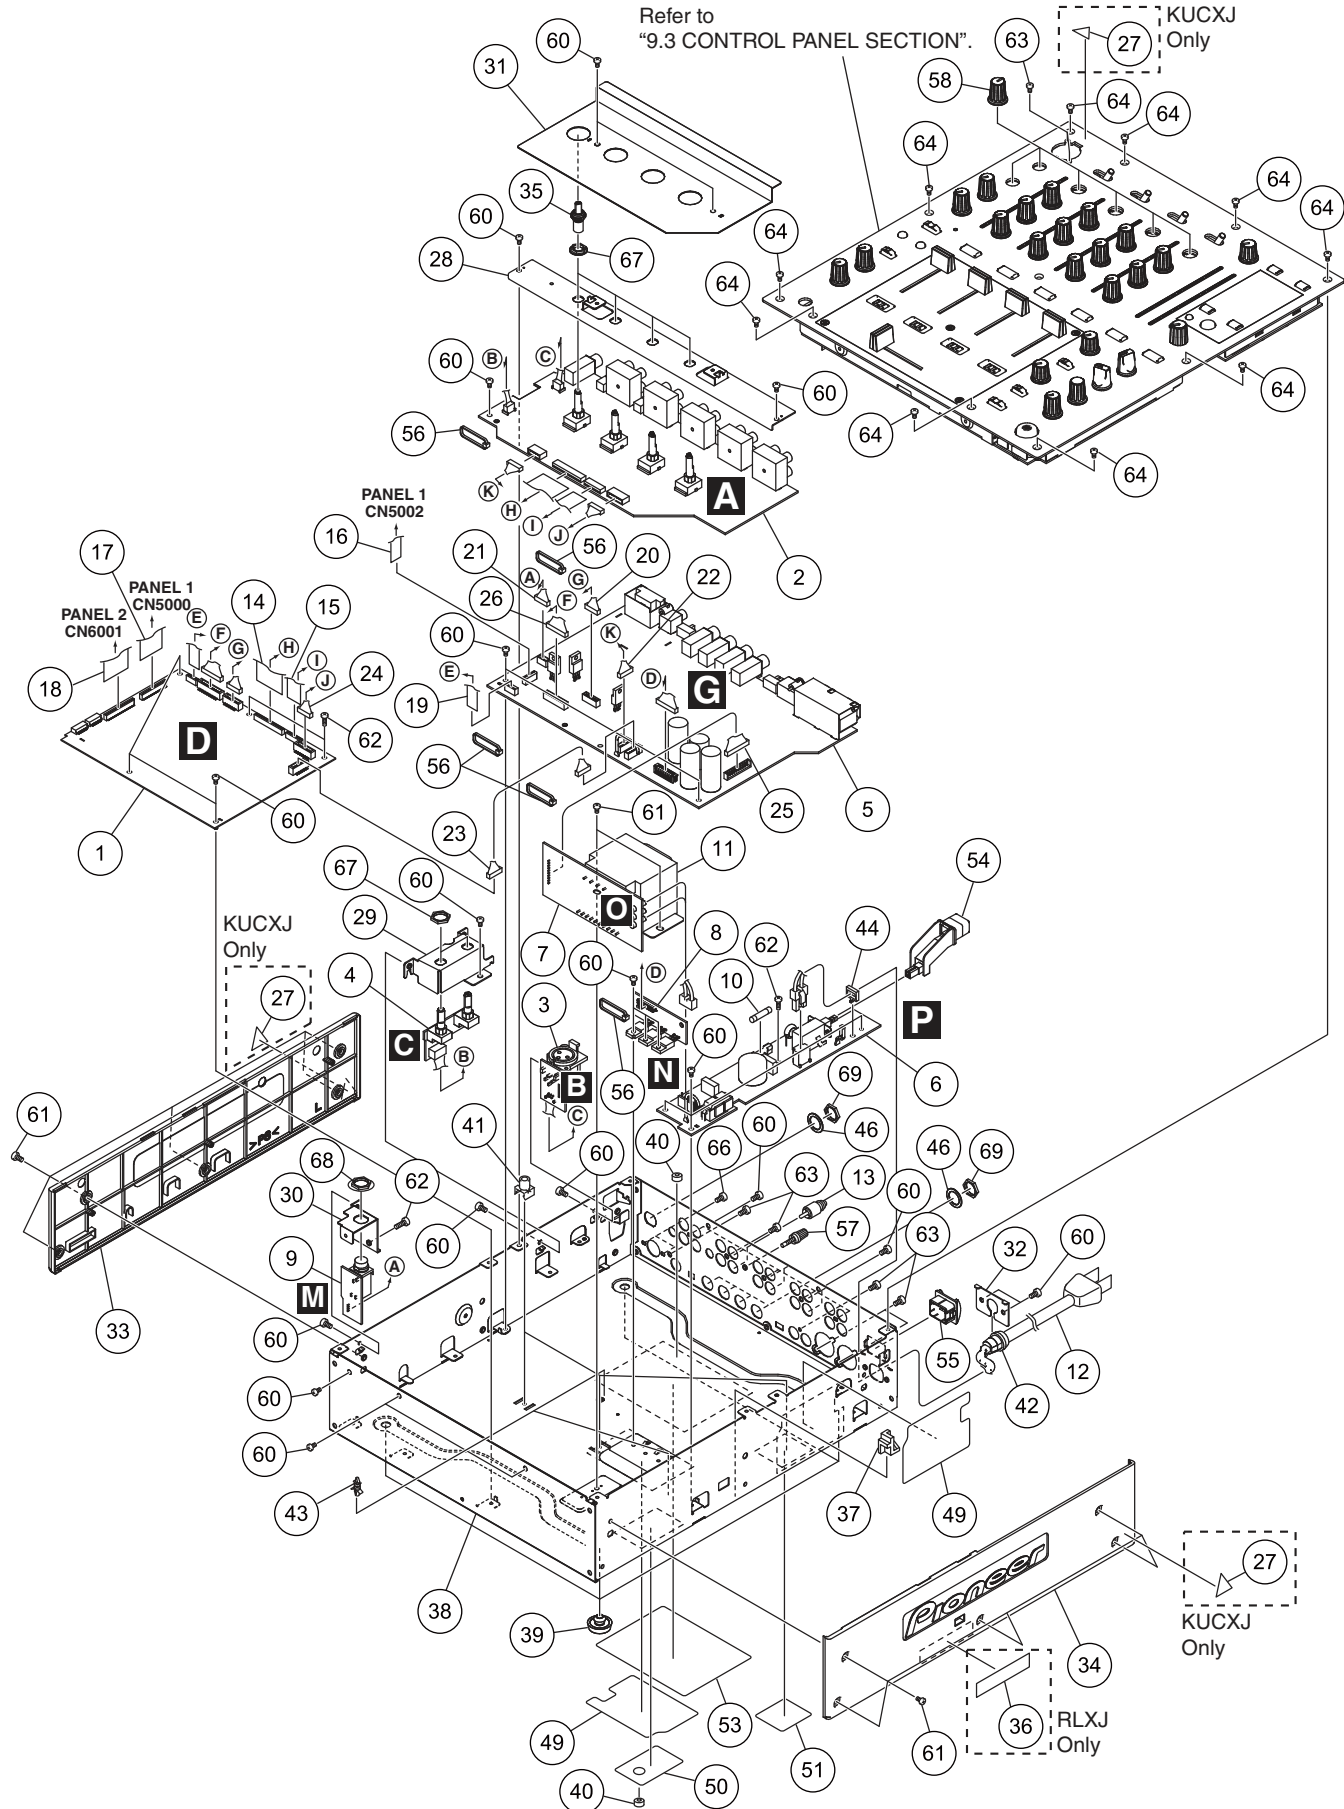

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN Assy	DWX2674	46	Washer	DEC2920	
2	INPUT Assy	DWX2675	47	•••••		A
3	MIC1 JACK Assy	DWX2685	48	•••••		
4	MIC VR Assy	DWX2686	49	Bottom Sheet A	DEC3020	
5	OUTPUT Assy	DWX2676	50	Bottom Sheet B	DEC3021	
⚠	6 PRIMARY Assy	See Contrast table (2)	51	Bottom Sheet C	DEC3022	
7	TRANS Assy	See Contrast table (2)	52	•••••		
8	REG Assy	DWX2689	NSP 53	Label	See Contrast table (2)	
9	HP JACK Assy	DWX2690	54	Button (POWER)	DAC2394	
⚠	10 Fuse (FU1901:T500mA)	AEK1051	55	Power Knob Guard	DNK4534	
⚠	11 Power Transformer	See Contrast table (2)	56	Binder	ZCA-SKB90BK	B
⚠	12 AC Power Cord	See Contrast table (2)	57	Terminal Screw	AKE-031	
13	Short Pin Plug	AKM7008	58	Knob (BLACK)	DAA1212	
14	30P FFC	DDD1362	59	•••••		
15	16P FFC	DDD1363	60	Screw	BBZ30P060FTB	
16	11P FFC	DDD1366	61	Screw	BBZ40P060FTB	
17	27P FFC	DDD1367	62	Screw	BCZ30P140FTC	
18	31P FFC	DDD1368	63	Screw	BPZ30P080FTB	
19	9P FFC	DDD1364	64	Screw	See Contrast table (2)	
20	Connector Assy	DKP3787	65	•••••		C
21	Connector Assy	PF04PP-D27	66	Screw	PMH30P100FTB	
22	Connector Assy	PF06PP-D10	67	Flange Nut M9	DBN1008	
23	Connector Assy	PF07PP-S12	68	Flange Nut M12	DBN1012	
24	Connector Assy	PF08PP-D12	69	Nut M12	NKX2FNI	
25	Connector Assy	PF10EE-S22				
26	Connector Assy	PF11PP-D10				
NSP 27	Label	See Contrast table (2)				
28	Trim Stay	DNF1765				
29	MIC VR Stay	DNF1766				D
30	HP Stay	DNF1767				
31	Input Shield	DNF1770				
32	Power Cord Stay	DNF1792				
33	Side Panel L	DNK4945				
34	Side Panel R	See Contrast table (2)				
35	Extension Shaft	DNK4948				
NSP 36	V Select Label	See Contrast table (2)				
37	Stopper (Screw)	DNK5084				
38	Chassis Assy	See Contrast table (2)				E
39	Foot Assy	REC-434				
40	Spacer	AEB7092				
41	PCB Mold (PP)	AMR2534				
42	Cord Stopper	See Contrast table (2)				
43	Spacer	DEC2369				
44	Locking Mini Clamp	DEC2439				
45	•••••					F

(2) CONTRAST TABLE

DJM-700-S/KUCXJ, WYXJ5, RLXJ, DJM-700-K/KUCXJ, WYXJ5 and RLXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-700-S /KUCXJ	DJM-700-S /WYXJ5	DJM-700-S /RLXJ	DJM-700-K /KUCXJ	DJM-700-K /WYXJ5	DJM-700-K /RLXJ
A		6 PRIMARY Assy	DWX2687	DWX2687	DWX2692	DWX2687	DWX2687	DWX2692
	7	TRANS Assy	DWX2688	DWX2688	DWX2757	DWX2688	DWX2688	DWX2757
		11 Power Transformer	DTT1209	DTT1208	DTT1208	DTT1209	DTT1208	DTT1208
		12 AC Power Cord	VDG1075	Not used	Not used	VDG1075	Not used	Not used
		12 Power Cord with Plug	Not used	VDG1061	VDG1061	Not used	VDG1061	VDG1061
B	NSP	27 Label	DRW1975	Not used	Not used	DRW1975	Not used	Not used
	34	Side Panel R	DNK4946	DNK4946	DNK4947	DNK4946	DNK4946	DNK4947
	NSP	36 V Select Label	Not used	Not used	DRW2349	Not used	Not used	DRW2349
	38	Chassis Assy	DXB1952	DXB1951	DXB1951	DXB1952	DXB1951	DXB1951
	42	Cord Stopper	CM-22C	CM-22B	CM-22B	CM-22C	CM-22B	CM-22B
	NSP	53 Label	DRW2351	DRW2350	DRW2352	DRW2357	DRW2356	DRW2358
	64	Screw	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FTB	CCZ30P060FTB	CCZ30P060FTB



5



6



7



8



A



B



C



D



E



F



5



6




7



8



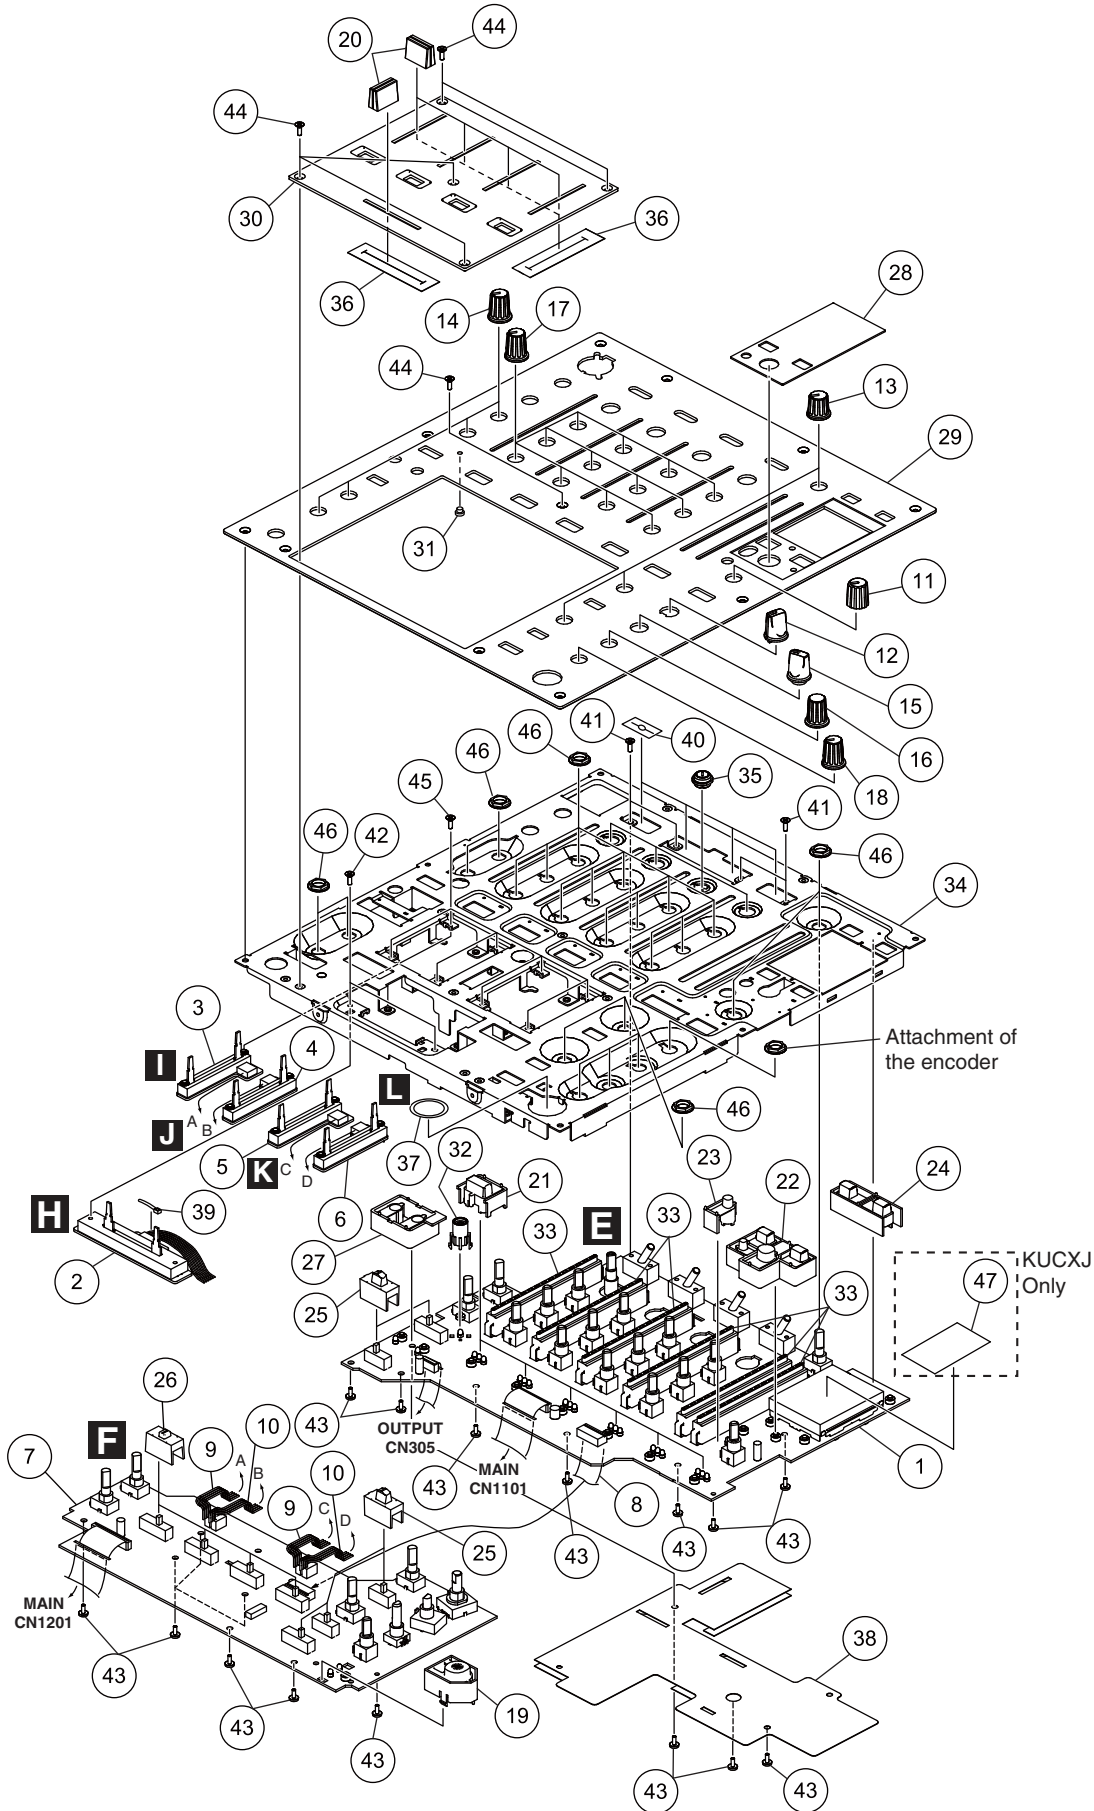

(1) CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	PANEL 1 Assy	DWX2677	26	Slide SW Cap (W)	DAC2401
2	FADER (CROSS) Assy	DWX2680	27	Button (FS)	DAC2422
3	FADER (CH1) Assy	DWX2681	28	Display Window	See Contrast table (2)
4	FADER (CH2) Assy	DWX2682	29	Control Panel	See Contrast table (2)
5	FADER (CH3) Assy	DWX2683	30	Fader Panel	See Contrast table (2)
6	FADER (CH4) Assy	DWX2684	31	Lens	DNK4532
7	PANEL 2 Assy	DWX2678	32	Lens Holder	DNK4533
8	13P FFC	DDD1369	33	Level Meter Assy	DXB1882
9	Connector Assy	PF04PP-B05	34	Panel Stay	DNF1764
10	Connector Assy	PF04PP4B05	35	Bush	DNK4996
11	Rotary SW Knob (HM)	DAA1197	36	Fader Packing	DEC2903
12	Select Knob	DAA1205	37	SW Packing	DEC2929
13	Knob (MA)	DAA1210	38	Barrier (PANEL)	DEC3009
14	Knob (BLACK)	DAA1212	39	Binder	ZCA-SKB90BK
15	FX SEL Knob	DAA1213	40	SW Packing	DED1177
16	Knob (TIME)	DAA1214	41	Screw	AMZ26P040FTC
17	Rotary SW Knob (G)	DAA1219	42	Screw	AMZ30P040FTC
18	Rotary Knob (BN)	DAA1220	43	Screw	BBZ30P060FTB
19	Effect Knob	DAC2304	44	Screw	See Contrast table (2)
20	Slider Knob (L2)	DAC2371	45	Screw	PMA20P040FTC
21	Button (CUE)	DAC2395	46	Flange Nut M9	DBN1008
22	Button (TAP)	DAC2397	47	Barrier (FL)	See Contrast table (2)
23	Button (FL)	DAC2398			
24	Button (MIDI)	DAC2399			
25	Slide SW Cap	DAC2400			

(2) CONTRAST TABLE

DJM-700-S/KUCXJ, WYXJ5, RLXJ, DJM-700-K/KUCXJ, WYXJ5 and RLXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-700-S /KUCXJ	DJM-700-S /WYXJ5	DJM-700-S /RLXJ	DJM-700-K /KUCXJ	DJM-700-K /WYXJ5	DJM-700-K /RLXJ
	28	Display Window S	DAH2542	DAH2542	DAH2542	Not used	Not used	Not used
	28	Display Window B	Not used	Not used	Not used	DAH2543	DAH2543	DAH2543
	29	Control Panel	DNB1152	DNB1152	DNB1152	Not used	Not used	Not used
	29	Control Panel B	Not used	Not used	Not used	DNB1153	DNB1153	DNB1153
	30	Fader Panel	DNB1154	DNB1154	DNB1154	Not used	Not used	Not used
	30	Fader Panel B	Not used	Not used	Not used	DNB1155	DNB1155	DNB1155
	44	Screw	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FTB	CCZ30P060FTB	CCZ30P060FTB
	47	Barrier (FL)	DEC3058	Not used	Not used	DEC3058	Not used	Not used