


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

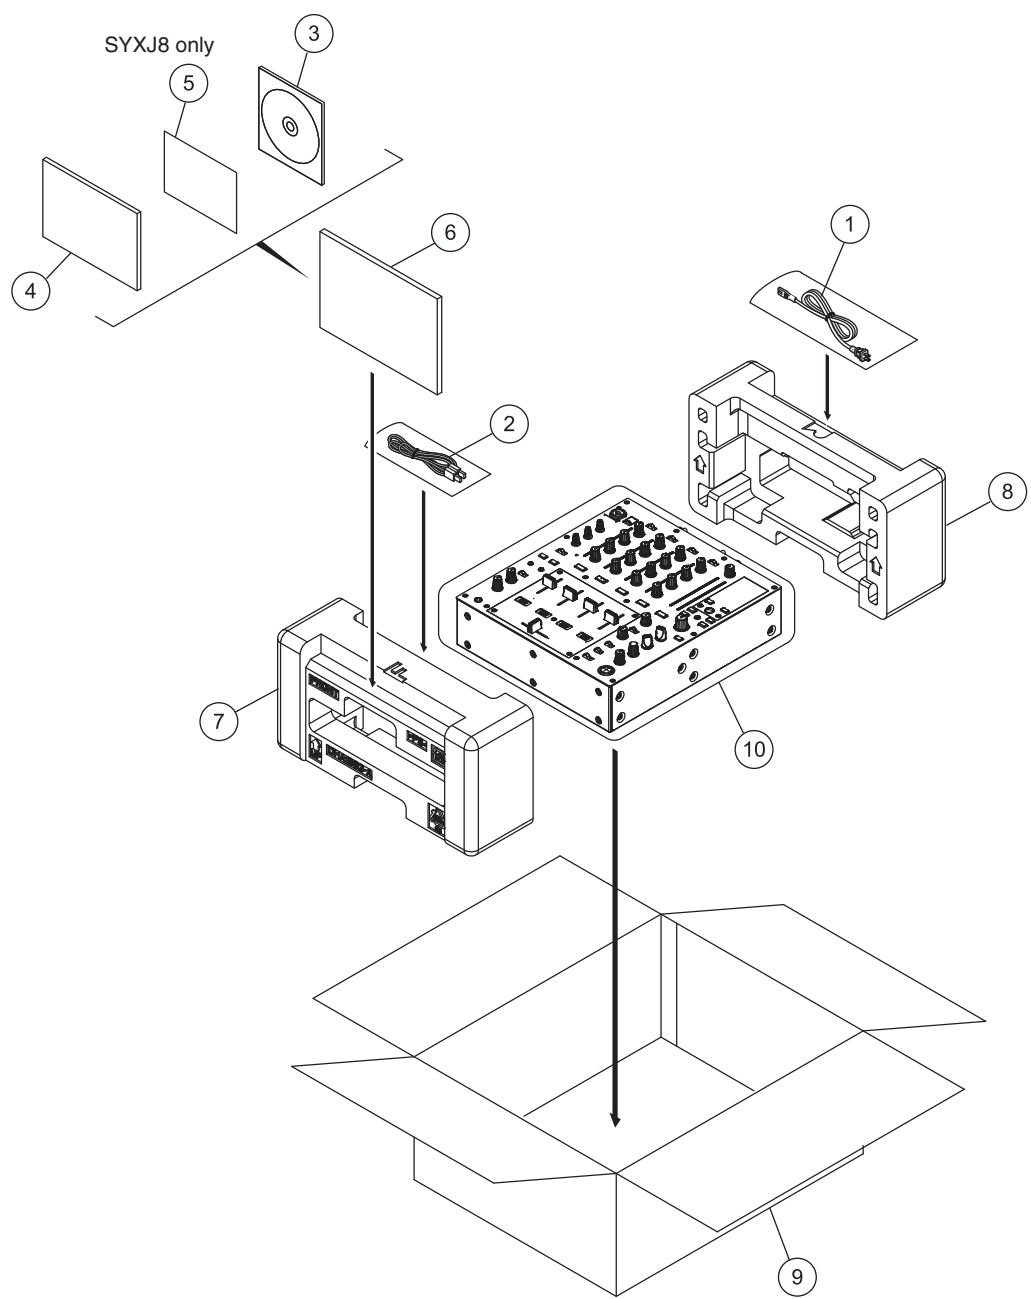

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
⚠ 1	Power Cord	See Contrast table (2)
2	USB Cable	DDE1128
3	Driver Software/ Operating Instructions CD-ROM	DXX2726
4	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
NSP 5	Warranty	See Contrast table (2)
NSP 6	Polyethylene Bag	AHG7117
7	Packing Pad/A	DHA1883
8	Packing Pad/B	DHA1884
9	Packing Case	See Contrast table (2)
10	Packing Sheet	RHC1023

(2) CONTRAST TABLE

DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5
⚠	1	Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Read Before Use (Important) /Quick Start Guide	DRH1205	DRH1206	DRH1216	DRH1219	DRH1218
NSP	5	Warranty	ARY7158	Not used	Not used	Not used	Not used
	9	Packing Case	DHG3239	DHG3240	DHG3241	DHG3244	DHG3243

Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5
⚠	1	Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Read Before Use (Important) /Quick Start Guide	DRH1205	DRH1206	DRH1216	DRH1219	DRH1218
NSP	5	Warranty	ARY7158	Not used	Not used	Not used	Not used
	9	Packing Case	DHG3245	DHG3246	DHG3247	DHG3250	DHG3249

A

B

C

D

E

F



(1) EXTERIOR SECION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	USBI Assy	DWX3431	21	USB Cover B	DNK5868	
2	INPUT Assy	DWX3432	22	Side Panel L	DNK6061	A
3	HPJK Assy	DWX3433	23	Side Panel R	See Contrast table (2)	
4	MIC1 Assy	DWX3441	24	Panel/USB	DNK6120	
5	MTRM Assy	DWX3442	25	Knob/POW	See Contrast table (2)	
6	Plug/Pin	DKM1024	26	Terminal Screw	AKE-031	
7	Shielded Conn-Cable	DDA1043	27	Front Panel	DNK6063	
8	FFC/25P	DDD1597	28	Knob/EQ	DAA1302	
9	FFC/22P	DDD1598	NSP 29	Name Label	See Contrast table (2)	
10	Connector Assy	PF04PP-S05	NSP 30	Label	See Contrast table (2)	
11	Cable	PF04PP-S17	NSP 31	Caution Label	See Contrast table (2)	B
12	Stay/HP	DNF1907	NSP 32	V Select Label	See Contrast table (2)	
13	Shield Plate/INP	DNF1908	33	•••••		
14	Bracket/USB	DNF1909	34	Flange Nut M9	DBN1008	
15	Bracket/MIC	DNF1929	35	Nut (M12)	NKX2FNI	
16	Stay/INP	DNF1911	36	Nut M12	DBN1018	
17	Bracket/SCN	DNH3090	37	Washer	DEC2920	
18	Nylon Rivet	AEC1671	38	Screw (FE)	See Contrast table (2)	
19	Locking Mini Clamp	DEC2439	39	Screw (M3*5)	DBA1340	
20	Holder	VEC1355	40	Screw	BBZ30P060FTB	C
			41	Screw	BBZ30P060FTC	
			42	Screw	BBZ40P060FTB	
			43	Screw	BPZ30P080FTB	
			44	Screw	BPZ30P120FTB	

(2) CONTRAST TABLE

DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5
	23	Side Panel R	DNK6062	DNK6062	DNK6065	DNK6062	DNK6062
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used
NSP	29	Name Label	DAL1260	DAL1245	DAL1246	DAL1249	DAL1248
NSP	30	Label	Not used	DRW1975	Not used	Not used	Not used
NSP	31	Caution Label	Not used	DRW2429	DRW2430	Not used	Not used
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used
	38	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290

Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5
	23	Side Panel R	DNK6062	DNK6062	DNK6065	DNK6062	DNK6062
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used
NSP	29	Name Label	DAL1261	DAL1251	DAL1252	DAL1255	DAL1254
NSP	30	Label	Not used	DRW1975	Not used	Not used	Not used
NSP	31	Caution Label	Not used	DRW2429	DRW2430	Not used	Not used
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used
	38	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436

9.3 BOTTOM SECTION

A


B

C

D

E

F

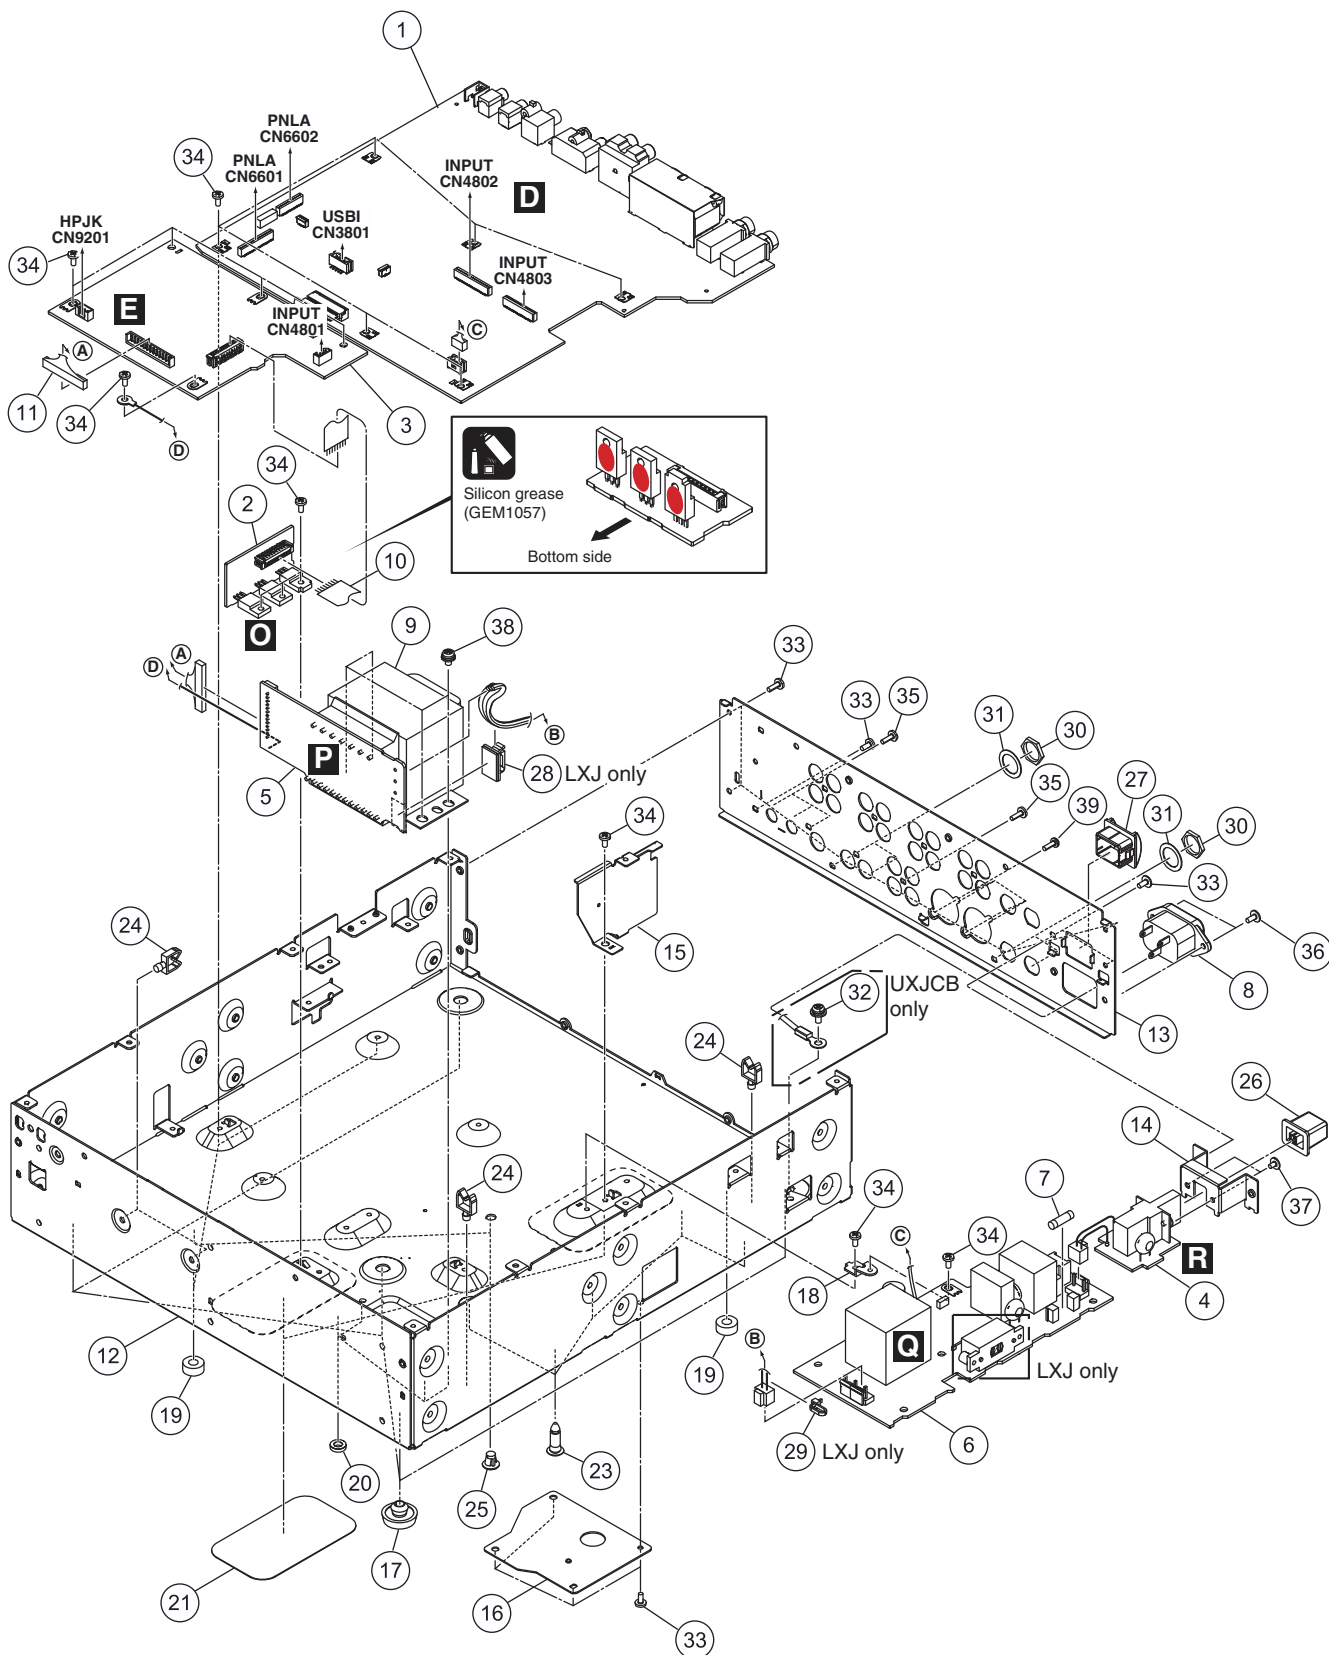

(1) BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 MAIN Assy	DWX3430	21	Sheet/BOT	DEC3404
	2 REG Assy	DWR1528	22	•••••	
	3 SEC/HP Assy	DWR1529	23	PCB Holder	PNW2029
	4 ACSW Assy	DWR1532	24	Holder	VEC1355
	5 PRIMARY Assy	See Contrast table (2)	NSP 25	PC Support	VEC1749
	6 TRANS Assy	See Contrast table (2)	26	Power Knob	DAC2306
⚠	7 Fuse (T630 mA)	AEK1052	27	Power Knob Guard	DNK4534
⚠	8 AC Inlet	See Contrast table (2)	28	Locking Wire Saddle	See Contrast table (2)
⚠	9 Transformer	See Contrast table (2)	29	Binder	See Contrast table (2)
	10 Jumper Wire	D20PYY1010E	30	Nut (M12)	NKX2FNI
	11 Connector Assy	PF13EE-S17	31	Washer	DEC2920
NSP	12 Chassis/750	DNA1453	32	Screw	See Contrast table (2)
	13 Rear Panel	See Contrast table (2)	33	Screw	BBZ30P060FTB
	14 Bracket PSW	DNF1759	34	Screw	BBZ30P060FTC
	15 Shield Plate/PW	DNF1906	35	Screw	BPZ30P080FTB
NSP	16 Plate	DNK6124	36	Screw	IBZ30P080FTB
	17 Foot (Rubber)	REC-434	37	Screw	IMZ30P040FTC
NSP	18 PCB Stay (FE)	VNE2489	38	Screw	PMB40P060FTB
NSP	19 Spacer	AEB7092	39	Screw	PPZ30P080FTB
	20 Spacer	DEB1998			

(2) CONTRAST TABLE

DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5
⚠	5	PRIMARY Assy	DWR1535	DWR1537	DWR1530	DWR1535	DWR1535
⚠	6	TRANS Assy	DWR1536	DWR1538	DWR1531	DWR1536	DWR1536
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916
	9	Transformer	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256
	13	Rear Panel	DNC2101	DNC2102	DNC2103	DNC2106	DNC2105
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used

Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5
⚠	5	PRIMARY Assy	DWR1535	DWR1537	DWR1530	DWR1535	DWR1535
⚠	6	TRANS Assy	DWR1536	DWR1538	DWR1531	DWR1536	DWR1536
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916
⚠	9	Transformer	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256
	13	Rear Panel	DNC2101	DNC2102	DNC2103	DNC2106	DNC2105
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used

1 2 3 4

9.4 CONTROL PANEL SECTION (1/2)

A


B

C

D

E

F

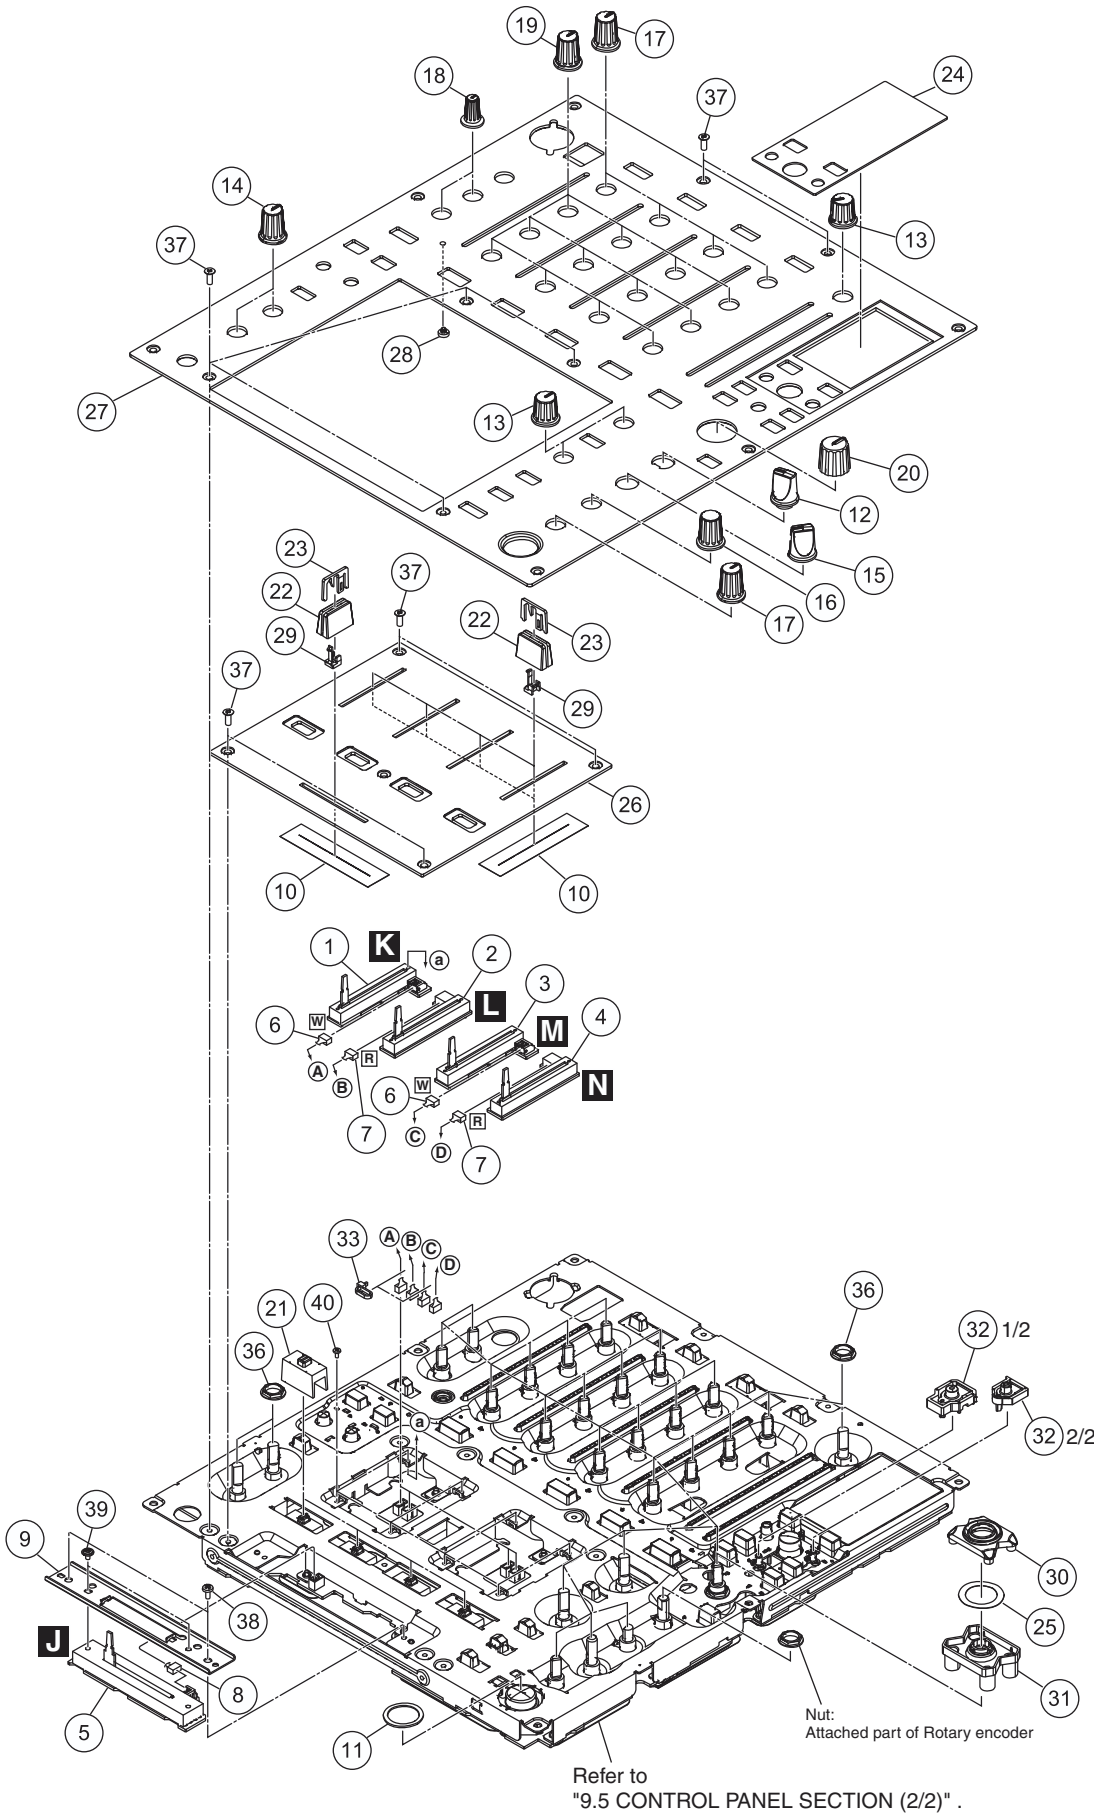

(1) CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	FAD1 Assy	DWX3434	21	Slide SW Cap (W)	DAC2401	
2	FAD2 Assy	DWX3435	22	Slider Knob 1	DAC2684	A
3	FAD3 Assy	DWX3436	23	Slider Knob 2	DAC2685	
4	FAD4 Assy	DWX3437	24	Panel/FL	DAH2936	
5	FADC Assy	DWX3438	25	Ring	DEC3479	
6	Connector Assy	PF03PP-B05	26	Panel/FD	See Contrast table (2)	
7	Connector Assy	PF03PP2B05	27	Control Panel	See Contrast table (2)	
8	Connector Assy	PF03PP6B07	28	Lens	DNK4532	
9	CRF Stay	DNF1870	29	Slider Knob Stopper	DNK5888	
10	Fader Packing	DEC2903	30	Lens	DNK6231	
11	SW Packing (EF)	DEC2929	31	Reflector	DNK6232	B
12	Select Knob	DAA1205	32	Button Assy/UTY	DXB2138	
13	Knob (MA)	DAA1210	33	Binder	ZCA-SKB90BK	
14	Knob (Black)	DAA1212	34	•••••		
15	FX SEL Knob	DAA1213	35	•••••		
16	Knob (TIME)	DAA1214	36	Flange Nut M9	DBN1008	
17	Rotary Knob (BN)	DAA1220	37	Screw (FE)	See Contrast table (2)	
18	Knob/MIC	DAA1301	38	Screw	BBZ30P060FTC	
19	Knob/RSW	DAA1306	39	Screw	IMZ30P040FTC	
20	Knob/FRE	DAA1309	40	Screw	PMA20P040FTC	C

(2) CONTRAST TABLE


DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5	
	26	Panel/FD	DNB1216	DNB1216	DNB1216	DNB1216	DNB1216	
	27	Control Panel	DNB1218	DNB1218	DNB1218	DNB1218	DNB1218	D
	37	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290	
Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5	
	26	Panel/FD	DNB1217	DNB1217	DNB1217	DNB1217	DNB1217	
	27	Control Panel	DNB1219	DNB1219	DNB1219	DNB1219	DNB1219	
	37	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436	

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

Note:
Refer to "7. DISASSEMBLY" for styling of flexible cables, barriers.

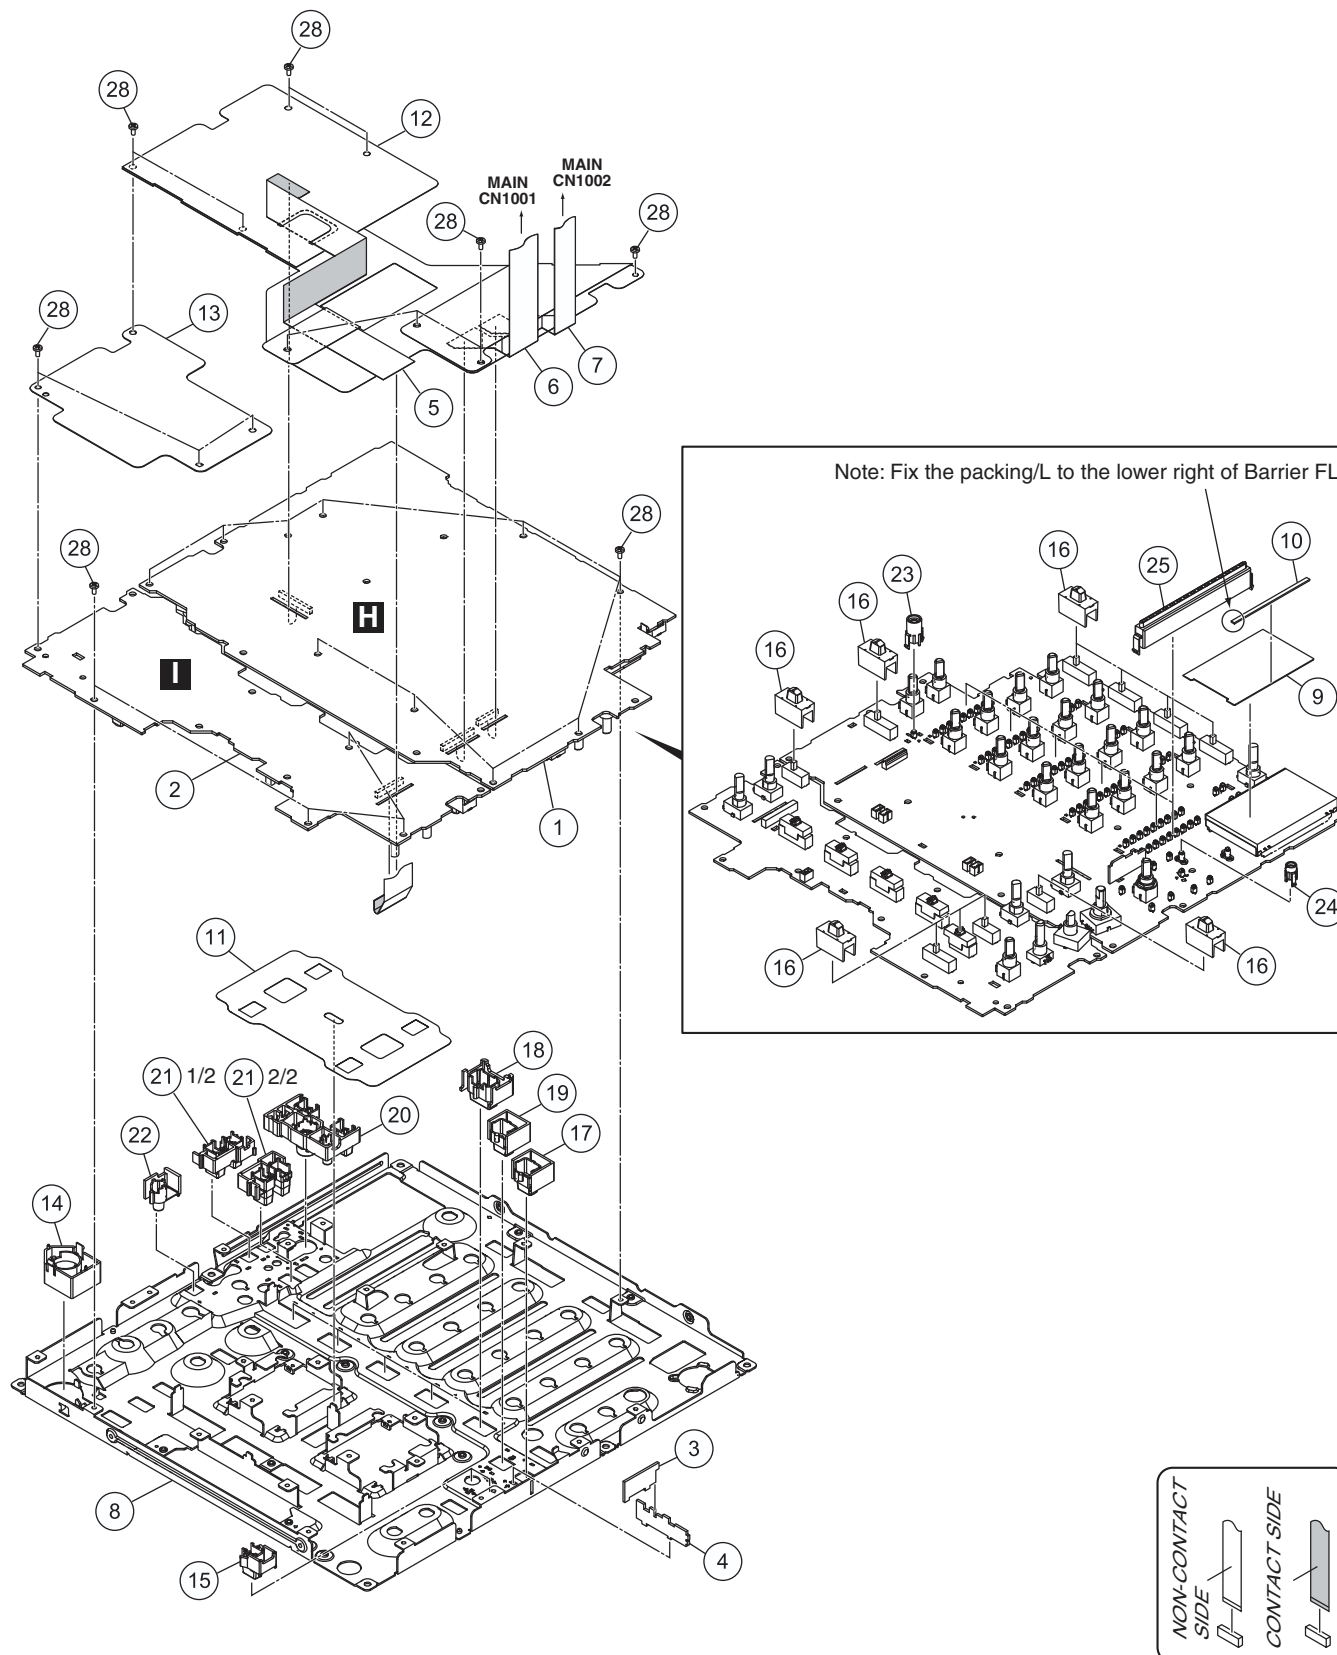

CONTROL PANEL SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	
1	PNLA Assy	DWX3439	
2	PNLB Assy	DWX3440	A
3	SHADE1 Assy	DWX3479	
4	SHADE2 Assy	DWX3483	
5	FFC/27P	DDD1601	
6	FFC/24P	DDD1628	
7	FFC/17P	DDD1629	
8	Stay/PNL	DND1275	
9	Barrier FL	DEC3351	
10	Packing/L	DEC3416	
11	Barrier/CHF	DMR1017	B
12	Barrier/PNL	DMR1018	
13	Barrier/A	DMR1019	
14	Effect Knob	DAC2304	
15	Button (FL)	DAC2398	
16	Slide SW Cap	DAC2400	
17	MIC Knob	DAC2522	
18	Button/CUE	DAC2873	
19	Button/BLK	DAC2920	
20	Button/TAP	DAC2921	C
21	Button/CFX	DAC2923	
22	Button/CUE	DAC2925	
23	Lens Holder	DNK4533	
24	Holder/LED	DNK6230	
25	Lebel Meter Assy	DXB1882	
26			
27			
28	Screw	BBZ30P060FTC	D