


2. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING SECTION

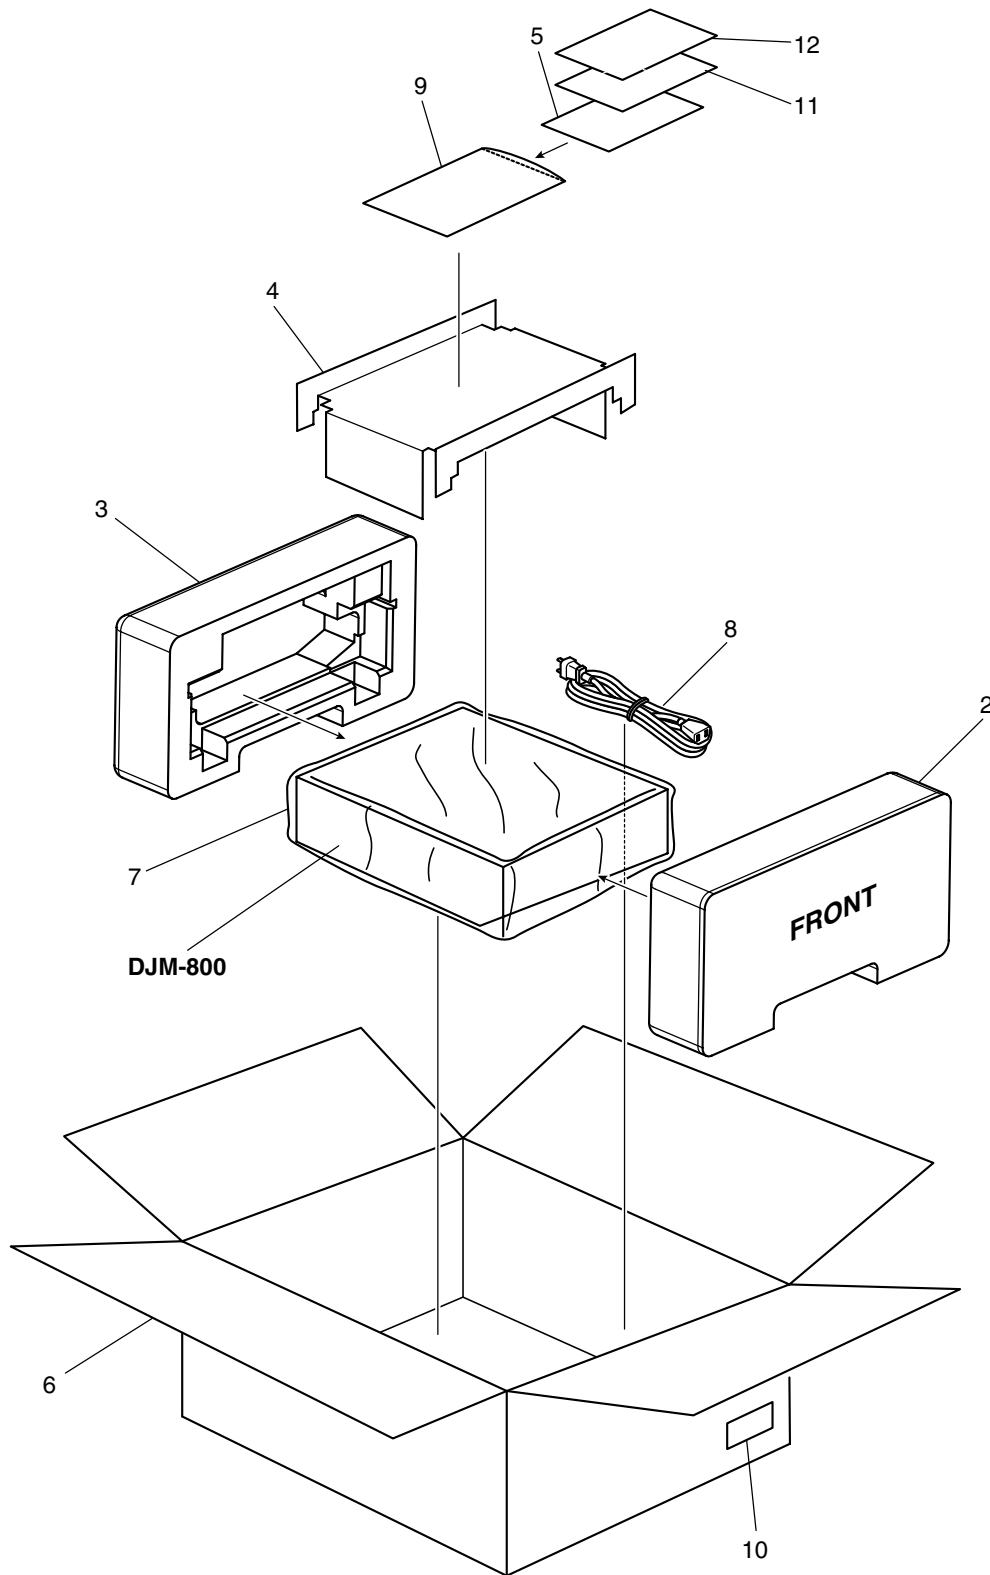

DJM-800

(1) PACKING SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	• • • • •		⚠ 8	Power Cord	See Contrast table (2)
2	Pad Front	DHA1698	NSP 9	Polyethylene Bag	AHG7117
3	Pad Rear	DHA1699	NSP 10	Label	See Contrast table (2)
4	Pad Top	DHA1705			
5	Instruction Manual(M800)	See Contrast table (2)	NSP 11	Warranty Card	See Contrast table (2)
			NSP 12	User Registration Sheet	DRM1262
6	Packing Case	See Contrast table (2)			
7	Sheet	RHX1006			

(2) CONTRAST TABLE

DJM-800/WYXJ5, DJM-800/TLXJ and DJM-800/KUCXJ are constructed the same except for the following

Mark	No.	Symbol and Description	DJM-800 /KUCXJ	DJM-800 /WYXJ5	DJM-800 /TLXJ
	5	Instruction Manual (English)	DRB1393	Not used	Not used
	5	Instruction Manual (English, French German, Italian, Dutch, Spanish)	Not used	DRB1392	Not used
	5	Instruction Manual (English, Spanish, Chinese)	Not used	Not used	DRB1394
	6	Packing Case	DHG2559	DHG2558	DHG2560
⚠	8	Power Cord	DDG1028	ADG7062	ADG7062
NSP	10	Label	DRW2311	VRW1629	VRW1629
NSP	11	Warranty Card	ARY7043	Not used	Not used

2.2 EXTERIOR SECTION

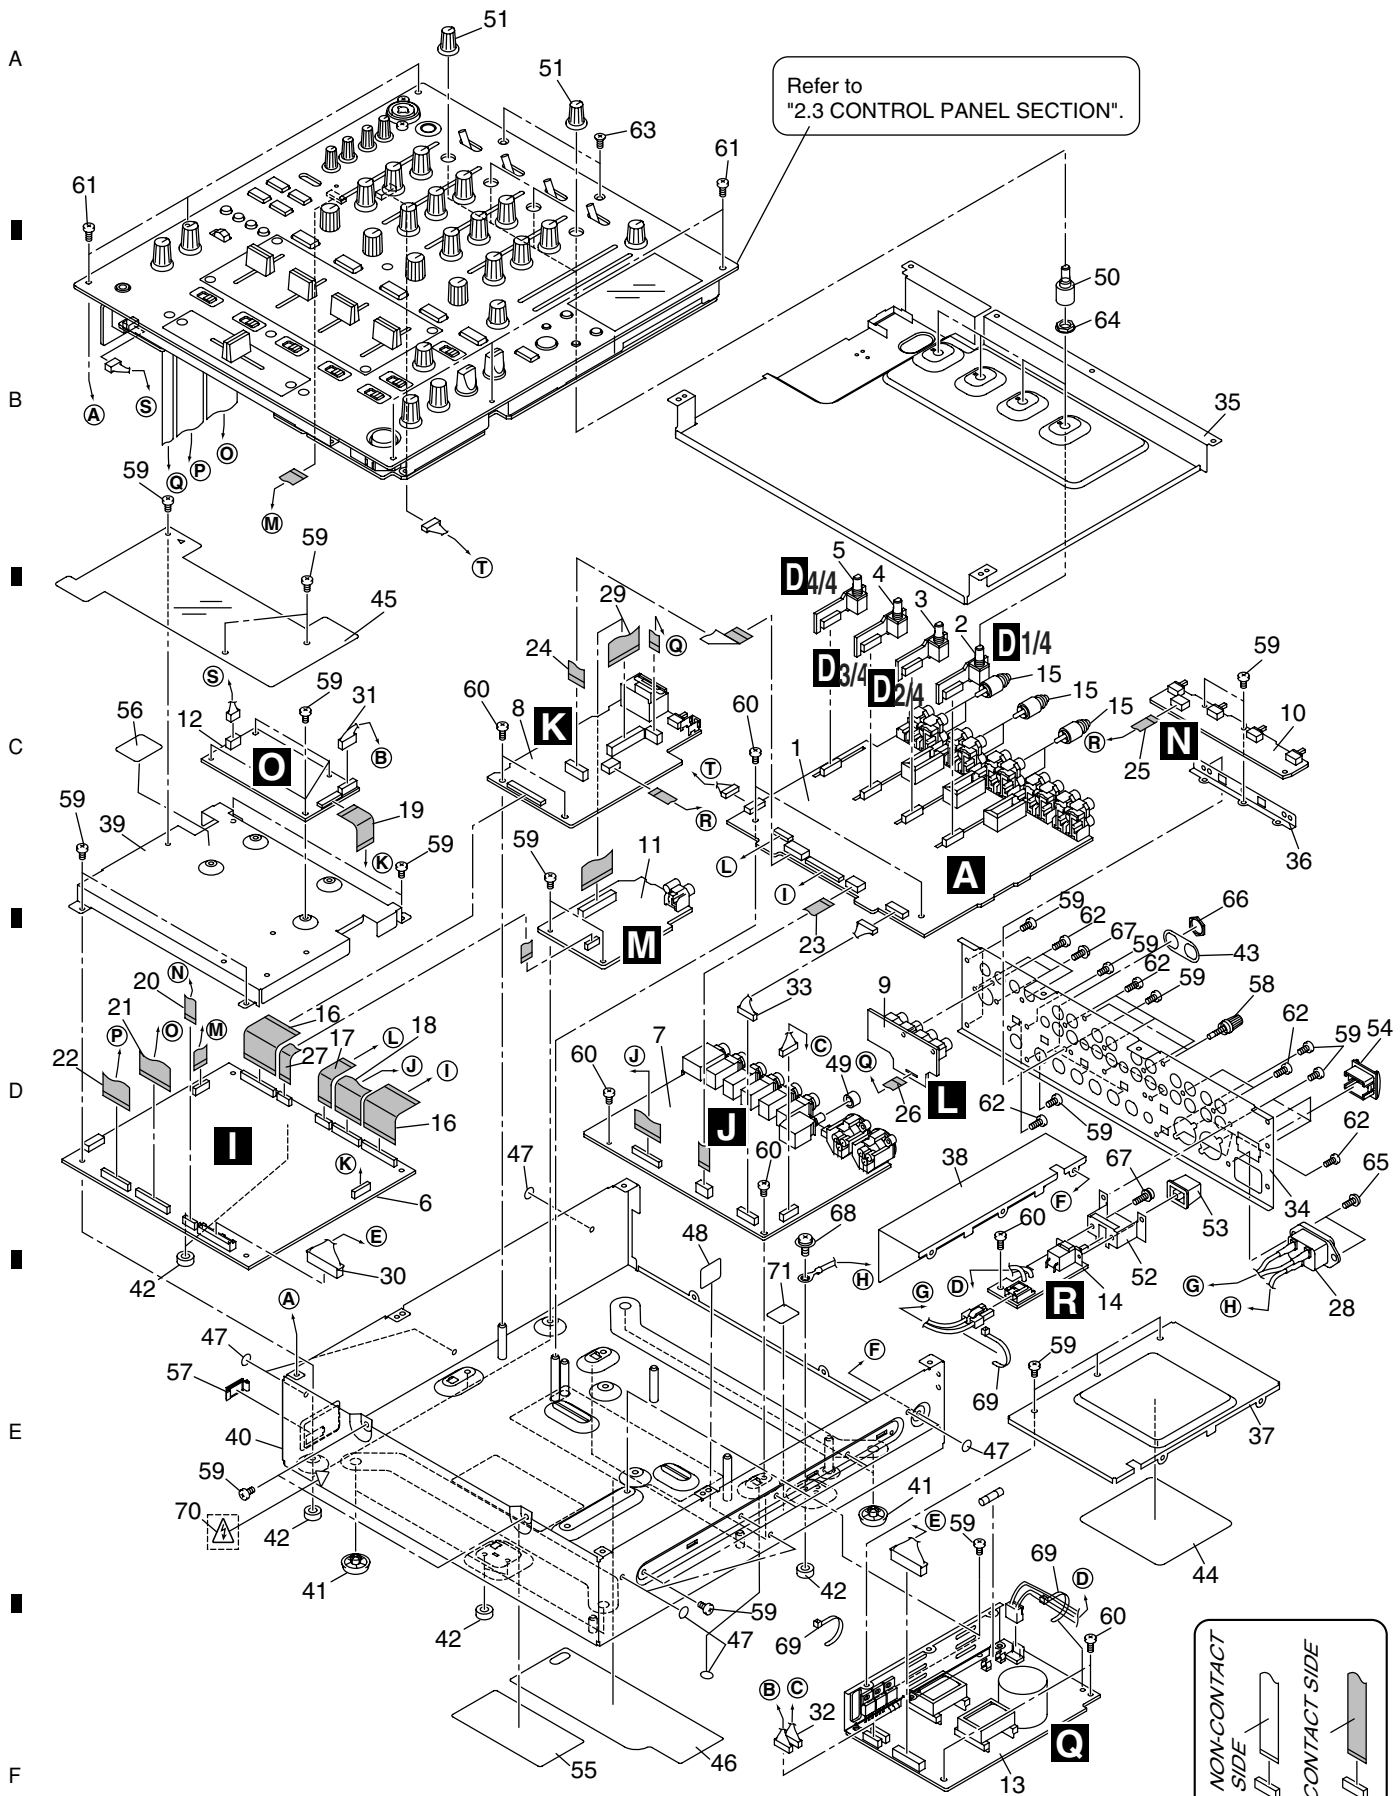

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	INPUT Assy	DWX2535	37	Shield Case	DNH2697	
2	TRIM 4 Assy	DWX2551	38	Shield Case AC	DNH2698	A
3	TRIM 3 Assy	DWX2550	39	Shield Case DSP	DNH2699	
4	TRIM 2 Assy	DWX2549	40	Chassis Assy	DXB1881	
5	TRIM 1 Assy	DWX2548				
6	DSP Assy	DWX2534	41	Leg Assy	REC-434	
7	OUTPUT Assy	DWX2544	NSP 42	Spacer	AEB7092	
8	DIGIC Assy	DWX2547	43	PHONE Spacer	DEC2914	
9	DIGIA Assy	DWX2555	44	Barrier A	DEC2915	
10	SLSW Assy	DWX2536	45	Styling Sheet	DEC2917	
11	DIGIB Assy	DWX2546	46	Bottom Cover	DEC2918	
12	HPAMP Assy	DWX2556	47	Blind Label	DEC2928	B
⚠ 13	POWER SUPPLY Unit	DWR1433	48	Barrier B	DEC2944	
14	ACSW Assy	DWX2545	49	Select Knob (S)	DAA1166	
15	Short Pin Plug	AKM7008	50	Extension Shaft	DNK4691	
16	Flexible Cable (31P)	DDD1316	51	Rotary SW Knob S	DAA1204	
17	Flexible Cable (12P)	DDD1317	52	Bracket PSW	DNF1730	
18	Flexible Cable (25P)	DDD1318	53	POWER Knob	DAC2306	
19	Flexible Cable (16P)	DDD1319	54	POWER Knob Guard	DNK4534	
20	Flexible Cable (10P)	DDD1321	NSP 55	LABEL	See Contrast table (2)	
21	Flexible Cable (30P)	DDD1322	56	CAUTION Label	DRW2312	C
22	Flexible Cable (25P)	DDD1323	57	Blind Cap	DNK4218	
23	Flexible Cable (7P)	DDD1326	58	Terminal Screw	AKE-031-0	
24	Flexible Cable (12P)	DDD1327	59	Screw	BBZ30P060FTB	
25	Flexible Cable (6P)	DDD1328	60	Screw	BBZ30P080FTC	
26	Flexible Cable (7P)	DDD1329	61	Screw	BCZ30P080FTB	
27	Flexible Cable (10P)	DDD1333	62	Screw	BPZ30P080FTB	
⚠ 28	AC Inlet Assy	See Contrast table (2)	63	Screw	CCZ30P060FTB	
29	Flexible Cable (24P)	DDD1330	64	Flange Nut M7	DBN1011	
30	Connector Assy(10P-12P)	DKP3763	65	Screw	IBZ30P080FTB	D
31	Connector Assy	PF05EE-S22	66	Nut	NKX2FTC	
32	Connector Assy	PF05EE4S32	67	Screw	PMH30P100FTB	
33	Connector Assy	PF06EE-D12	68	Screw	PMH40P080FTC	
NSP 34	Rear Panel	See Contrast table (2)	69	Binder (SKB-90BK)	ZCA-SKB90BK	
35	Bracket TRIM	DNF1728	NSP 70	Caution LABEL	See Contrast table (2)	
36	Bracket SSW	DNF1729	NSP 71	Earth LABEL	See Contrast table (2)	

(2) CONTRAST TABLE

DJM-800/WYXJ5, /TLXJ and DJM-800/KUCXJ are constructed the same except for the following :

Mark	No.	Symbol and Description	DJM-800 /KUCXJ	DJM-800 /WYXJ5	DJM-800 /TLXJ
⚠	28	AC Inlet Assy	DKP3761	DKP3762	DKP3762
NSP	34	Rear Panel	DNC1800	DNC1789	DNC1791
NSP	55	LABEL	DRW2294	DRW2293	DRW2319
NSP	70	Caution LABEL	DRW1975	Not used	Not used
NSP	71	Earth LABEL	DRW2276	Not used	Not used

2.3 CONTROL PANEL SECTION

A


B

C

D

E

F

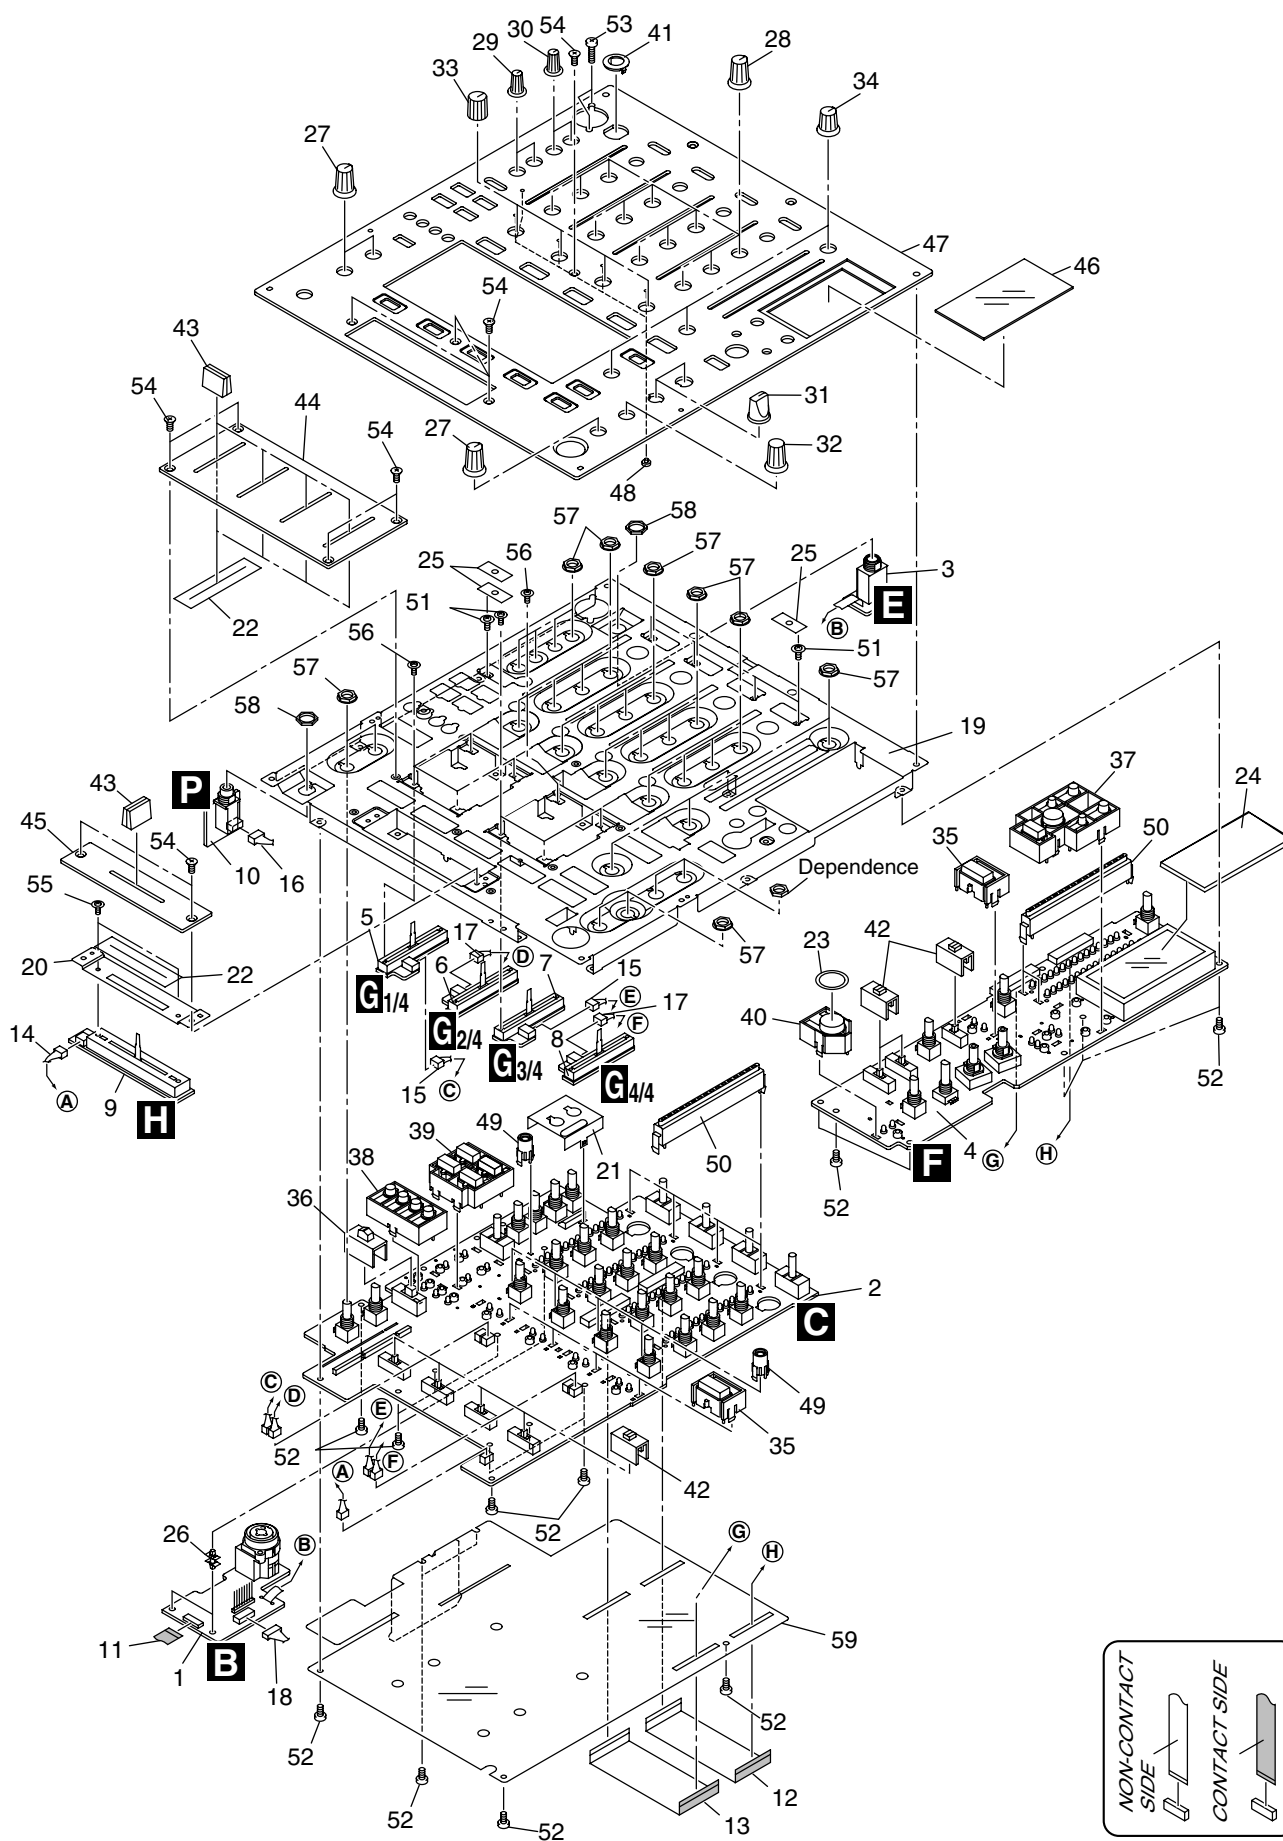

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MIC 1 Assy	DWX2542	50	LEVEL Meter Assy	DXB1882	A
2	PANEL 1 Assy	DWX2552				
3	MIC 2 Assy	DWX2543	51	Screw	AMZ26P040FTC	
4	PANEL 2 Assy	DWX2554	52	Screw	BBZ30P060FTB	
5	CHFD 1 Assy	DWX2537	53	Screw	BPZ30P120FTB	
			54	Screw	CCZ30P060FTB	
6	CHFD 2 Assy	DWX2538	55	Screw	DBA1262	
7	CHFD 3 Assy	DWX2539				
8	CHFD 4 Assy	DWX2540	56	Screw	DBA1298	
9	CRSFD Assy	DWX2541	57	Flange Nut M9	DBN1008	
10	HP JACK Assy	DWX2553	58	Nut	NKX2FTC	
						B
11	Flexible Cable (12P)	DDD1320				
12	Flexible Cable (27P)	DDD1324				
13	Flexible Cable (30P)	DDD1325				
14	Housing Wire Assy	PF03PP-D12				
15	Housing Wire Assy	PF04PP-D05				
16	Housing Wire Assy	PF04PP-D20				
17	Housing Wire Assy	PF04PP4D05				
18	Housing Wire Assy	PF05FF-D25				
NSP 19	Panel Stay	DND1254				
20	CRF Stay	DNF1726				C
21	MIC Stay	DNF1727				
22	Fader Packing	DEC2903				
23	SW Packing	DEC2929				
24	Barrier (FL)	DEC2943				
25	SW Packing	DED1177				
NSP 26	PC Support	VEC1508				
27	Rotary SW Knob (A)	DAA1175				
28	Rotary SW Knob (B)	DAA1176				
29	Rotary SW Knob S (A)	DAA1177				
30	Rotary SW Knob S (B)	DAA1178				D
31	Select Knob	DAA1205				
32	Rotary SW Knob (C)	DAA1180				
33	Rotary SW Knob (HM)	DAA1197				
34	Rotary SW Knob (MA)	DAA1198				
35	CUE Knob	DAC2215				
36	Slide SW Cap (A)	DAC2219				
37	SET Knob (TAP)	DAC2300				
38	SET Knob (FS)	DAC2301				E
39	SET Knob (HM)	DAC2302				
40	EFFECT Knob	DAC2304				
41	MIC Cap	DAC2309				
42	Slide SW Cap	DAC2310				
43	Slider Knob (L2)	DAC2371				
44	CHF Panel	DAH2426				
45	CRF Panel	DAH2427				
46	Disply Panel	DAH2428				
47	Control Panel	DNB1144				F
48	LENS	DNK4532				
49	LENS Holder	DNK4533				