


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

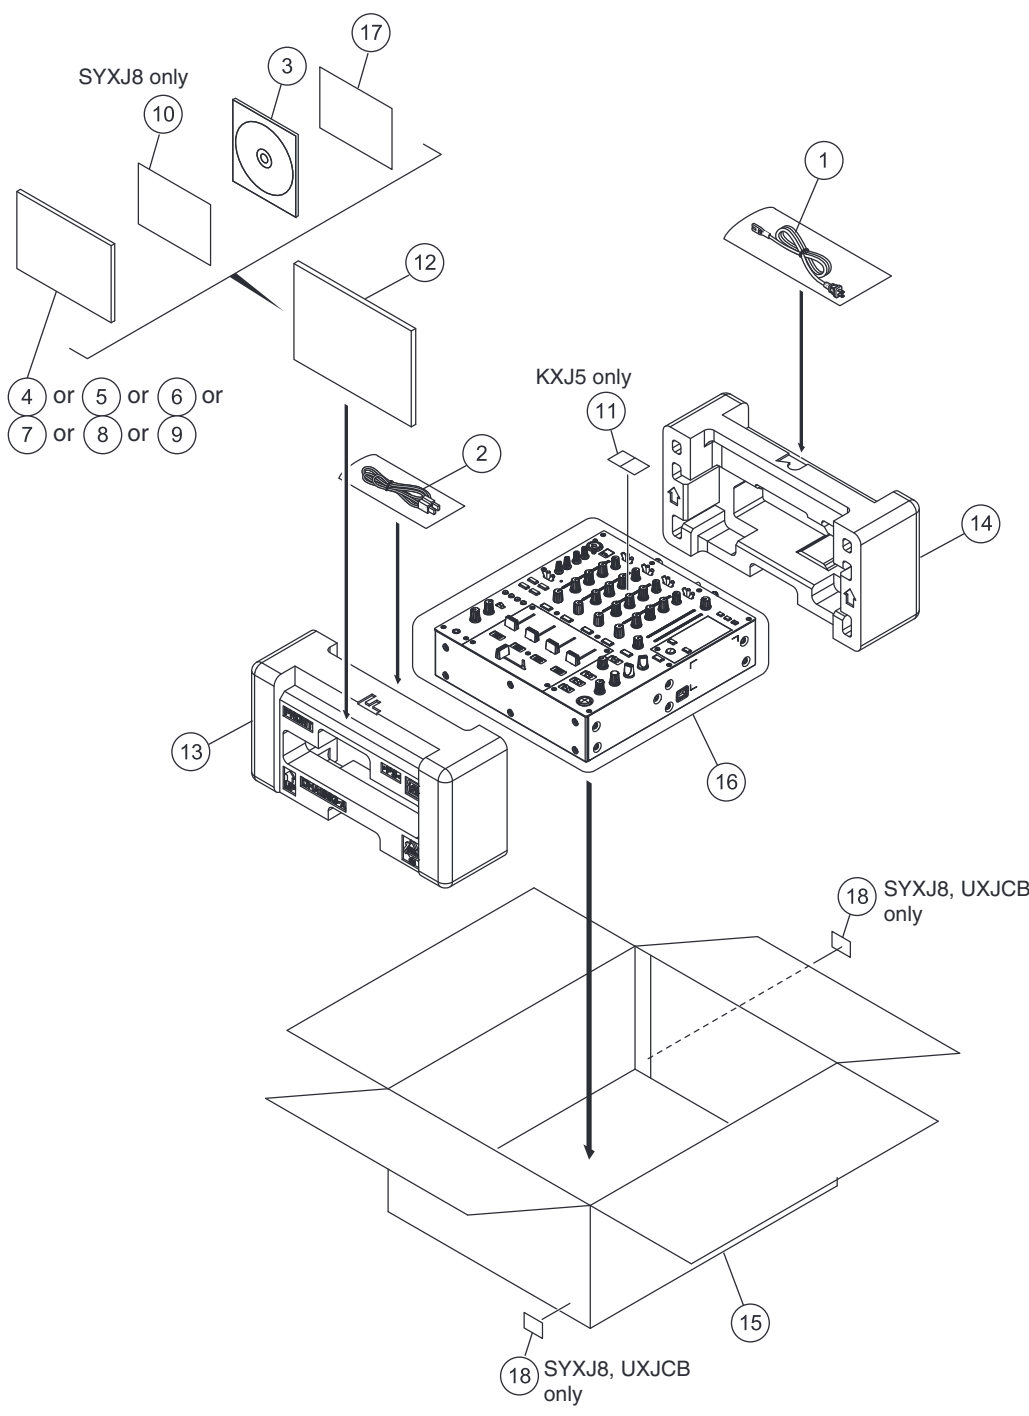

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
⚠	1 AC Power Cord	See Contrast table (2)
	2 USB Cable	DDE1128
	3 Driver Software CD-ROM	DXX2694
	4 Operating Instructions	See Contrast table (2)
	5 Operating Instructions	See Contrast table (2)
	6 Operating Instructions	See Contrast table (2)
	7 Operating Instructions	See Contrast table (2)
	8 Operating Instructions	See Contrast table (2)
	9 Operating Instructions	See Contrast table (2)
NSP	10 Warranty Card (WY)	See Contrast table (2)
NSP	11 Label RCY	See Contrast table (2)
NSP	12 Polyethylene Bag	AHG7117
	13 Packing Pad/A	DHA1883
	14 Packing Pad/B	DHA1884
	15 Packing Case	See Contrast table (2)
	16 Packing Sheet	RHC1023
NSP	17 Leaflet/NI	DRM1367
	18 Label/NI	See Contrast table (2)

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5
⚠	1	AC Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Operating Instructions (En, Fr, De, It)	DRB1604	Not used	Not used	Not used	Not used
	5	Operating Instructions (NI, Es, Ru)	DRB1605	Not used	Not used	Not used	Not used
	6	Operating Instructions (En)	Not used	DRB1606	Not used	Not used	Not used
	7	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1607	Not used	Not used
	8	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1608	Not used
	9	Operating Instructions (En, Zhcn)	Not used	Not used	Not used	Not used	DRB1609
NSP	10	Warranty Card (WY)	ARY7107	Not used	Not used	Not used	Not used
NSP	11	Label RCY	Not used	Not used	Not used	DRW2487	Not used
	15	Packing Case	DHG3093	DHG3094	DHG3095	DHG3098	DHG3097
	18	Label/NI	DRW2543	DRW2543	Not used	Not used	Not used

Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5
⚠	1	AC Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Operating Instructions (En, Fr, De, It)	DRB1604	Not used	Not used	Not used	Not used
	5	Operating Instructions (NI, Es, Ru)	DRB1605	Not used	Not used	Not used	Not used
	6	Operating Instructions (En)	Not used	DRB1606	Not used	Not used	Not used
	7	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1607	Not used	Not used
	8	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1608	Not used
	9	Operating Instructions (En, Zhcn)	Not used	Not used	Not used	Not used	DRB1609
NSP	10	Warranty Card (WY)	ARY7107	Not used	Not used	Not used	Not used
NSP	11	Label RCY	Not used	Not used	Not used	DRW2487	Not used
	15	Packing Case	DHG3105	DHG3106	DHG3107	DHG3110	DHG3109
	18	Label/NI	DRW2543	DRW2543	Not used	Not used	Not used

9.2 EXTERIOR SECTION

A

Refer to
"9.4 CONTROL PANEL SECTION (1/2)" .


B

C

D

E

F

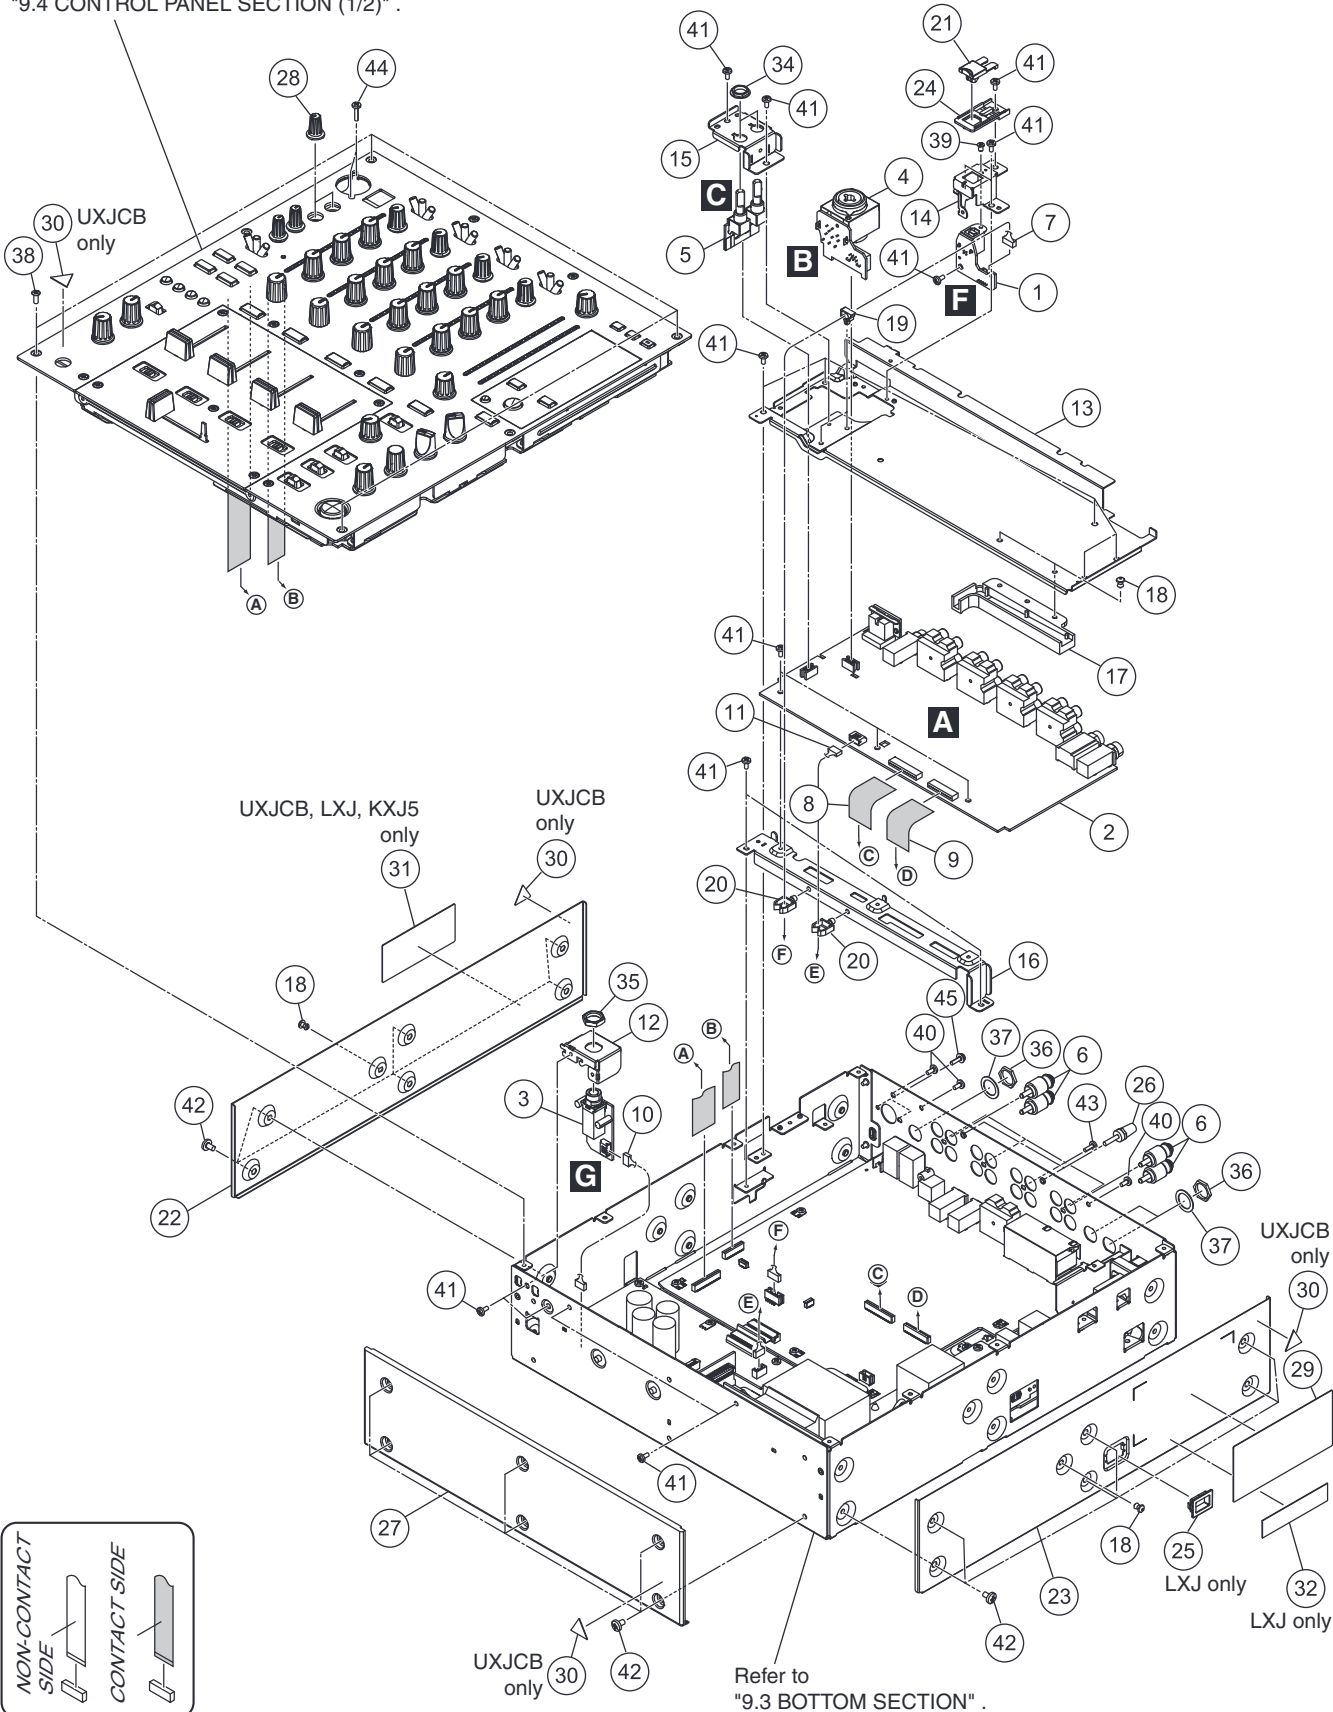

(1) EXTERIOR SECION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	USBI Assy	DWX3361	26	Terminal Screw	AKE-031	
2	INPUT Assy	DWX3362	27	Front Panel	DNK6063	A
3	HPJK Assy	DWX3363	28	Knob/MIC	DAA1301	
4	MIC1 Assy	DWX3371	NSP 29	Label	See Contrast table (2)	
5	MTRM Assy	DWX3372	NSP 30	Label	See Contrast table (2)	
6	Short Pin Plug	AKM7008	NSP 31	Caution Label	See Contrast table (2)	
7	Shielded Conn-Cable	DDA1043	NSP 32	V Select Label	See Contrast table (2)	
8	FFC/25P	DDD1597	33	•••••		
9	FFC/22P	DDD1598	34	Flange Nut M9	DBN1008	
10	Connector Assy (J2)	PF04PP-S05	35	Nut M12	DBN1018	
11	Cable (J3)	PF04PP-S17	36	Nut (M12)	NKX2FNI	B
12	Stay/HP	DNF1907	37	Washer	DEC2920	
13	Shield Plate/INP	DNF1908	38	Screw (FE)	See Contrast table (2)	
14	Bracket/USB	DNF1909	39	Screw (M3*5)	DBA1340	
15	Bracket/MIC	DNF1910	40	Screw	BBZ30P060FTB	
16	Stay/INP	DNF1911	41	Screw	BBZ30P060FTC	
17	Cover/PCB	DNK6136	42	Screw	BBZ40P060FTB	
18	Nylon Rivet	AEC1671	43	Screw	BPZ30P080FTB	
19	Locking Mini Clamp	DEC2439	44	Screw	BPZ30P120FTB	
20	Holder	VEC1355	45	Screw	PMH30P100FTB	C
21	USB Cover B	DNK5868				
22	Side Panel L	DNK6061				
23	Side Panel R	See Contrast table (2)				
24	Panel/USB	DNK6120				
25	Knob/POW	See Contrast table (2)				

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5	
NSP	23	Side Panel R	DNK6062	DNK6062	Not used	DNK6062	DNK6062	
	23	Side Panel R/G	Not used	Not used	DNK6065	Not used	Not used	
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used	
	29	Label	DAL1207	DAL1208	DAL1209	DAL1212	DAL1211	
	30	Label	Not used	DRW1975	Not used	Not used	Not used	
NSP	31	Caution Label	Not used	DRW2429	DRW2430	DRW2542	Not used	
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used	E
	38	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290	
Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5	
NSP	23	Side Panel R	DNK6062	DNK6062	Not used	DNK6062	DNK6062	
	23	Side Panel R/G	Not used	Not used	DNK6065	Not used	Not used	
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used	
	29	Label	DAL1213	DAL1214	DAL1215	DAL1218	DAL1217	
	30	Label	Not used	DRW1975	Not used	Not used	Not used	
NSP	31	Caution Label	Not used	DRW2429	DRW2430	DRW2542	Not used	
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used	F
	38	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436	

9.3 BOTTOM SECTION

A


B

C

D

E

F

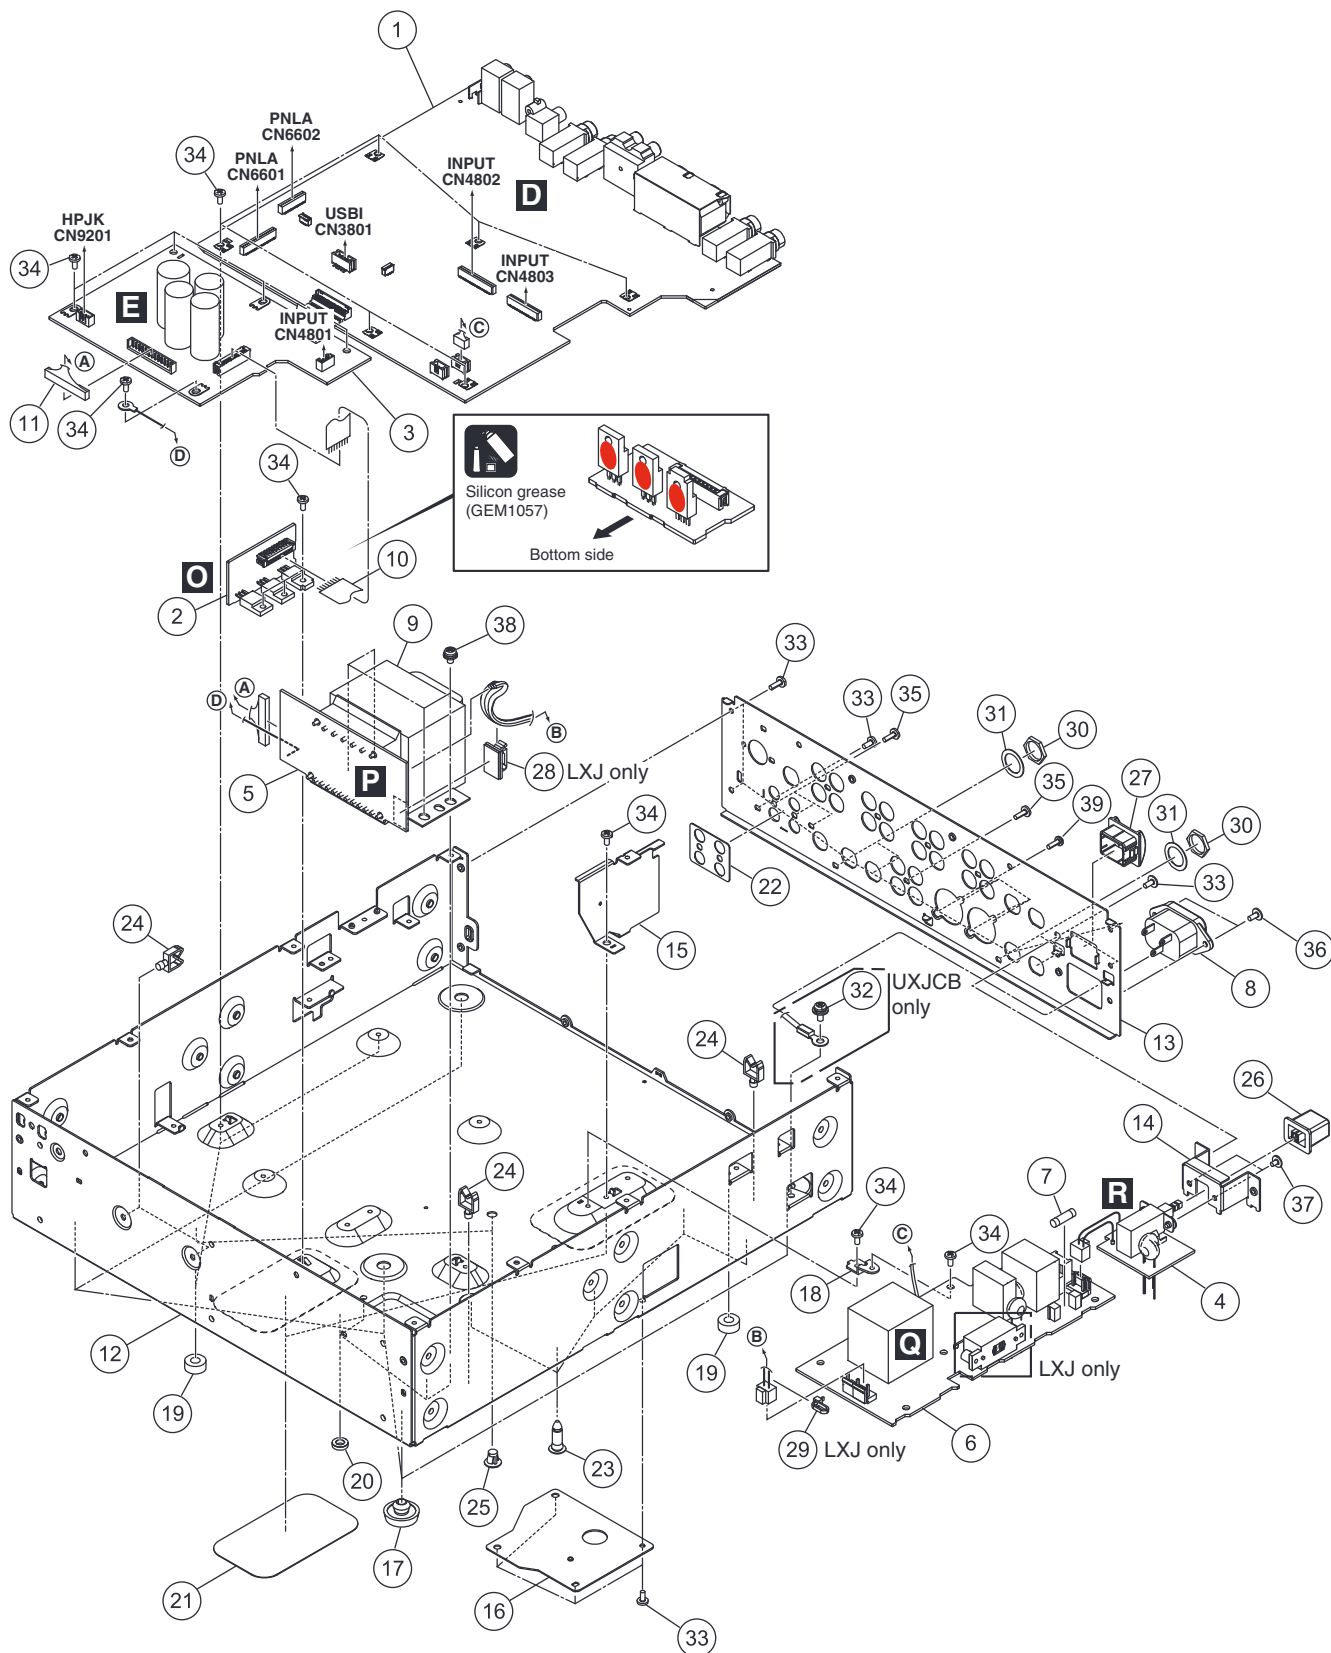

(1) BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
	1 MAIN Assy	DWX3360		21 Sheet/BOT	DEC3404	
	2 REG Assy	DWR1510	NSP 22	Insulating Sheet	DMR1010	A
	3 SEC/HP Assy	DWR1511		23 PCB Holder	PNW2029	
	4 ACSW Assy	DWR1515		24 Holder	VEC1355	
	5 TRANS Assy	See Contrast table (2)	NSP 25	PC Support	VEC1749	
	6 PRIMARY Assy	See Contrast table (2)		26 Power Knob	DAC2306	
⚠	7 Fuse (FU1: T630 mA)	AEK1052		27 Power Knob Guard	DNK4534	
⚠	8 AC Inlet	See Contrast table (2)		28 Locking Wire Saddle	See Contrast table (2)	
⚠	9 Transformer/L (T3101)	See Contrast table (2)		29 Binder	See Contrast table (2)	
	10 Jumper Wire (J1)	D20PYY1010E		30 Nut (M12)	NKX2FNI	
	11 Connector Assy (J4)	PF13EE-S17		31 Washer	DEC2920	B
NSP 12	Chassis	DNA1437		32 Screw	See Contrast table (2)	
	13 Rear Panel	See Contrast table (2)		33 Screw	BBZ30P060FTB	
	14 Bracket PSW	DNF1759		34 Screw	BBZ30P060FTC	
	15 Shield Plate/PW	DNF1906		35 Screw	BPZ30P080FTB	
NSP 16	Plate	DNK6124		36 Screw	IBZ30P080FTB	
	17 Foot (Rubber)	REC-434		37 Screw	IMZ30P040FTC	
NSP 18	PCB Stay (FE)	VNE2489		38 Screw	PMB40P060FTB	
NSP 19	Spacer	AEB7092		39 Screw	PPZ30P080FTB	
	20 Spacer	DEB1998				C

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5	
	5	TRANS Assy	DWR1516	DWR1517	DWR1512	DWR1516	DWR1516	
	6	PRIMARY Assy	DWR1519	DWR1520	DWR1509	DWR1519	DWR1519	D
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916	
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used	
⚠	9	Transformer/L (T3101)	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256	
	13	Rear Panel	DNC2069	DNC2070	DNC2081	DNC2082	DNC2073	
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used	
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used	
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used	
Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5	
	5	TRANS Assy	DWR1516	DWR1517	DWR1512	DWR1516	DWR1516	
	6	PRIMARY Assy	DWR1519	DWR1520	DWR1509	DWR1519	DWR1519	E
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916	
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used	
⚠	9	Transformer/L (T3101)	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256	
	13	Rear Panel	DNC2069	DNC2070	DNC2081	DNC2082	DNC2073	
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used	
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used	
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used	

9.4 CONTROL PANEL SECTION (1/2)

A


B

C

D

E

F

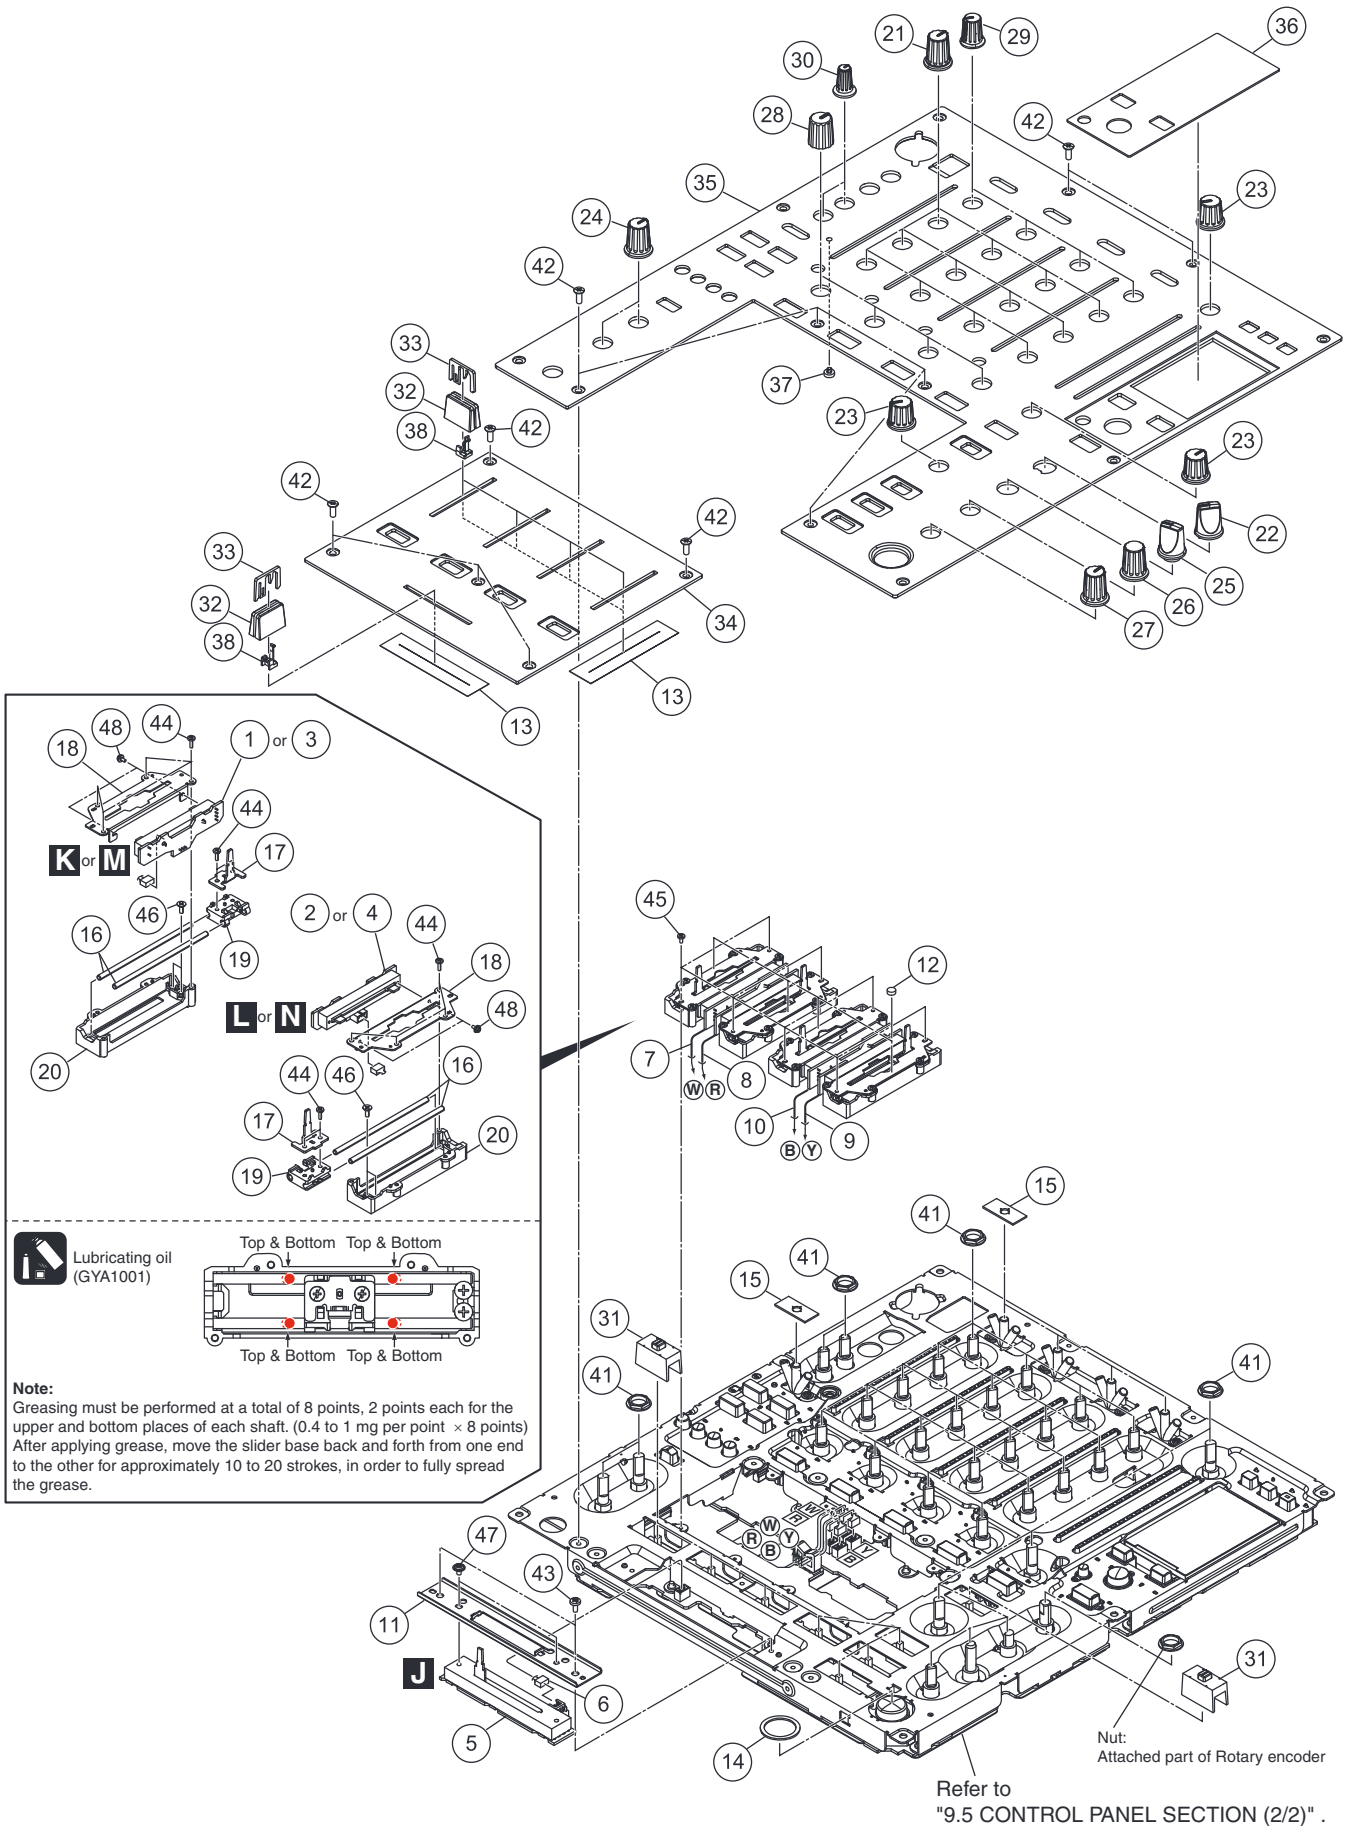

(1) CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	FAD1 Assy	DWX3366	26	Knob (TIME)	DAA1214	
2	FAD2 Assy	DWX3367	27	Rotary Knob (BN)	DAA1220	A
3	FAD3 Assy	DWX3368	28	Rotary SW Knob (HM)	DAA1256	
4	FAD4 Assy	DWX3369	29	Knob/CH	DAA1300	
5	FADC Assy	DWX3370	30	Knob/EQ	DAA1302	
6	Connector Assy	PF03PP-B07	31	Slide SW Cap (W)	DAC2401	
7	Connector Assy	PF03PP-B12	32	Slider Knob 1	DAC2684	
8	Connector Assy	PF03PP2B07	33	Slider Knob 2	DAC2685	
9	Connector Assy	PF03PP4B12	34	Fader Panel	See Contrast table (2)	
10	Connector Assy	PF03PP6B07	35	Control Panel	See Contrast table (2)	
11	CRF Stay	DNF1870	36	Panel/FL	DAH2877	B
12	SW Cushion HH48/2	DEC2538	37	Lens	DNK4532	
13	Fader Packing	DEC2903	38	Slider Knob Stopper	DNK5888	
14	SW Packing (EF)	DEC2929	39	•••••		
15	SW Packing	DED1177	40	•••••		
NSP 16	Guide Shaft (S)	DLA1918	41	Flange Nut M9	DBN1008	
17	Lever Plate	DNH2954	42	Screw (FE)	See Contrast table (2)	
18	VR Stay	DNH2955	43	Screw	BBZ30P060FTC	
19	Slider Base	DNK5851	44	Screw	BPZ20P060FTC	
20	Shaft Holder	DNK5852	45	Screw	BSZ20P040FTB	C
21	Rotary SW Knob (B)	DAA1176	46	Screw	CPZ26P080FTC	
22	Select Knob	DAA1205	47	Screw	IMZ30P040FTC	
23	Knob (MA)	DAA1210	48	Screw	PMH20P040FTC	
24	Knob (Black)	DAA1212				
25	FX SEL Knob	DAA1213				

(2) CONTRAST TABLE


DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5
	34	Fader Panel	DNB1196	DNB1196	DNB1196	DNB1196	DNB1196
	35	Control Panel	DNB1197	DNB1197	DNB1197	DNB1197	DNB1197
	42	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290

Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5
	34	Fader Panel	DNB1201	DNB1201	DNB1201	DNB1201	DNB1201
	35	Control Panel	DNB1202	DNB1202	DNB1202	DNB1202	DNB1202
	42	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

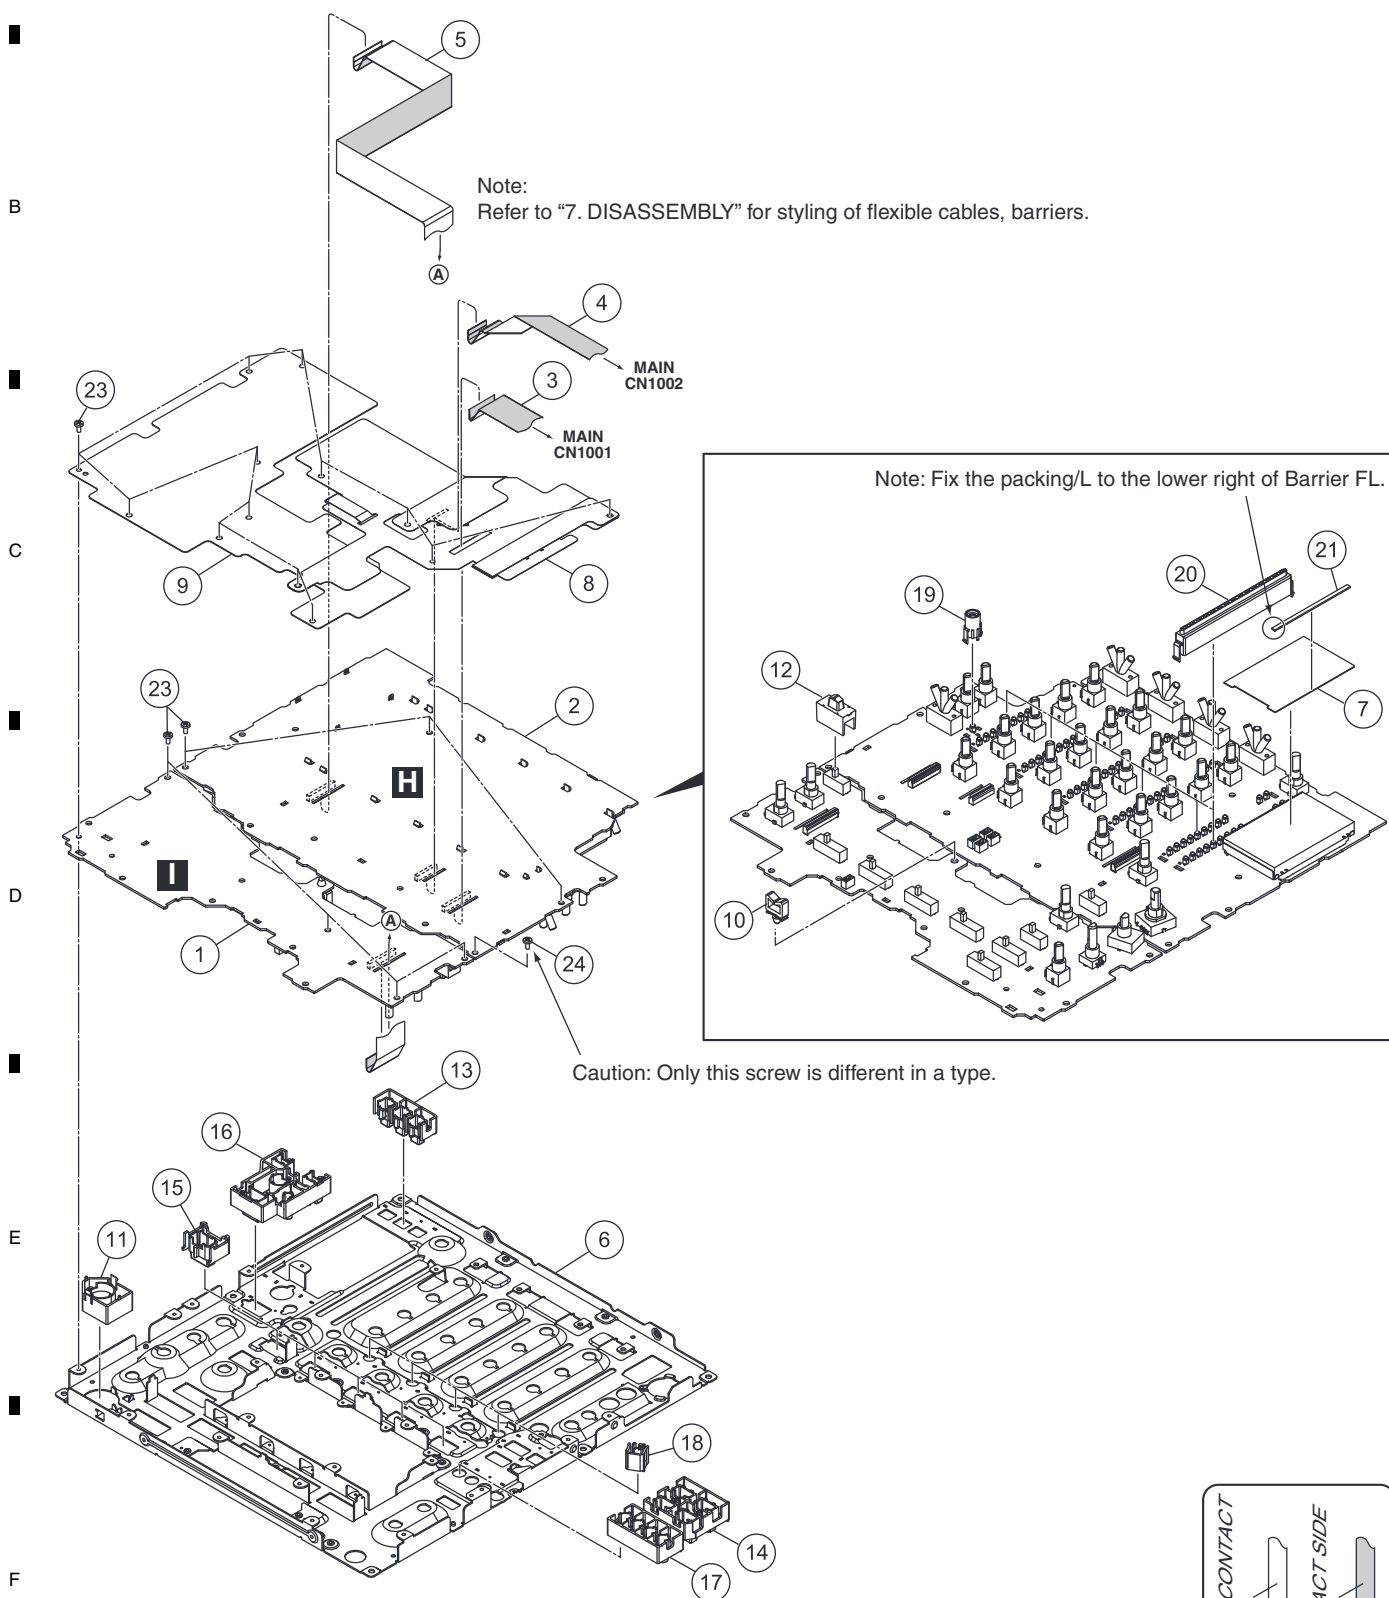

CONTROL PANEL SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	
1	PNLB Assy	DWX3365	A
2	PNLA Assy	DWX3359	
3	FFC/24P	DDD1599	
4	FFC/17P	DDD1600	
5	FFC/27P	DDD1601	
6	Panel Stay	DND1272	
7	Barrier FL	DEC3351	
8	Barrier/PNL	DMR1007	
9	Barrier/A	DMR1009	
10	Wire Saddle	XEC3100	
11	Effect Knob	DAC2304	B
12	Slide SW Cap	DAC2400	
13	Button (MIDI)	DAC2655	
14	Button/CFX	DAC2837	
15	Button/CUE	DAC2838	
16	Button/TAP	DAC2839	
17	Button/FS	DAC2840	
18	Button/BFX	DAC2841	
19	Lens Holder	DNK4533	
20	Lebel Meter Assy	DXB1882	
21	Packing/L	DEC3416	C
22	•••••		
23	Screw	BBZ30P060FTC	
24	Screw	PBH30P080FTB	
			D
			E
			F