


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

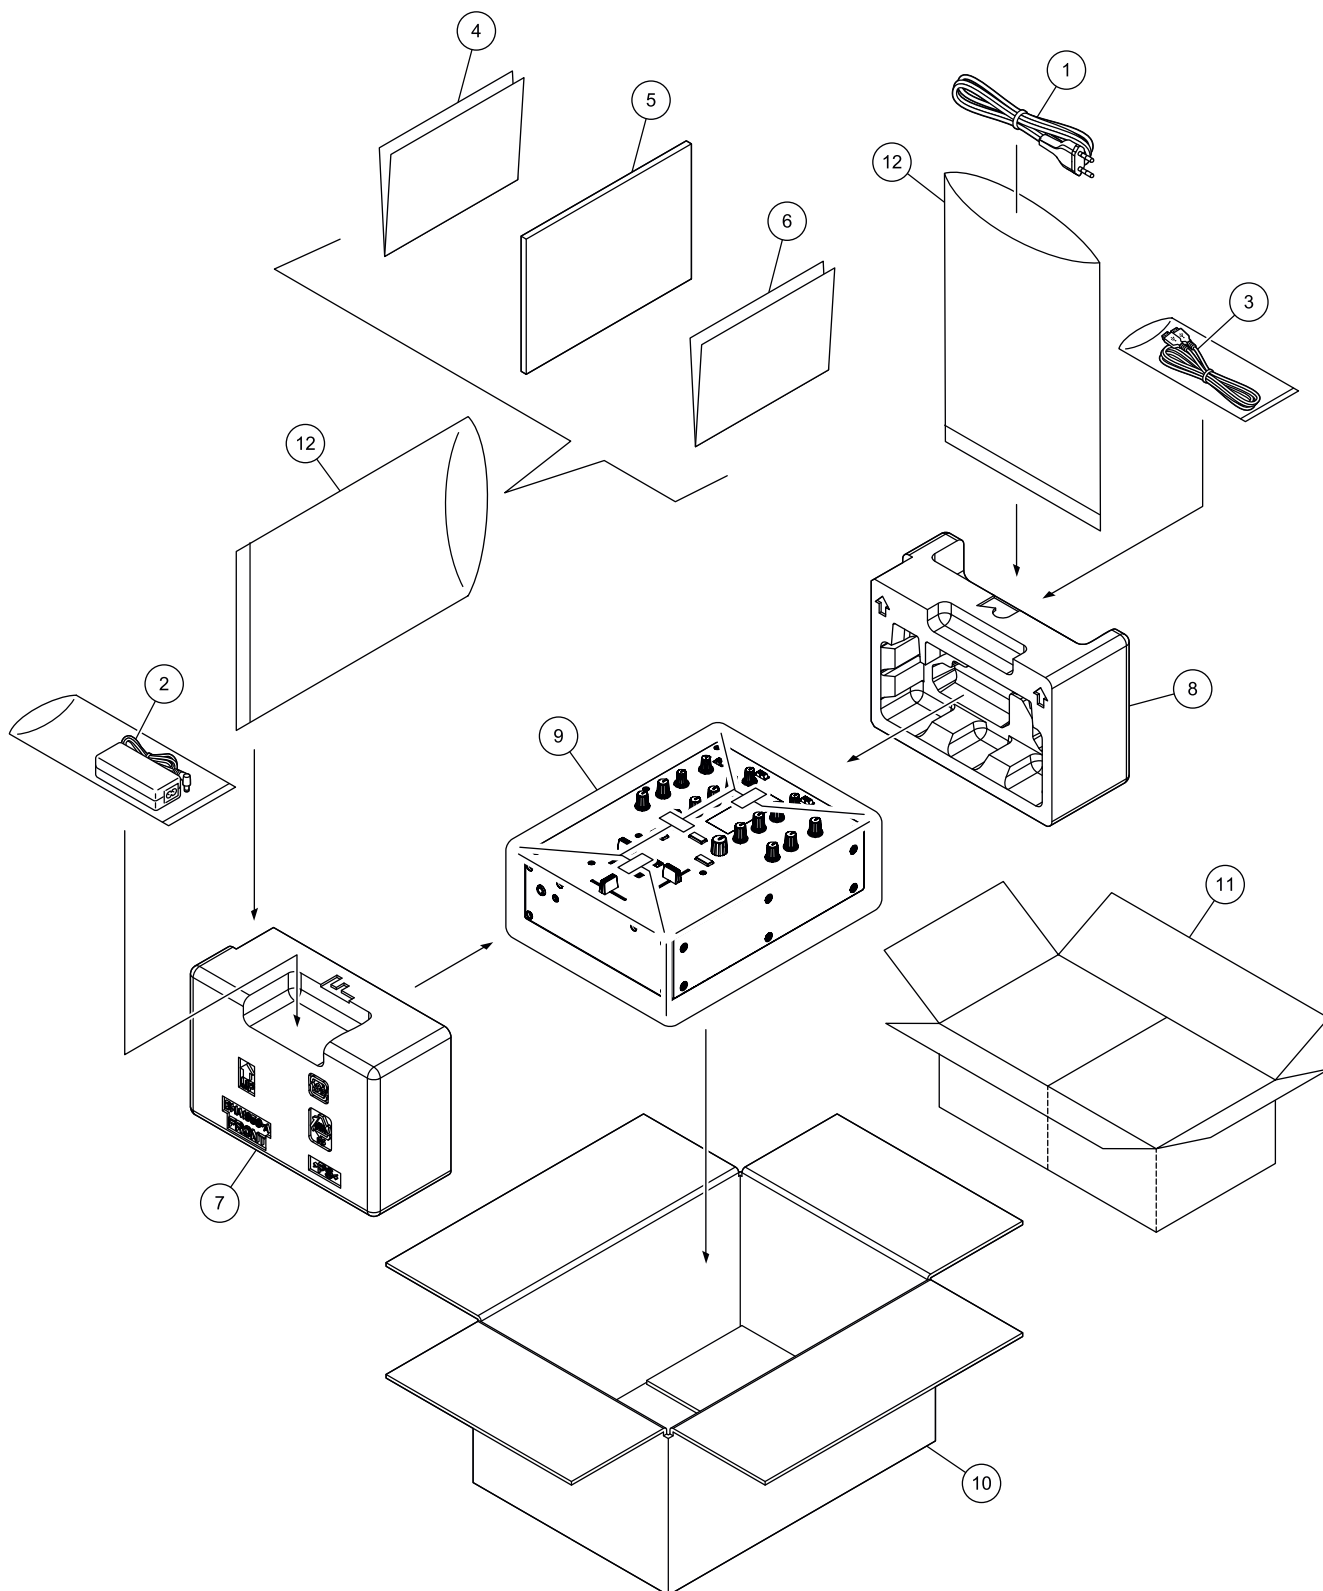

(1) PACKING SECTION PARTS LIST

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1	Power Cord	See Contrast table (2)
	2	AC Adapter	See Contrast table (2)
NSP	3	USB Cable	DDE1128
	4	Leaflet	DRH1496
	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	6	Warranty	See Contrast table (2)
NSP	7	Packing Pad	DHA1959
	8	Packing Pad	DHA1960
	9	Sheet	RHX1006
	10	Packing Case	DHG3592
NSP	11	Master Carton	See Contrast table (2)
	12	Polyethylene Bag	AHG7117

(2) CONTRAST TABLE


SYXJ, UXJCB and FWLPWXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	SYXJ	UXJCB	FWLPWXJ
⚠	1	Power Cord	ADG1154	XDG3052	ADG1154
⚠	2	AC Adapter	DWR1571	DWR1571	DWR1572
NSP	5	Operating Instructions (Quick Start Guide)	DRH1473	DRH1474	DRH1475
	6	Warranty	DRY1270	No used	No used
	11	Master Carton	DHG3601	DHG3593	DHG3602

9.2 EXTERIOR SECTION

* Notes on assembling :

- Always attach the No.9 Panel (DNK6751) first to the CHASSIS SECTION, and then attach the No.10 Panel (DNF2012) to the CHASSIS SECTION.
- Attach the No.10 Panel (DNF2012) while lifting toward the top side (to reduce the gap between it and Control Panel.)

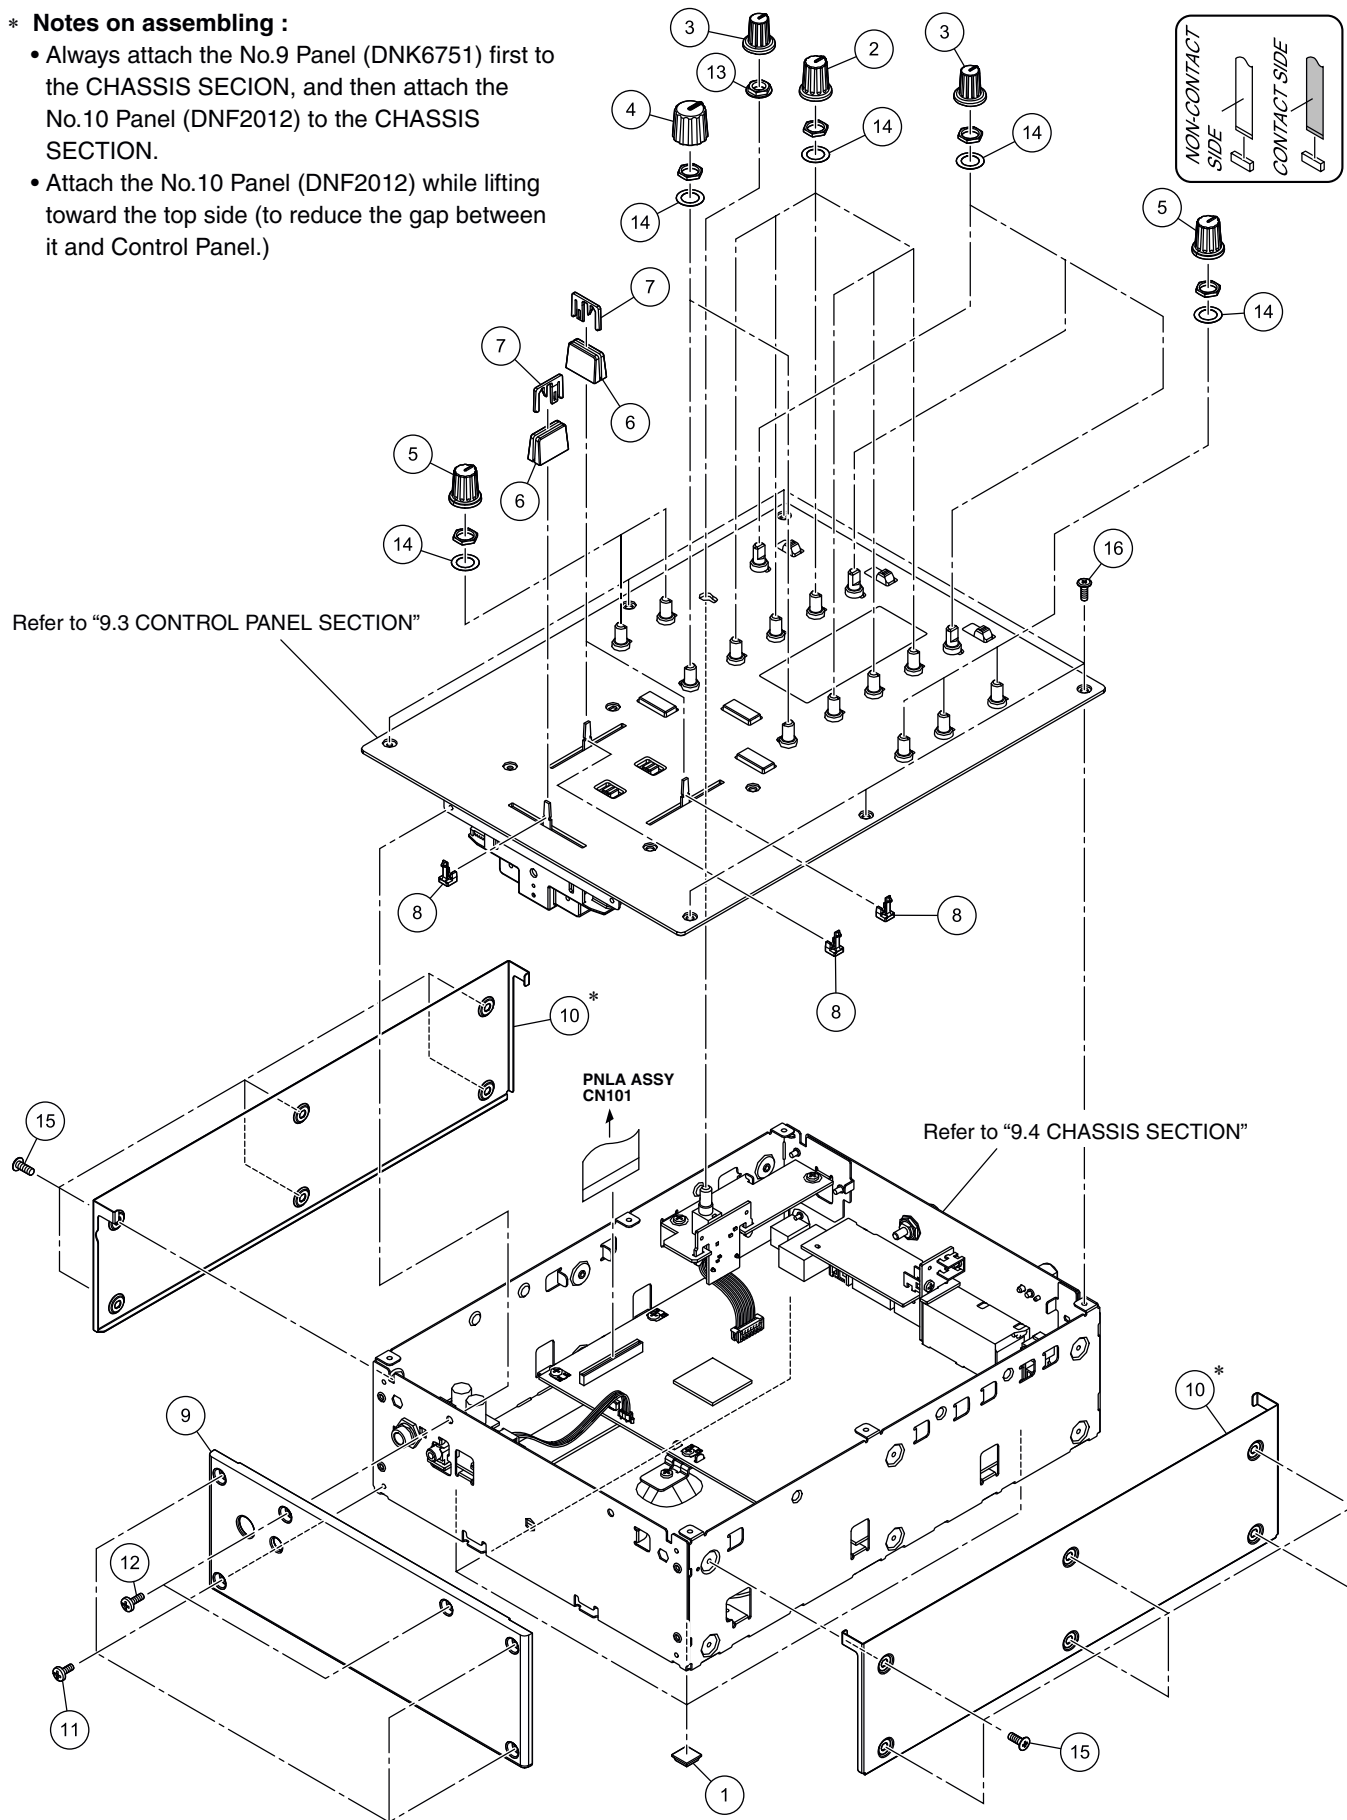

1 2 3 4

9.3 CONTROL PANEL SECTION

A


B

C

D

E

F

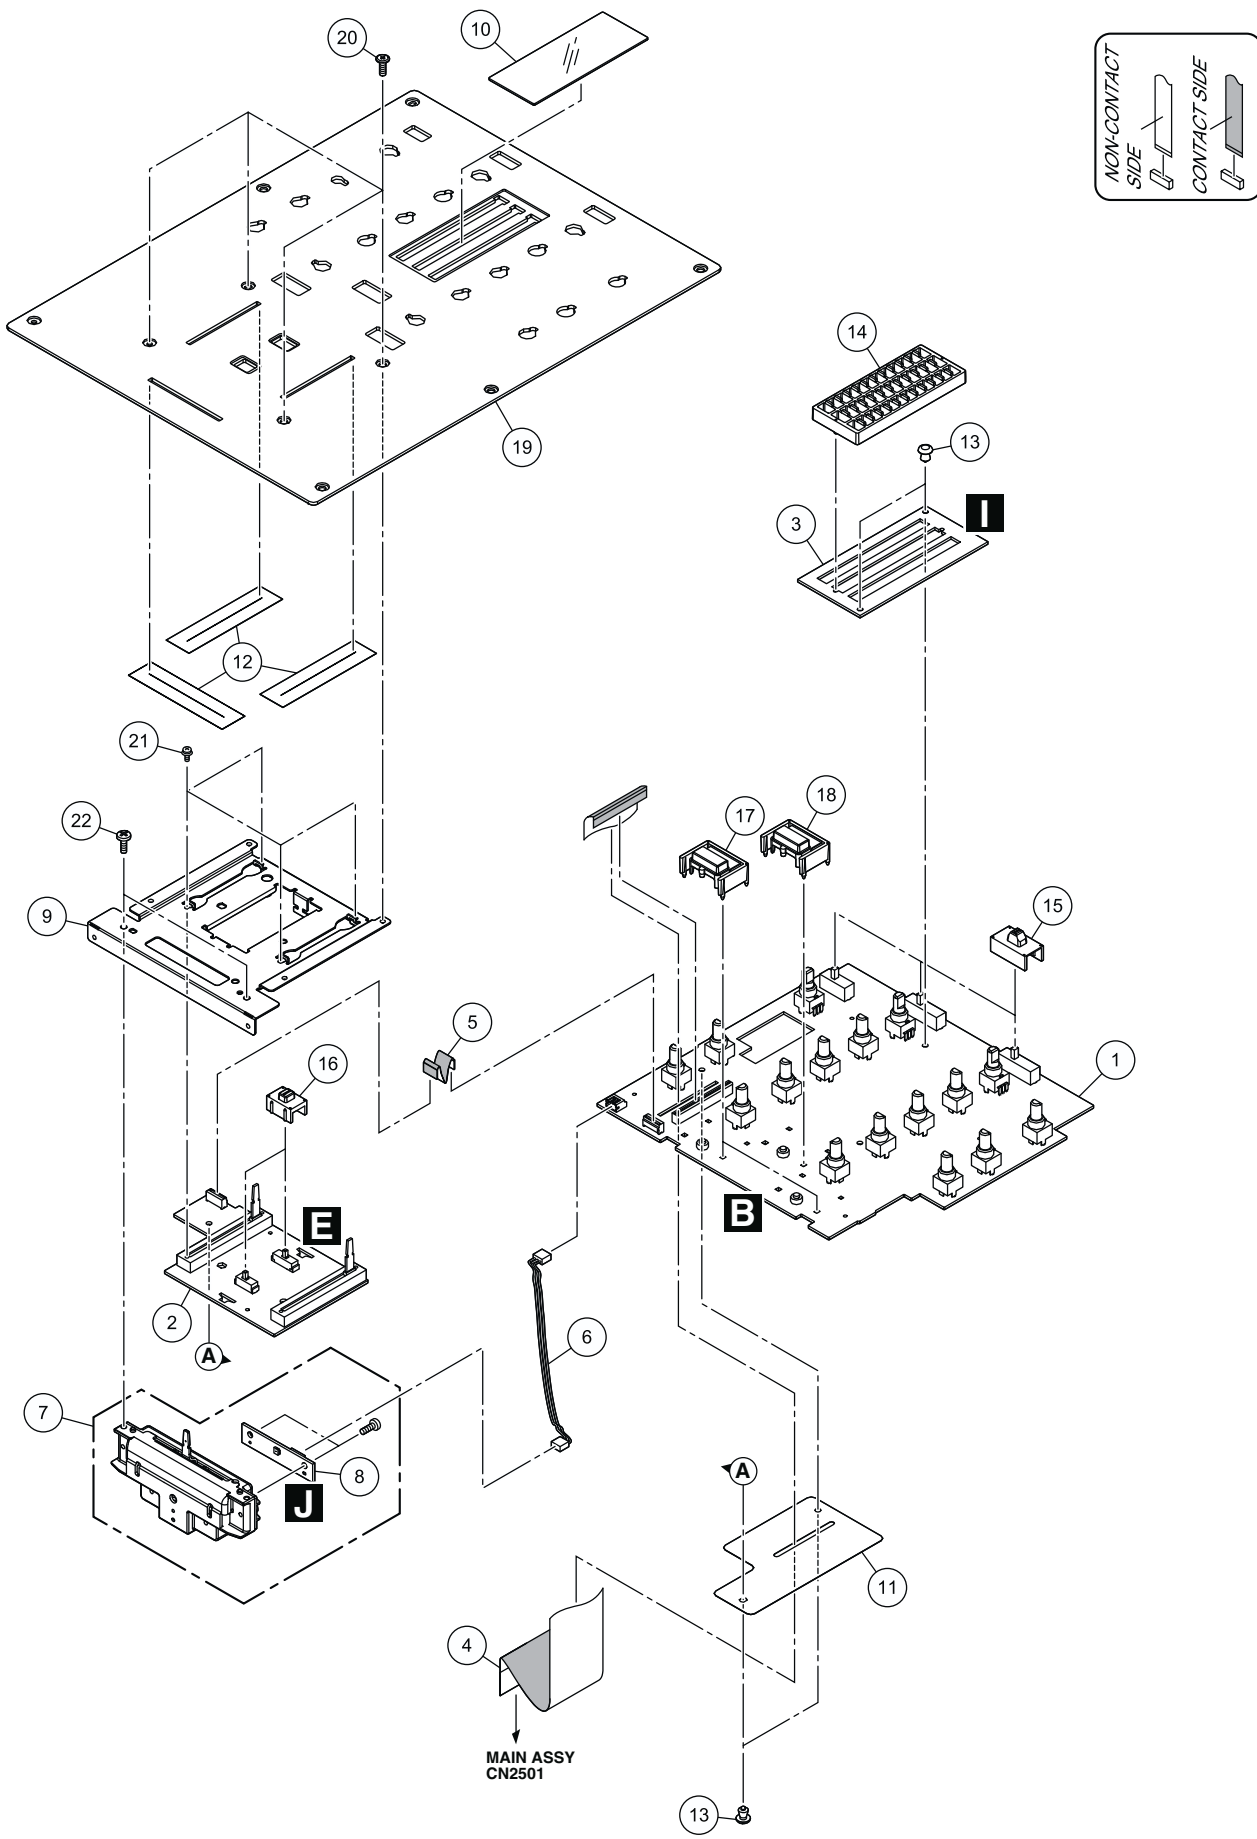


CONTROL PANEL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1 PNLA ASSY	DWX4143	
	2 FADB ASSY	DWX4145	A
	3 HOLD ASSY	DWX3986	
	4 FFC	DDD1803	
	5 FFC	DDD1804	
	6 Connector ASSY	PF03PP2B15	
	7 Cross Fader ASSY	DXA2257	
NSP	8 CRFD ASSY	DWX3258	
	9 Stay	DNF2011	
	10 Plate	DAK1011	
	11 Sheet	DEC3732	B
	12 Fader Packing	DEC2903	
	13 Rivet (Plastic)	RBM-003	
	14 Holder	DNK6660	
	15 Cap/MIC	DAC2773	
	16 Cap	DAC3284	
	17 Button	DAC3250	
	18 Button	DAC3273	
	19 Control Panel	DNB1266	
	20 Screw	DBA1451	C
	21 Screw	PMH20P040FTC	
	22 Screw	BPZ30P080FTC	

1 2 3 4

9.4 CHASSIS SECTION

A
B
C
D
E
F

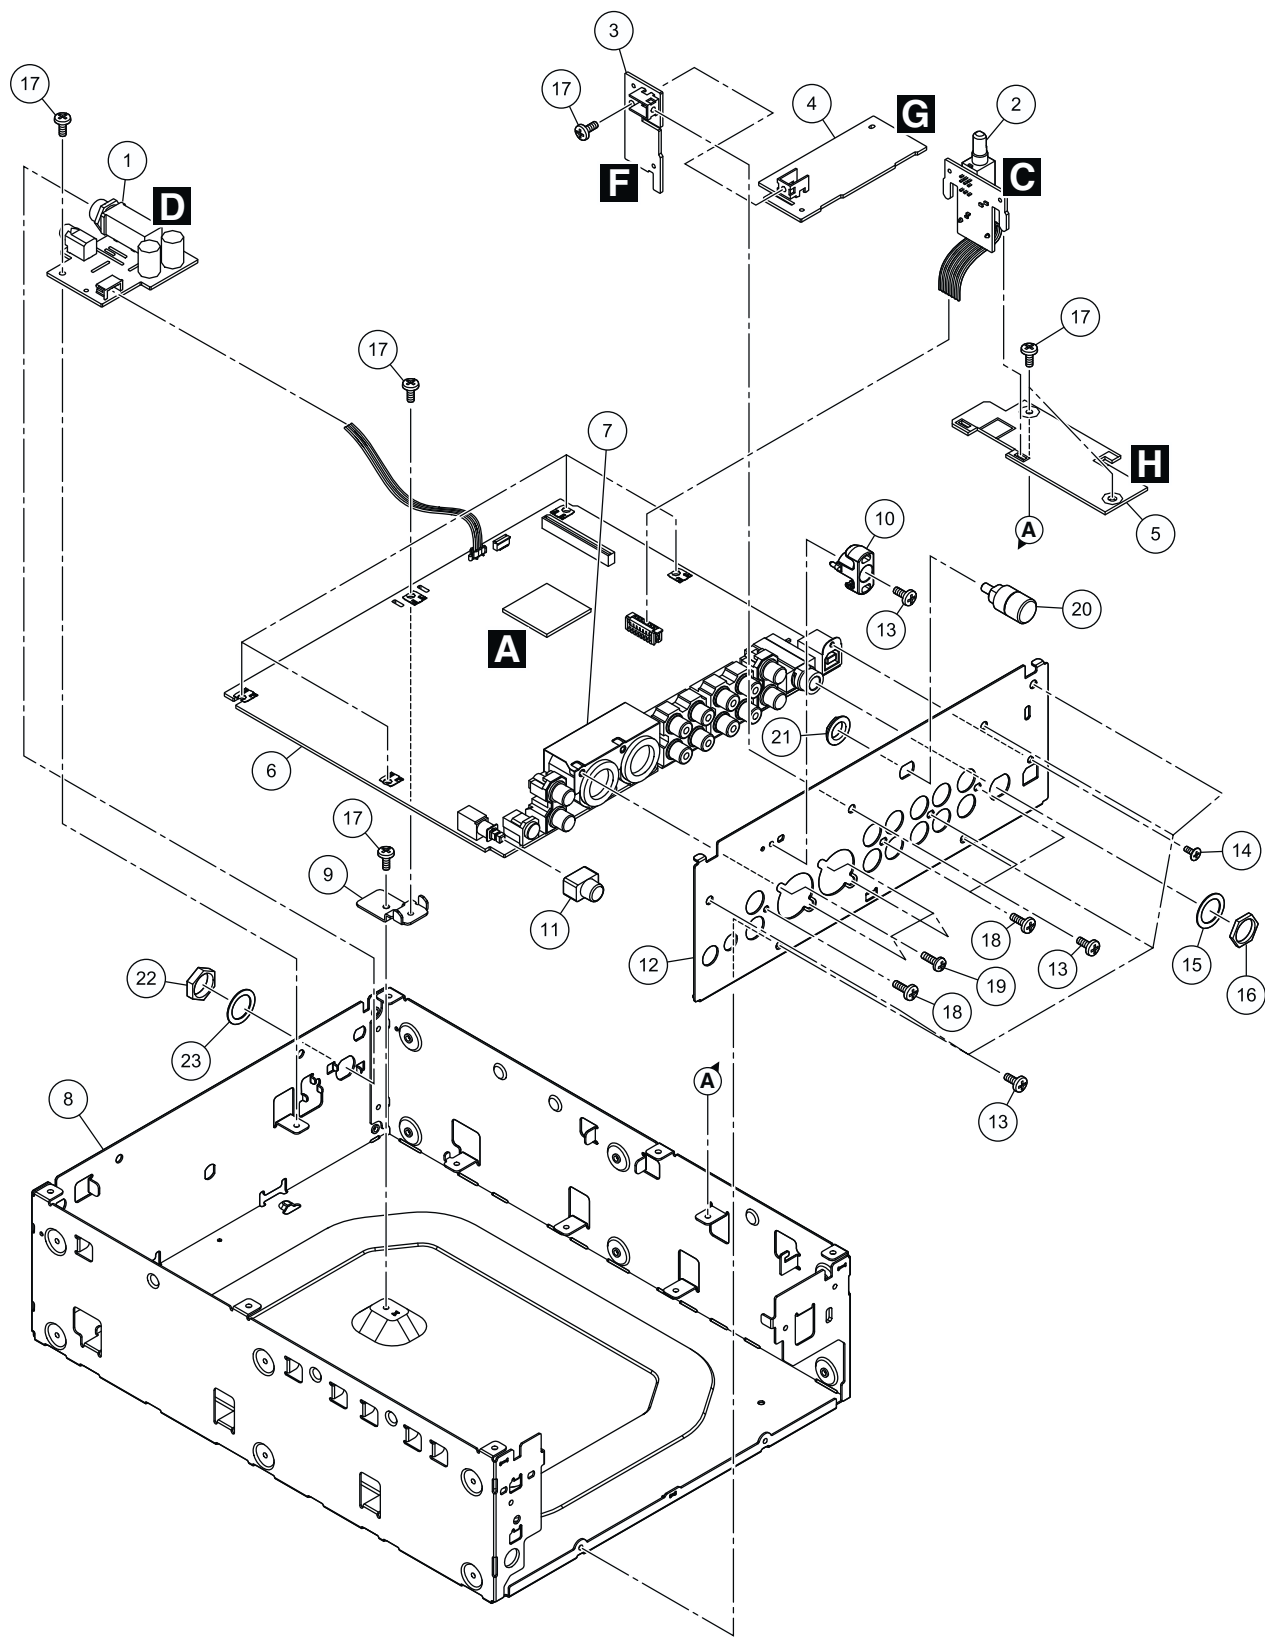

CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	HPJK ASSY	DWX3981	
2	TRIM ASSY	DWX3983	A
3	MPSH ASSY	DWX3988	
4	PPSH ASSY	DWX3989	
5	STAY ASSY	DWX3984	
6	MAIN ASSY	DWX4142	■
NSP 7	Canon Shield	DNF1789	
8	Chassis	DNA1462	
9	Stay	DNF2017	
10	Hook	DNK6067	
11	Knob	DNK6607	B
12	Rear Panel	DNC2135	
13	Screw	BBZ30P060FTB	
14	Screw (M3×5)	DBA1340	
15	Washer	DEC2920	■
16	Nut	NKX2FTC	
17	Screw	BBZ30P060FTC	
18	Screw	BPZ30P080FTB	
19	Screw	PPZ30P080FTB	
20	Earth Terminal	DKE1019	C
21	Flange Nut M9	DBN1008	
22	Nut	NKX2FTC	
23	Washer	DBE1017	■

D

E

F

■ 1 ■ 2 ■ 3 ■ 4 ■

A

■

B

■

C

■

D

■

E

■

F