


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

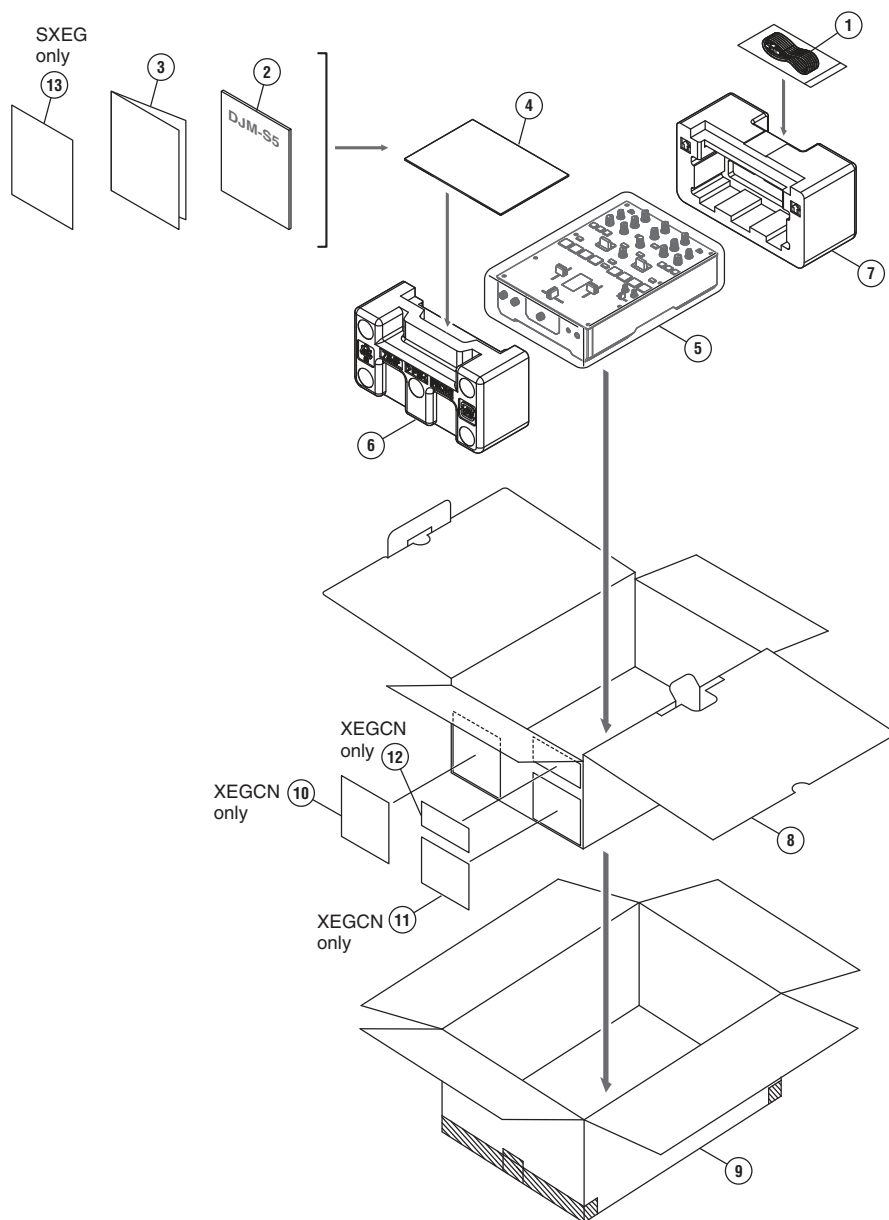

(1) PACKING SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 USB Cable	408-061-153	6	Pad F	506-061-784F
	2 Quick Start Guide	See Contrast table (2)	7	Pad B	506-061-784B
	3 Precautions for Use	See Contrast table (2)	8	Gift Box	507-061-3891
	4 PE Bag	505-DJM250-014	9	Carton	See Contrast table (2)
	5 HDPE Bag	505-058-277	10	Barcode Label	See Contrast table (2)
B			11	Produce Label	See Contrast table (2)
			12	Caution Label	See Contrast table (2)
			NSP 13	Warranty Card	See Contrast table (2)

(2) CONTRAST TABLE

DJM-S5/SXEG and DJM-S5/XEGCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S5/SXEG	DJM-S5/XEGCN
C	2	Quick Start Guide	502-DJMS5A-3946	502-DJMS5B-3948
	3	Precautions for Use	502-DJMS5A-3947A	502-DJMS5B-3949
	9	Carton	507-061-3892	507-061B-3892
	10	Barcode Label	Not used	501-DJMS5B-3047
	11	Produce Label	Not used	501-DJMS5B-3048
NSP	12	Caution Label	Not used	501-DJMS7D-3019
	13	Warranty Card	502-SXMK3B-3549C	Not used

9.2 EXTERIOR SECTION

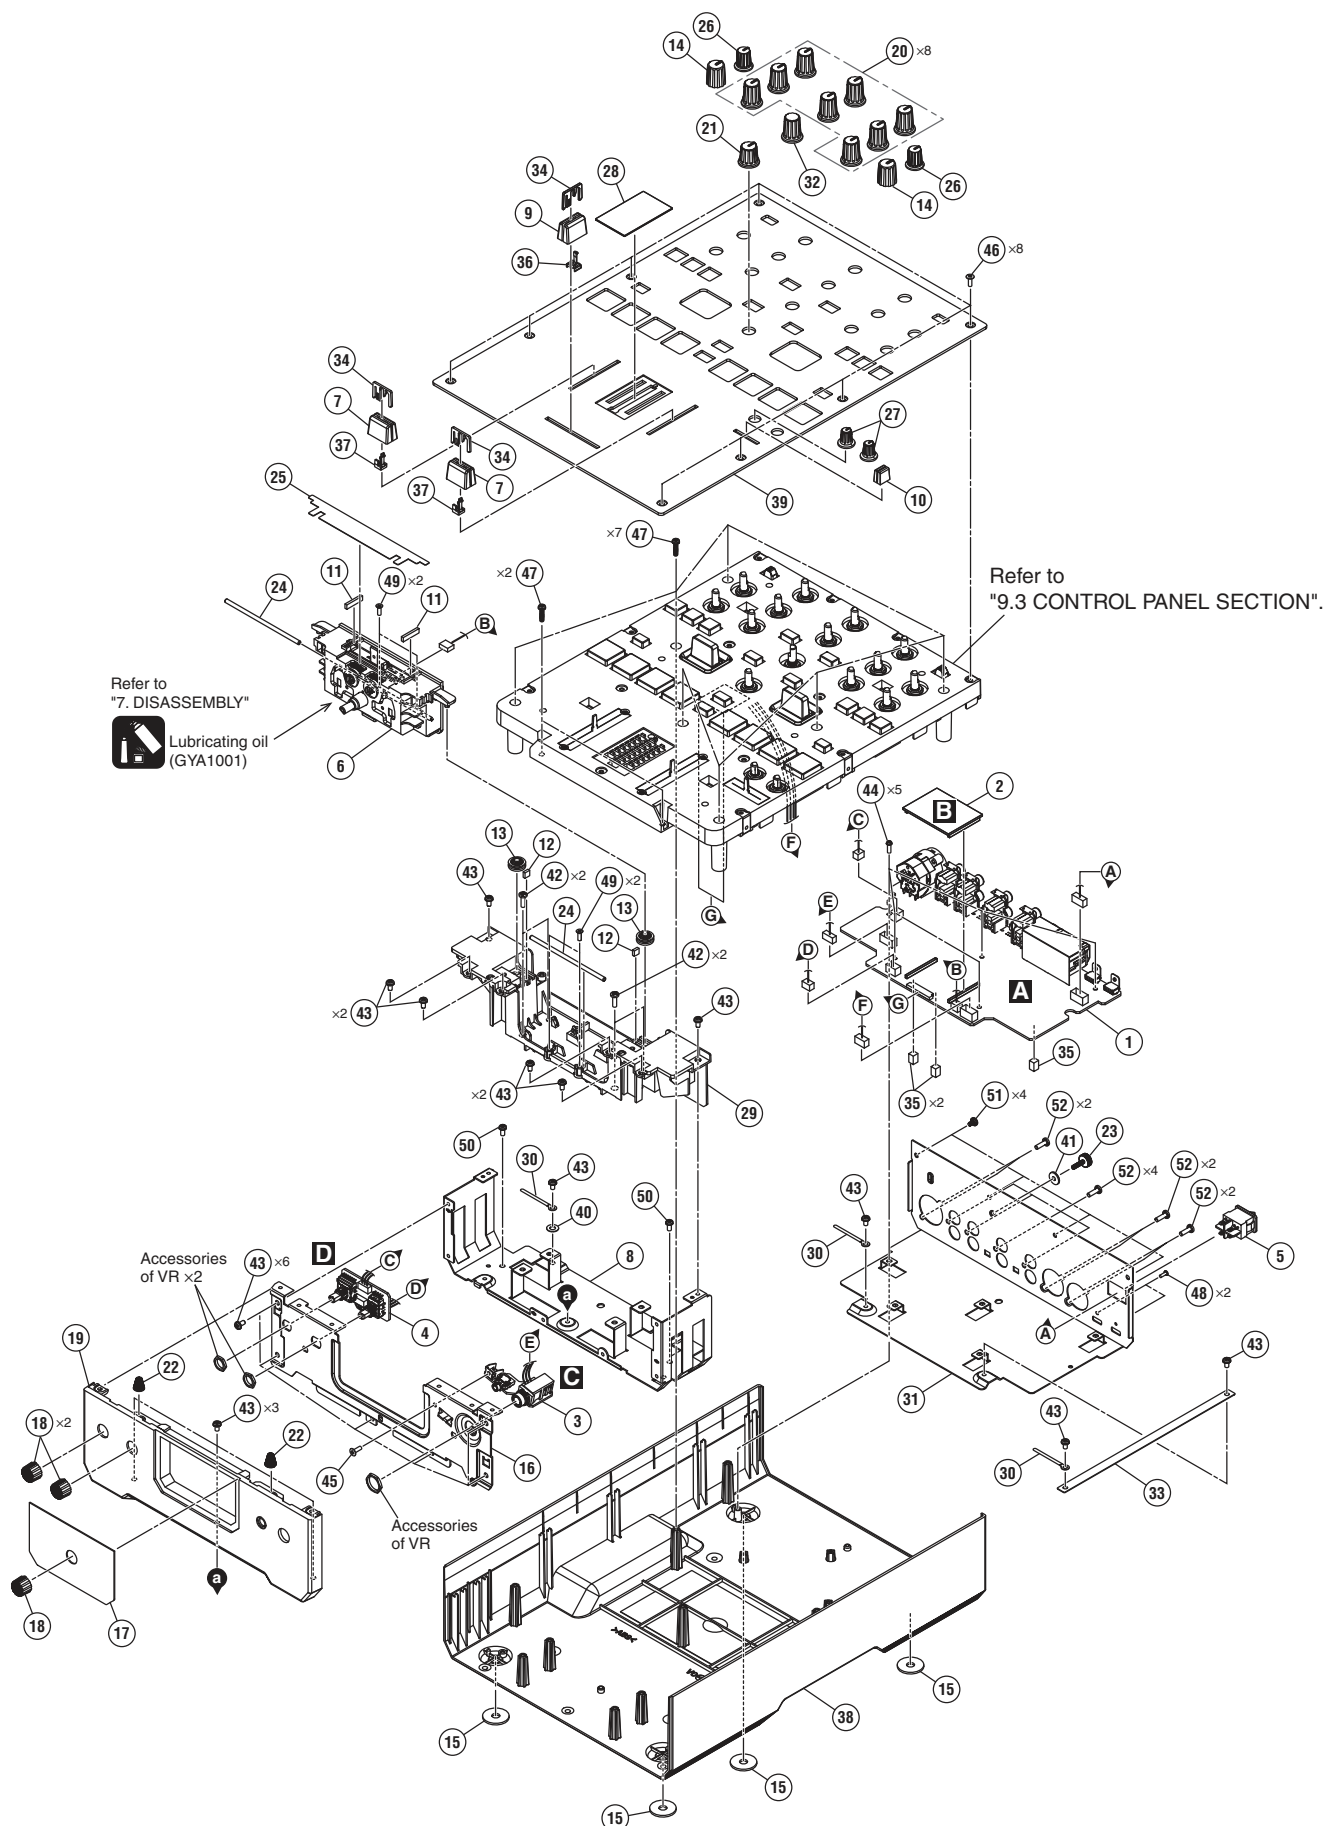


EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	USB PCB Assy	704-061-C534	46	Screw (3*10)	602-PTS310-851B
	2	MPU ADAPTOR PCB Assy	704-061-C535	47	Screw (C-1018,PTP,3-L12)	602-PTP3012-571Z
	3	PHONES PCB Assy	704-061-C537	48	Screw (M2*6)	602-ISO206-839B
	4	FRONT PCB Assy	704-061-C538	49	Screw (PTF,2.6*8)	602-PTF2608-837N
	5	POWER SW Assy	704-061-C541	50	Screw (PTP,3*6,ZB)	602-HDJ9700-423
B	6	MAGVEL FADER PRO Assy	418-058-800	51	Screw (SAE1018,BTB,3-5)	602-BTB305-727B
	7	Channel Fader Knob	100-061-3525S	52	Screw (TTB3*10)	602-XM610-522
	8	VR Bracket	300-061-2514			
	9	Crossfader Knob	100-061-3534S			
	10	CUE Fader	100-058-3524			
C	11	Cushion	604-058-728			
	12	Cushion	604-058-729			
	13	Damper/S1	604-058-727			
	14	FILTER Rotate Knob	100-S1-3009			
	15	Foot	612-058-605			
D	16	Front Bracket	300-061-2515			
	17	Front Clear Panel	501-061-3030			
	18	Front Knob	100-058-3527			
	19	Front Panel	100-061-3561			
	20	FX Rotate Knob	100-S1-3006			
E	21	GAIN Rotate Knob	100-S1-3008			
	22	Ground Spring	603-058-443			
	23	Ground Terminal	200-S1-665			
	24	Guide Bar	200-058-1023			
	25	Insulation Spacer	501-061-3060			
F	26	Jog Tuning Knob	100-DDJLE-2944			
	27	Knob	100-058-3523			
	28	Level Indicator	501-061-3029			
	29	Level Indicator Base	100-061-3566			
	30	Locking Cable Clip	300-HM510B-224B			
	31	Rear Panel	300-061-2512			
	32	Rotate Knob	100-S1-3007			
	33	Signal GND	300-061-2517			
	34	Slider Knob 2	100-058-3535			
	35	Sponge	612-IQ2UM-378			
	36	Stopper	100-058-3536			
	37	Stopper/SLD	100-058-3537			
	38	Sub Plastic Base	100-061-3562			
	39	Top Panel	300-061-2511			
	40	Washer	606-HV3360-091			
	41	Washer (10*3.2*1T)	606-S1-007			
	42	Screw	602-PTB3010-674Z			
	43	Screw	602-QMX2BPM-322			
	44	Screw	602-SL24F-099			
	45	Screw	602-ISO308-735B			

5 6 7 8

9.3 CONTROL PANEL SECTION

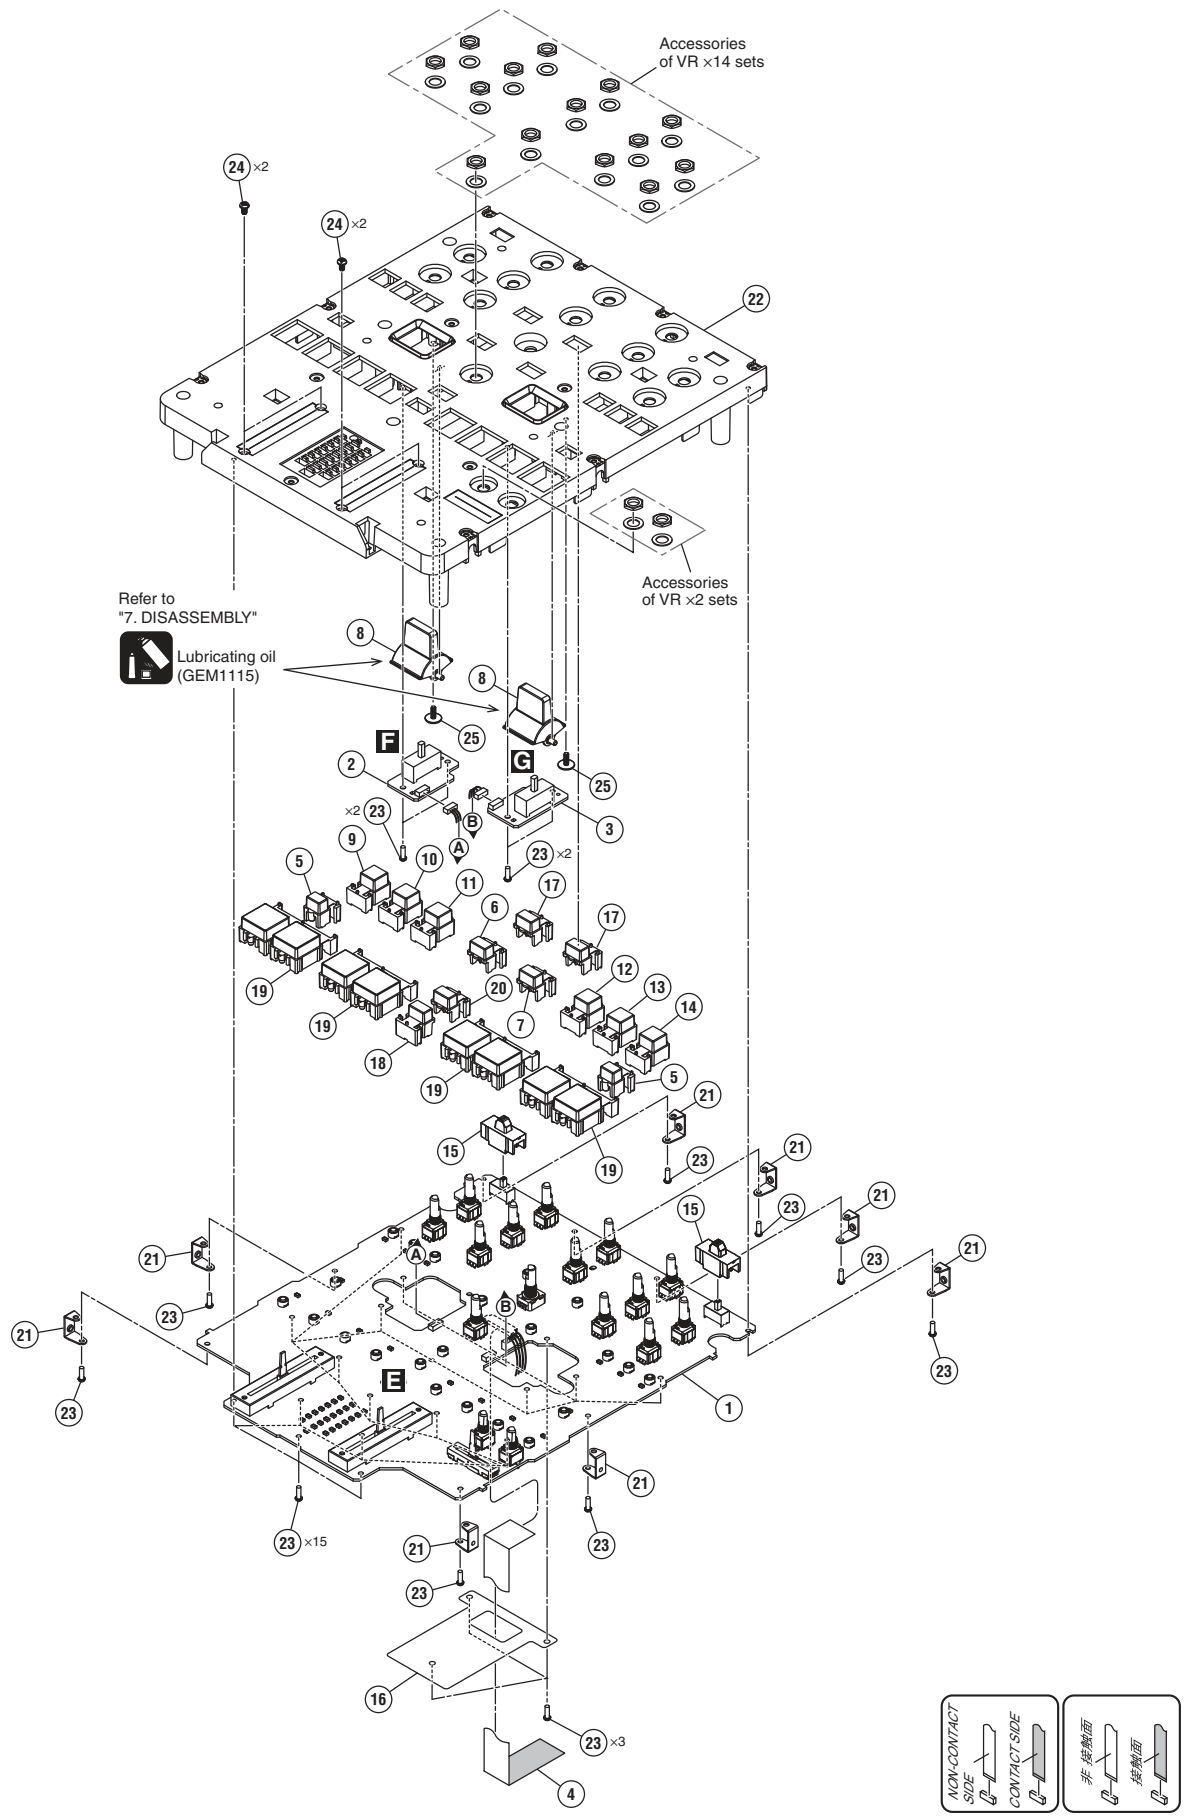

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.
A	1 MIX PCB Assy	704-061-C533
	2 LEVER-L PCB Assy	704-061-C539
	3 LEVER-R PCB Assy	704-061-C540
	4 20P 1.0 FFC Cable (L = 250 mm)	406-DJM250-1190
	5 BACK Button	100-061-3512
	6 BEAT Button	100-058-3519
	7 BEAT Button	100-058A-3519
	8 FX Lever	100-061-3567
	9 FX Select Button	100-FXL1-3564
	10 FX Select Button	100-FXL2-3564
B	11 FX Select Button	100-FXL3-3564
	12 FX Select Button	100-FXR1-3564
	13 FX Select Button	100-FXR2-3564
	14 FX Select Button	100-FXR3-3564
	15 Input Selector	100-SX3-3410
	16 Isolated Slice	501-061-3032
	17 LOAD Button	100-LOAD-3519
	18 MODE Button	100-MODE-3519
	19 Pad Select Button	100-061-3565S
	20 SHIFT Button	100-SHIFT-3519
C	21 Side Bracket	300-061-2516
	22 Chassis Assy (Service part)	701-DJMS5-6139
	23 Screw	602-SL24F-099
	24 Screw (3*5 P=0.5)	602-B300-041
	25 Screw (SAE1018,WPTP 3-8,CAP=9.5)	602-MD26-082

D

E

F