


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

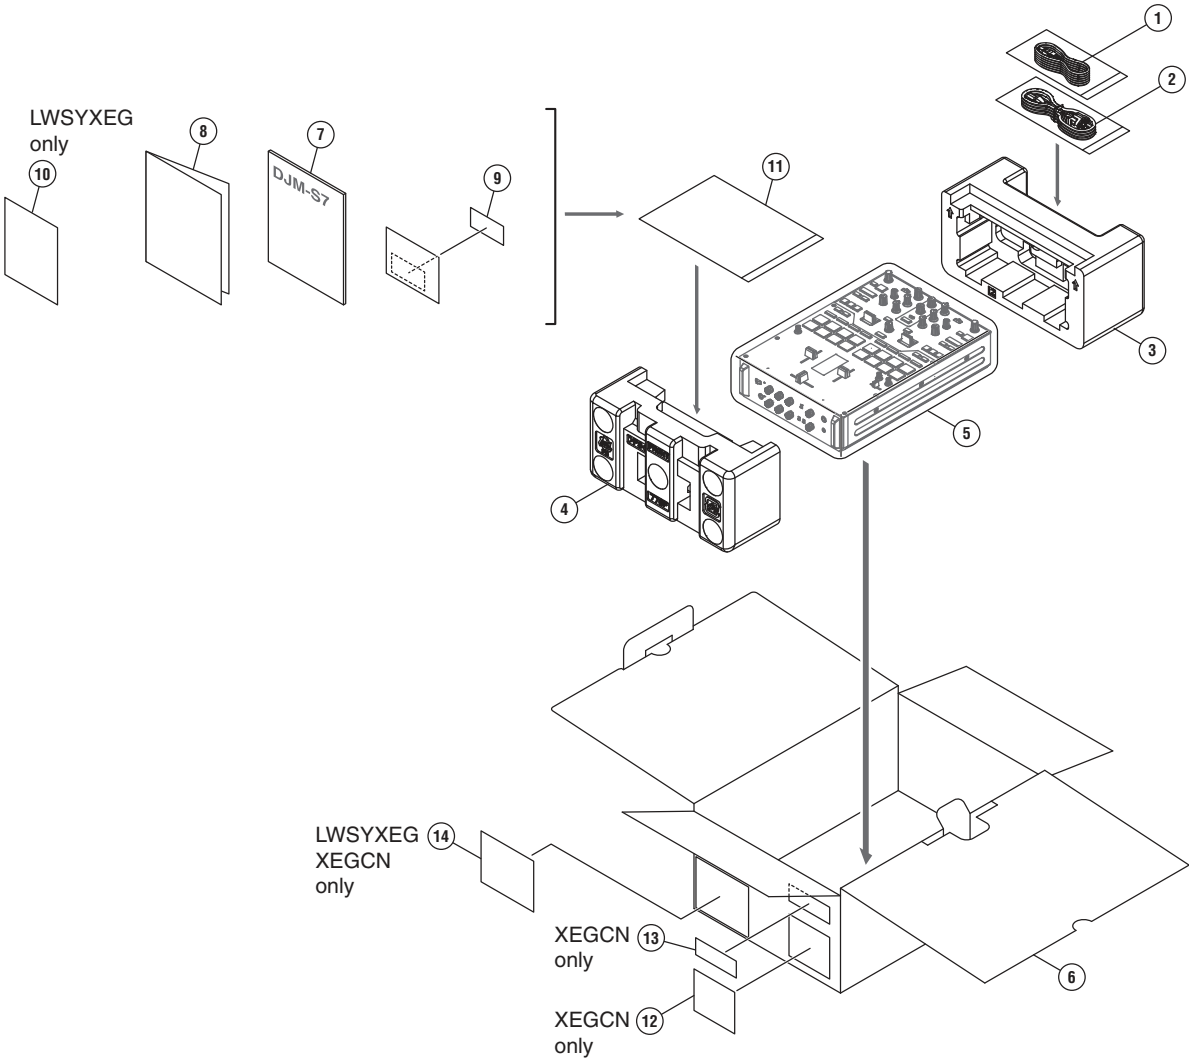

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)
	2 USB Cable (L = 1500 mm)	408-SUB-132
	3 Styrofoam B	506-S7-776B
	4 Styrofoam F	506-S7-776F
	5 HDPE Bag	505-058-277
	6 Gift Box	507-S7A-3863
	7 Quick Start Guide	See Contrast table (2)
	8 Precautions For Use	See Contrast table (2)
NSP	9 Serato DJ Pro EXPANSION PACK VOUCHER	•••••
NSP	10 Warranty	See Contrast table (2)
	11 PE Bag	505-DJM250-014
	12 Produce Label	See Contrast table (2)
	13 Caution Label	See Contrast table (2)
	14 Barcode Label	See Contrast table (2)

(2) CONTRAST TABLE

DJM-S7/LWSYXEG, UXEGCB and XEGCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-S7/LWSYXEG	DJM-S7/UXEGCB	DJM-S7/XEGCN
⚠	1	Power Cord	409-HDJ7100-055D-HA	409-HDJ7100-054D-HA	409-DMX101-218A
	7	Quick Start Guide	502-DJMS7A-3885	502-DJMS7A-3885	502-DJMS7D-3888
	8	Precautions For Use	502-DJMS7A-3886	502-DJMS7A-3886	502-DJMS7D-3889
NSP	10	Warranty	502-SXMK3B-3549C	Not used	Not used
	12	Produce Label	Not used	Not used	501-DJMS7D-3018
	13	Caution Label	Not used	Not used	501-DJMS7D-3019
	14	Barcode Label	501-DJMS7B-3017	Not used	501-DJMS7D-3017

A



※ いじり防止トルクスネジ使用
分解・組立には指定のトルクスドライバー
を使用してください。
(3.2 治工具一覧 参照)



EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	DSP PCB Assy	704-S7-C282	46	Power Cover	300-058-2484	
2	INPUT PCB Assy	704-S7-C288	47	Rear Panel Assy	703-DJMS7-1567	A
3	FRONT PCB Assy	704-S7-C289	48	Knob	100-DJM250-2826	
4	USB PCB Assy	704-S7-C290	49	•••••		
5	PHONES PCB Assy	704-S7-C293	50	Slider Knob 2	100-058-3535	
⚠	6 SWITCHING POWER	411-058-1050	51	Cushion	612-SX2-362	
	7 MAGVEL FADER PRO Assy	418-058-800	52	Sponge	612-USOLOFX-371	
	8 Processed Assy	704-S7-C331	53	Sponge (10*17*8 mm)	612-MAIE-399	
⚠	9 3P AC Jack	404-50CU-3971	54	Stopper	100-058-3536	
	10 12P 1.0 FFC Cable	406-058-1441	55	Stopper/SLD	100-058-3537	
	11 30P 1.0 FFC Cable	406-058-1434	56	Strain Relife Bushing	100-058-3552	B
	12 40P 0.5 FFC Cable	406-058-1433	57	SW Cover	300-058-2482	
	13 1P Ground Wire	406-50CU-1334	58	TALKOVER ON/OFF Switch	100-058-3528	
	14 Rotate Knob	100-S1-3007	59	•••••		
⚠	15 Power Button Assy	704-S7-C295	60	TRIM Knob	100-058-2944	
	16 Bottom	100-058-3508S	61	Spring (7*4.3*1T)	606-STR830-141	
	17 Bottom	300-058-2476	62	Washer (4.36*8.26*0.9T)	606-NCDS700-123	
	18 Fixed Plate	300-058-2478	63	•••••		
	19 Cable Tie	504-S100-004	64	Screw	602-308BLACK-724B	
	20 CH Fader Cover	100-058-3525	65	Screw	602-BTB408-751C	C
	21 CR Knob	100-058-3534	66	Screw	602-BTB305-727B	
	22 CUE Fader	100-058-3524	67	Screw	602-XM610-522	
	23 •••••		68	Screw	602-HDJ9700-423	
	24 Cushion	604-058-728	69	Screw	602-HP1010K-174	
	25 Cushion	604-058-729	70	•••••		
	26 Himilon (T = 0.5)	612-900-219	71	Screw	602-ISO206-839B	
	27 Damper/S1	604-058-727	72	Screw	602-SX1200-544	
	28 FILTER Rotate Knob	100-SX3-3009	73	Screw	602-MC4-532A	
	29 Fixed Plate	300-058-2481	74	Screw	602-MK8-605	D
	30 Top Panel	300-058-2477	75	Screw	602-PTB3010-674Z	
	31 Foot	612-058-605	76	Screw	602-PTF2608-837N	
	32 Front Guard	100-058-3510	77	Screw	602-PTX2608-829Z	
	33 Front Knob	100-058-3527	78	Screw	602-QMX2BPM-322	
	34 Front Panel Assy	701-DJMS7-6079	79	Screw	602-SA12-377	
	35 GAIN Rotate Knob	100-S1-3008	80	Screw	602-B300-041	
	36 Ground Spring	603-058-443				
	37 Guide Bar	200-058-1023				
	38 Holder	100-058-3533				E
	39 Holder	300-058-2485				
	40 Knob	100-058-3523				
	41 Level Indicator	501-058-2998				
	42 Locking Cable Clip	300-HM510B-224				
	43 •••••					
	44 •••••					
	45 Power Knob	100-165-1641				F

9.3 CONTROL PANEL SECTION

A • Bottom view

• Top view

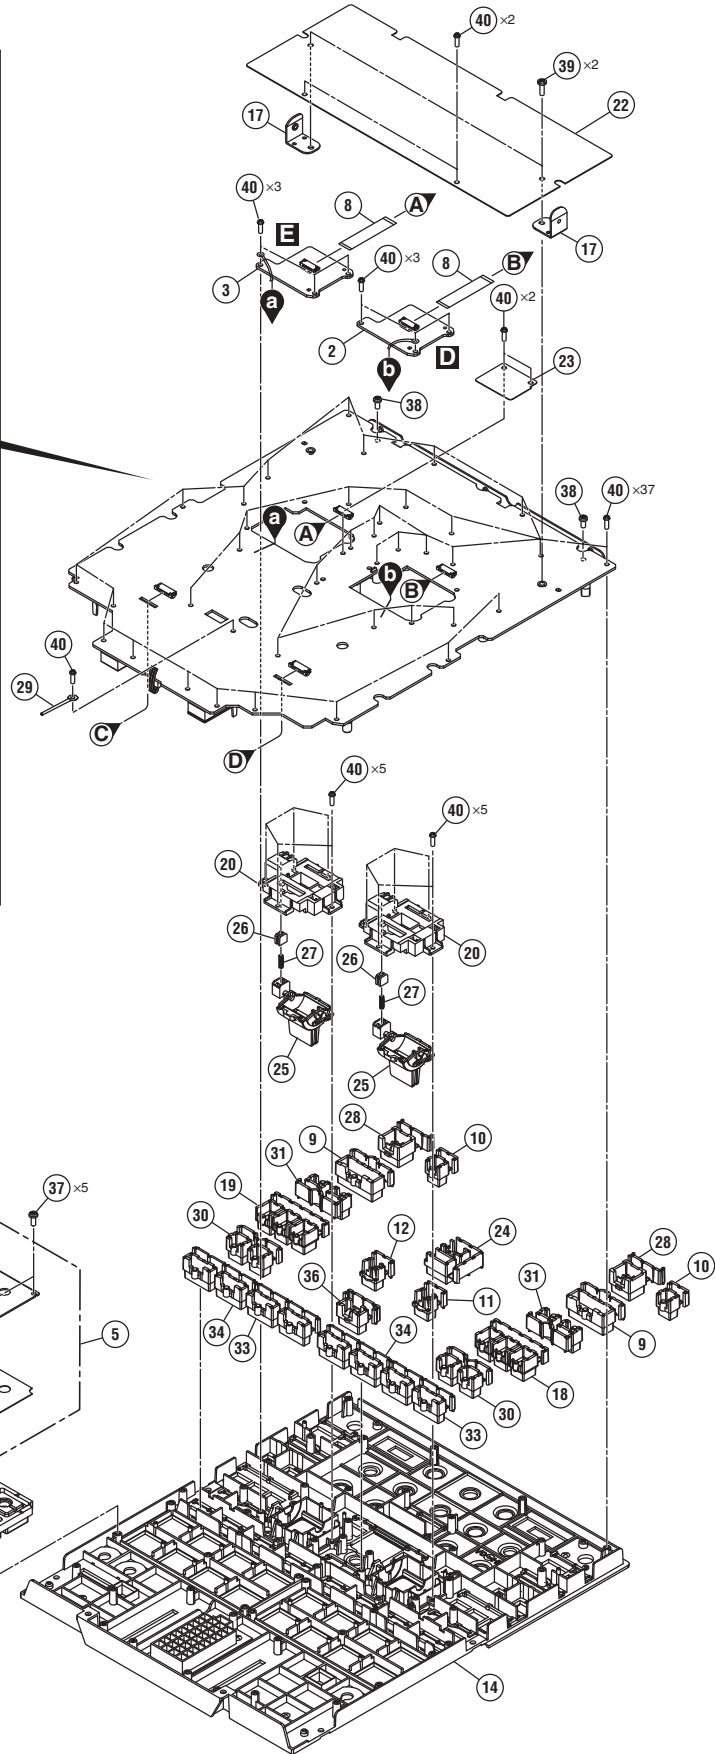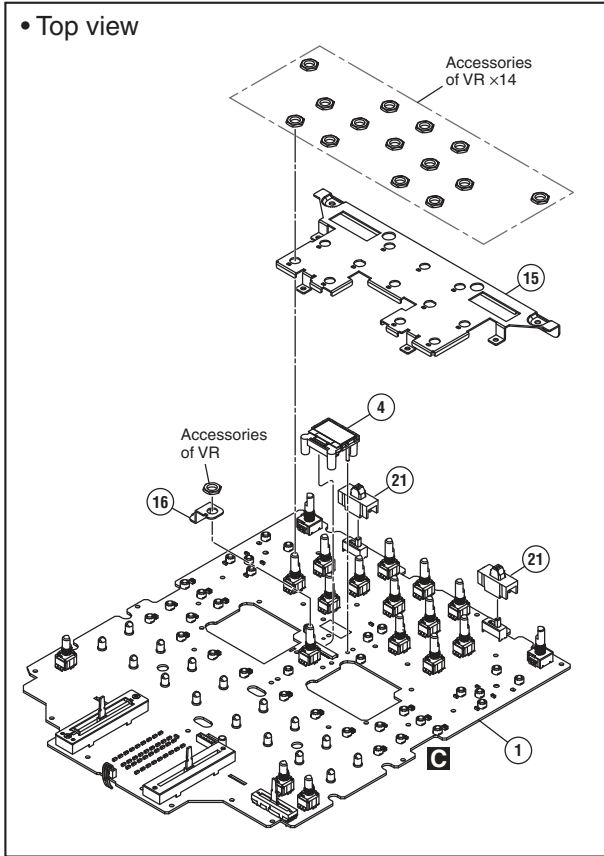

A

B

C

D

E

F