


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

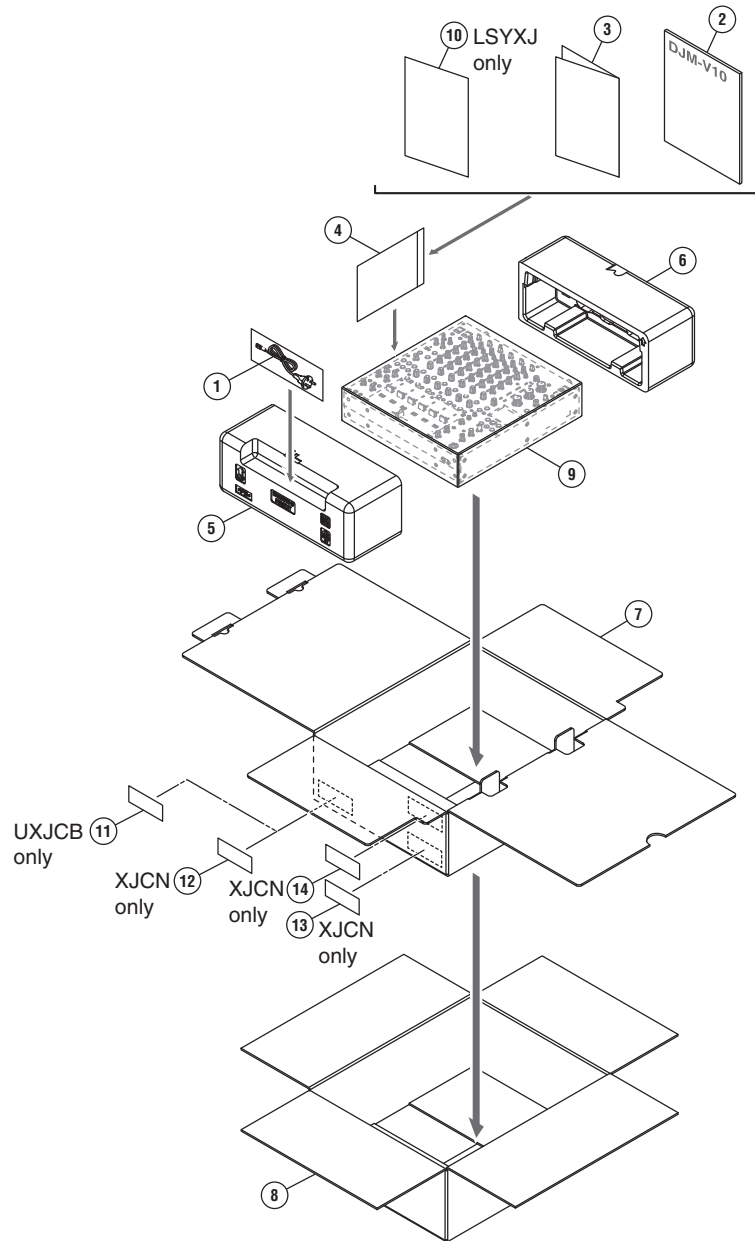

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power cord	See Contrast table (2)	11	Label	See Contrast table (2)
	2 Quick Start Guide	See Contrast table (2)	12	Label	See Contrast table (2)
	3 Precautions for Use	See Contrast table (2)	NSP 13	Label	See Contrast table (2)
NSP	4 Polyethylene Bag	AHG7117	NSP 14	Label	See Contrast table (2)
	5 Packing Pad	DHA2001			
	6 Packing Pad	DHA2002			
	7 Packing Case	DHG3755			
	8 Master Carton	See Contrast table (2)			
	9 Mirror Mat (1200*1000)	DHL1169			
NSP	10 Warranty	See Contrast table (2)			

(2) CONTRAST TABLE

DJM-V10/LSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-V10/LSYXJ	DJM-V10/UXJCB	DJM-V10/XJCN
⚠	1	Power Cord	DDG1124	DDG1123	DDG1125
	2	Quick Start Guide	DRH1574	DRH1574	DRH1575
	3	Precautions for Use	DRH1579	DRH1579	DRH1580
	8	Master Carton	DHG3712	DHG3713	DHG3754
NSP	10	Warranty	DRY1274	Not used	Not used
	11	Label	Not used	DRW2803	Not used
	12	Label	Not used	Not used	DRW2805
NSP	13	Label	Not used	Not used	DRW2841
NSP	14	Label	Not used	Not used	DRW2842

F



(1) EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	HPJC Assy	DWX4339		31	Knob	DAA1420
	2	RCA Plug	DKM1026		32	Panel	DAH3281
	3	Stay	DNG1123		33	Panel	DAH3282
	4	SW Packing (EF)	DEC2929	⚠	34	Panel	DNK6875
	5	Sheet	DEC3937		35	Lid	DNK6550
B	6	Sheet	DEC3940		36	Panel	DNK6887
	7	Sheet	DEC3941		37	Lid	DNK6652
	8	Sheet	DEC3942		38	Panel	DNK6876
	9	Sheet	DEC3943		39	Holder	DNK6549
	10	Sheet	DEC3944		40	Panel	DAH3283
C	11	Sheet	DEC3945		41	Packing	DEC3642
	12	Sheet	DEC3946		42	Control Panel	DNB1276
	13	Sheet	DEC3947		43	Lens	DNK4532
	14	Knob	DAA1434		44	Lens	DNK6877
	15	Knob	DAA1419		45	DS Tape	DEH1110
D	16	Plate	DNG1133		46	Lens	DNK6516
	17	Rotary Knob Low (BN)	DAA1265		47	Holder	DNK6552
	18	Knob/RSW	DAA1307	NSP	48	Label	See Contrast table (2)
	19	Knob	DAA1418	NSP	49	Name Label	See Contrast table (2)
	20	Rotary SW Knob (C)	DAA1180		50	•••••	
E	21	Knob	DAA1435		51	Nut M12	DBN1018
	22	Knob	DAA1417		52	Screw 3*8 (FE)	DBA1290
	23	Select Knob	DAA1205		53	Screw	DBA1451
	24	Slider Knob 2	DAC2685		54	Screw	BBZ30P060FTB
	25	Knob	DAC3539		55	Screw	BBZ30P060FTC
F	26	Slider Knob Stopper	DNK5888		56	Screw	BPZ20P060FTC
	27	Knob	DAC3238		57	Screw	BPZ30P080FNI
	28	Stopper	DNK6440				
	29	Knob	DAA1415				
	30	Knob	DAA1416				

(2) CONTRAST TABLE

DJM-V10/LSYXJ, UXJCB and XJCN are constructed the same except for the following:


Mark	No.	Symbol and Description	DJM-V10/LSYXJ	DJM-V10/UXJCB	DJM-V10/XJCN
NSP	48	Label	Not used	DRW1975	Not used
NSP	49	Name Label	DAL1359	DAL1360	DAL1362



Refer to
"9.4 CHASSIS SECTION (2/2)".

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	USBA Assy	DWX4332
	2	USBB Assy	DWX4333
	3	USBP Assy	DWX4334
	4	AIN Assy	DWX4364
	5	HPJK Assy	DWX4337
	6	HPJM Assy	DWX4338
	7	MTRM Assy	DWX4348
	8	FGP2 Assy	DWX4349
	9	CCB1 Assy	DWX4410
	10	FGP1 Assy	DWX4395
B	11	SNRT1 Assy	DWX4355
	12	SNRT2 Assy	DWX4356
	13	SNRT3 Assy	DWX4357
	14	Crimp Connector	PF10PP-D07
	15	Crimp Connector	PF06PP-S15
	16	Connector Assy	PF03PP-D30
	17	Shielded Conn-Cable	DDA1095
	18	Shielded Conn-Cable	DDA1096
	19	Shielded Conn-Cable	DDA1061
	20	FFC	DDD1956
C	21	Shielded Conn-Cable	DDA1097
	22	Shielded Conn-Cable	DDA1098
	23	Shielded Conn-Cable	DDA1099
	24	Stay	DNG1120
	25	Stay	DNF1951
	26	Cover	DNF2066
	27	Shield Plate	DNG1119
	28	Stay	DNG1125
	29	Stay	DNF2069
	30	Stay	DNF1958
D	31	Stay	DNG1122
	32	Shield Plate	DNG1140
	33	Shield Case	DNG1127
	34	Locking Mini Clamp	DEC2439
	35	Holder	VEC1355
	36	Sheet	DEC3621
	37	Cable Tie	ZCA-SKB90BK
	38	EMC Gasket	DEC3637
	39	EMC Gasket	DEC3638
	40	Cord Clamper (Steel)	RNH-184
E	41	•••••	
	42	•••••	
	43	Nut (M12)	NKX2FNI
	44	Nut M12	DBN1018
	45	Washer	DEC2920
F	46	Screw	BBZ30P060FTC
	47	Screw	BPZ30P080FTB
	48	Screw	PPZ30P080FTB

9.4 CHASSIS SECTION (2/2)

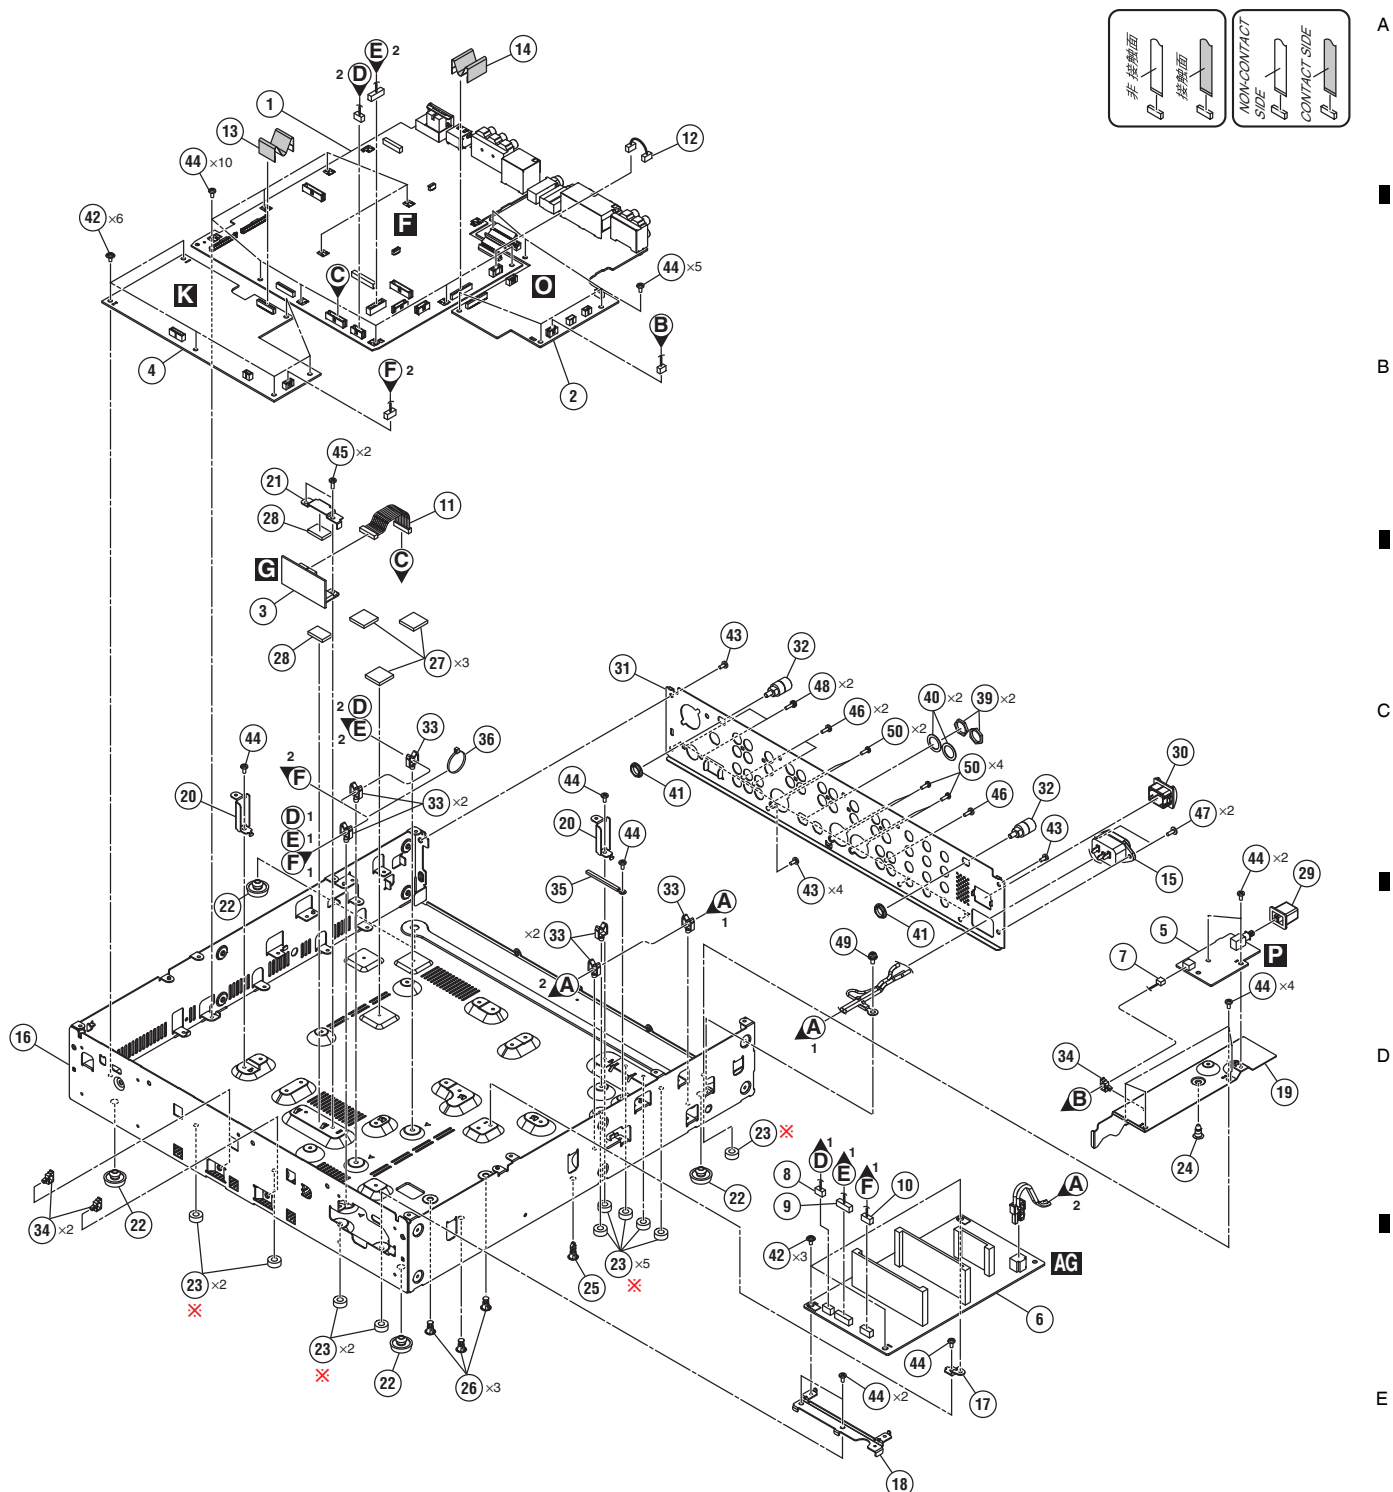


Note ✖ :
AEB7092 is nonreusable
to fix it with DS tape.

注意 ※：
AEB7092は両面テープで固定のため
再利用不可です。



CHASSIS SECTION (2/2) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MAIN Assy	DWX4331		46	Screw	BPZ30P080FTB
	2	AOUT Assy	DWX4336		47	Screw	IBZ30P080FTB
	3	REGB Assy	DWX4366		48	Screw	PMH30P100FTB
	4	HPPW Assy	DWX4344		49	Screw	PMH40P080FTC
	5	PSWB Assy	DWX4350		50	Screw	PPZ30P080FTB
B	⚠ 6	SW POWER SUPPLY	DWR1581				
	7	Connector Assy	PF03PP4B12				
	8	Crimp Connector	PF05PP-S30				
	9	Crimp Connector	PF08PP-S30				
	10	Crimp Connector	PF04PP-S15				
B	11	Crimp Connector	PF09PP-S07				
	12	Connector Assy	PF04PP-D05				
	13	FFC	DDD1955				
	14	FFC	DDD1957				
	⚠ 15	AC Inlet	DKP3992				
NSP	16	Chassis	DNA1476				
	17	PCB Stay (FE)	VNE2489				
	18	Stay	DNG1129				
	19	Shield Case	DNG1121				
	20	Stay	DNG1126				
NSP	21	Cover	DNG1138				
	22	Foot (Rubber)	REC-434				
	23	Spacer	AEB7092				
	24	PCB Holder	PNW1706				
	25	Spacer	DEC3850				
D	26	Spacer	DEC3878				
	27	Sheet	DEC3618				
	28	Sheet	DEC3901				
	29	Power Knob	DAC2306				
	30	Power Knob Guard	DNK4534				
E	31	Rear Panel	DNC2139				
	32	Earth Terminal	DKE1019				
	33	Holder	VEC1355				
	34	Locking Mini Clamp	DEC2439				
	35	Cord Clamper (Steel)	RNH-184				
E	36	Cable Tie	ZCA-SKB90BK				
	37	•••••					
	38	•••••					
	39	Nut (M12)	NKX2FNI				
	40	Washer	DEC2920				
F	41	Flange Nut M9	DBN1008				
	42	Screw	ABZ30P060FTC				
	43	Screw	BBZ30P060FTB				
	44	Screw	BBZ30P060FTC				
	45	Screw	BBZ30P080FTB				

9.5 CONTROL PANEL SECTION (1/3)

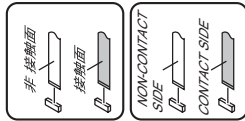

See
"● Channel Fader Section".

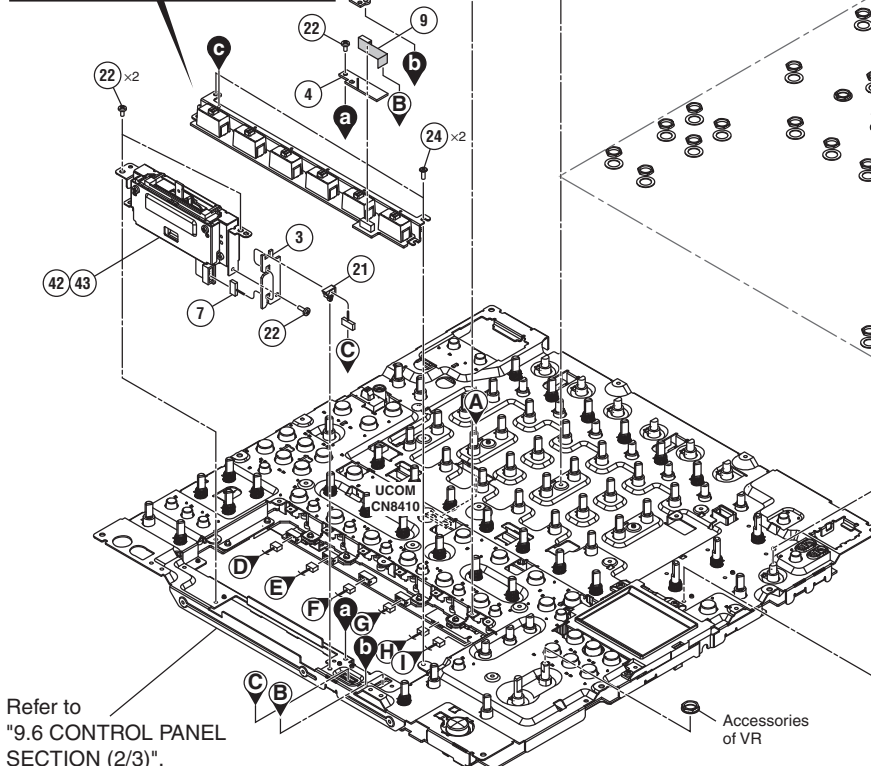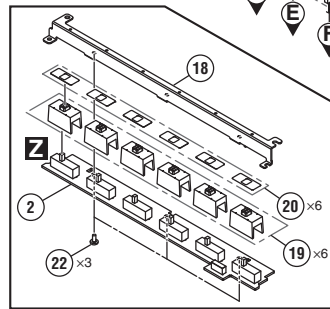


Refer to
"9.6 CONTROL PANEL
SECTION (2/3)".

● Channel Fader Section

Refer to "7. DISASSEMBLY"



Lubricating oil
(GEM1107)

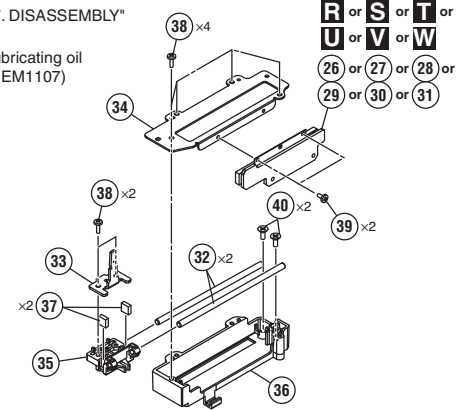

Accessories
of VR x77

CONTROL PANEL SECTION (1/3) PARTS LIST

Mark No. Description Part No.

A	1	LEDB Assy	DWX4342
	2	CRFSW Assy	DWX4365
	3	CRFDG Assy	DWX4396
	4	SWBTM Assy	DWX4397
	5	SWTOP Assy	DWX4398

B	6	Connector Assy	PF04PP-B12
	7	Crimp Connector	PF06PP-B10
	8	FFC	DDD1961
	9	FFC	DDD1968
	10	Holder	DNK6880

B	11	Ring/TRQ	DNK6116
	12	Base/TRQ	DNK6068
	13	Spring/TRQ	DBH1792
	14	•••••	
	15	Knob/ELA	DAA1295

C	16	Holder	DNK6878
	17	Sheet	DEC3885
	18	Stay	DND1312
	19	Slide SW Cap (W)	DAC2401
	20	Sheet	DEC3902

C	21	Locking Mini Clamp	DEC2439
	22	Screw	BBZ30P060FTC
	23	Screw	BSZ20P040FTB
	24	Screw	DBA1451
	25	•••••	

Channel Fader Section

D	26	CHF1 Assy	DWX4358
	27	CHF2 Assy	DWX4359
	28	CHF3 Assy	DWX4360
	29	CHF4 Assy	DWX4361
	30	CHF5 Assy	DWX4362

E	31	CHF6 Assy	DWX4363
	32	Guide Shaft VK1	DLA1978
	33	Lever Plate	DNH2954
	34	Cover	DNG1131
	35	Slider	DNK6889

E	36	Holder	DNK6884
	37	Cushion	DEC3640
	38	Screw	BPZ20P060FTC
	39	Screw	BSZ20P040FTB
	40	Screw	CPZ26P080FTC


F	41	•••••	
---	----	-------	--

Mark No. Description Part No.

Crossfader Section		
42	1..Cross Fader Service Assy	DEA1096
NSP 43	2..CRFB Assy	DWX4340

9.6 CONTROL PANEL SECTION (2/3)

- Bottom view

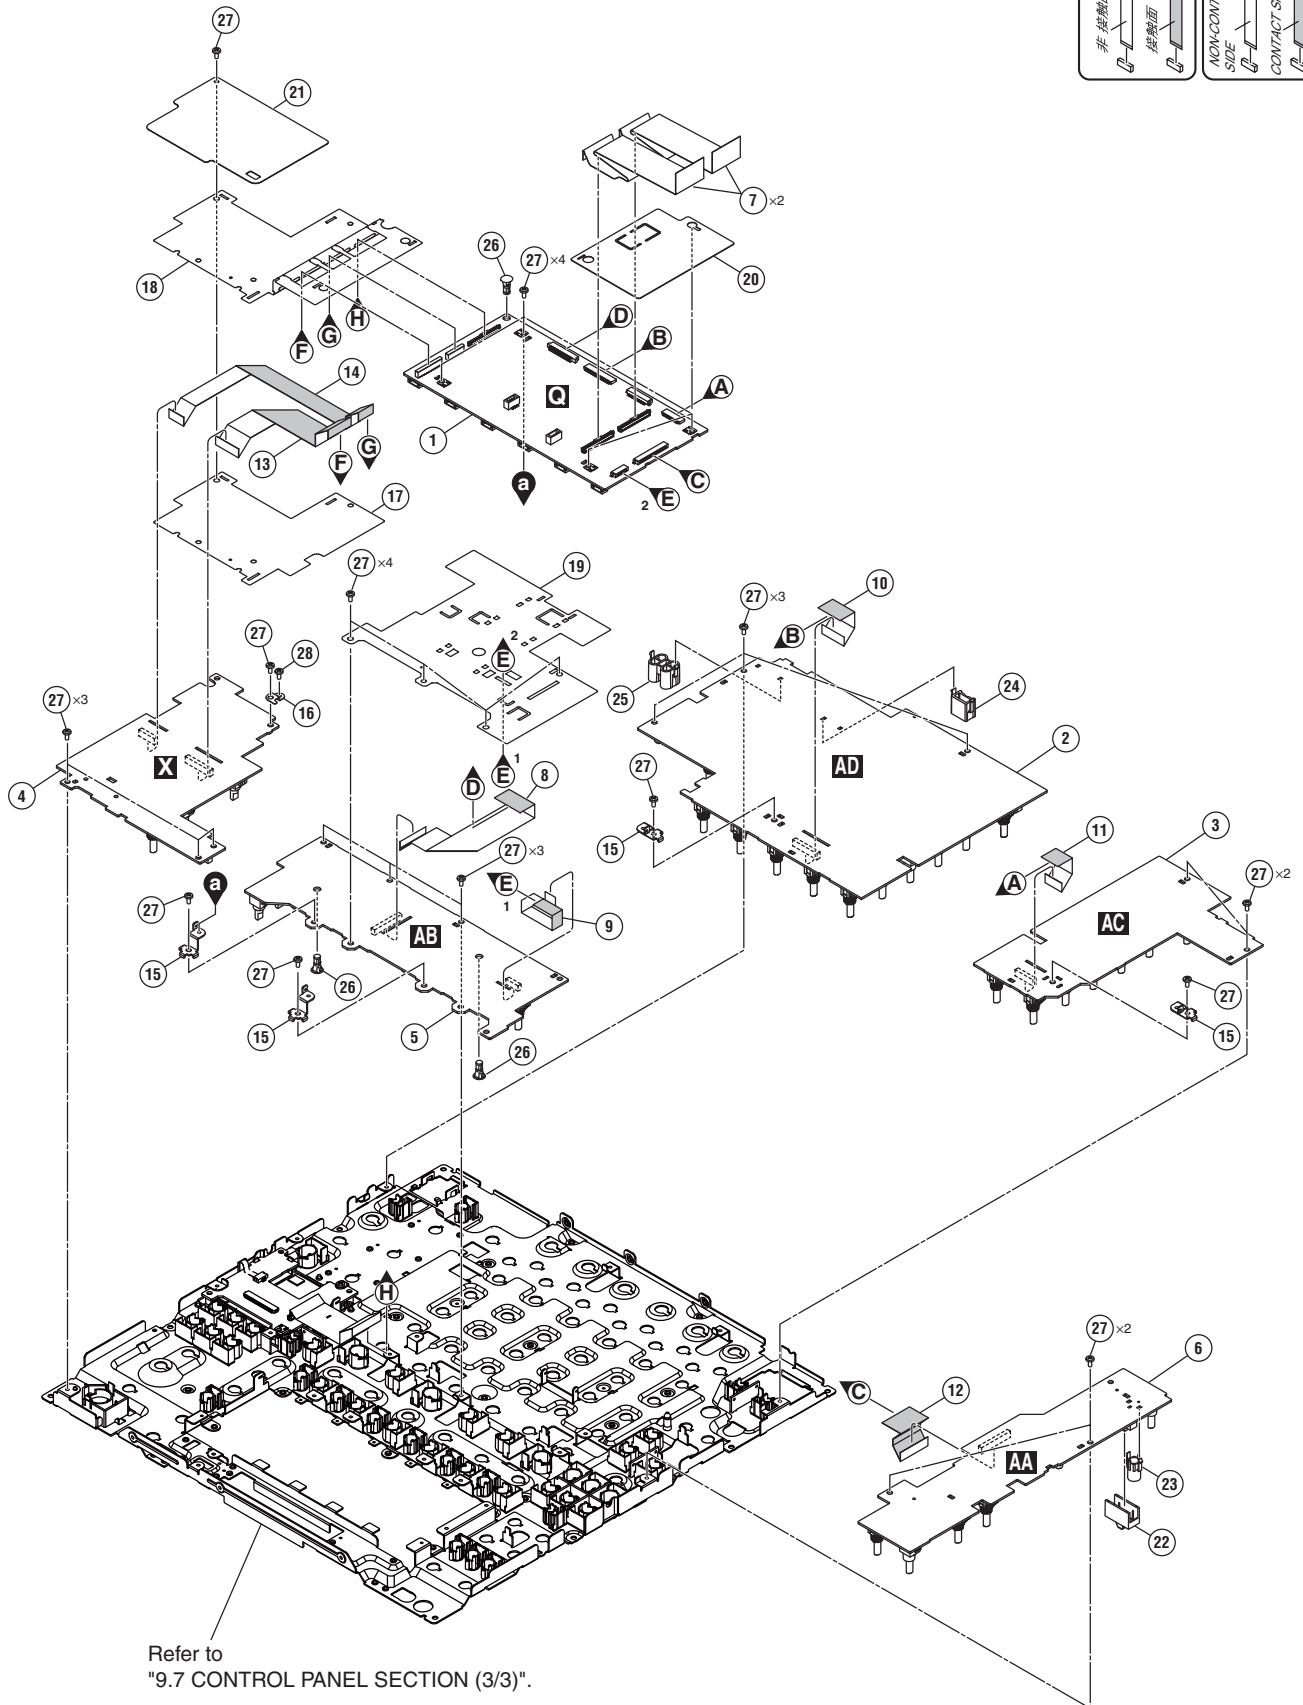

CONTROL PANEL SECTION (2/3) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	UCOM Assy	DWX4341
	2	PNLR Assy	DWX4345
	3	PNLL Assy	DWX4346
	4	BFXB Assy	DWX4352
	5	CUEVR Assy	DWX4347
	6	SFXB Assy	DWX4351
	7	FFC	DDD1958
	8	FFC	DDD1959
	9	FFC	DDD1960
	10	FFC	DDD1962
B	11	FFC	DDD1963
	12	FFC	DDD1965
	13	FFC	DDD1966
	14	FFC	DDD1967
	15	Stay	DND1313
	16	Plate	DNG1137
	17	Barrier	DEC3860
	18	Barrier	DEC3861
	19	Barrier	DEC3862
	20	Barrier	DEC3890
C	21	Barrier	DEC3929
	22	Cap	DAC3136
	23	Holder	DNK6930
	24	Holder	DNK6511
	25	Holder	DNK6879
	26	Spacer	DEC3880
	27	Screw	BBZ30P060FTC
	28	Screw	BPZ30P100FTB



D

E


F

9.7 CONTROL PANEL SECTION (3/3)

• Bottom view

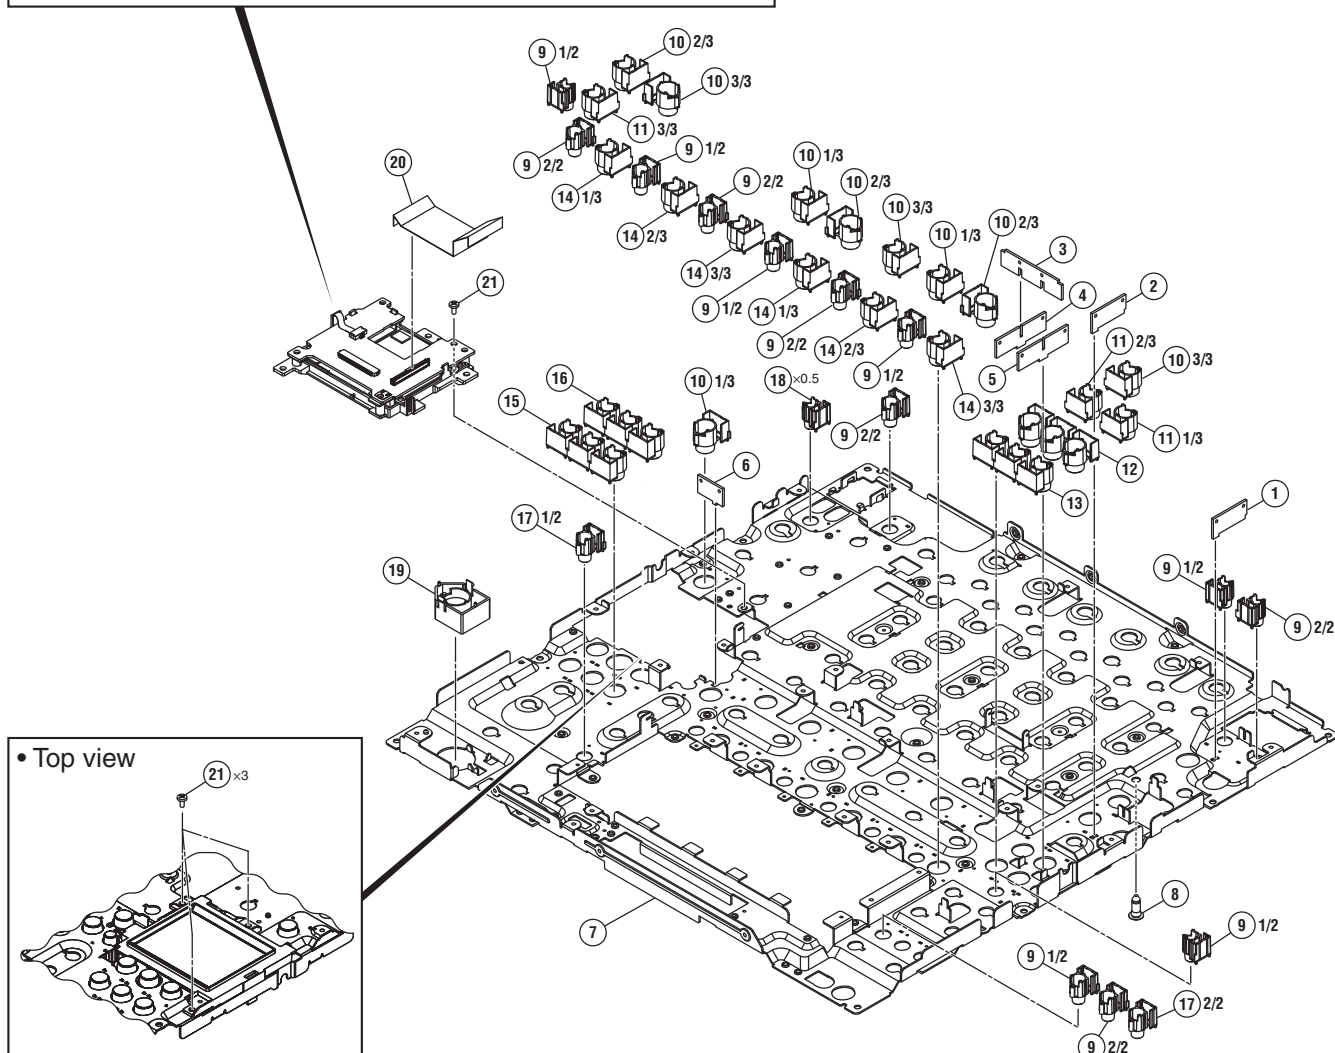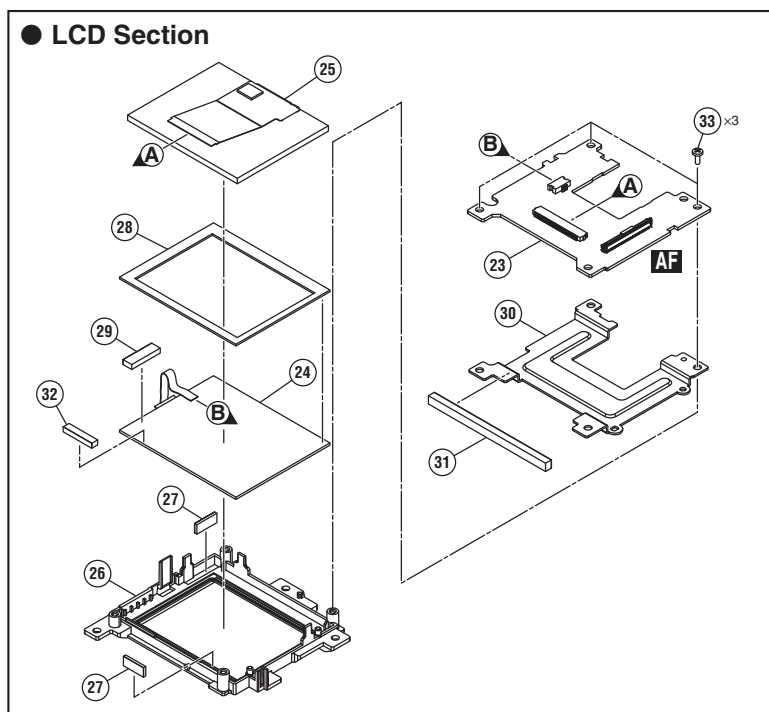

• The position of the divided parts / 分割部品の取り付け位置

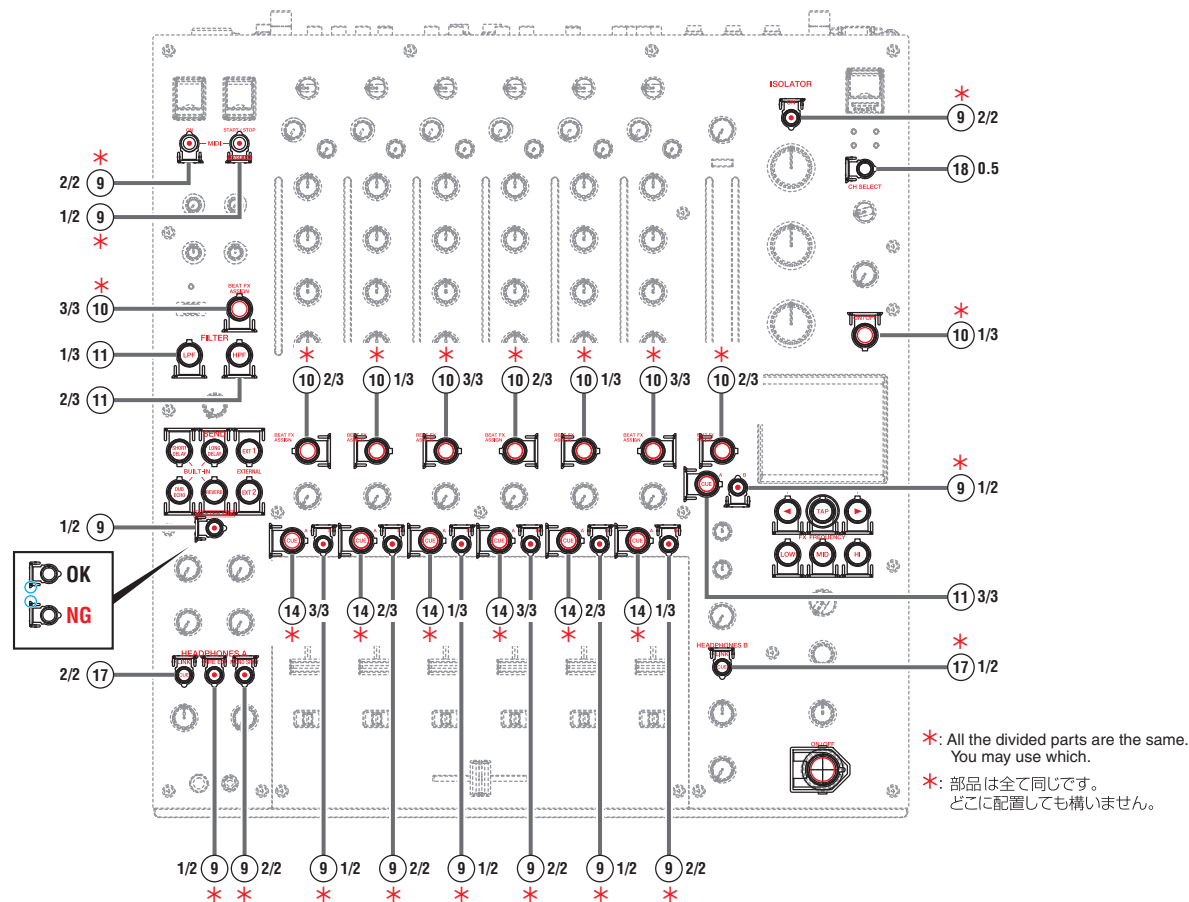

CONTROL PANEL SECTION (3/3) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	SHADE1 Assy	DWX4389	21	Screw	BBZ30P060FTC
2	SHADE2 Assy	DWX4390	22		
3	SHADE3 Assy	DWX4391	LCD Section		
4	SHADE4 Assy	DWX4392	23	LCDB Assy	DWX4343
5	SHADE5 Assy	DWX4393	24	Touch Panel	DSX1147
6	SHADE6 Assy	DWX4394	25	TFT LCD	DWX4228
7	Stay	DND1311	26	Panel	DNK6882
8	Spacer	AEC1065	27	Cushion	DEC3933
9	Button	DAC3491	28	Cushion	DEC3854
10	Button	DAC3492	29	Cushion	DEC3858
11	Button	DAC3493	30	Stay	DND1314
12	Button	DAC3494	31	Cushion	DEC3926
13	Button	DAC3495	32	Cushion	DEC3934
14	Button	DAC3496	33	Screw	BPZ30P100FTB
15	Button	DAC3497			
16	Button	DAC3498			
17	Button	DAC3499			
18	Button	DAC3500			
19	Button	DAC3501			
20	FFC	DDD1964			