


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

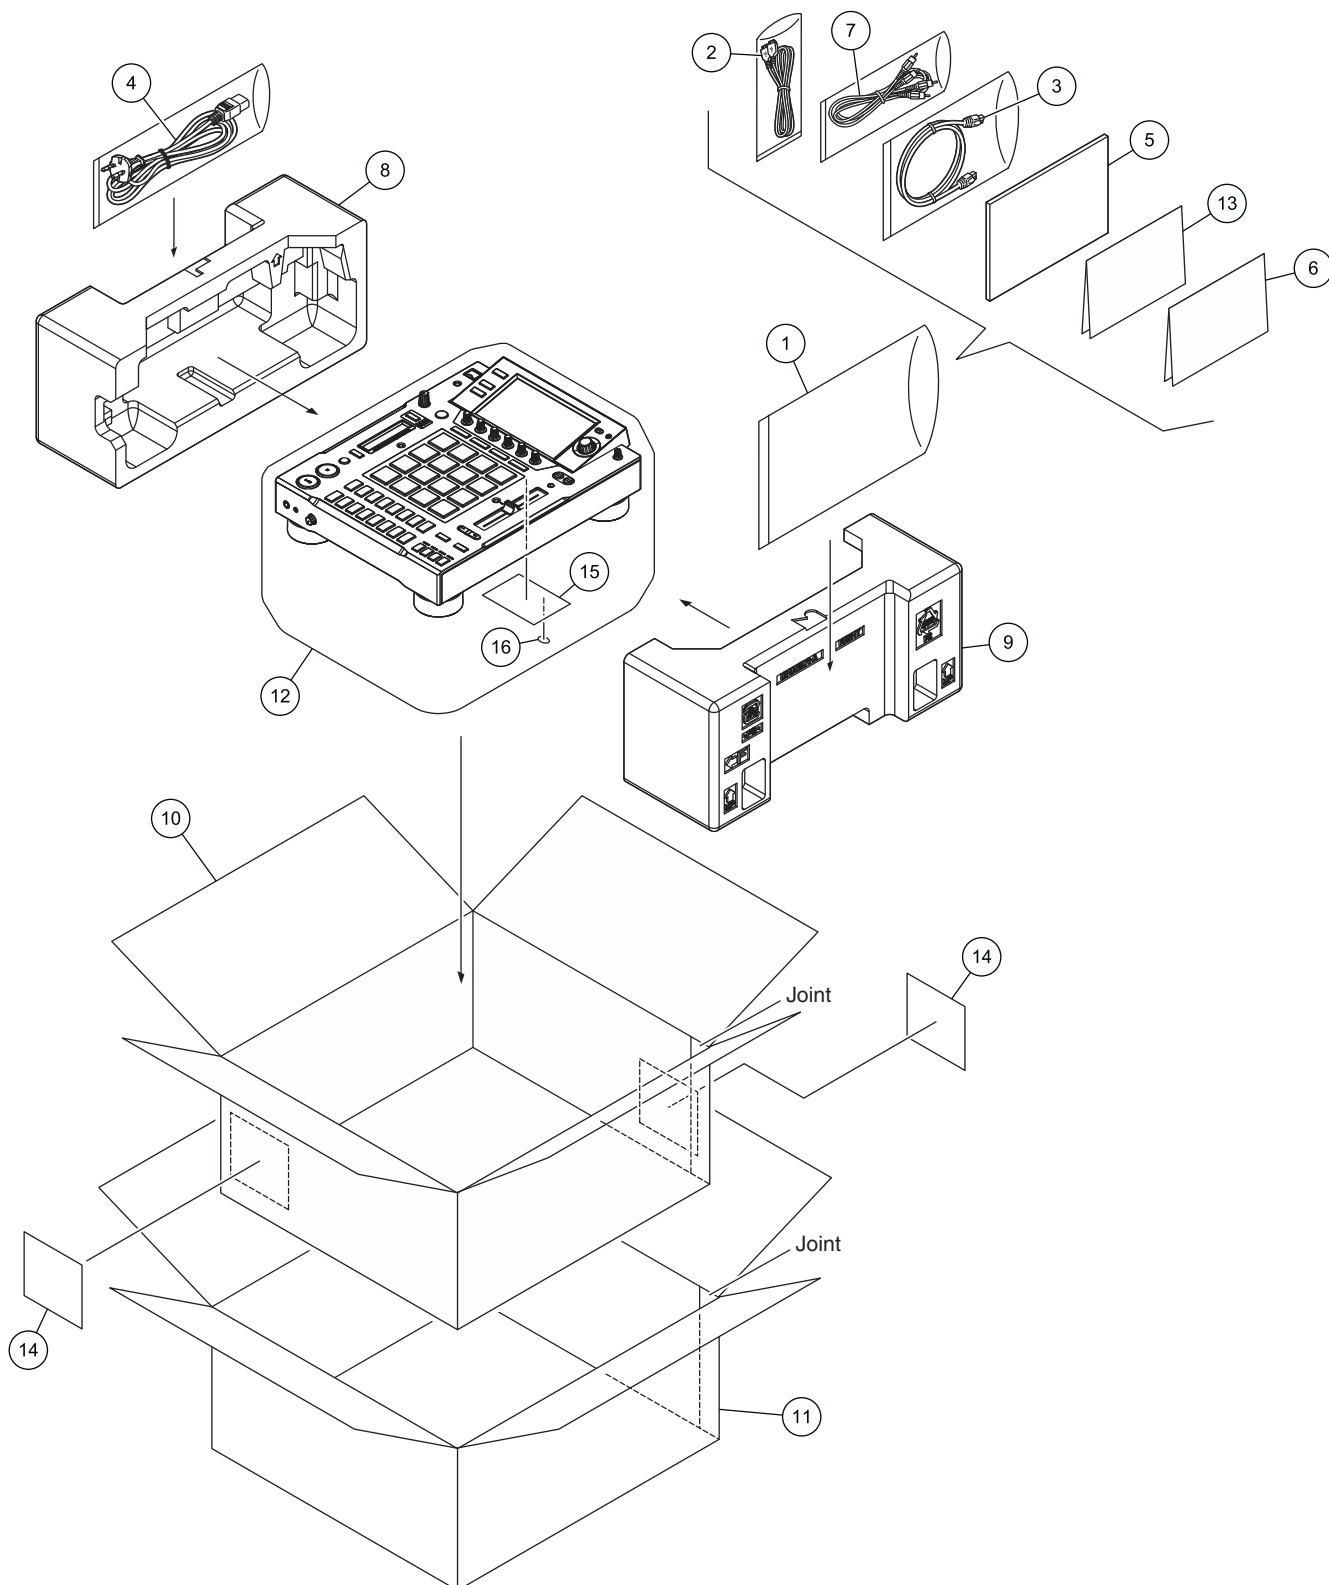

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
A	NSP 1	Polyethylene Bag	AHG7117
	2	USB Cable	DDE1128
	3	LAN Cable	DDE1141
	 4	Power Cord	See Contrast table (2)
	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
B	NSP 6	Leaflet	See Contrast table (2)
	7	RCA Pin Cable	XDE3045
	8	Packing Pad	DHA1970
	9	Packing Pad	DHA1971
	10	Packing Case	See Contrast table (2)
	11	Master Carton	See Contrast table (2)
	12	Packing Sheet	RHC1023
	NSP 13	Warranty	See Contrast table (2)
	14	Label	See Contrast table (2)
	15	Name Label	See Contrast table (2)
	16	CCC S&E Label	See Contrast table (2)

(2) CONTRAST TABLE

LSYXJ, UXJCB and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	LSYXJ	UXJCB	AXJ
	4	Power Cord	ADG1244	DDG1108	DDG1114
	5	Operating Instructions (Quick Start Guide)	DRH1456	DRH1455	DRH1457
	NSP 6	Leaflet	DRH1431	DRH1431	DRH1432
	10	Packing Case	DHG3607	DHG3607	DHG3606
	11	Master Carton	DHG3609	DHG3610	Not used
NSP	13	Warranty	DRY1270	Not used	Not used
	14	Label	Not used	DRW2754	Not used
	15	Name Label	Not used	Not used	DAL1353
	16	CCC S&E Label	Not used	Not used	DRW2310

9.2 EXTERIOR SECTION

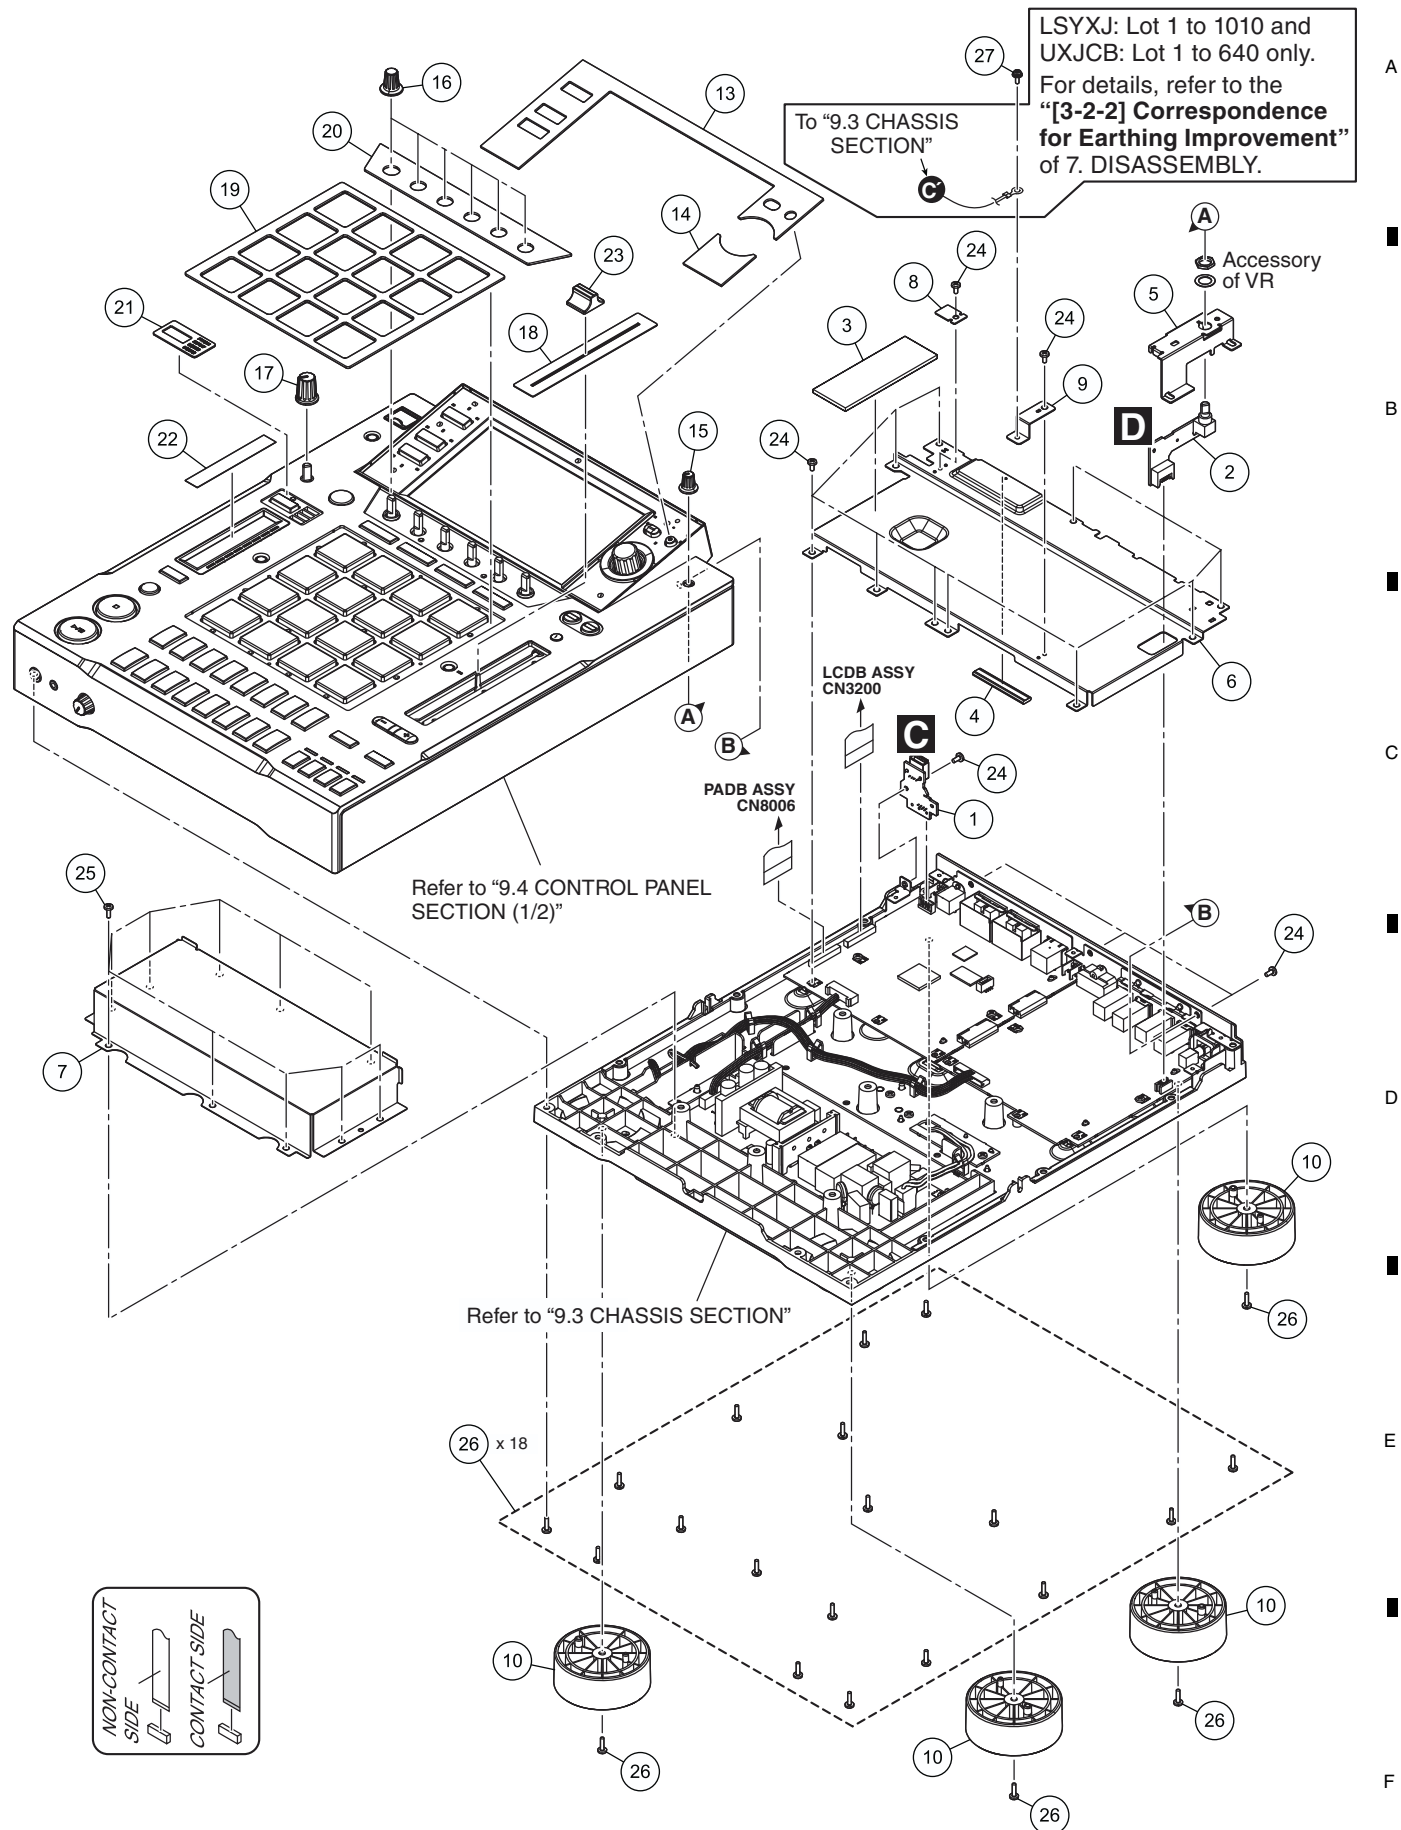

EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
A	1	USBA ASSY	DWX4083
	2	INVR ASSY	DWX4097
	3	Cushion	DEC3749
	4	Gasket	DEC3782
	5	Stay	DNH3319
	6	Shield Case	DNH3322
	7	Shield Case	DNH3326
	8	Stay	DNH3328
	9	Plate	DNH3349
	10	Insulator	DXB2184
B	11	•••••	
	12	•••••	
	13	Panel	DAH3163
	14	Panel	DAH3164
	15	Knob	DAA1346
	16	Knob	DAA1358
	17	Knob	DAA1368
	18	Slide Sheet 1C	DAH2404
	19	Panel	DAH3150
	20	Panel	DAH3165
C	21	Panel	DAH3166
	22	Sheet	DEC3748
	23	Knob/Slid	DNK5981
	24	Screw	BBZ30P060FTB
	25	Screw	BPZ30P080FNI
	26	Screw	BPZ30P100FTB
	27	Screw	PMH30P080FTC

D

E

F


9.3 CHASSIS SECTION

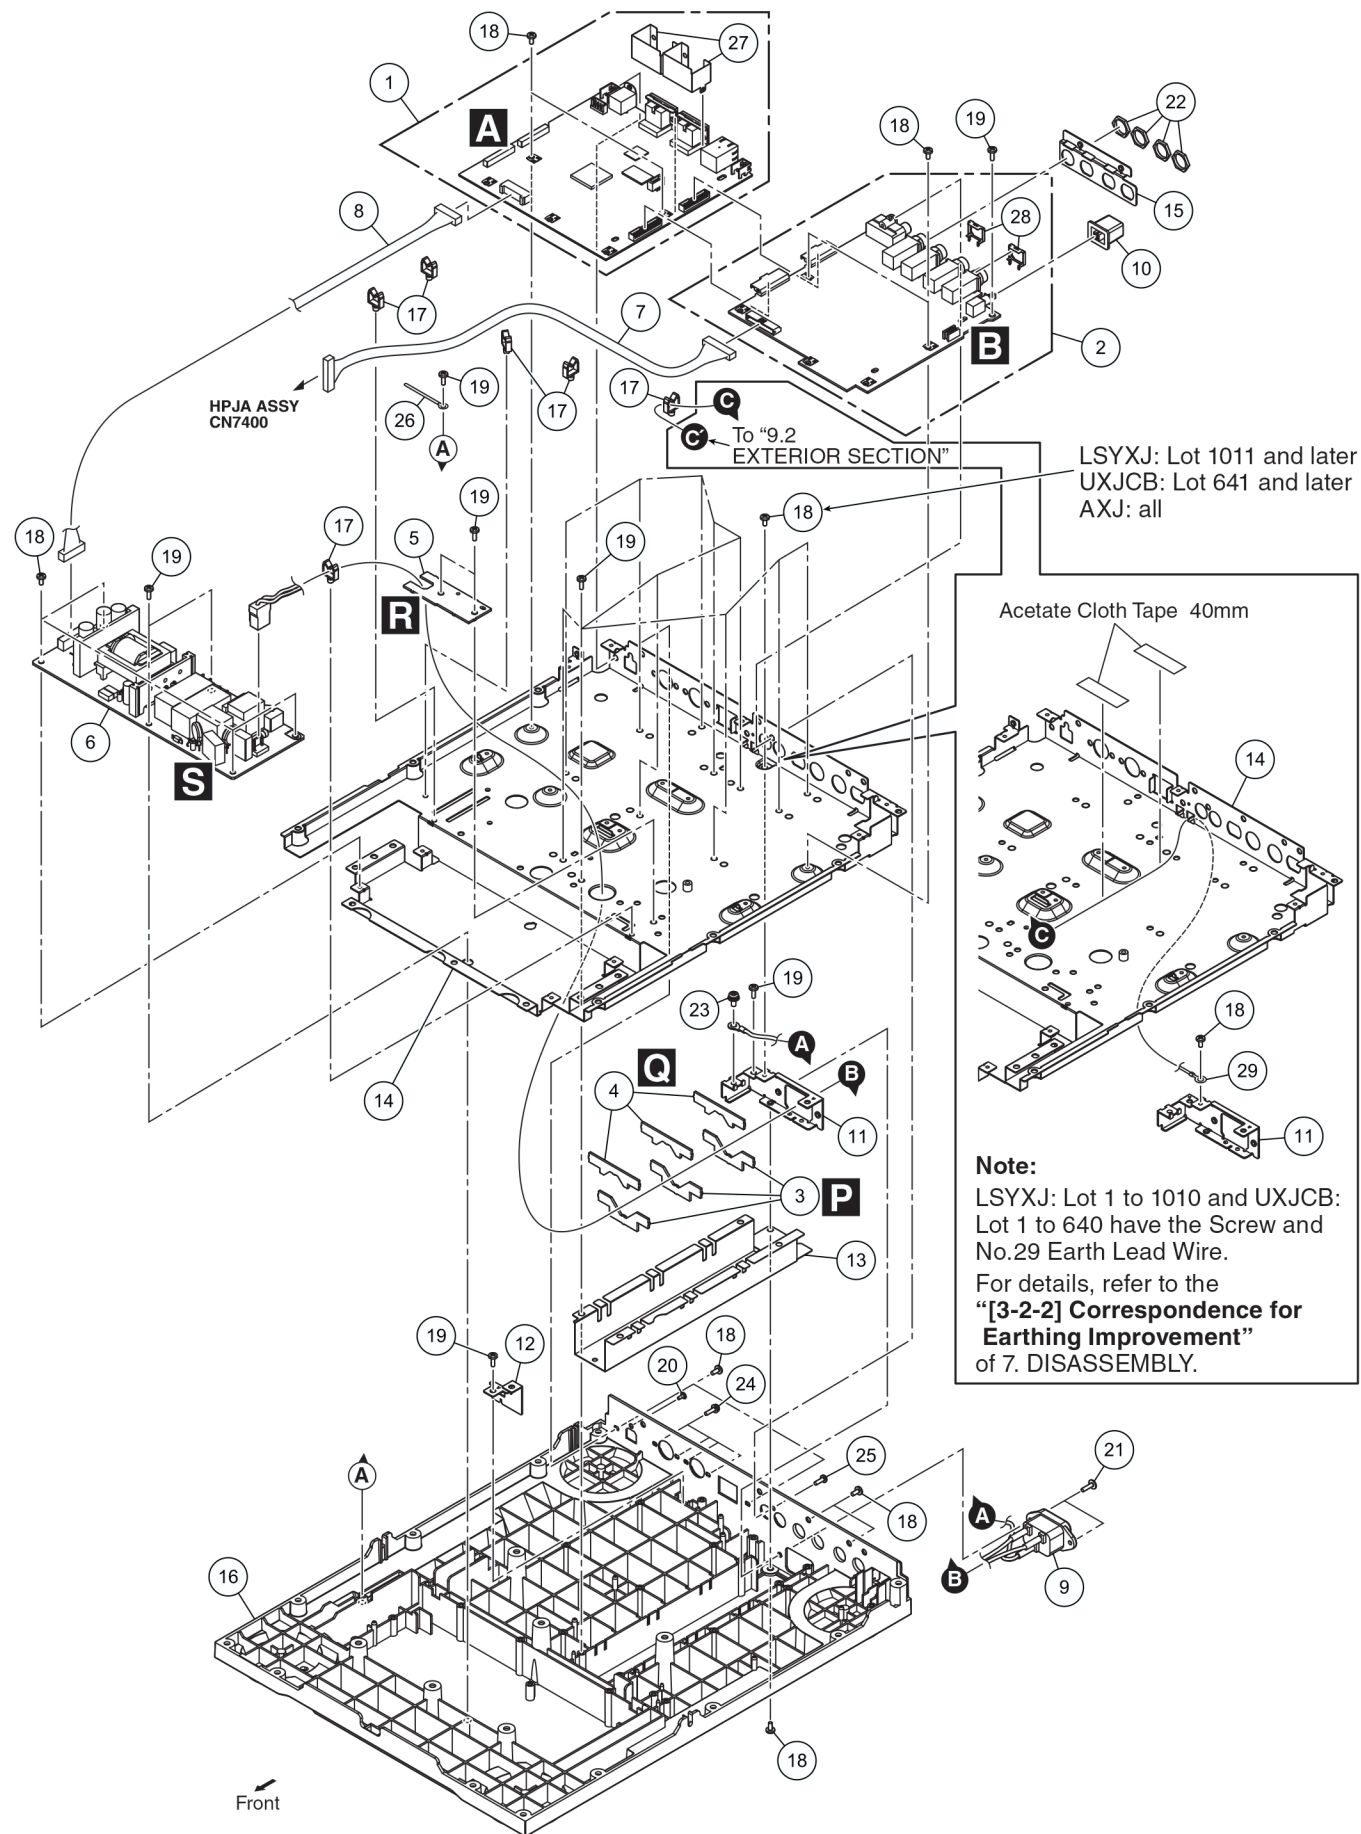

CHASSIS SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 MAIN ASSY	DWX4080
	2 AUDB ASSY	DWX4082
	3 SSK1 ASSY	DWX4090
	4 SSK2 ASSY	DWX4091
	5 SSK3 ASSY	DWX4096
■	⚠ 6 SW POWER SUPPLY	DWR1548
	7 Shielded Conn-cable	DDA1081
	8 Crimp Connector	DDC1024
	⚠ 9 AC Inlet	DKP3989
	10 Power Knob	DAC2306
B	11 Bracket/ACI	DNH3020
	12 Stay/KST	DNH3021
	13 Shield Case	DNH3317
	14 Stay	DNH3323
	15 Stay	DNH3325
■	16 Chassis	DNK6701
	17 Holder	VEC1355
	18 Screw	BBZ30P060FTB
	19 Screw	BPZ30P080FNI
	20 Screw (M3x5)	DBA1340
C	21 Screw	IBZ30P100FTB
	22 Nut (M12)	NKX2FNI
	23 Screw	PMH40P080FTC
	24 Screw	PMH30P100FTB
	25 Screw	PPZ30P080FTB
■	26 Cord Clamper (Steel)	RNH-184
	27 Shield Case (MIDI)	DNH2736
	28 Phone Shield	DNF1875
	29 Earth Lead Wire	DDX1286
D		
■		
E		
■		
F		

9.4 CONTROL PANEL SECTION (1/2)

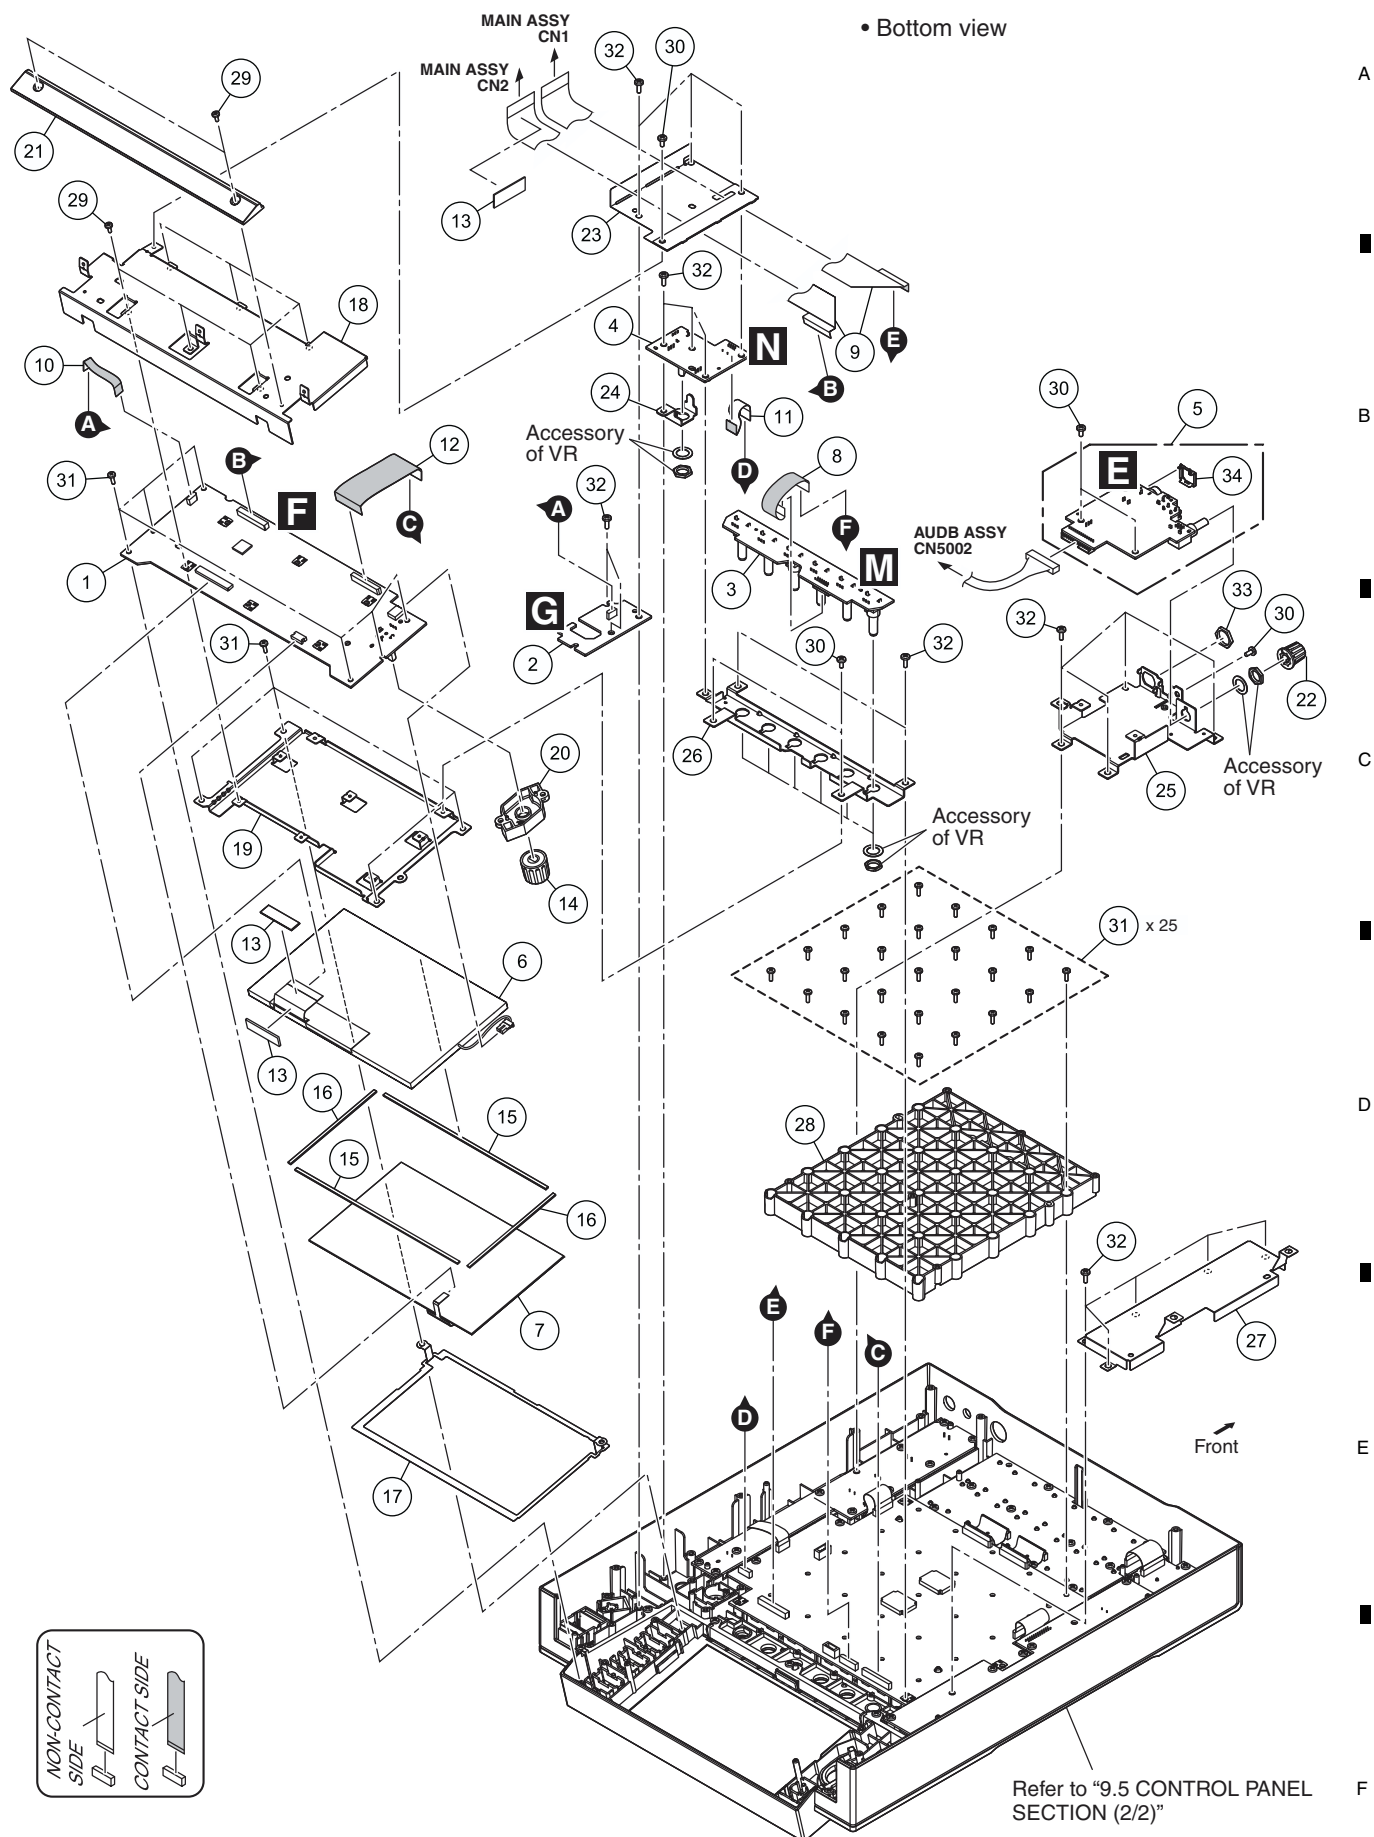

9.5 CONTROL PANEL SECTION (2/2)

• Bottom view

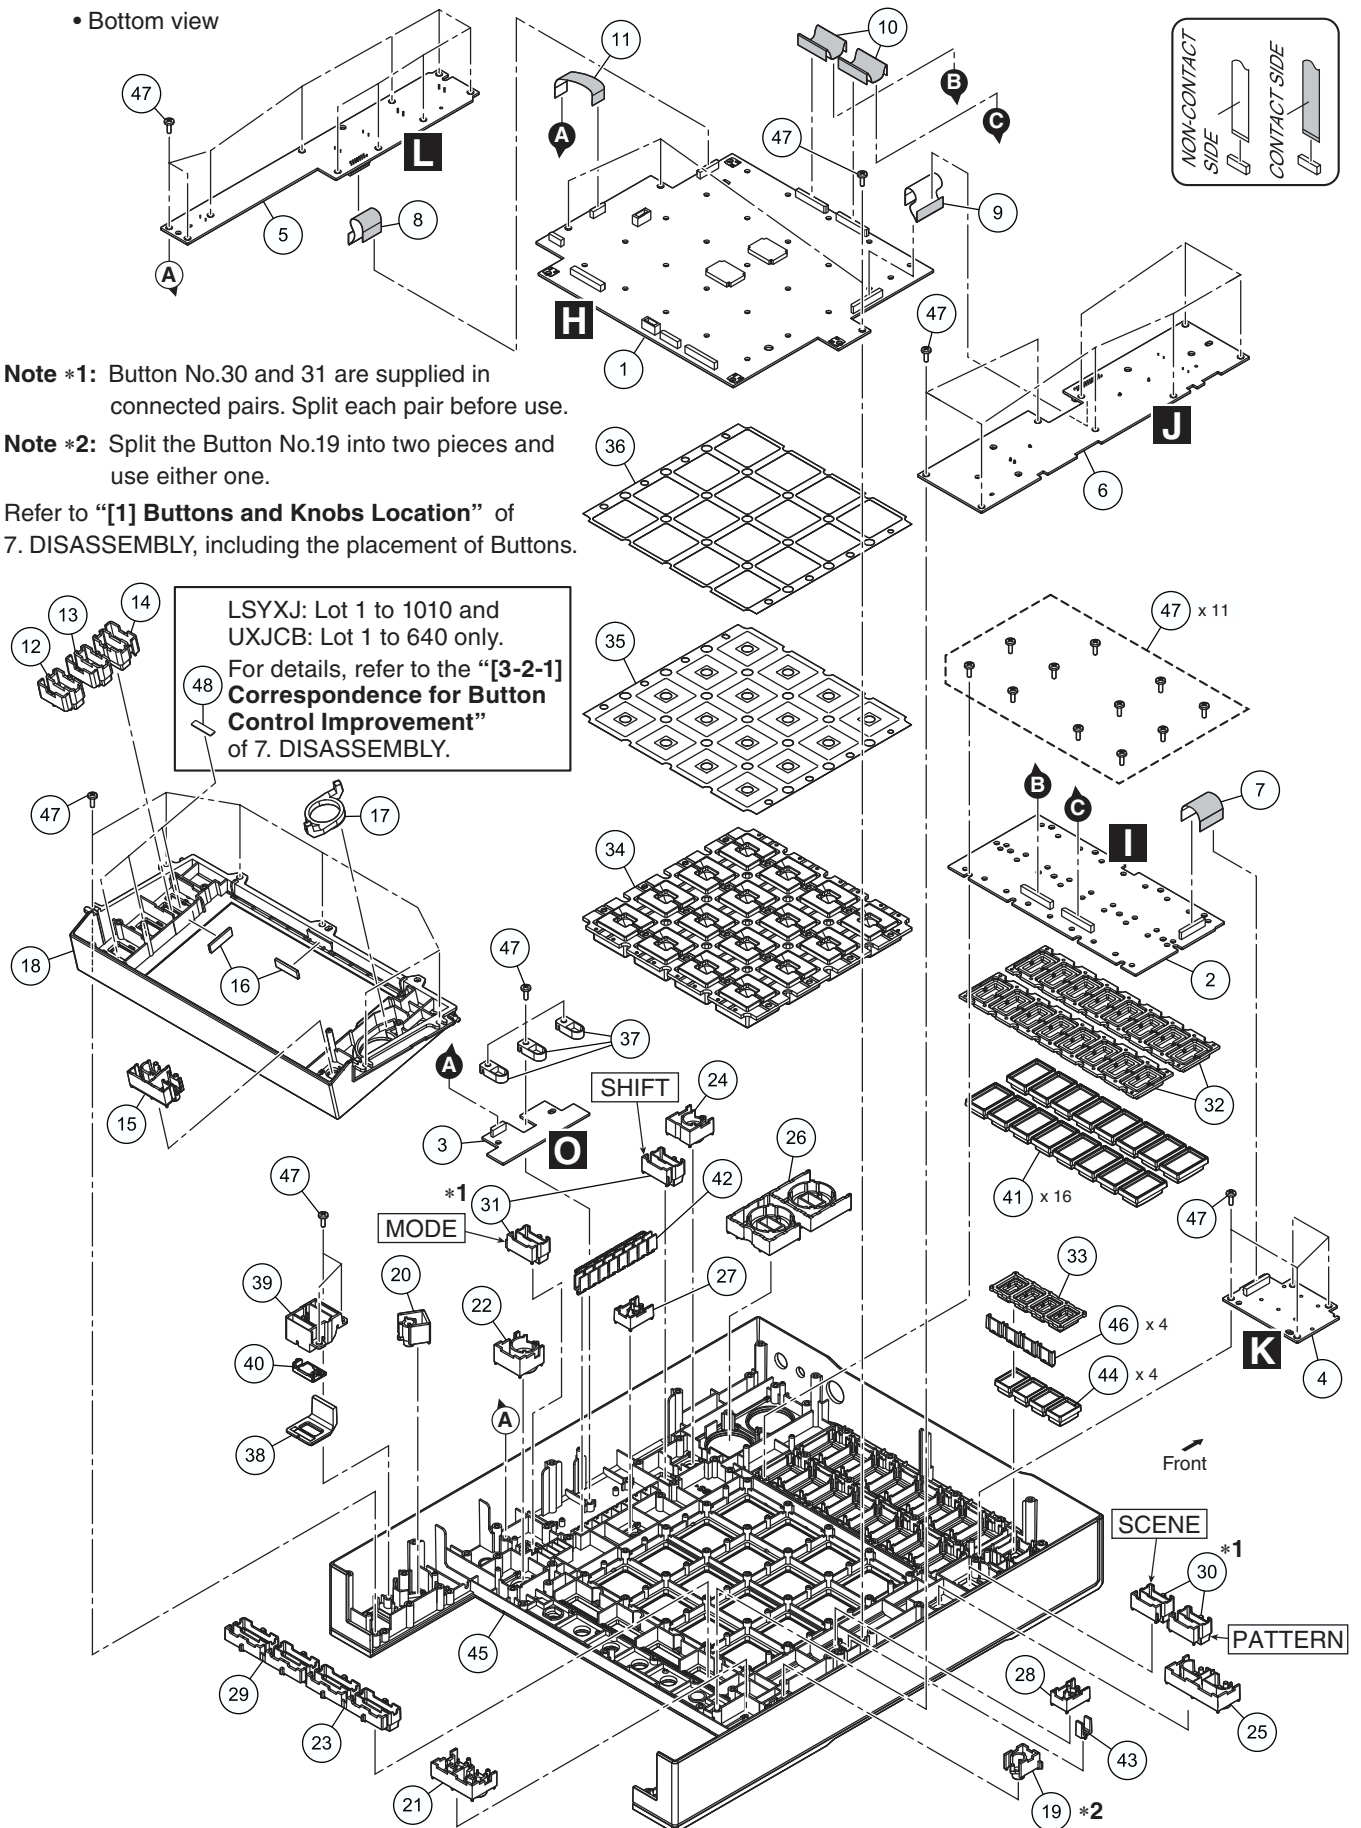

CONTROL PANEL SECTION (2/2) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	PADB ASSY	DWX4085		26	Button	DAC3301
	2	SEQB ASSY	DWX4086		27	Button	DAC3302
	3	CDCB ASSY	DWX4087		28	Button	DAC3305
	4	BARB ASSY	DWX4089		29	Button	DAC3306
	5	KSWB ASSY	DWX4092		30	Button	DAC3307
	6	SLDB ASSY	DWX4093		31	Button	DAC3308
	7	FFC/19P	DDD1689		32	Button	DEB2033
	8	FFC	DDD1823		33	Button	DEB2039
	9	FFC	DDD1824		34	Button	DEB2050
	10	FFC	DDD1825		35	Sensor	DEC3736
B	11	FFC	DDD1827		36	Sheet	DEC3737
	12	Button	DAC3299		37	CDC Stopper	DNK5863
	13	Button	DAC3303		38	Lens	DNK6491
	14	Button	DAC3304		39	Holder	DNK6496
	15	Button	DAC3346		40	Door	DNK6497
	16	Packing/LCD	DEC3565		41	Cap	DNK6624
	17	Ring Lens (Browse)	DNK5322		42	Lens	DNK6723
	18	Control Panel	DNK6718		43	Lens	DNK6724
	19	Button/Tmp	DAC2845		44	Cap	DNK6726
	20	Button/USB	DAC3016		45	Control Panel	DNK6729
C	21	Button/Syn	DAC3032		46	Lens	DNK6756
	22	Button/Ef	DAC3040		47	Screw	BPZ30P080FNI
	23	Button	DAC3294		48	Spacer	DEC3789
	24	Button	DAC3298				
	25	Button	DAC3300				