


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

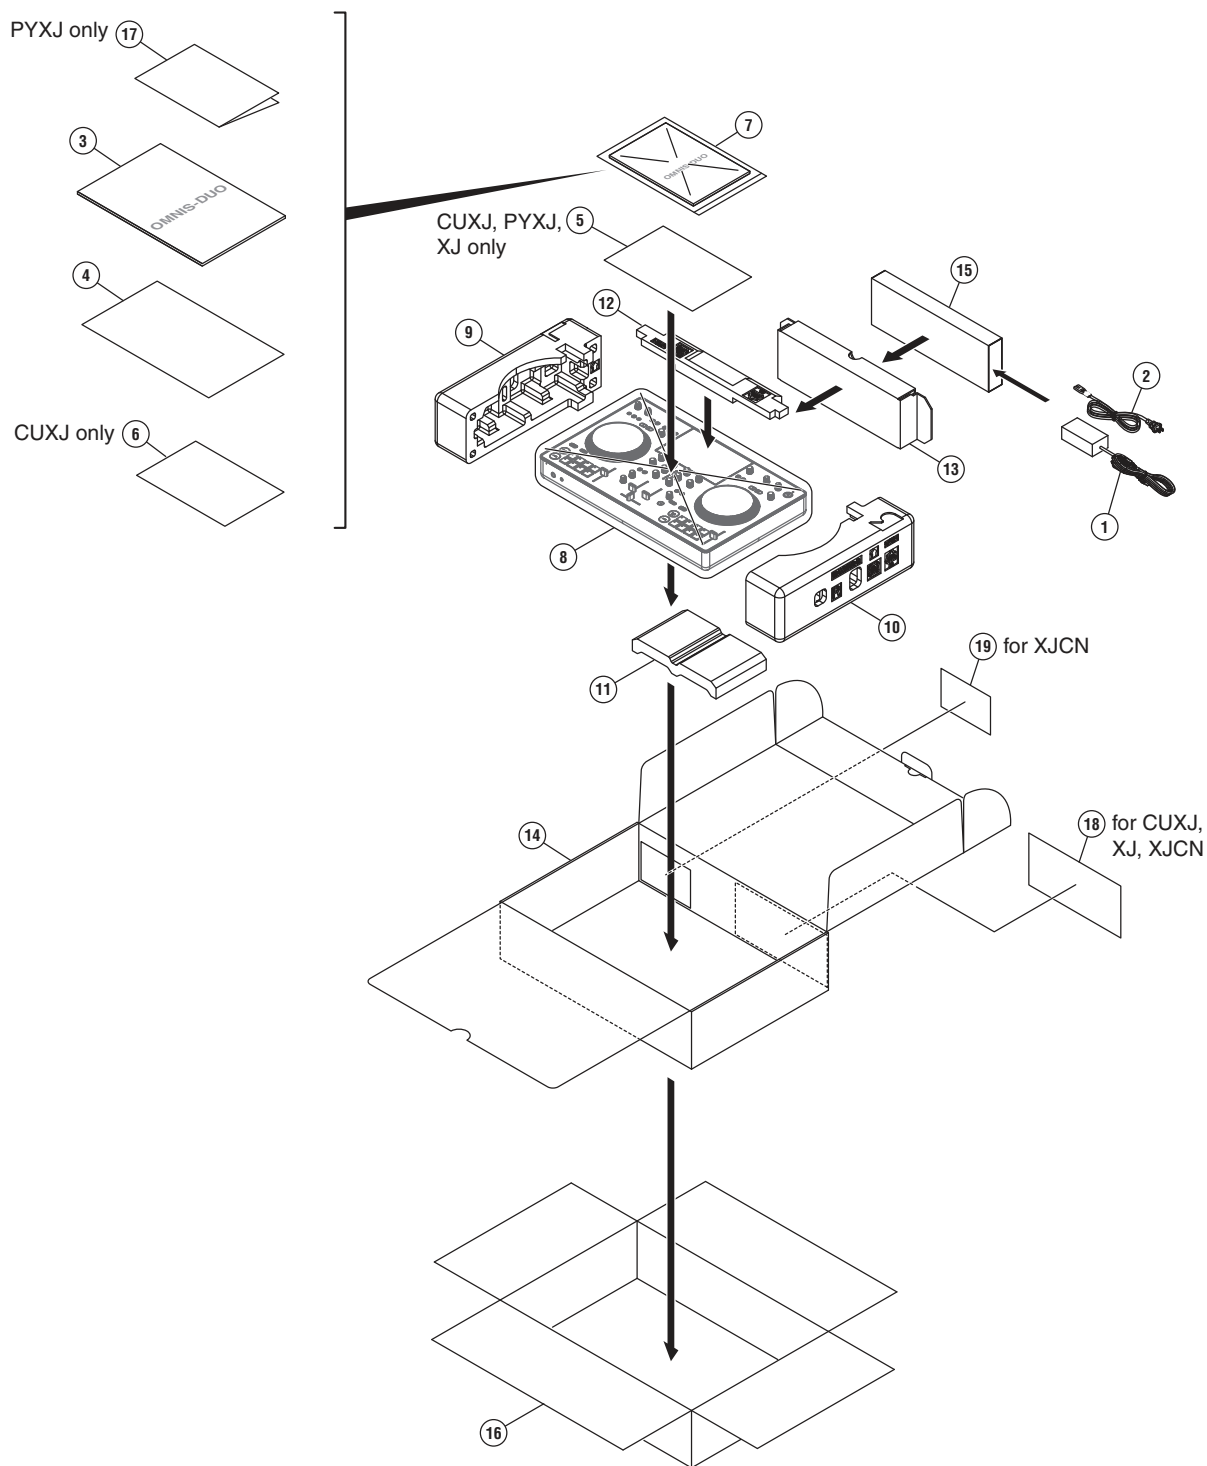

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 AC adapter	DWR1613	11	Packing Pad	DHA2057
⚠	2 Power cord	See Contrast table (2)	12	Packing Pad	DHA2058
	3 Quick Start Guide	See Contrast table (2)	13	Partition	DHC1121
	4 Precautions for Use	See Contrast table (2)	14	Packing Case	DHG3896
NSP	5 Leaflet	See Contrast table (2)	15	Packing Case	DHF1054
NSP	6 Leaflet	See Contrast table (2)	16	Master Carton	See Contrast table (2)
NSP	7 Poly Bag	DHL1207	17	Warranty	See Contrast table (2)
	8 Bag	DHL1208	18	Label	See Contrast table (2)
	9 Packing Pad	DHA2049	19	Label	See Contrast table (2)
	10 Packing Pad	DHA2050			

(2) CONTRAST TABLE

OMNIS-DUO/CUXJ, PYXJ, XJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	OMNIS-DUO/CUXJ	OMNIS-DUO/PYXJ	OMNIS-DUO/XJ	OMNIS-DUO/XJCN
⚠	2	Power cord	XDG3052	ADG1154	ADG1154	ADG7079
	3	Quick Start Guide	DRH1769	DRH1769	DRH1769	DRH1771
	4	Precautions for Use	DRH1770	DRH1770	DRH1770	DRH1774
NSP	5	Leaflet	DRH1797	DRH1797	DRH1797	Not used
NSP	6	Leaflet	DRH1799	Not used	Not used	Not used
	16	Master Carton	DHG3930	DHG3897	DHG3929	DHG3932
	17	Warranty	Not used	DRY1280	Not used	Not used
	18	Label	DRW3093	Not used	DRW3092	DRW3095
	19	Label	Not used	Not used	Not used	DRW3096

9.2 EXTERIOR SECTION

• Bottom view



×2 Tamper with it, and use a prevention torque screw.
Use a specified torque driver for the disassembly/assembly.
(See "3.2 JIGS LIST".)

×1 Refer to "7. DISASSEMBLY"



Lubricating oil
(GEM1100)
Jog dial Section

• Top view

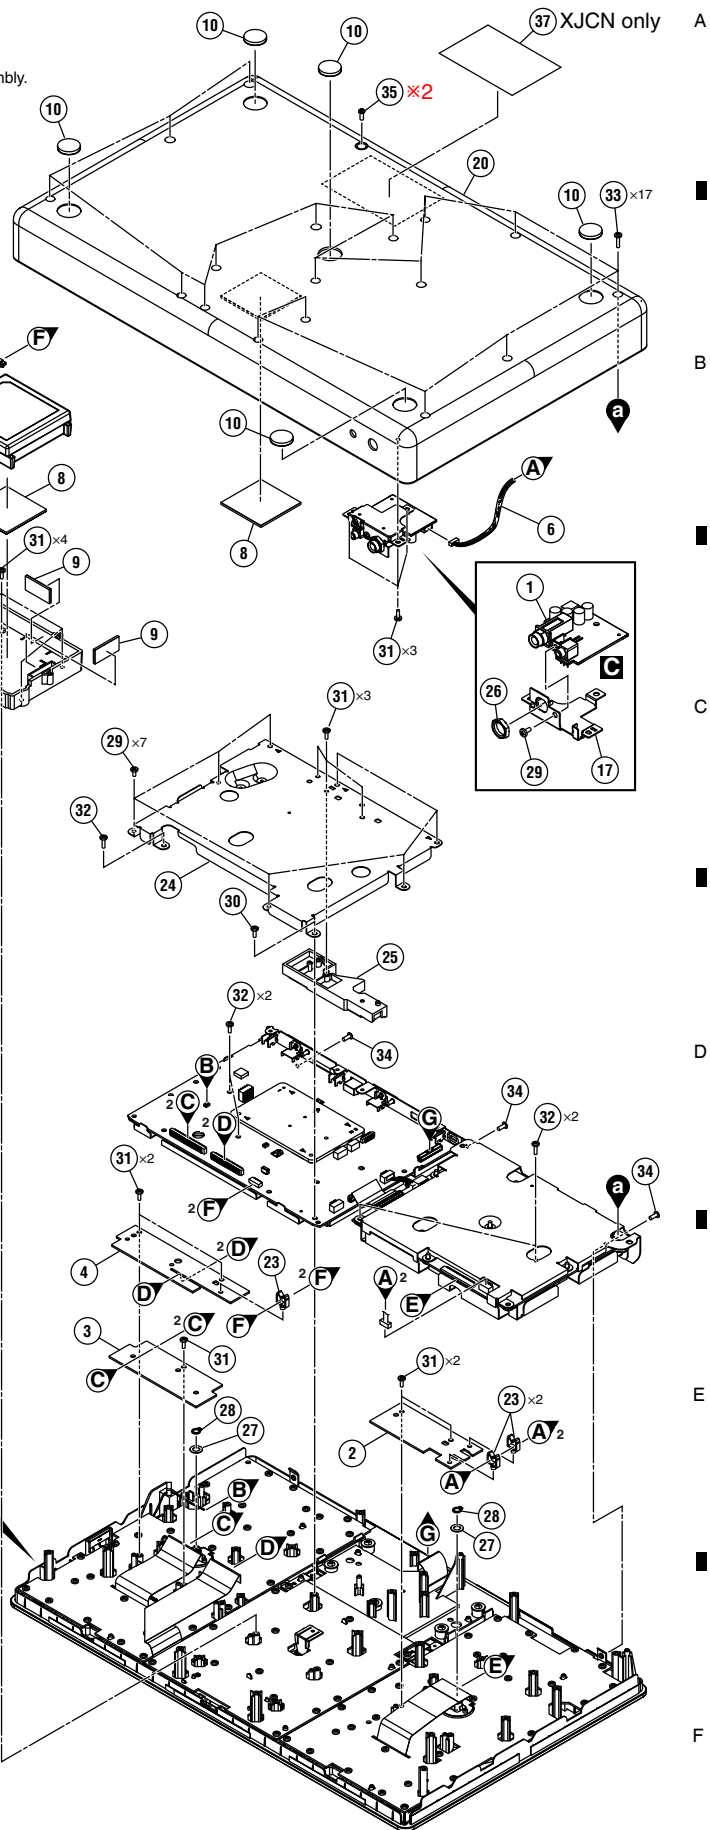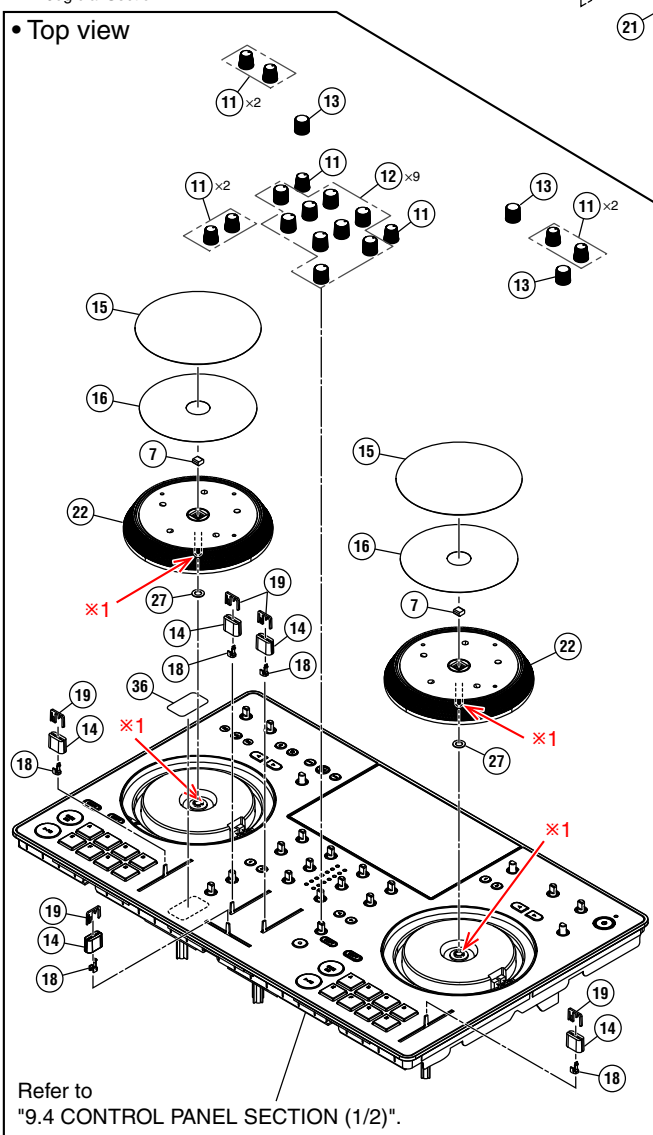

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 HP Assy	DWX4972	21	Holder	DNK7177
	2 HOLD1 Assy	DWX4981	22	Jog Dial	DNK7179
	3 HOLD2 Assy	DWX4982	23	Holder	VEC1355
	4 HOLD3 Assy	DWX4983	24	Shield Case	DNH3590
	⚠ 5 Battery	See Contrast table (2)	25	Guard	DNK7187
B	6 Parallel Jumper	PF04HH-B20A	26	Nut	DBN1028
	7 Gasket	DEC4059	27	Washer	WA62D095D050
	8 Cushion	DEC4127	28	Washer	YC60FAC
	9 Cushion	DEC4128	29	Screw	BBZ30P060FTC
	10 Foot	DEC4134	30	Screw	BBZ30P080FTB
	11 Knob	DAA1482	31	Screw	BPZ30P080FTC
	12 Knob	DAA1483	32	Screw	BPZ30P100FTC
	13 Knob	DAA1484	33	Screw	BPZ30P120FTB
	14 Knob	DAC3718	34	Screw (FE)	DBA1290
	15 Panel	DAH3431	35	Screw	DBA1460
C	16 DS Tape	DEH1143	NSP 36	Label	See Contrast table (2)
	17 Stay/HP	DNH3182	NSP 37	Name Plate	See Contrast table (2)
	18 Stopper/SLD	DNK6365			
	19 Knob/SL2	DNK6367			
	20 Chassis	DNK7174			


(2) CONTRAST TABLE

OMNIS-DUO/CUXJ, PYXJ, XJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	OMNIS-DUO/CUXJ	OMNIS-DUO/PYXJ	OMNIS-DUO/XJ	OMNIS-DUO/XJCN
⚠	5	Battery	DXF1017 or DXF1018	DXF1017 or DXF1018	DXF1017 or DXF1018	DXF1018
NSP	36	Label	DRW3080	DRW3080	DRW3080	Not used
NSP	37	Name Plate	Not used	Not used	Not used	DAL1399

5

9.3 CHASSIS SECTION

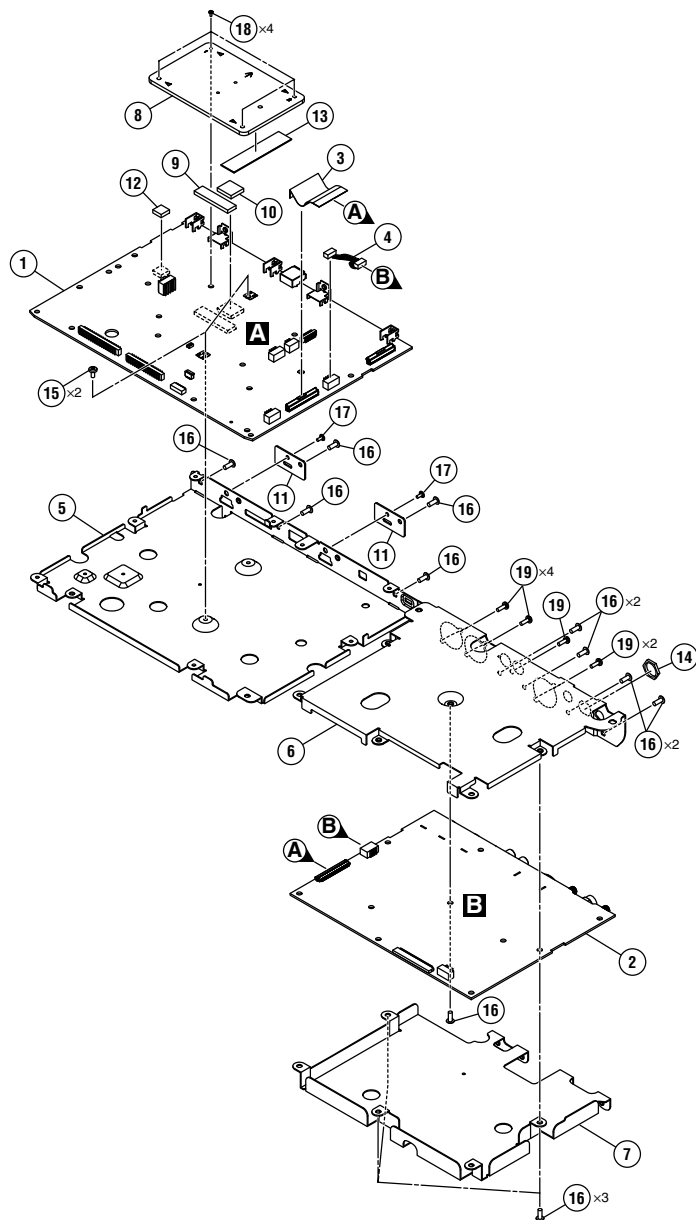

CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWX4902	11	Sheet	DEC4132
2	AUDIO Assy	DWX4969	12	Heat Cond Sheet	DEB2094
3	FFC	DDD2192	13	EMI Absorb Sheet	DEC4091
4	Parallel Jumper	DDC1057	14	Nut	NKX2FTC
5	Stay	DNH3589	15	Screw	BBZ30P060FTC
6	Stay	DNH3591	16	Screw (FE)	DBA1290
7	Shield Case	DNH3592	17	Screw (M3*5)	DBA1340
8	Heat Sink	DNH3596	18	Screw	PMB20P080FNI
9	Heat Cond Sheet	DEB2104	19	Screw	PPZ30P080FTB
10	Heat Cond Sheet	DEB2105			

A • Bottom view

B



C

D

E

F

• Top view

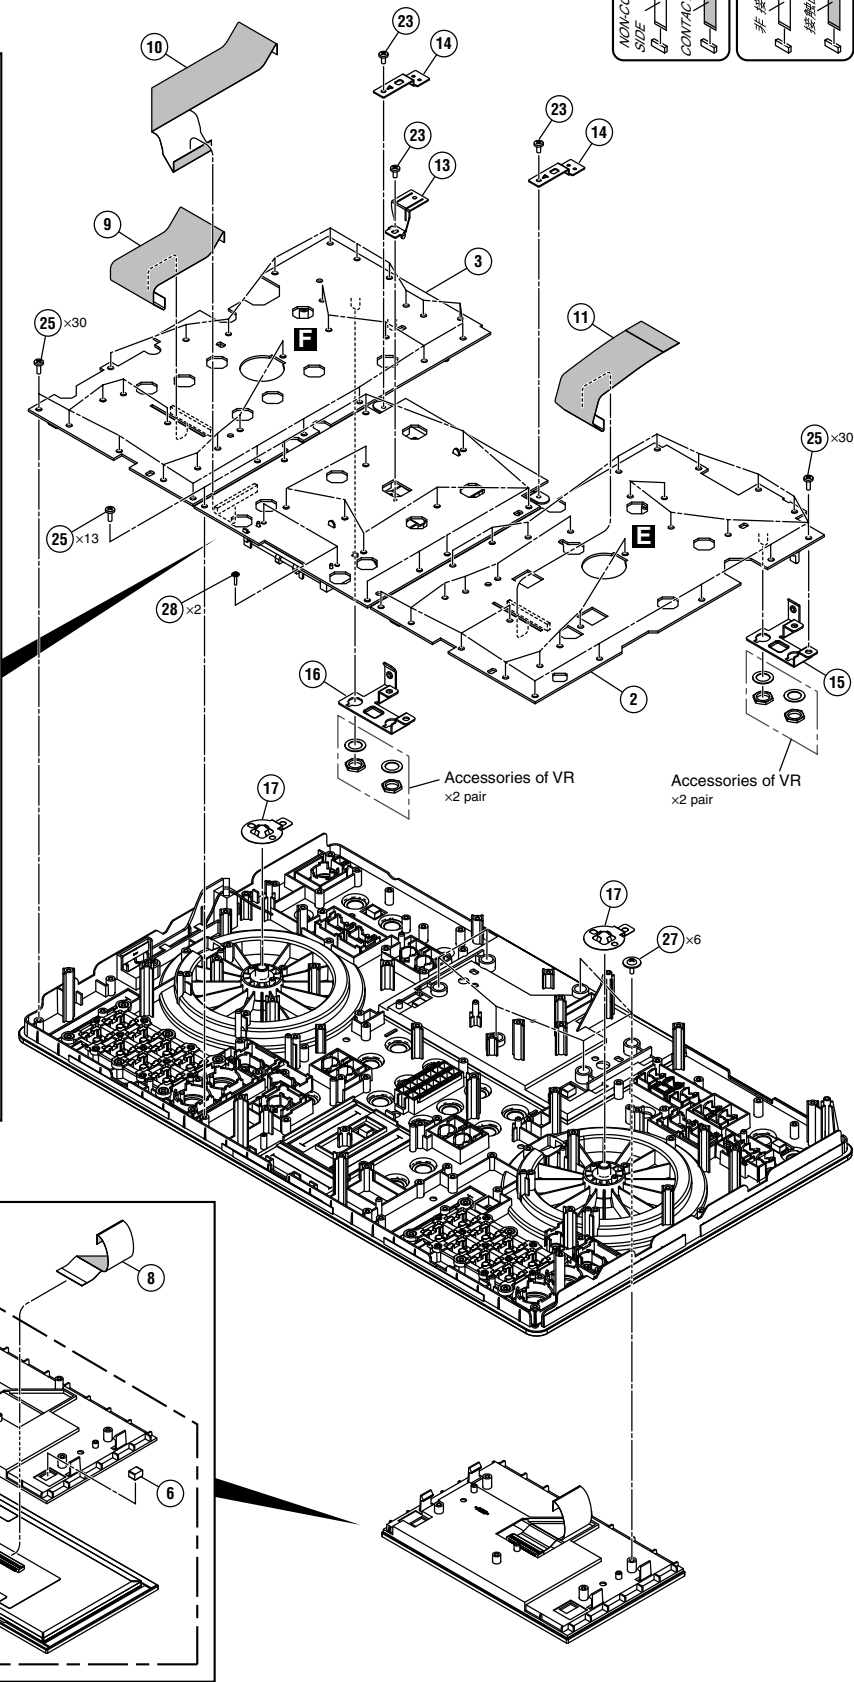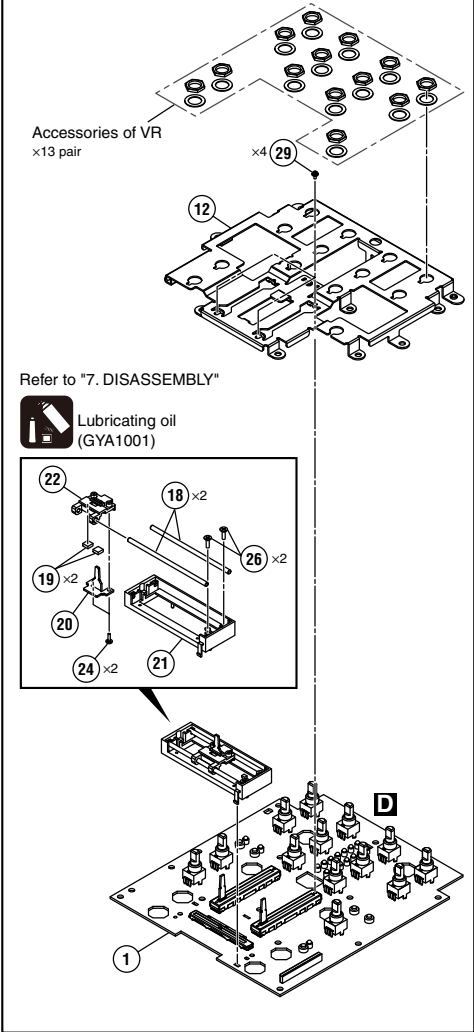


CONTROL PANEL SECTION (1/2) PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1 MIXER Assy	DWX4970	
	2 DCK1 Assy	DWX4971	A
	3 PNL2 Assy	DWX4973	
	4 1..OMNIS-DUO LCD Service Assy	DEA1175	
NSP 5	2..LCD Module	DWX4927	
	6 2..Gasket	DEC4056	
NSP 7	2..Holder	DNK7178	
	8 FFC	DDD2191	
	9 FFC	DDD2193	
	10 FFC	DDD2194	
	11 FFC	DDD2200	B
	12 Stay	DNH3583	
	13 Bracket	DNH3584	
	14 Bracket	DNH3585	
	15 Stay	DNH3587	
	16 Stay	DNH3588	
	17 Plate/CND	DNH3137	
	18 Guide Shaft VK1	DLA1978	
	19 Cushion	DEC3640	
	20 Lever	DNH3594	C
	21 Holder	DNK7070	
	22 Slider	DNK7071	
	23 Screw	BBZ30P060FTC	
	24 Screw	BPZ20P060FTC	
	25 Screw	BPZ30P080FTC	
	26 Screw	CPZ26P080FTC	
	27 DM Screw (FTC)	DBA1260	
	28 Screw	IPZ20P080FTC	
	29 Screw	PMH20P040FTC	D

9.5 CONTROL PANEL SECTION (2/2)


A • Bottom view

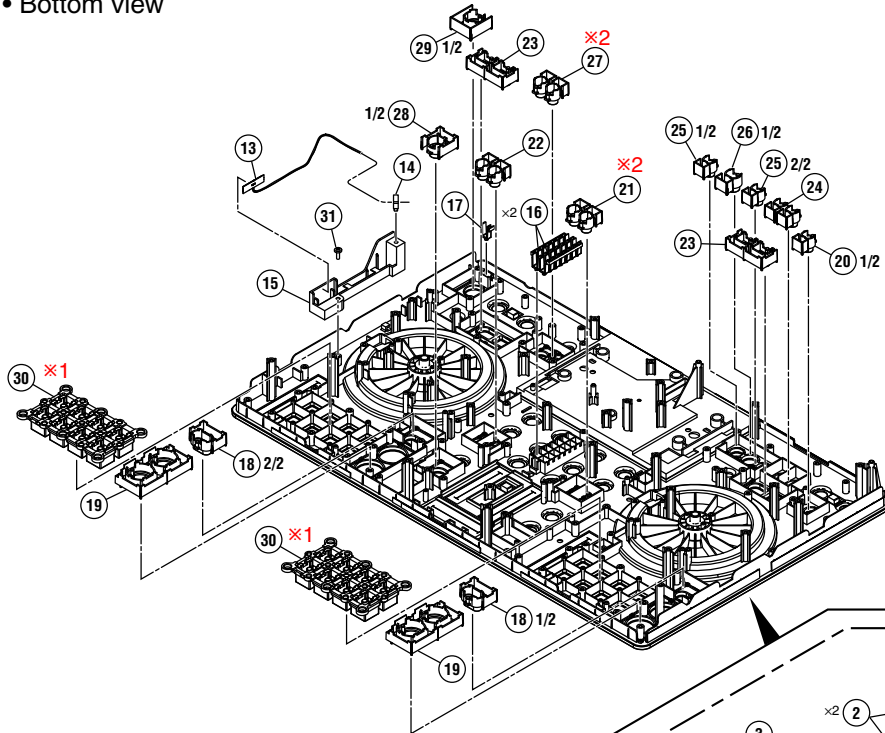

• Divide position

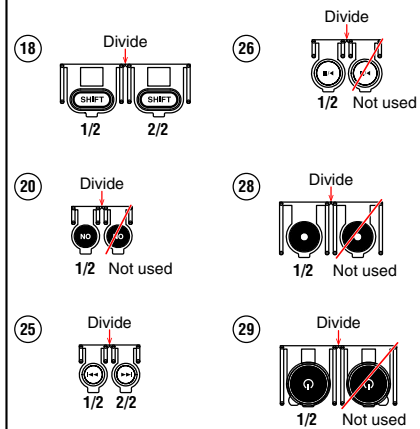

※1 Button installation alignment

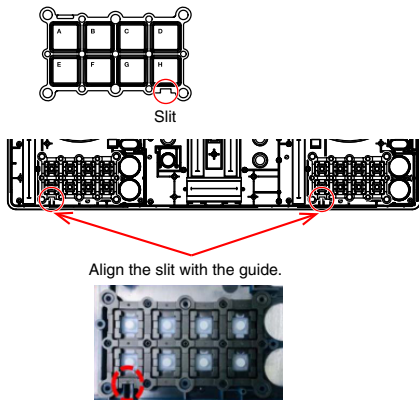


※2

The display contents of DAC3722 and DAC3729 are the same.
Be careful not to make a mistake in the installation position.

DAC3722 : LED lighting
DAC3729 : No light



Clear color number part

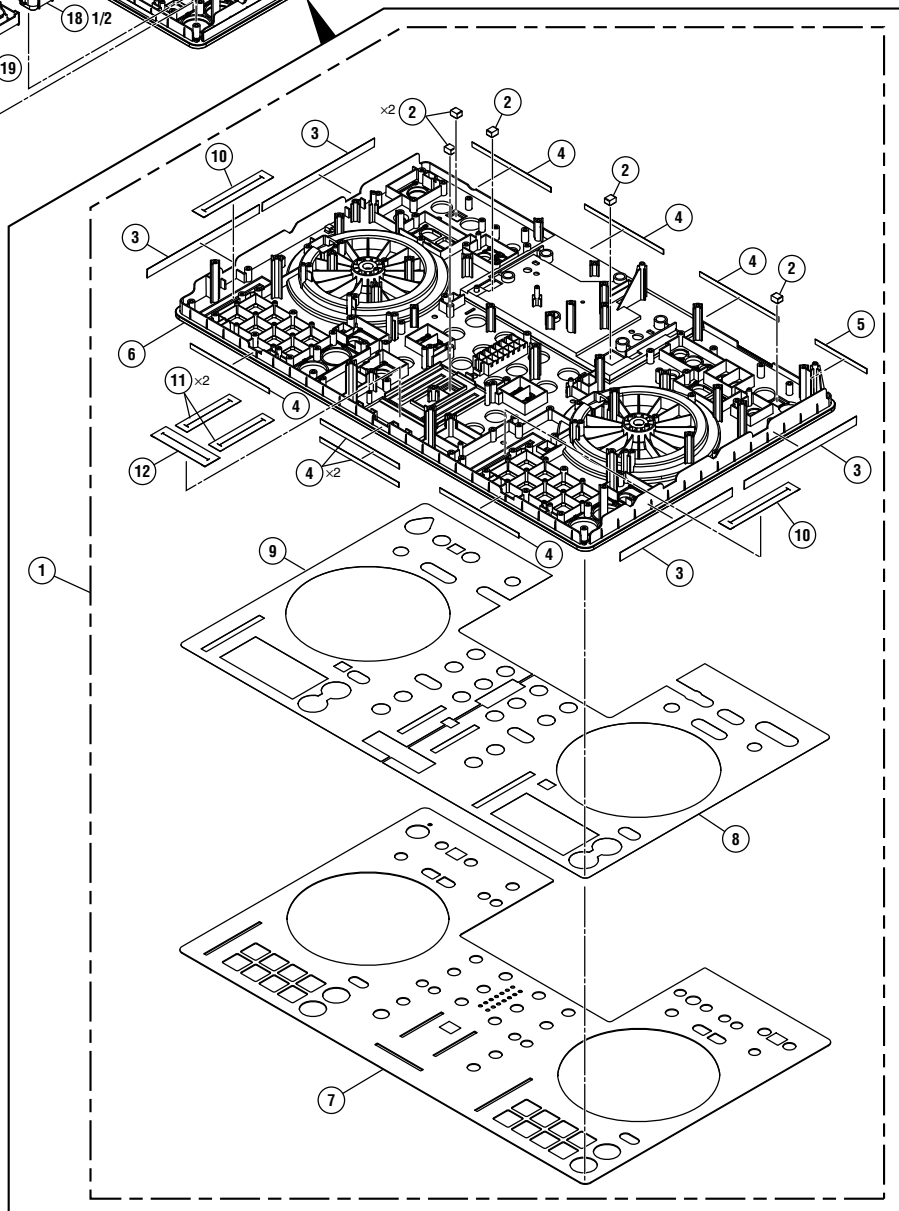

CONTROL PANEL SECTION (2/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	1..OMNIS-DUO Panel Service Assy	DEA1174
2	2..Gasket	DEC4056
3	2..Packing	DEC4175
4	2..Packing	DEC4178
5	2..Packing	DEC4180
NSP 6	2..Control Panel	DNK7173
NSP 7	2..Panel	DAH3430
NSP 8	2..DS Tape	DEH1152
NSP 9	2..DS Tape	DEH1153
10	2..Packing/TMP	DEC3392
11	2..Sheet	DEC3795
12	2..Packing	DEC3642
13	Wi-Fi Antenna	DSD1005
14	Locking Mini Clamp	DEC2439
15	Holder	DNK7176
16	Lens	DNK7182
17	Lens	DNK7226
18	Button	DAC3719
19	Button	DAC3720
20	Button	DAC3721
21	Button	DAC3722
22	Button	DAC3723
23	Button	DAC3724
24	Button	DAC3725
25	Button	DAC3727
26	Button	DAC3728
27	Button	DAC3729
28	Button	DAC3730
29	Button	DAC3731
30	Button	DEB2106
31	Screw	BPZ30P080FTC