


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

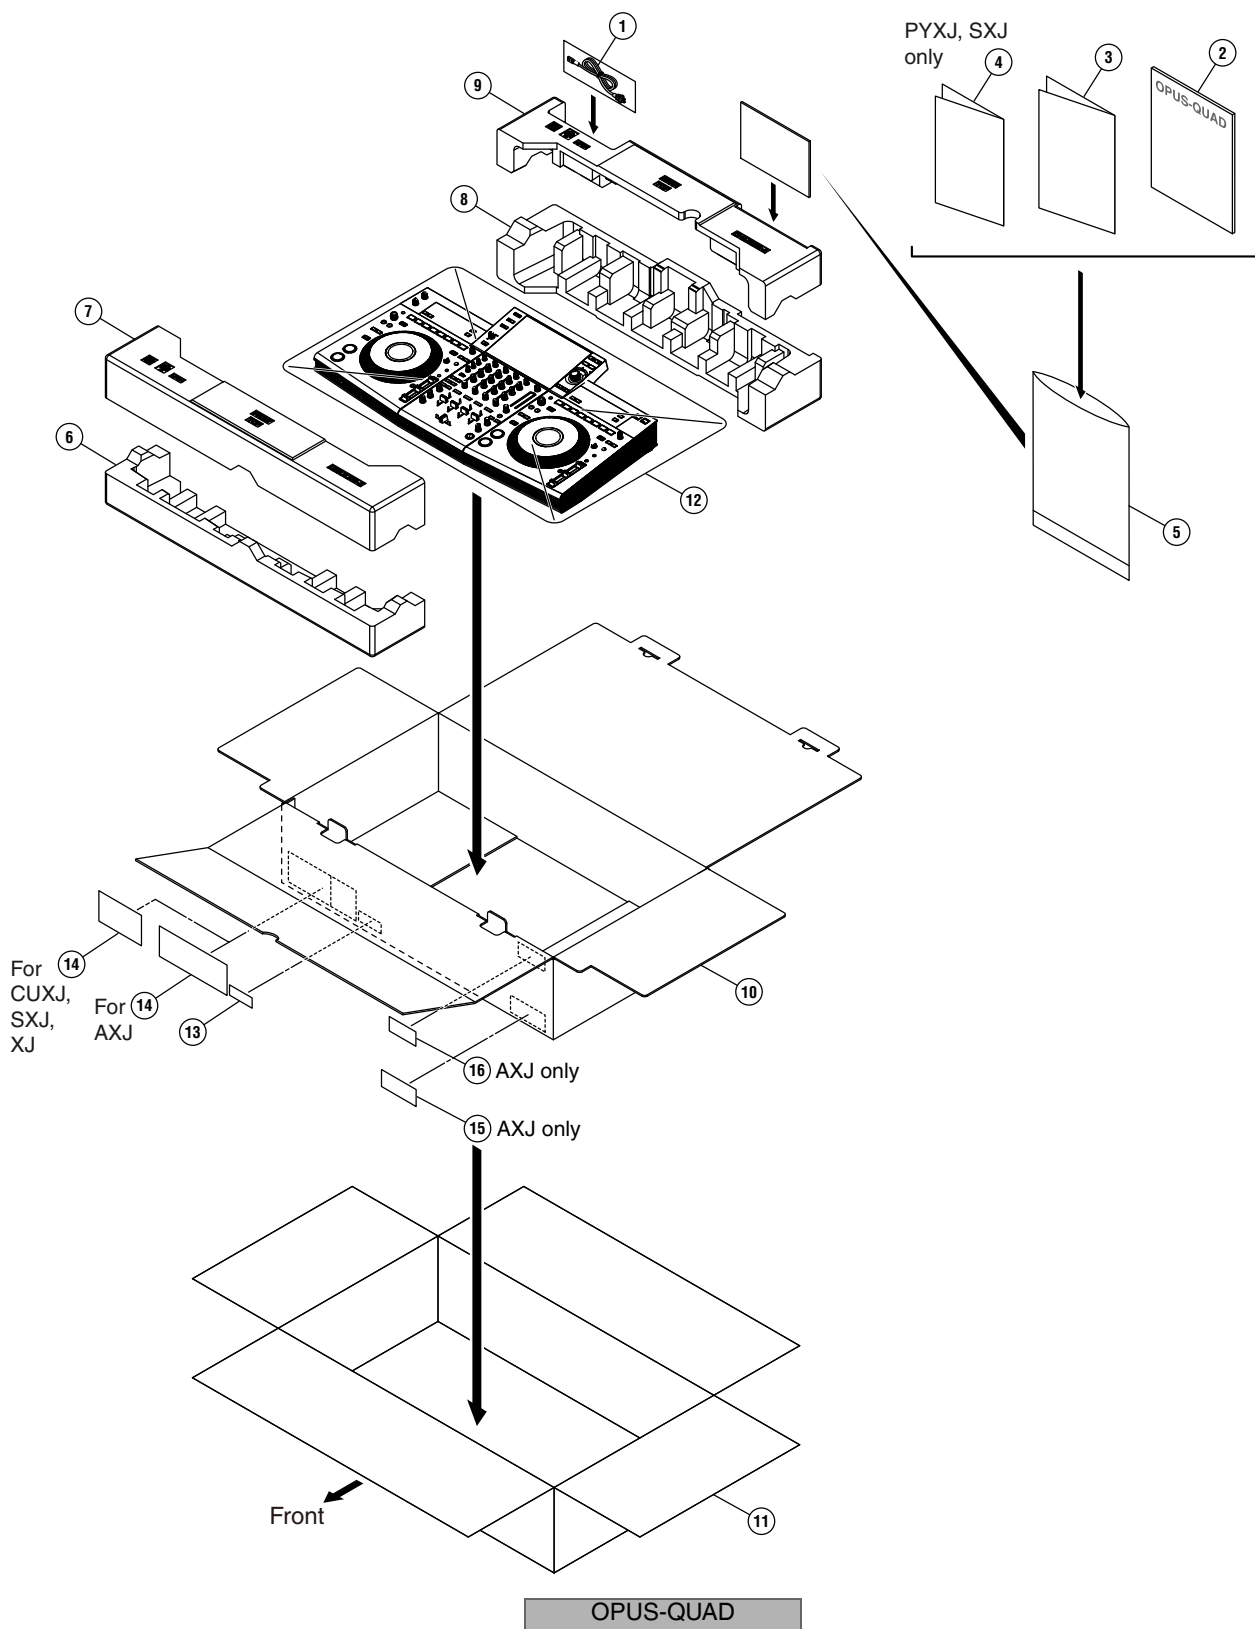

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power cord	See Contrast table (2)	11	Master Carton	See Contrast table (2)
	2 Quick Start Guide	See Contrast table (2)	12	Mirror Mat	DHL1201
	3 Precautions for Use	See Contrast table (2)	NSP 13	Label	DRW3066
NSP	4 Warranty	See Contrast table (2)	14	Label	See Contrast table (2)
NSP	5 Polyethylene Bag	AHG7117	15	Label	See Contrast table (2)
	6 Packing Pad	DHA2025	16	Label	See Contrast table (2)
	7 Packing Pad	DHA2026			
	8 Packing Pad	DHA2027			
	9 Packing Pad	DHA2028			
	10 Packing Case	DHG3856			

(2) CONTRAST TABLE

OPUS-QUAD/PYXJ, CUXJ, SXJ, XJ and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	OPUS-QUAD /PYXJ	OPUS-QUAD /CUXJ	OPUS-QUAD /SXJ	OPUS-QUAD /XJ	OPUS-QUAD /AXJ
⚠	1	Power cord	ADG1244	DDG1108	ADG1244	ADG1244	DDG1114
	2	Quick Start Guide	DRH1720	DRH1720	DRH1720	DRH1720	DRH1721
	3	Precautions for Use	DRH1722	DRH1722	DRH1722	DRH1722	DRH1724
NSP	4	Warranty	DRY1274	Not used	DRY1274	Not used	Not used
	11	Master Carton	DHG3857	DHG3860	DHG3858	DHG3859	DHG3862
	14	Label	Not used	DRW3052	DRW3050	DRW3051	DRW3054
	15	Label	Not used	Not used	Not used	Not used	DRW3055
	16	Label	Not used	Not used	Not used	Not used	DRW3056

9.2 BOTTOM SECTION

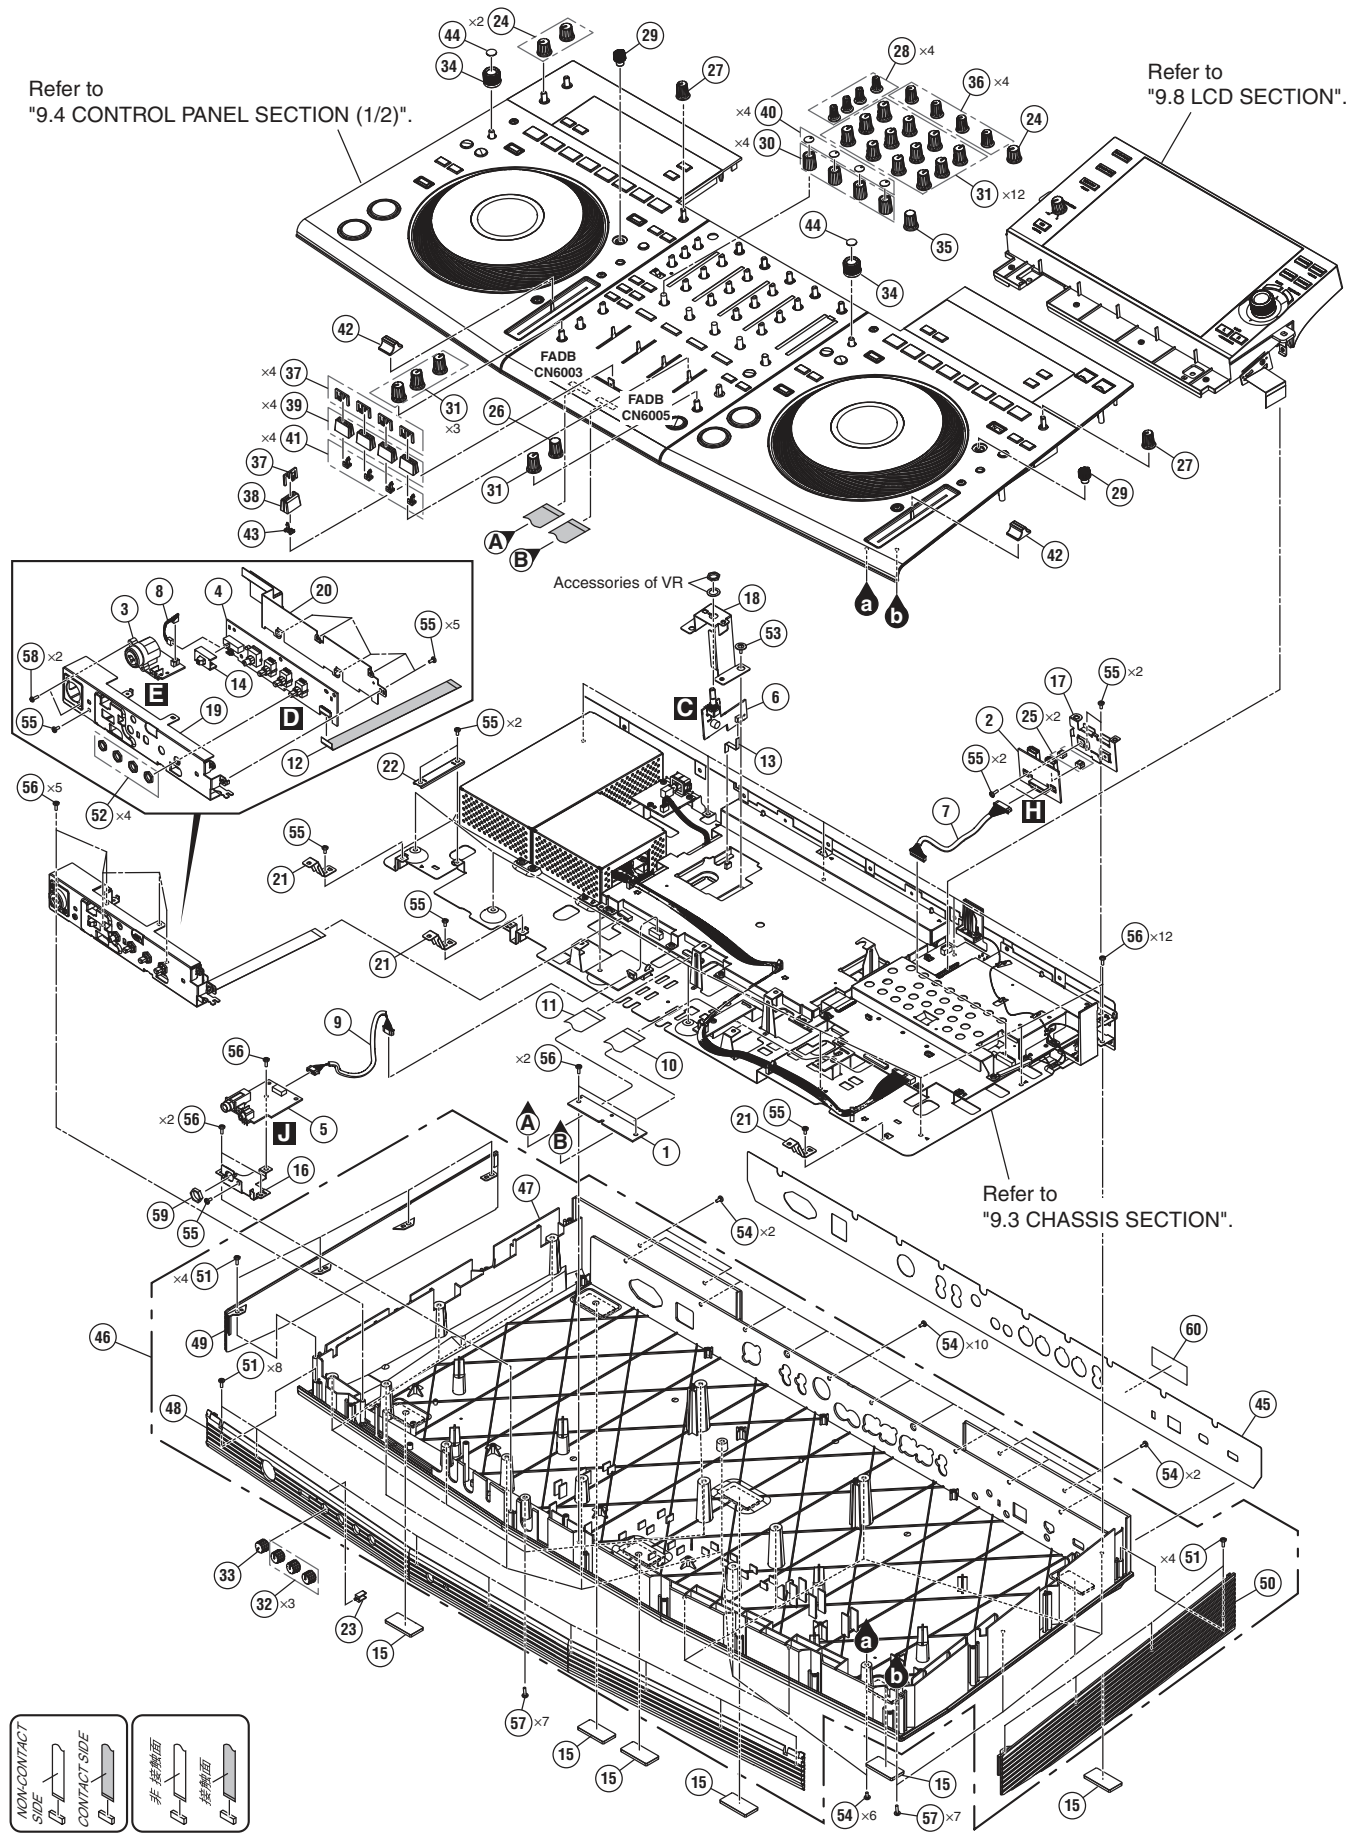

(1) BOTTOM SECTION PARTS LIST



	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	PNST2 Assy	DWX4823		31	Knob	DAA1434
	2	USBA Assy	DWX4731		32	Knob	DAA1467
	3	FMIC Assy	DWX4742		33	Knob	DAA1468
	4	FRVR Assy	DWX4743		34	Knob	DAA1472
	5	HPJK Assy	DWX4744		35	Knob	DAA1474
	6	MTRM Assy	DWX4749		36	Knob	DAA1475
	7	Shielded Conn-Cable	DDA1108		37	Slider Knob 2	DAC2685
	8	Parallel Jumper	DDC1047		38	Knob	DAC3238
	9	Parallel Jumper	DDC1050		39	Knob	DAC3705
	10	FFC	DDD2103		40	Plate	DNG1171
B	11	FFC	DDD2106		41	Slider Knob Stopper	DNK5888
	12	FFC	DDD2107		42	Knob/SLD	DNK5981
	13	FFC	DDD2108		43	Stopper	DNK6440
	14	Cap/MIC	DAC2773		44	Plate	DAH3409
	15	Sheet/LEG	DEC3534	⚠	45	Rear Panel	See Contrast table (2)
	16	Stay/HP	DNH3182	⚠	46	1..Chassis Unit	DXB2228
	17	Stay	DNH3511	⚠ NSP	47	2..Chassis	DNK7072
	18	Stay	DNH3512	⚠ NSP	48	2..Panel	DNK7074
	19	Stay	DNH3513	⚠ NSP	49	2..Panel	DNK7075
	20	Shield Case	DNH3530	⚠ NSP	50	2..Panel	DNK7076
C	21	Bracket	DNH3533		51	2..Screw	BPZ30P080FNI
	22	Beam	DNH3534		52	Nut	NK90FTC
	23	Lens	DNK7079		53	DM Screw (FTC)	DBA1260
	24	Knob	DAA1435		54	Screw	BBZ30P060FTB
	25	Gasket	DEC4056		55	Screw	BBZ30P060FTC
	26	Rotary SW Knob (C)	DAA1180		56	Screw	BPZ30P080FNI
	27	Knob/LBK	DAA1284		57	Screw	BPZ30P100FTB
	28	Knob/RSW	DAA1307		58	Screw	PPZ30P080FTB
	29	Knob	DAA1406		59	Nut M12	DBN1028
	30	Knob	DAA1419	NSP	60	Serial Label (UPC)	DRW2311

(2) CONTRAST TABLE

OPUS-QUAD/PYXJ, CUXJ, SXJ, XJ and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	OPUS-QUAD /PYXJ	OPUS-QUAD /CUXJ	OPUS-QUAD /SXJ	OPUS-QUAD /XJ	OPUS-QUAD /AXJ
⚠	45	Rear Panel	DAH3397	DAH3397	DAH3397	DAH3397	DAH3398


9.3 CHASSIS SECTION

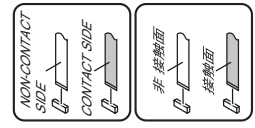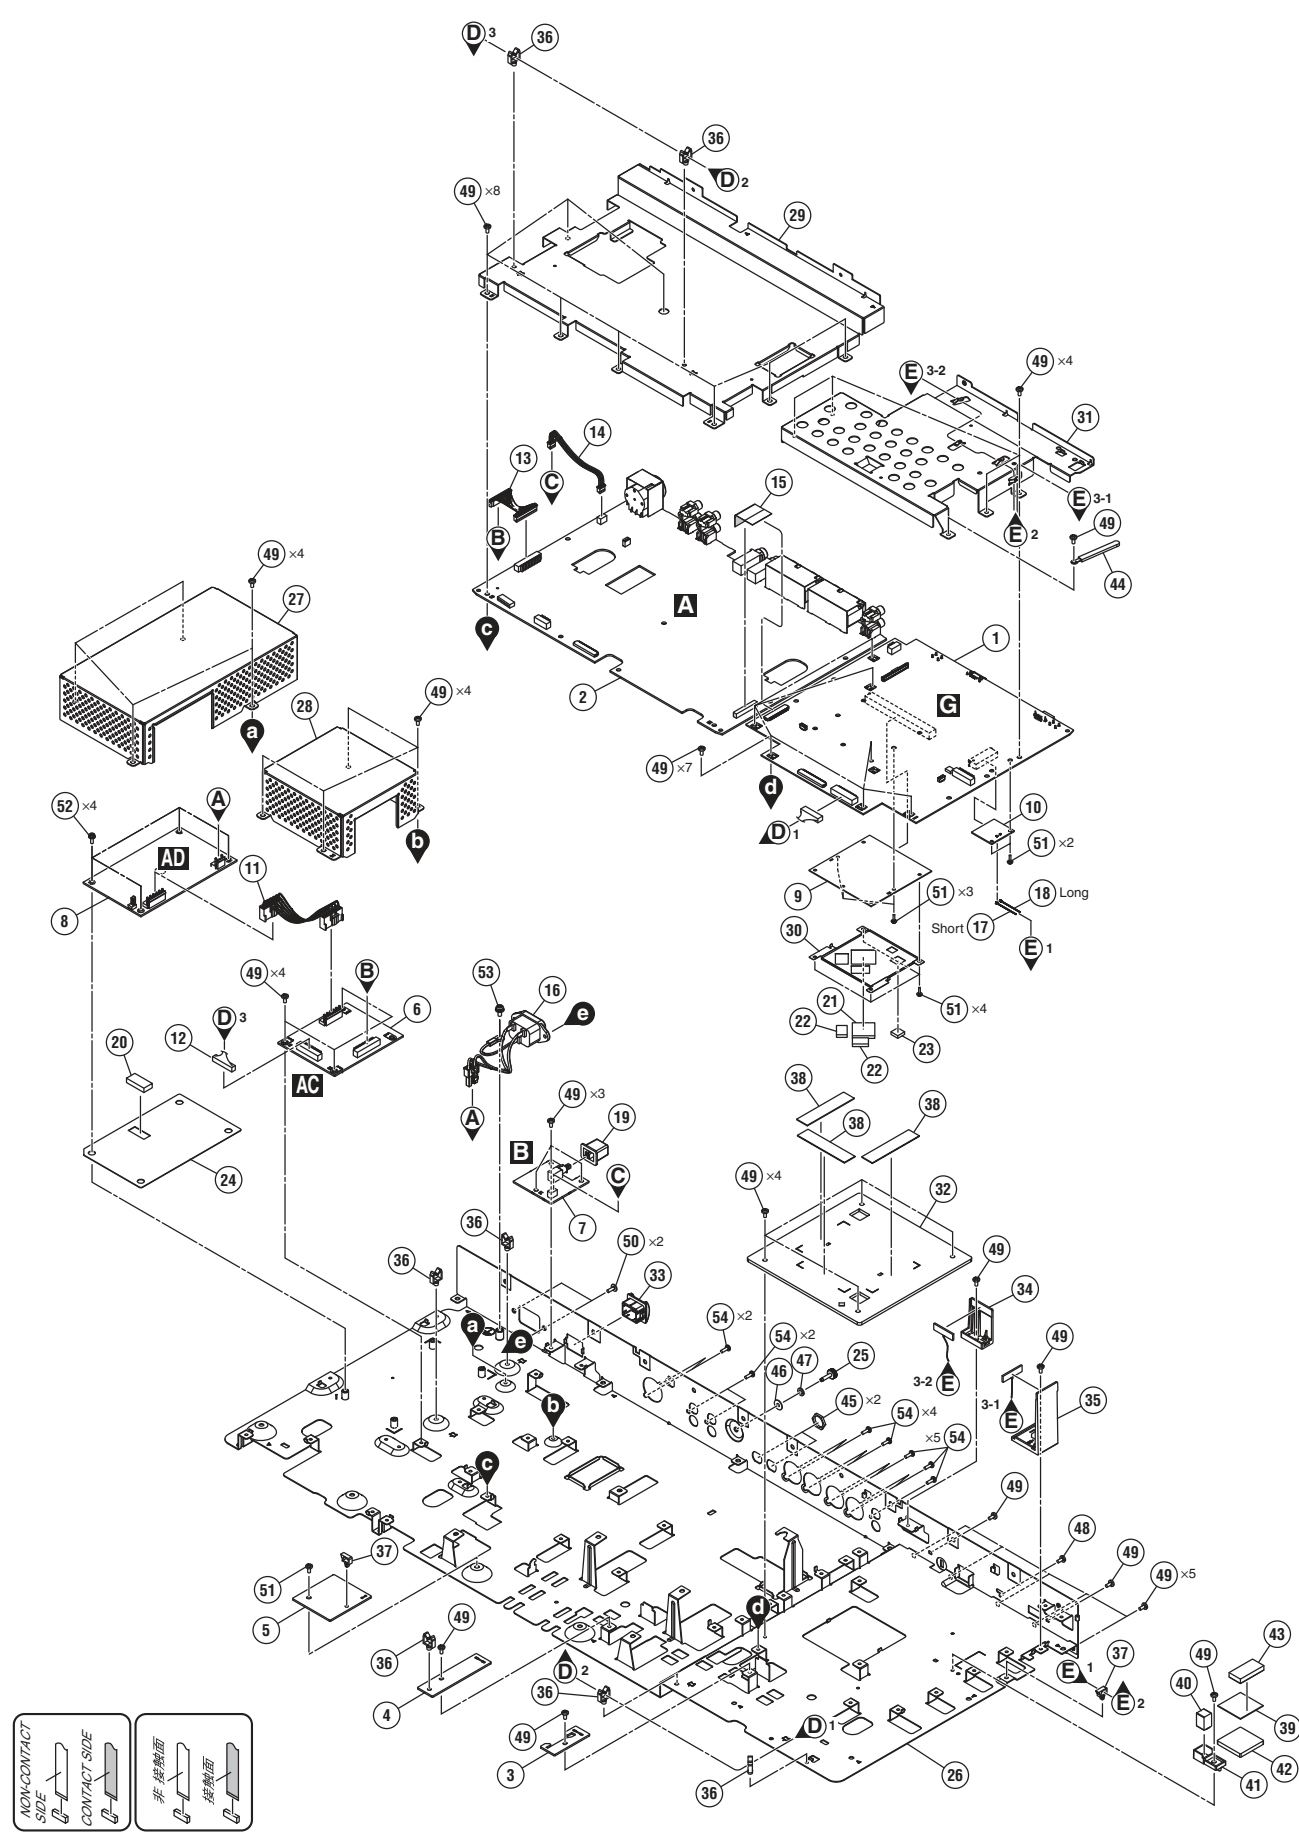

CHASSIS SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MAIN Assy	DWX4725		46	Washer	WA32F100Q050
	2	AUDIO Assy	DWX4726		47	Spring Lock Washer	WS40FNI
	3	PNST1 Assy	DWX4820		48	Screw	DBA1458
	4	PNST3 Assy	DWX4822		49	Screw	BBZ30P060FTC
	5	HPST Assy	DWX4754		50	Screw	IBZ30P080FTB
■	6	PWRB Assy	DWX4732		51	Screw	PMB20P080FNI
	7	PWSW Assy	DWX4748		52	Screw	PMH30P080FTB
	⚠	8 SW POWER SUPPLY	DWR1590		53	Screw	PMH40P080FTC
	9	SoM Module	DWX4722		54	Screw	PPZ30P080FTB
	10	Wi-Fi/BT Module	DWX4723				
B	11	Crimp Connector	DDC1039				
	12	Parallel Jumper	DDC1045				
	13	Parallel Jumper	DDC1046				
	14	Parallel Jumper	DDC1048				
	15	FFC	DDD2101				
■	⚠	16 AC Inlet	DKP3996				
	17	Wi-Fi Antenna (SHORT)	DSD1002				
	18	Wi-Fi Antenna (LONG)	DSD1003				
	19	Power Knob	DAC2306				
	20	Heat Cond Sheet	DEB2091				
C	21	Heat Cond Sheet	DEB2092				
	22	Heat Cond Sheet	DEB2093				
	23	Heat Cond Sheet	DEB2094				
	⚠	24 Barrier	DEC4052				
	25	Earth Terminal	DKE1015				
■	⚠	26 Stay	DNH3510				
	⚠	27 Shield Case	DNH3523				
	⚠	28 Shield Case	DNH3524				
	29	Shield Case	DNH3525				
	30	Shield Case	DNH3526				
D	31	Shield Case	DNH3529				
	32	Heat Sink	DNH3535				
	33	Power Knob Guard	DNK4534				
	34	Holder	DNK7080				
	35	Holder	DNK7098				
■	36	Holder	VEC1355				
	37	Locking Mini Clamp	DEC2439				
	38	EMI Absorb Sheet	DEC4091				
	39	EMI Absorb Sheet	DEC4093				
	40	Gasket	DEC4094				
E	41	Support	DNK7143				
	42	Plate	DEC4092				
	43	Cushion	DEC4096				
	44	Cord Clamper	DEX1025				
	45	Nut (M12)	NKX2FNI				
■							
F							

9.4 CONTROL PANEL SECTION (1/2)

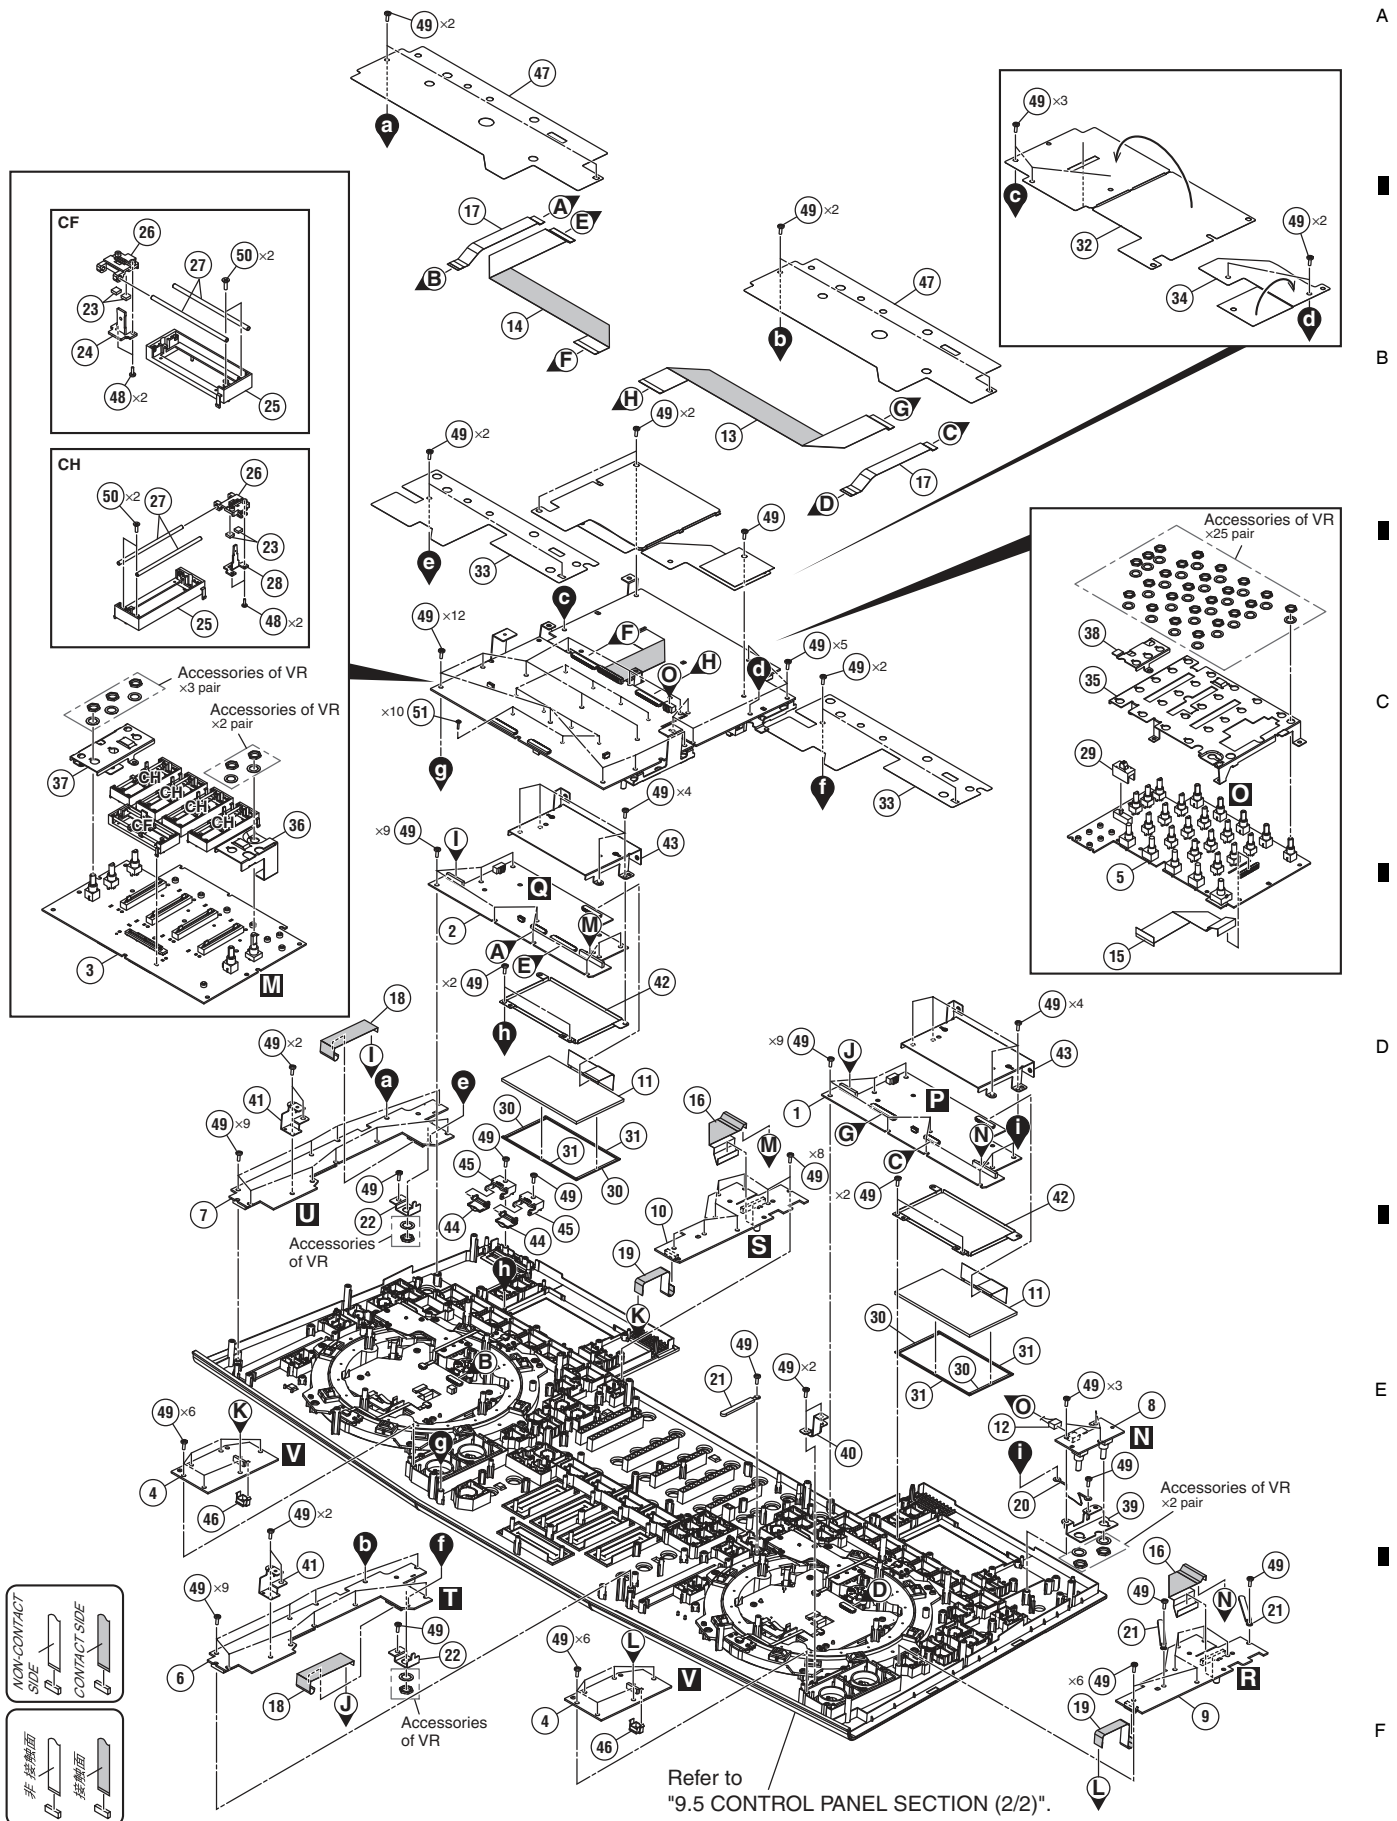


CONTROL PANEL SECTION (1/2) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	SLCD1 Assy	DWX4728		46	Lens	DNK7126
	2	SLCD2 Assy	DWX4729		47	Sheet	DEC4097
	3	FADB Assy	DWX4730		48	Screw	BPZ20P060FTC
	4	PLAY Assy	DWX4739		49	Screw	BPZ30P080FNI
	5	MXRB Assy	DWX4741		50	Screw	CPZ26P080FTC
	6	DCKL1 Assy	DWX4745		51	Screw	IPZ20P080FTC
	7	DCKL2 Assy	DWX4746				
	8	ZBVR Assy	DWX4747				
	9	DCKR1 Assy	DWX4752				
	10	DCKR2 Assy	DWX4753				
B	11	TFT LCD	DWX4903				
	12	Parallel Jumper	DDC1049				
	13	FFC	DDD2109				
	14	FFC	DDD2110				
	15	FFC	DDD2111				
	16	FFC	DDD2112				
	17	FFC	DDD2113				
	18	FFC	DDD2114				
	19	FFC	DDD2115				
	20	Cord With Plug	DE007VE0				
C	21	Cord Clamper	DEX1025				
	22	VR Stay S	DNH2964				
	23	Cushion	DEC3640				
	24	Lever	DNH3505				
	25	Holder	DNK7070				
	26	Slider	DNK7071				
	27	Guide Shaft VK1	DLA1978				
	28	Lever	DNH3504				
	29	Cap	DAC3136				
	30	Packing	DEC3915				
D	31	Packing	DEC3916				
	32	Sheet	DEC4068				
	33	Sheet	DEC4069				
	34	Sheet	DEC4077				
	35	Stay	DNH3515				
	36	Stay	DNH3516				
	37	Stay	DNH3517				
	38	Stay	DNH3518				
	39	Stay	DNH3519				
	40	Stay	DNH3520				
E	41	Stay	DNH3521				
	42	Stay	DNH3522				
	43	Shield Case	DNH3528				
	44	Door	DNK6497				
	45	Holder	DNK6710				
F							

9.5 CONTROL PANEL SECTION (2/2)

• Bottom view



Refer to
"9.6 JOG DIAL SECTION (1/2)".

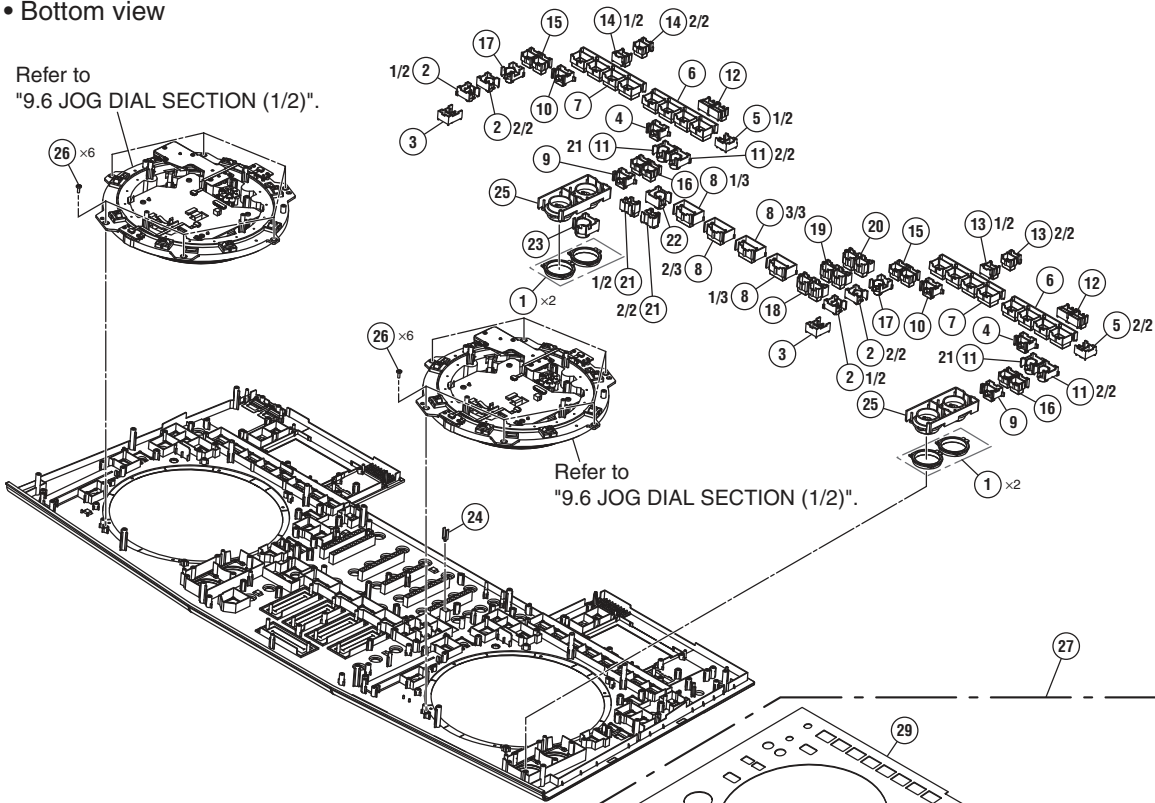


Refer to
"9.6 JOG DIAL SECTION (1/2)".

• Top view

• Divide position

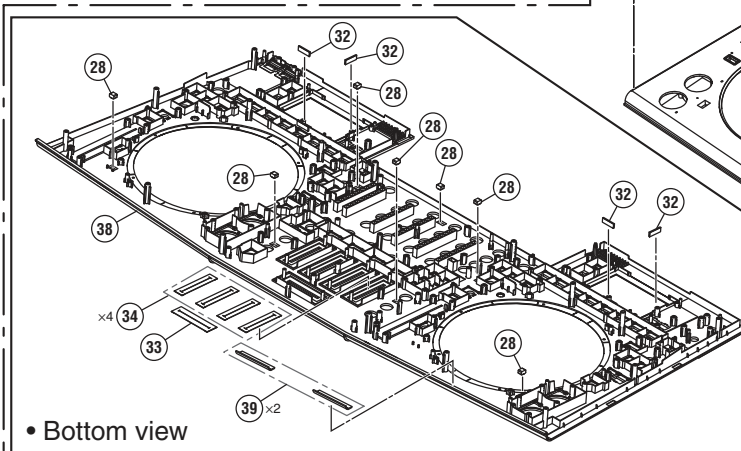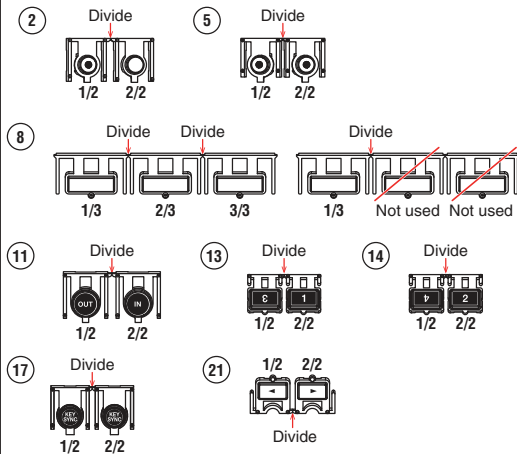

• Bottom view

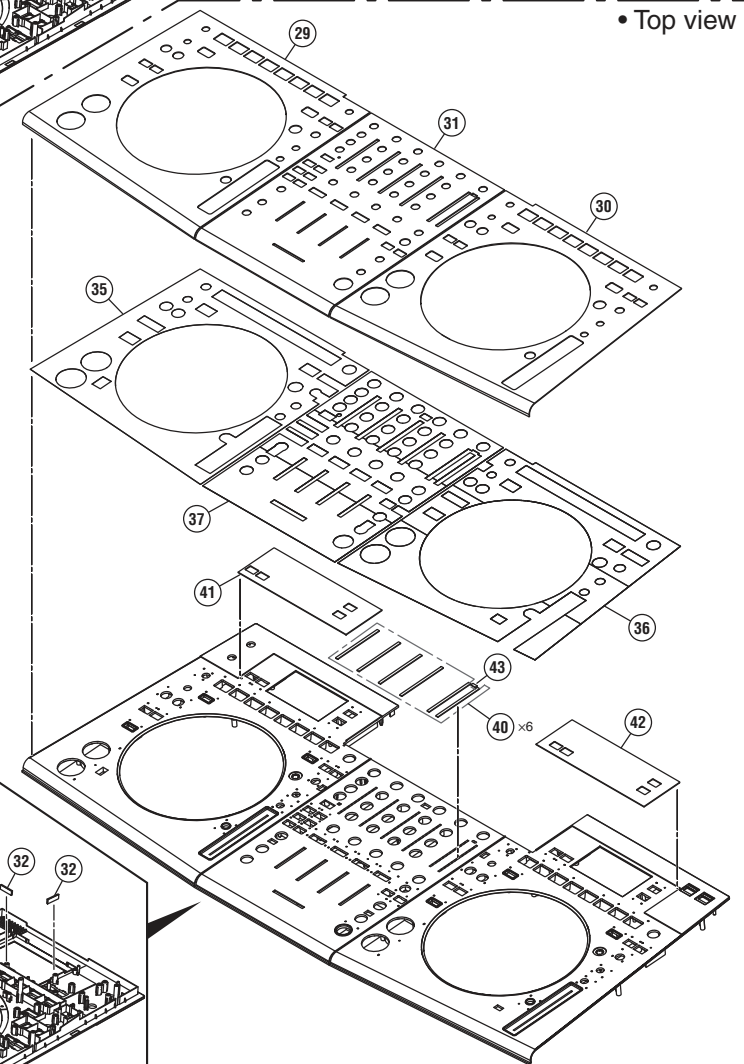

CONTROL PANEL SECTION (2/2) PARTS LIST


	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	Ring Lens (PLAY)	DNK5315
	2	Button/MT	DAC3029
	3	Button/REL	DAC3030
	4	Button	DAC3288
	5	Button	DAC3646
	6	Button	DAC3647
	7	Button	DAC3648
	8	Button	DAC3650
	9	Button	DAC3656
	10	Button	DAC3657
B	11	Button	DAC3658
	12	Button	DAC3659
	13	Button	DAC3660
	14	Button	DAC3661
	15	Button	DAC3662
	16	Button	DAC3663
	17	Button	DAC3664
	18	Button	DAC3665
	19	Button	DAC3666
	20	Button	DAC3667
C	21	Button	DAC3668
	22	Button	DAC3669
	23	Button	DAC3670
	24	Lens	DNK7078
	25	Button Unit	DXB2223
	26	Screw	BPZ30P080FNI
D	⚠ 27	1..OPUS-QUAD Panel Service Assy	DEA1154
	28	2..Gasket	DEC4056
	NSP 29	2..Plate	DAH3390
	NSP 30	2..Plate	DAH3391
	NSP 31	2..Plate	DAH3392
	32	2..Packing/LCD	DEC3565
	33	2..Packing	DEC3642
	34	2..Sheet	DEC3795
	NSP 35	2..DS Tape	DEH1132
	NSP 36	2..DS Tape	DEH1133
E	NSP 37	2..DS Tape	DEH1134
	⚠ NSP 38	2..Control Panel	DNK7073
	39	2..Packing	DEC4098
	40	2..Plate	DAH3410
	⚠ NSP 41	2..Plate	DAH3393
	⚠ NSP 42	2..Plate	DAH3394
	43	2..Plate	DAH3399

F

Refer to "7. DISASSEMBLY"



Lubricating oil

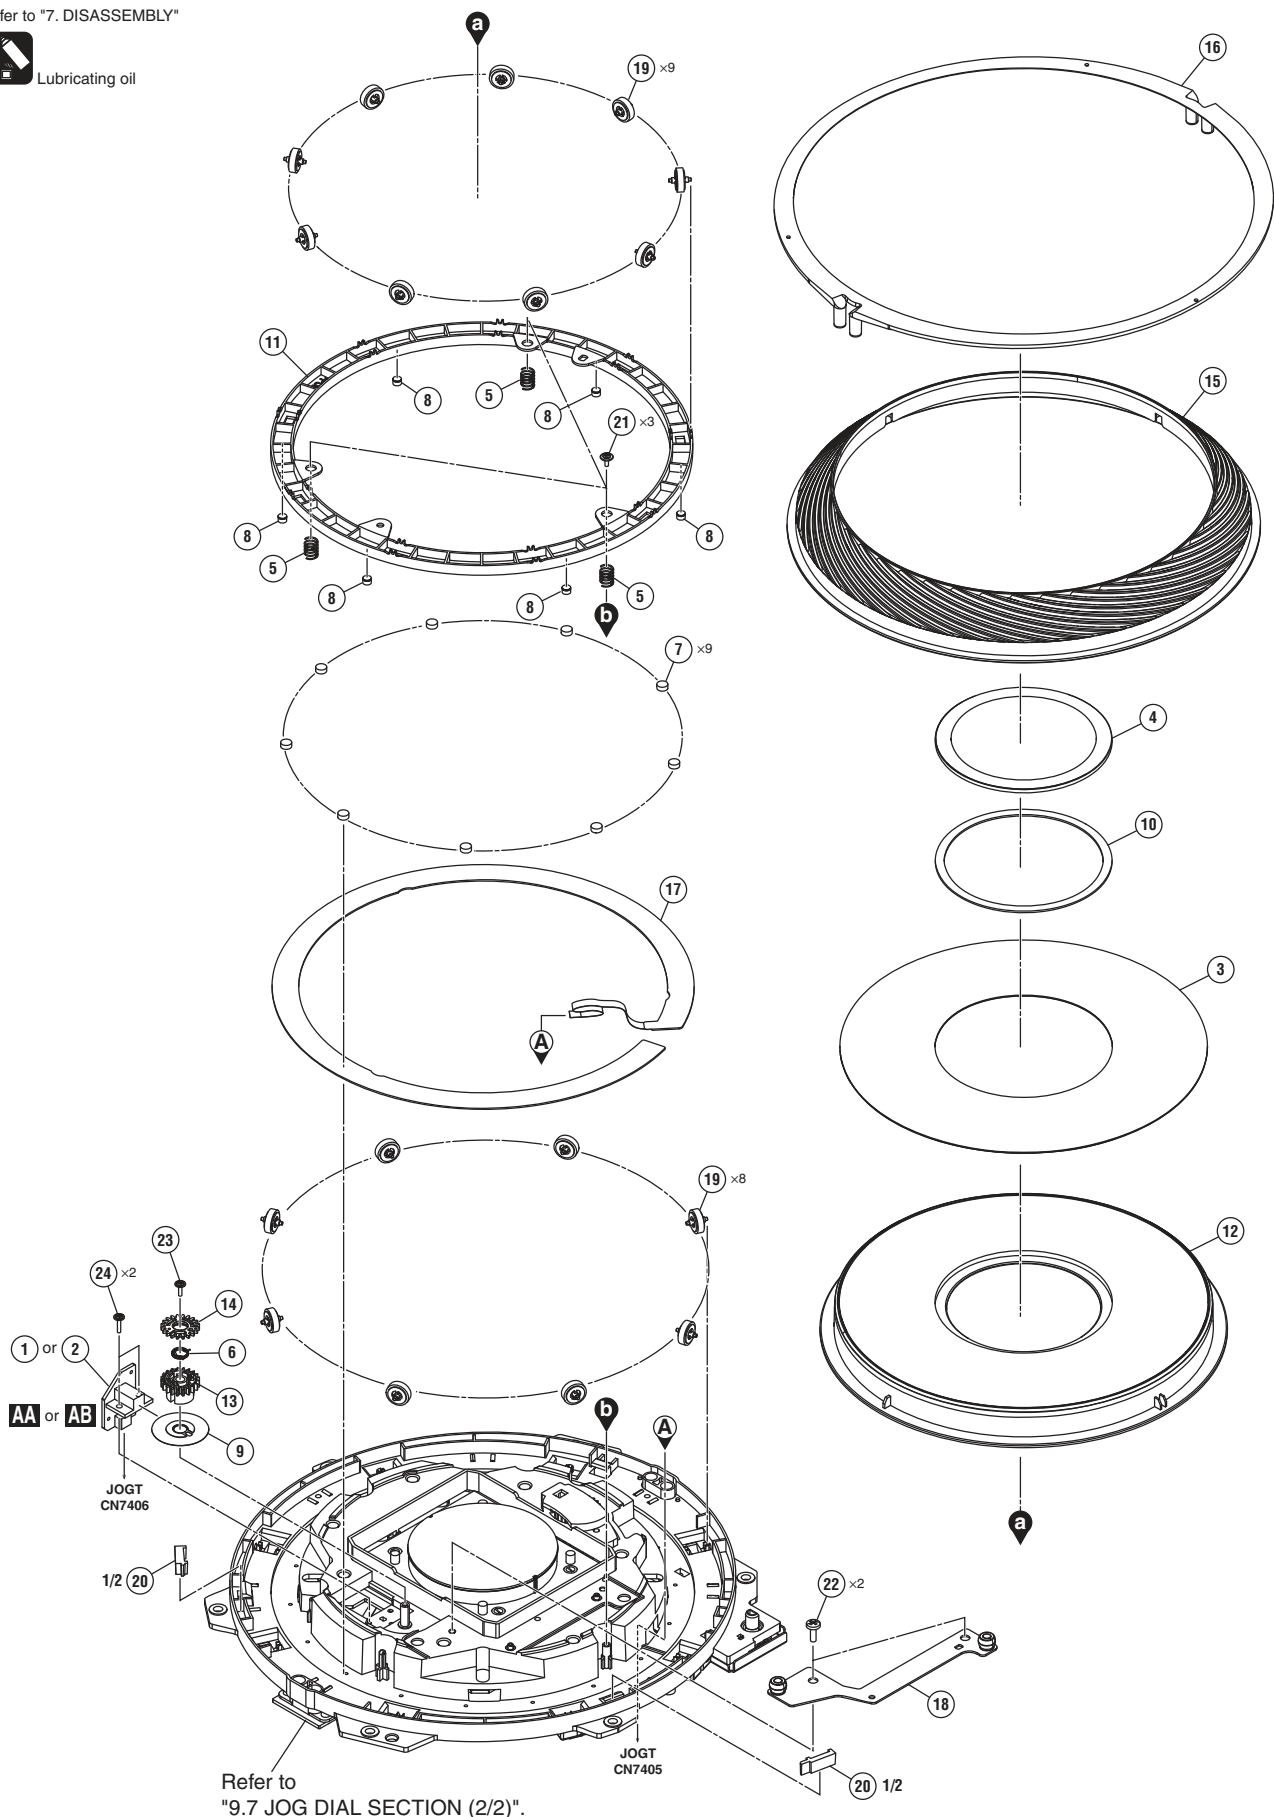

	Mark No.	Description	Part No.
A	1	JOGR1 Assy	DWX4750
	2	JOGR2 Assy	DWX4751
	3	Plate	DAH3395
	4	Window	DAH3396
	5	SW Spring	DBH1681
	6	Encoder Spring	DBH1710
	7	SW Cushion HH48/2	DEC2538
	8	Cushion/RNG	DEC3466
	9	Plate	DEC3700
	10	Spacer	DEC4054
B	11	SW Ring	DNK5233
	12	Jog Dial A	DNK5357
	13	Gear/A	DNK6143
	14	Gear/B	DNK6144
	15	Jog Dial	DNK7090
	16	Lens	DNK7092
	17	Sheet SW	DSX1078
	18	Stay Assy/Jog	DXB2133
	19	Roller	DXB2178
	20	Spacer	DNK7142
C	21	Screw (FE)	DBA1265
	22	Screw	BPZ30P080FNI
	23	Screw	IPZ20P060FTC
	24	Screw	IPZ20P080FTC

D

E




F

• Bottom view

Refer to "7. DISASSEMBLY"



Lubricating oil

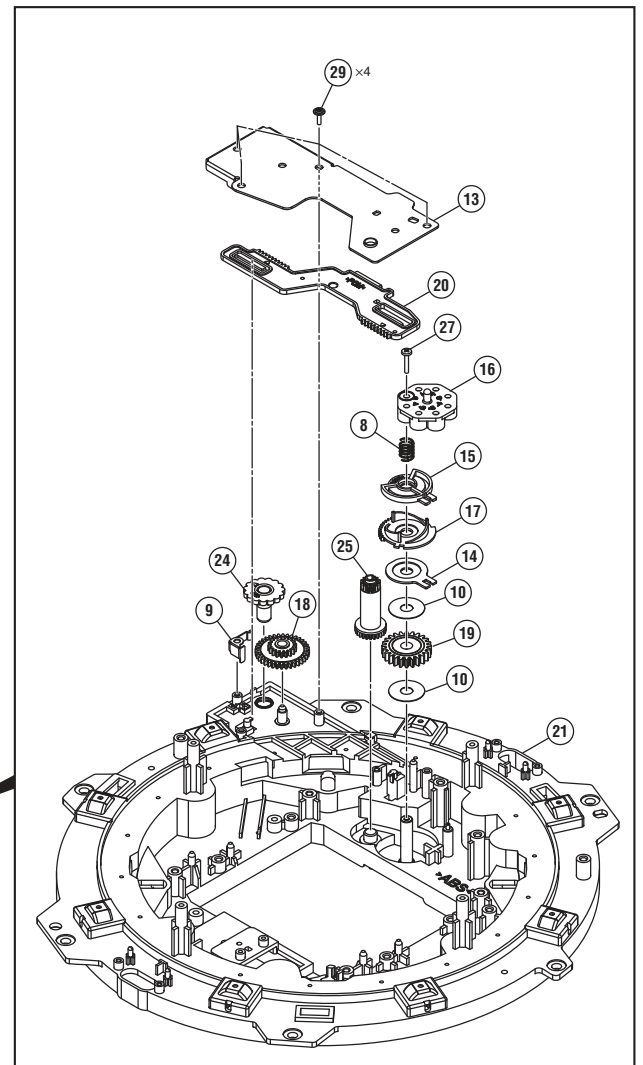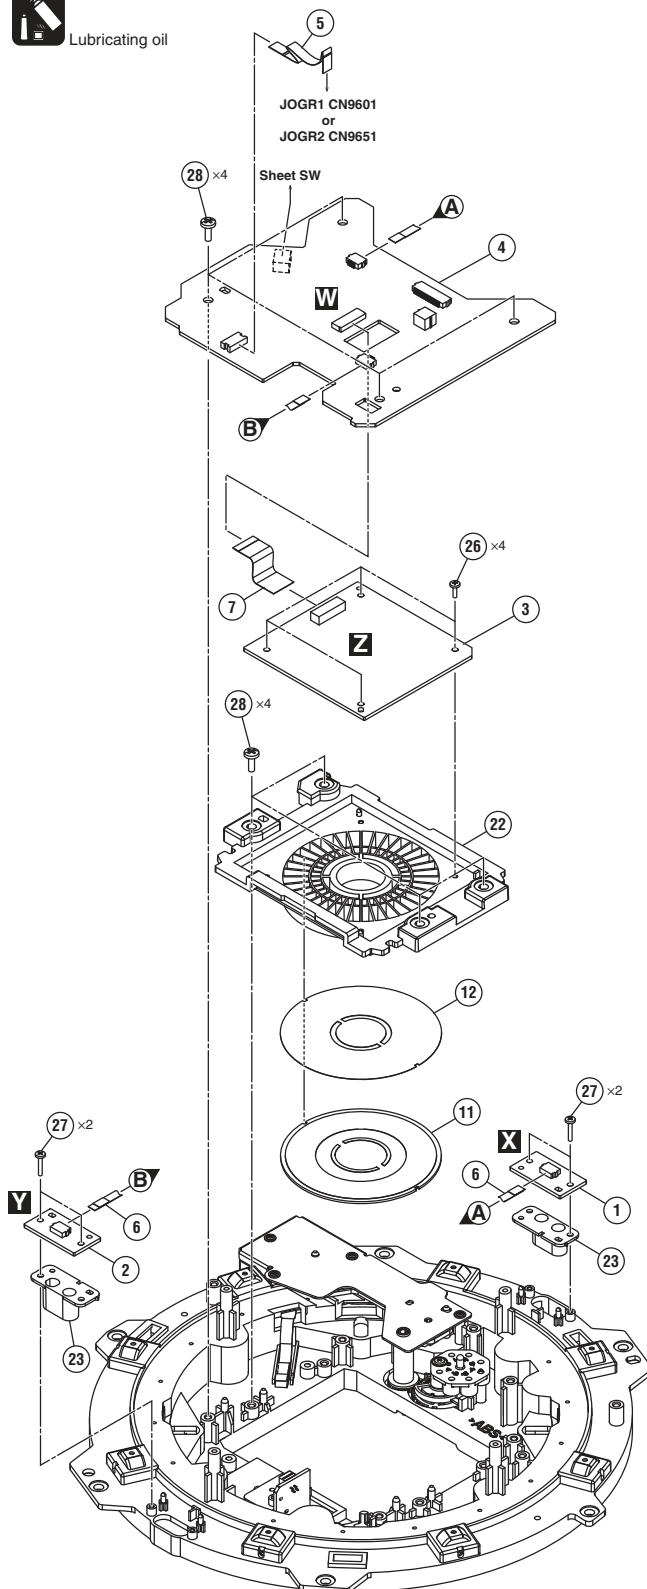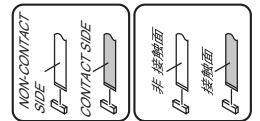

JOG DIAL SECTION (2/2) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	JLEDA Assy	DWX4735
	2	JLEDB Assy	DWX4736
	3	JLEDC Assy	DWX4737
	4	JOGT Assy	DWX4738
	5	FFC	DDD1843
	6	FFC	DDD2116
	7	FFC	DDD2117
	8	Coil Spring/LD	DBH1798
	9	Leaf Spring/ADJ	DBK1376
	10	Washer	DEC3137
B	11	Sheet	DEC4053
	12	Light-D Sheet	DEC4057
	13	Plate	DNH3345
	14	Smoother	DNK5237
	15	Comp Plate	DNK5243
	16	Adjust Plate	DNK5300
	17	Cam Plate	DNK5301
	18	Link Gear B	DNK5304
	19	Gear/LD	DNK6145
	20	Plate	DNK6748
C	21	Holder	DNK7089
	22	Holder	DNK7091
	23	Reflector	DNK7093
	24	Gear	DNK7094
	25	Gear	DNK7095
	26	Screw	BPZ20P060FTC
	27	Screw	BPZ20P100FTC
	28	Screw	BPZ30P080FNI
	29	Screw	IPZ20P060FTC
D			
E			
F			

9.8 LCD SECTION

- Bottom view

Refer to "7. DISASSEMBLY"



LCD SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MLCDR Assy	DWX4727
	2	MLST Assy	DWX4819
	3	JSTE Assy	DWX4733
	4	JSTS Assy	DWX4733
	5	MLCDL Assy	DWX4740
	6	LCD Module	DWX4724
	7	FFC	DDD2102
	8	FFC	DDD2104
	9	FFC	DDD2105
	10	FFC	DDD2118
B	11	Knob	DAA1435
	12	Knob	DAA1473
	13	Button	DAC3649
	14	Button	DAC3651
	15	Button	DAC3652
	16	Button	DAC3653
	17	Button	DAC3654
	18	Button	DAC3655
	19	Coil Spring	DBH1846
	20	DS Tape	DEH1135
C	21	VR Stay S	DNH2964
	22	Stay	DNH3514
	23	Shield Case	DNH3527
	24	Angle	DNH3532
	25	Panel	DNK7077
	26	Holder	DNK7081
	27	Base	DNK7139
	28	Base	DNK7140
	29	Stopper	DNK7141
	30	Cover	DNK7085
D	31	Lens	DNK7086
	32	Reflector	DNK7087
	33	Cover	DNK7088
	34	Cap	DNK7097
	35	Rivet (Plastic)	RBM-003
	36	Gasket	DEC4056
	37	Screw	BBZ30P060FTB
	38	Screw	BBZ30P060FTC
	39	Screw	BPZ20P100FTC
	40	Screw	BPZ26P080FTC

F