

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.


● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ▼ mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

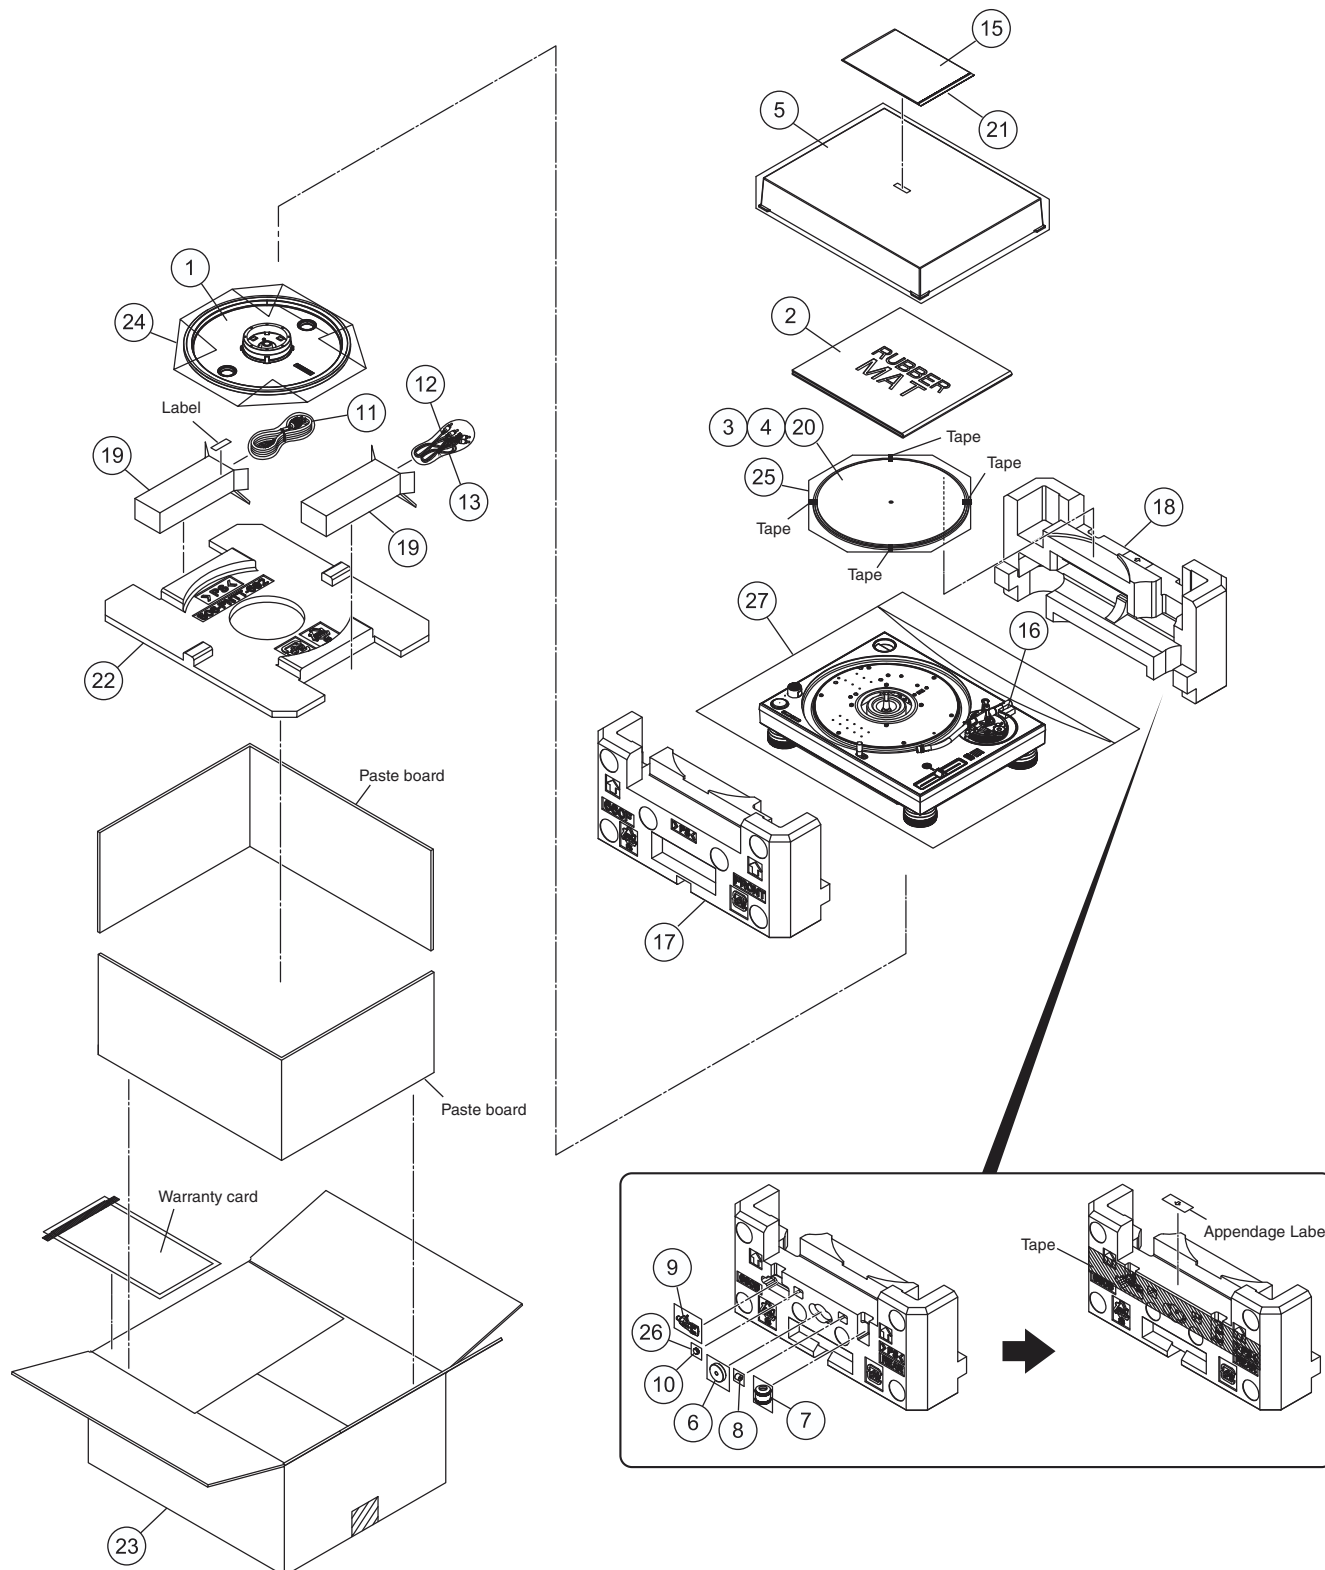

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Turntable	702-PNTT-075
2	Turntable Sheet	705-DJ1900-078
3	Slip Mat	612-PNTT-095
4	Slip Sheet	505-PNTT-248
5	Dust Cover	705-PLX1000-1583
6	Adapter for EP Record	200-PNTT-211A
7	Balance Weight	702-PNTT-076
8	Sub Weight	200-PNTT-693
9	Headshell	703-PNTT-1411
10	Shell Weight	200-ST100-268
⚠ 11	Power Cord	See Contrast table (2)
12	Audio Cable (L=150)	408-PLX-140
13	Ground Wire (L=150)	406-PLX-1288
14	•••••	
15	Operating Instructions	See Contrast table (2)
16	Cushion for Tone Arm	612-ST150-159
17	Polyfoam F	506-PNTT-660F
18	Polyfoam B	506-PNTT-660B
19	Box	507-PNTT-3470
20	Spacer	507-PNTT-3467
21	PE Bag	505-DJM250-014
22	Polyfoam	506-PNTT-662
23	Gift Box	See Contrast table (2)
24	Polybag for Turntable	505-DJ2500H-001
25	Bag	505-PNTT-247
26	Polybag (PE, 35*50 mm)	505-S15-117
27	Soft Bag	509-PNTT-332

(2) CONTRAST TABLE

PLX-1000/LPSYXE8 and FUXECB are constructed the same except for the following:

Mark	No.	Symbol and Description	PLX-1000 /LPSYXE8	PLX-1000 /FUXECB
⚠	11	Power Cord	409-HDJ7100-055D-HA	409-HDJ7100-054D-HA
	15	Operating Instructions (En)	502-PX1000B-3366	Not used
	15	Operating Instructions (Zhtw)	Not used	502-PX1000A-3365
	23	Gift Box	507-PNTTB-3469	507-PNTT-3469

△



EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN PCB Assy	704-PLX-A787	46	•••••		
2	SPEED PCB Assy	704-PLX-A790	47	Nut (4 mm, P=0.7 ISO)	601-F200-001	A
3	PHONO PCB Assy	704-PLX-A791	48	Washer (5.5*3*0.7 mm)	606-B300-039	
4	D.D. MOTOR Assy	704-PLX-A800	49	Washer Spring (7*4*1T)	606-DJ3000-102	
5	SEARCHLIGHT Assy	704-PLX-A802	50	Washer 4.36*8.26*0.9	606-NCDS700-123-HA	
6	STROBOSCOPE Assy	704-PLX-A803	51	Washer (10.5*3.2*1.6T)	606-PNTT-271	
⚠ 7	AC&PLAY PCB Assy	704-PLX-A863	52	Washer (8*3.2*1T, NI)	606-Q2221-122-HA	
⚠ 8	Transformer	411-PLX-912	53	Washer (16*4.1*1.2T)	606-ST150-157	
⚠ 9	AC Socket Assy	704-PLX-A795	54	Screw (SAE1018, BTB, 3*)	602-BTB0311-765B	
⚠ 10	Voltage SW Assy	704-PLX-A796	55	Screw (4*8)	602-BTB408-751C	
11	1P Ground Wire (L=110)	406-HV3500K-415A	56	Screw (BTS, 3*8)	602-BTS308-724B-HA	B
12	Shield Wire Assy	407-1410FR-097	57	Screw (TTP, 3*8, ZB)	602-DJ5500-452	
13	33/45 Knob	100-PNTT-3093	58	Screw (TTB DIA3*8)	602-DM3000-270	
14	TEMPO Reset Button	100-PNTT-3094	59	Screw (TTB, 3*L10)	602-HP1010K-174	
15	TEMPO Range Button	100-PNTT-3095	60	Screw (3*L8)	602-HP1010K-175-HA	
16	SPEED Button	100-PNTT-3096	61	Screw (M4*26, Black)	602-ISOM4026-752B	
17	Shell Stand	100-PNTT-3100	62	Screw	602-ISO308-735B	
18	Button Base	100-PNTT-3113	63	Screw (3*8)	602-XM610-526-HA	
19	Cover for Transformer	200-PNTT-737	64	Screw	602-MK8-604	
20	Transformer Bottom Cover	300-PNTT-2126	65	Screw (M3*7 TTP)	602-SL24F-096	C
21	Fixed Plate	300-PNTT-2134	66	Screw (TTB 4*10)	602-XM610-517	
22	Fixed Plate	300-PNTT-2135	67	Screw (M4*18, Spring W)	602-ST150-432	
23	Tone Arm Base	300-PNTT-2139	68	Screw (TTB, 3*25)	602-ST150-439	
24	Adhesive Mount	504-HDJ7000-032				
25	Locking Cable Clip	504-HV3500K-033				
26	Canoe Clip (MB-1, White)	504-PLX-301				
27	Protected Ring (SB-10)	504-PLX-307				
28	Cable Tie	504-S100-004-HA				
29	Bush 1	604-BUSH1-653				D
30	Bush 2	604-BUSH2-654				
31	Rubber for Bottom Base	604-DJ5500-262				
32	Pipe	604-PIPE-650				
33	Side Rubber	604-PNTT-638				
34	Long Rubber	604-PNTT-639				
35	Rubber	604-PNTT-648				
36	Rear Rubber	604-PNTT-649				
37	•••••					
38	Spring (7*4.3*1T)	606-STR830-141				E
39	Tooth Washer	606-TST4-240				
40	Bottom Base Assy	701-PNTT-5359				
41	Foot Assy	701-PNTT-5415				
42	Back Board Assy	703-PNTT-1408				
43	Tone Arm Assy	704-PNTT-B013				
44	Chassis Packing Assy	705-PNTT-1586				
45	•••••					