


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

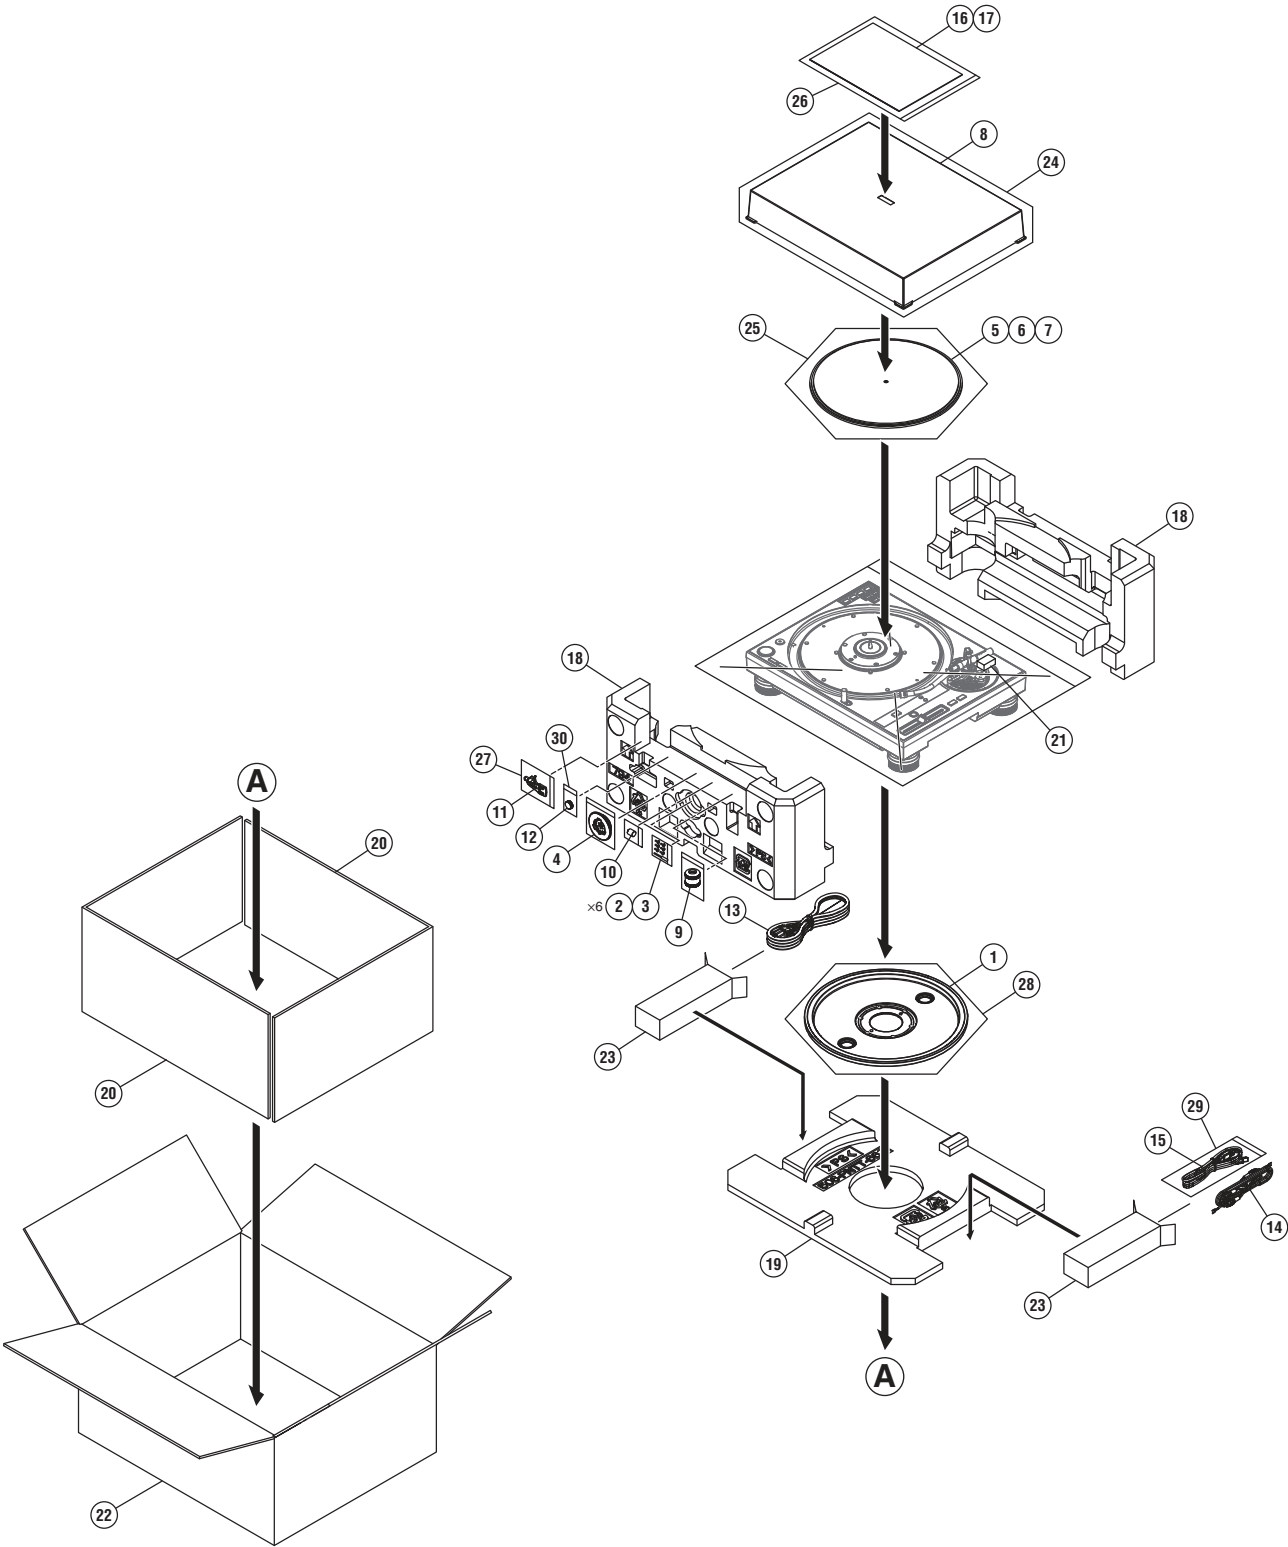

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Platter	702-EP126-171	16	Quick Start Guide	See Contrast table (2)
2	Screws for platter	602-SWISOK310-858	17	Precautions for Use	See Contrast table (2)
3	Screwdriver	614-HP-291	18	Styrofoam	506-EP126-794
4	Magvel Clamp	705-EP126-1954	19	Polyfoam	506-PNTT-662A
5	Slip mat	612-EP126-095	20	Pasteboard	507-PNTT-3468
6	Slip sheet	505-PNTT-248	21	Cushion For Tonearm	612-ST150-159
7	Spacer	507-PNTT-3467	22	Gift Box	See Contrast table (2)
8	Dust cover)	705-PLX1000-1583A	23	Box	507-PNTT-3470
9	Balance weight	702-EP126-076	24	Packing Sheet	509-EP126-332A
10	Sub weight	200-EP126-693	25	Bag	505-PNTT-247
11	Headshell	703-EP126-1411	26	PE Bag	505-DJM250-014
12	Shell weight	200-EP126-268	27	Polybag (60 * 102 mm)(PB,CD)	505-B300-007
⚠ 13	Power cord	See Contrast table (2)	28	Polybag For Turntable	505-DJ2500H-001
14	Audio cable (with ground wire)	408-W2000-146C	29	Poly Bag	505-HM500A-049
15	USB cable	408-EP126-159	30	Polybag (PE, 35 * 50 mm)	505-S15-117

(2) CONTRAST TABLE

PLX-CRSS12/FSXEG, CUXEG and AXEG are constructed the same except for the following:

Mark	No.	Symbol and Description	PLX-CRSS12/FSXEG	PLX-CRSS12/CUXEG	PLX-CRSS12/AXEG
⚠	13	Power Cord	409-HDJ7100-055D	409-HDJ7100-054D	409-DMX101-218A
	16	Quick Start Guide	502-EP126A-3978	502-EP126A-3978	502-EP126D-3981
	17	Precautions for Use	502-EP126A-3979	502-EP126A-3979	502-EP126D-3982
	22	Gift Box	507-EP126B-3469	507-EP126A-3469	507-EP126D-3469

A


B

C

D

E

F

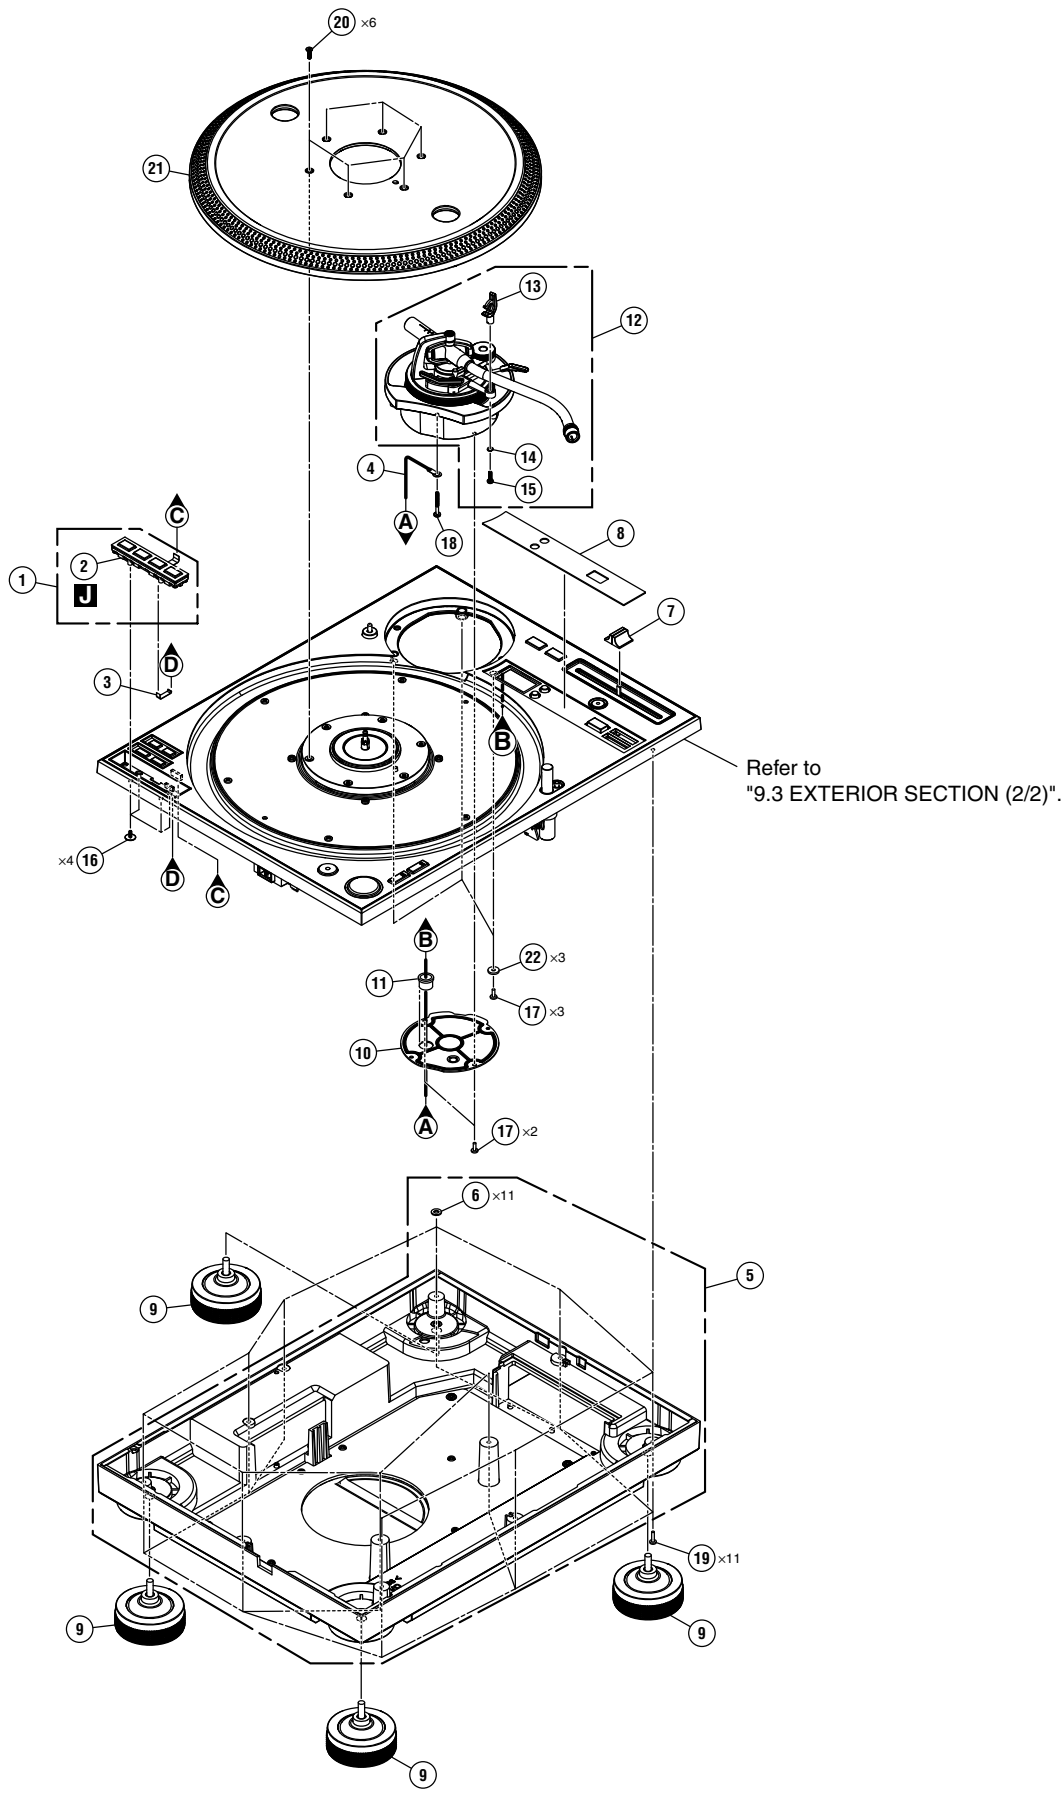

(1) EXTERIOR SECTION (1/2) PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
NSP	1 1..CONTROL PAD BUTTON Assy	704-EP126-C862	11	Protected Ring	504-PLX-307	A
	2 2..PAD LED PCB Assy	•••••	12	1..TONE ARM PACKING Assy	705-EP126-1943	
	3 8P 0.5 FFC Cable (L = 40 mm)	406-EP126-1474	13	2..TONEARM LIFTER Assy	701-ST150-2795A	
	4 Connector Wire (L = 115 mm)	407-1410FR-096	14	2..Washer	606-B300-039	
	5 1..Bottom Case Packing Assy	See Contrast table (2)	15	2..Screw	602-MK7-131	
	6 2..Rubber For Bottom BA	604-DJ5500-262	16	Screw	602-DV300-5023	■
	7 Pitch Adjust Knob	100-EP126-3096	17	Screw (TTB DIA3*8)	602-DM3000-270	
	8 Display Window	501-EP126-3065	18	Screw (TTB,3*25)	602-ST150-439	
	9 Foot Assy	701-PNTT-5415	19	Screw (SAE1018,BTB,3*L11)	602-BTB0311-765B	
	10 Tonearm Base	300-PNTT-2139	20	Screws for platter	602-SWISOK310-858	
			21	Platter	702-EP126-171	B
			22	Washer (10.5*3.2*1.6T)	606-PNTT-271	

(2) CONTRAST TABLE

PLX-CRSS12/FSXEG, CUXEG and AXEG are constructed the same except for the following:

Mark	No.	Symbol and Description	PLX-CRSS12/FSXEG	PLX-CRSS12/CUXEG	PLX-CRSS12/AXEG
	5	Bottom Case Packing Assy	705-EP126-1948	705-EP126-1948	705-EP126D-1949

9.3 EXTERIOR SECTION (2/2)

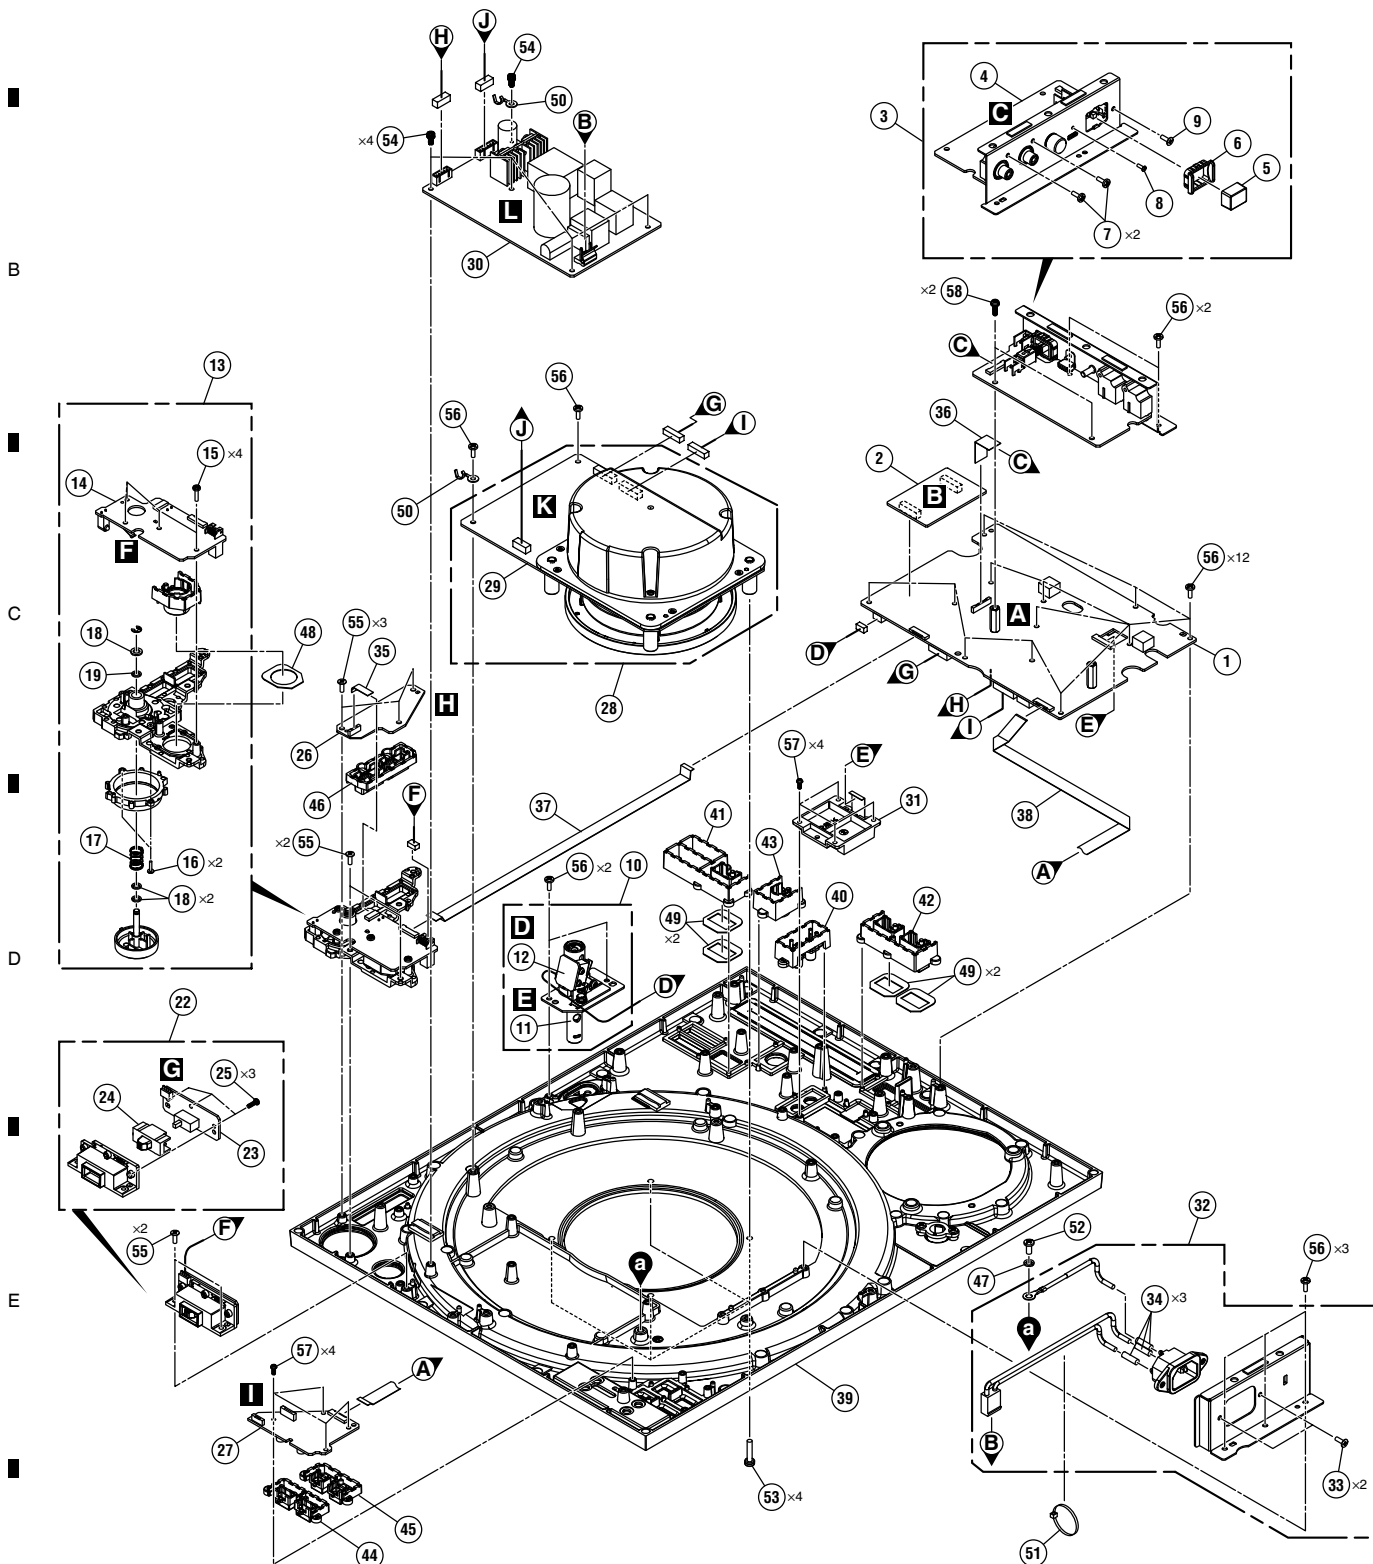

(1) EXTERIOR SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN PCB Assy	704-EP126-C840	31	OLED & OLED Base Assy	704-EP126-C909	
2	ADAPTER PCB Assy	704-EP126-C851	⚠ 32	1..AC Inlet Assy	See Contrast table (2)	A
3	1..PHONO OUT Assy	704-EP126-C860	33	2..Screw	602-ISO308-735B	
NSP 4	2..I/O PCB Assy	•••••	⚠ 34	2..Shrink Tube (W/UL,5,BLACK)	605-HT8033-5008	
5	2..Power Knob	100-HDJ2000-1641	35	10P 0.5 FFC Cable (L = 30 mm)	406-EP126-1472	
6	2..Button Frame	100-SX3-3411	36	26P 0.5 FFC Cable (L = 50 mm, +/-)	406-EP126-1476	
7	2..Screw (TTP,3*8,ZB)	602-DJ5500-452	37	18P 0.5 FFC Cable (L = 280 mm)	406-EP126-1473	
8	2..Screw (M2*6)	602-ISO206-839B	38	20P 0.5 FFC Cable (L = 390 mm)	406-EP126-1475	
9	2..Screw	602-ISO308-735B	39	Front Panel Assy	704-EP126-C891	
10	1..STYLUS & STROBE ILLUMINATOR Assy	704-EP126-C858	40	Deck/Application Button	100-DECK-3599	
NSP 11	2..LAMP PCB Assy	•••••	41	Needleless Mode Button	100-NEEDLE-3598	B
NSP 12	2..CONTROL LAMP PCB Assy	•••••	42	TEMPO RANGE Button	100-RANGE-3595	
13	1..START/STOP BUTTON Assy	704-EP126-C859	43	TEMPO RESET Button	100-RESET-3594	
NSP 14	2..START/STOP PCB Assy	•••••	44	ROLL/HOT CUE Button	100-ROLL-3597	
15	2..Screw	602-MK8-604	45	SHIFT/5-8 Button	100-SHIFT-3596	
16	2..Screw (PTB2*8)	602-PTB208-730B	46	Speed Change Button (33/45)	100-SPEED-3590	
17	2..Spring	603-PNTT-403	47	Spring (7*4.3*1T)	606-STR830-141	
18	2..Spacer For Noise Elimination	612-PNTT-508	48	Cushion	612-EP126-647	
19	2..Spacer For Noise Elimination	612-ST150-150	49	Cushion	612-EP126-648	
20	2..LED Support (Leg3-10F)	504-PLX-306	50	Locking Cable Clip	300-HM510B-224B	C
21	2..Sponge	612-USOLOFX-371	51	Cable Tie	504-S100-004	
22	1..BRAKE SELECT SW KNOB Assy	704-EP126-C863	52	Screw (4*8)	602-BTB408-751C	
NSP 23	2..SELECT PCB Assy	•••••	53	Screw (M4*10*P0.7)	602-RP5000-412	
24	2..Input Select Switch	100-EP126-3410	⚠ 54	Screw	602-SBTP308-873N	
25	2..Screw	602-SL24F-099	55	Screw (BTS,3*8)	602-BTS308-724B	
26	33/45 PCB Assy	704-EP126-C845	56	Screw (TTB DIA3*8)	602-DM3000-270	
27	CONTROL PCB Assy	704-EP126-C843	57	Screw	602-ST150-431	
28	1..D.D. MOTOR PACKING Assy	705-EP126-1944	58	Screw (M3*10, Spring Washer, MC)	602-ST150-433	
NSP 29	2..D.D. MOTOR PCB Assy	•••••				D
⚠ 30	SMPS PCB Assy	704-EP126-C842				

(2) CONTRAST TABLE

PLX-CRSS12/FSXEG, CUXEG and AXEG are constructed the same except for the following:

Mark	No.	Symbol and Description	PLX-CRSS12/FSXEG	PLX-CRSS12/CUXEG	PLX-CRSS12/AXEG	
⚠	32	AC Inlet Assy	704-EP126-C861	704-EP126-C861	704-EP126D-C866	E