


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

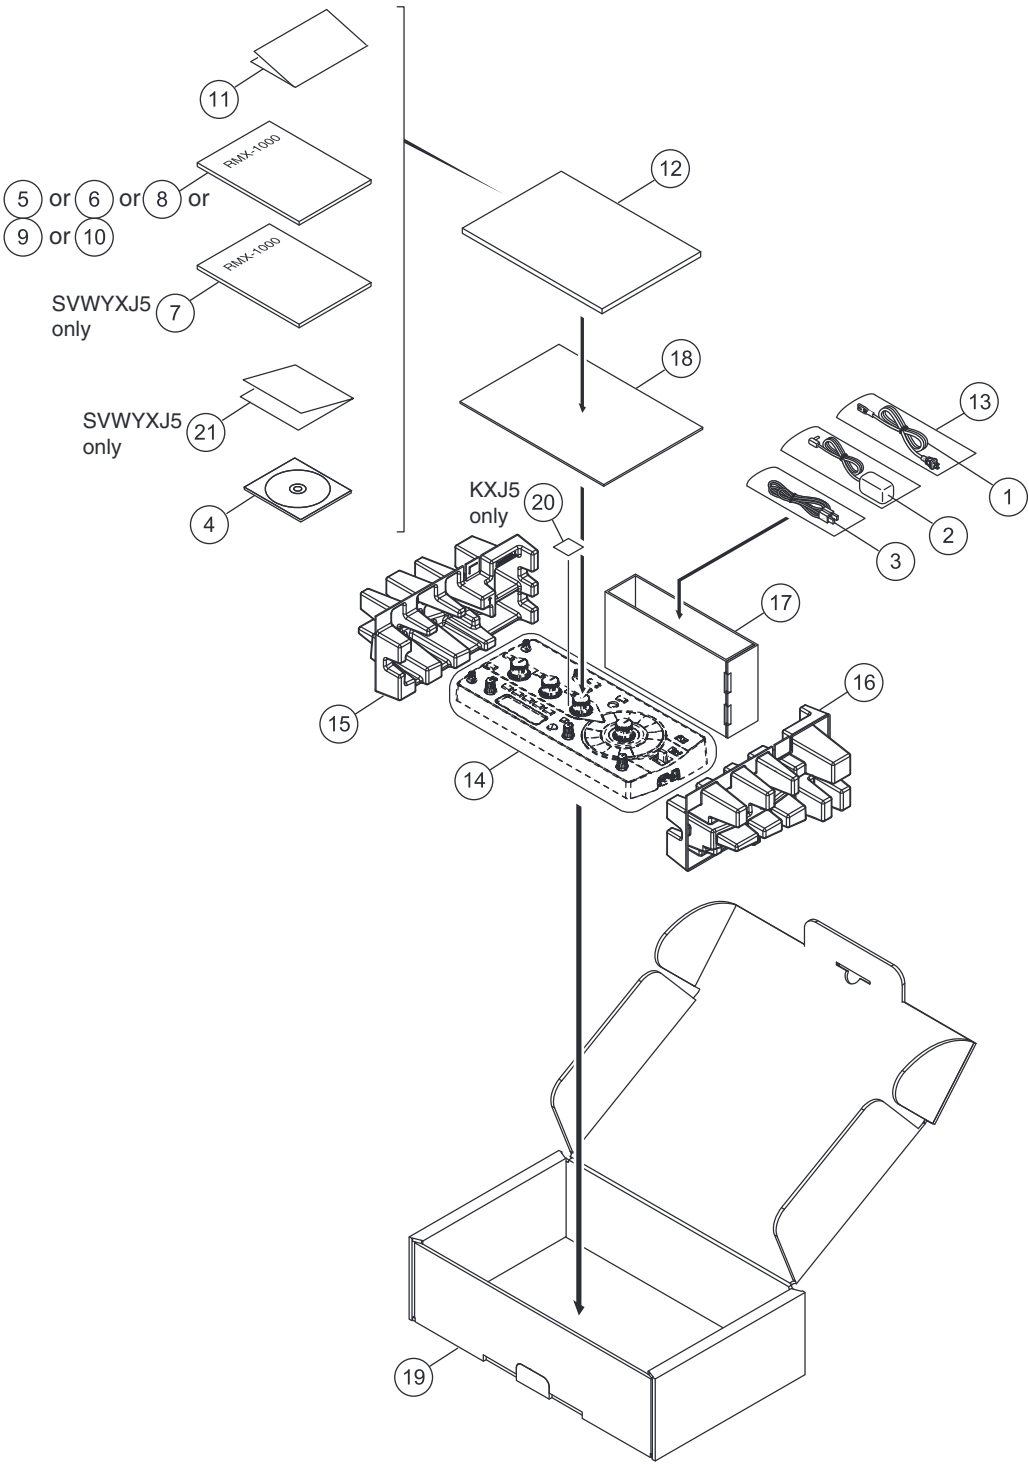

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
⚠	2	AC Adapter	DWR1525 *
	3	USB Cable	DDE1128
	4	CD-ROM	DXX2691
	5	Operating Instructions	See Contrast table (2)
	6	Operating Instructions	See Contrast table (2)
	7	Operating Instructions	See Contrast table (2)
	8	Operating Instructions	See Contrast table (2)
	9	Operating Instructions	See Contrast table (2)
	10	Operating Instructions	See Contrast table (2)
NSP	11	Leaflet/VST	DRM1366
NSP	12	Polyethylene Bag	AHG7117
	13	Vinyl Bag	Z21-013
	14	Packing Sheet	AHG7053
	15	Packing Pad	DHA1886
	16	Packing Pad	DHA1887
	17	Partition/ACC	DHC1080
	18	Packing Board/ACC	DHC1081
	19	Packing Case	See Contrast table (2)
NSP	20	Label/RCY	See Contrast table (2)
NSP	21	Warranty	See Contrast table (2)

* The AC adapter for the initial production (approximately 3,000 units in total) will be the DWR1507.

However, because of the problem on safety standards, the DWR1507 must not be used with the RMX-1000/KXJ5 (for Korea).

(2) CONTRAST TABLE

RMX-1000/UXJCB, SVWYXJ5, FWLWPWXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	RMX-1000 /UXJCB	RMX-1000 /SVWYXJ5	RMX-1000 /FWLWPWXJ	RMX-1000 /KXJ5	RMX-1000 /AXJ5
⚠	1	Power Cord	XDG3052	ADG1154	ADG1154	ADG7113	ADG7079
	5	Operating Instructions (En)	DRB1586	Not used	Not used	Not used	Not used
	6	Operating Instructions (En, Fr, De)	Not used	DRB1587	Not used	Not used	Not used
	7	Operating Instructions (It, NI, Es, Ru)	Not used	DRB1588	Not used	Not used	Not used
	8	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1589	Not used	Not used
	9	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1591	Not used
	10	Operating Instructions (En, Zhcn)	Not used	Not used	Not used	Not used	DRB1590
	19	Packing Case	DHG3100	DHG3099	DHG3101	DHG3104	DHG3103
NSP	20	Label/RCY	Not used	Not used	Not used	DRW2487	Not used
NSP	21	Warranty	Not used	ARY7158	Not used	Not used	Not used

1 2 3 4

9.2 CHASSIS SECTION

A



B

C

D

E

F

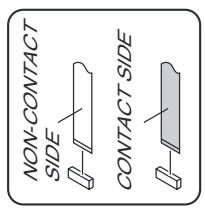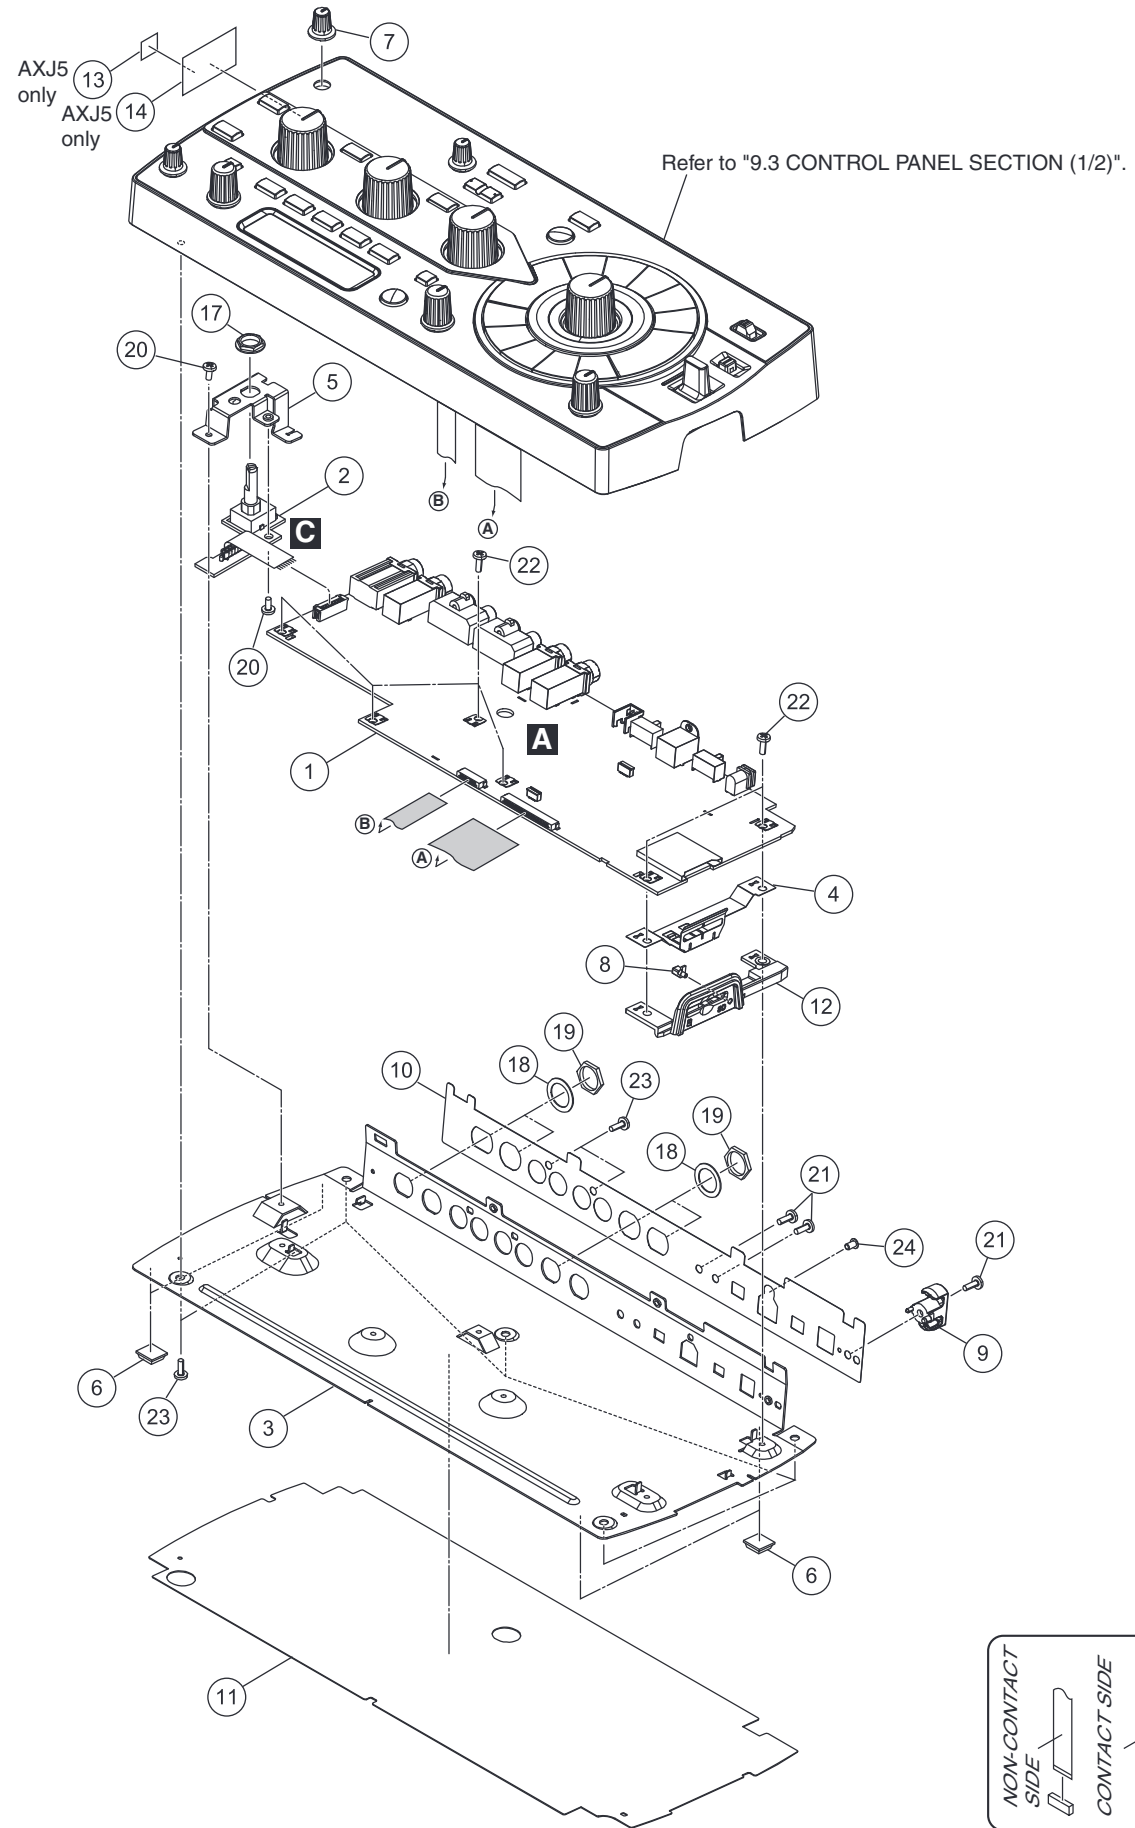

(1) CHASSIS SECTION PARTS LIST

Mark	No.	Description	Part No.	
	1	MAIN Assy	DWX3315	
	2	TRIM Assy	DWX3319	A
NSP	3	Chassis	DNA1435	
	4	Angle/SD	DNF1895	
	5	Stay/INP	DNF1896	
	6	Rubber Foot	VEB1349	■
	7	Knob/BLK	DAA1294	
	8	Lens/SD	DNK6048	
	9	Hook	DNK6067	
	10	Rear Panel	DAH2891	
NSP	11	Sheet	See Contrast table (2)	B
	12	Panel/SD	DNK6046	
NSP	13	CCC S Label	See Contrast table (2)	
NSP	14	Name Label/RMA	See Contrast table (2)	
	15	•••••		■
	16	•••••		
	17	Flange Nut M9	DBN1008	
	18	Washer	DEC2920	
	19	Nut (M12)	NKX2FNI	
	20	Screw	BBZ30P060FTB	C
	21	Screw	BBZ30P080FTB	
	22	Screw	BBZ30P080FTC	
	23	Screw	BPZ30P120FTB	
	24	Screw (M3*5)	DBA1340	■

(2) CONTRAST TABLE

RMX-1000/UXJCB, SVWYXJ5, FWLWPWXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	RMX-1000 /UXJCB	RMX-1000 /SVWYXJ5	RMX-1000 /FWLWPWXJ	RMX-1000 /KXJ5	RMX-1000 /AXJ5
NSP	11	Sheet	DEC3423	DEC3424	DEC3425	DEC3428	DEC3427
NSP	13	CCC S Label	Not used	Not used	Not used	Not used	DRW2310
NSP	14	Name Label/RMA	Not used	Not used	Not used	Not used	DRW2500

1 2 3 4

9.3 CONTROL PANEL SECTION (1/2)

A


B

C

D

E

F

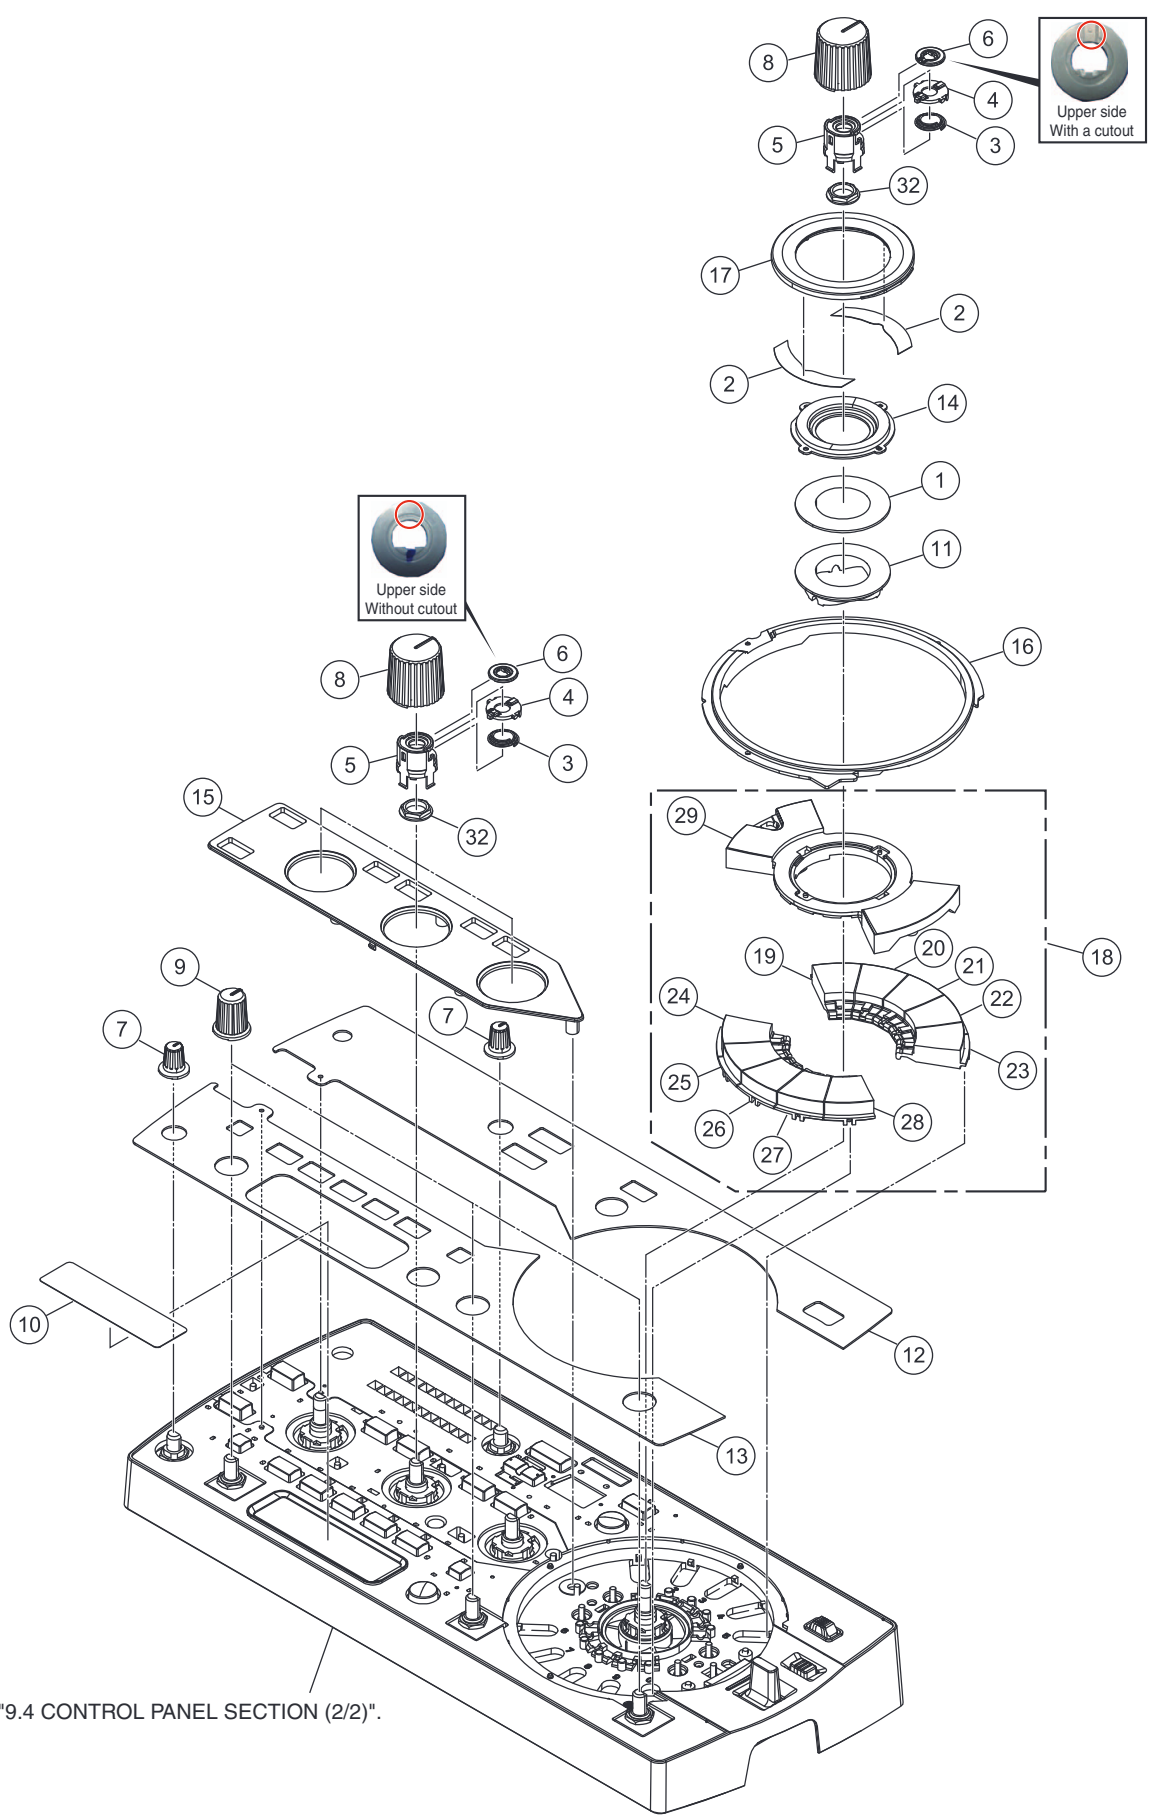


CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	
1	Film/SFX	DEC3429	
2	DS Tape/SFX	DEH1040	A
3	Spring/TRQ	DBH1792	
4	Base/TRQ	DNK6068	
5	Holder/TRQ	DNK6069	
6	Ring/TRQ	DNK6116	■
7	Knob/BLK	DAA1294	
8	Knob/ELA	DAA1295	
9	Knob/BLK	DAA1296	
10	Sheet/CDC	DEC3396	
11	Lens/SFX	DNK6026	B
12	Plate/TRE	DAH2872	
13	Plate/TFR	DAH2873	
14	Window/SFX	DAH2875	
15	Panel/SUB	DNK6032	■
16	Ring/SFX	DNK6044	
17	Escutcheon/SFX	DNK6047	
18	1..Button Assy/SFX	DXB2132	
NSP 19	2..Button/SF1	DAC2822	
NSP 20	2..Button/SF2	DAC2823	C
NSP 21	2..Button/SF3	DAC2824	
NSP 22	2..Button/SF4	DAC2825	
NSP 23	2..Button/SF5	DAC2826	
NSP 24	2..Button/SF6	DAC2827	
NSP 25	2..Button/SF7	DAC2828	■
NSP 26	2..Button/SF8	DAC2829	
NSP 27	2..Button/SF9	DAC2830	
NSP 28	2..Button/SF0	DAC2831	
NSP 29	2..Panel/SFX	DNK6045	D
30			
31			
32	Flange Nut M9	DBN1008	■

9.4 CONTROL PANEL SECTION (2/2)

A • Bottom view

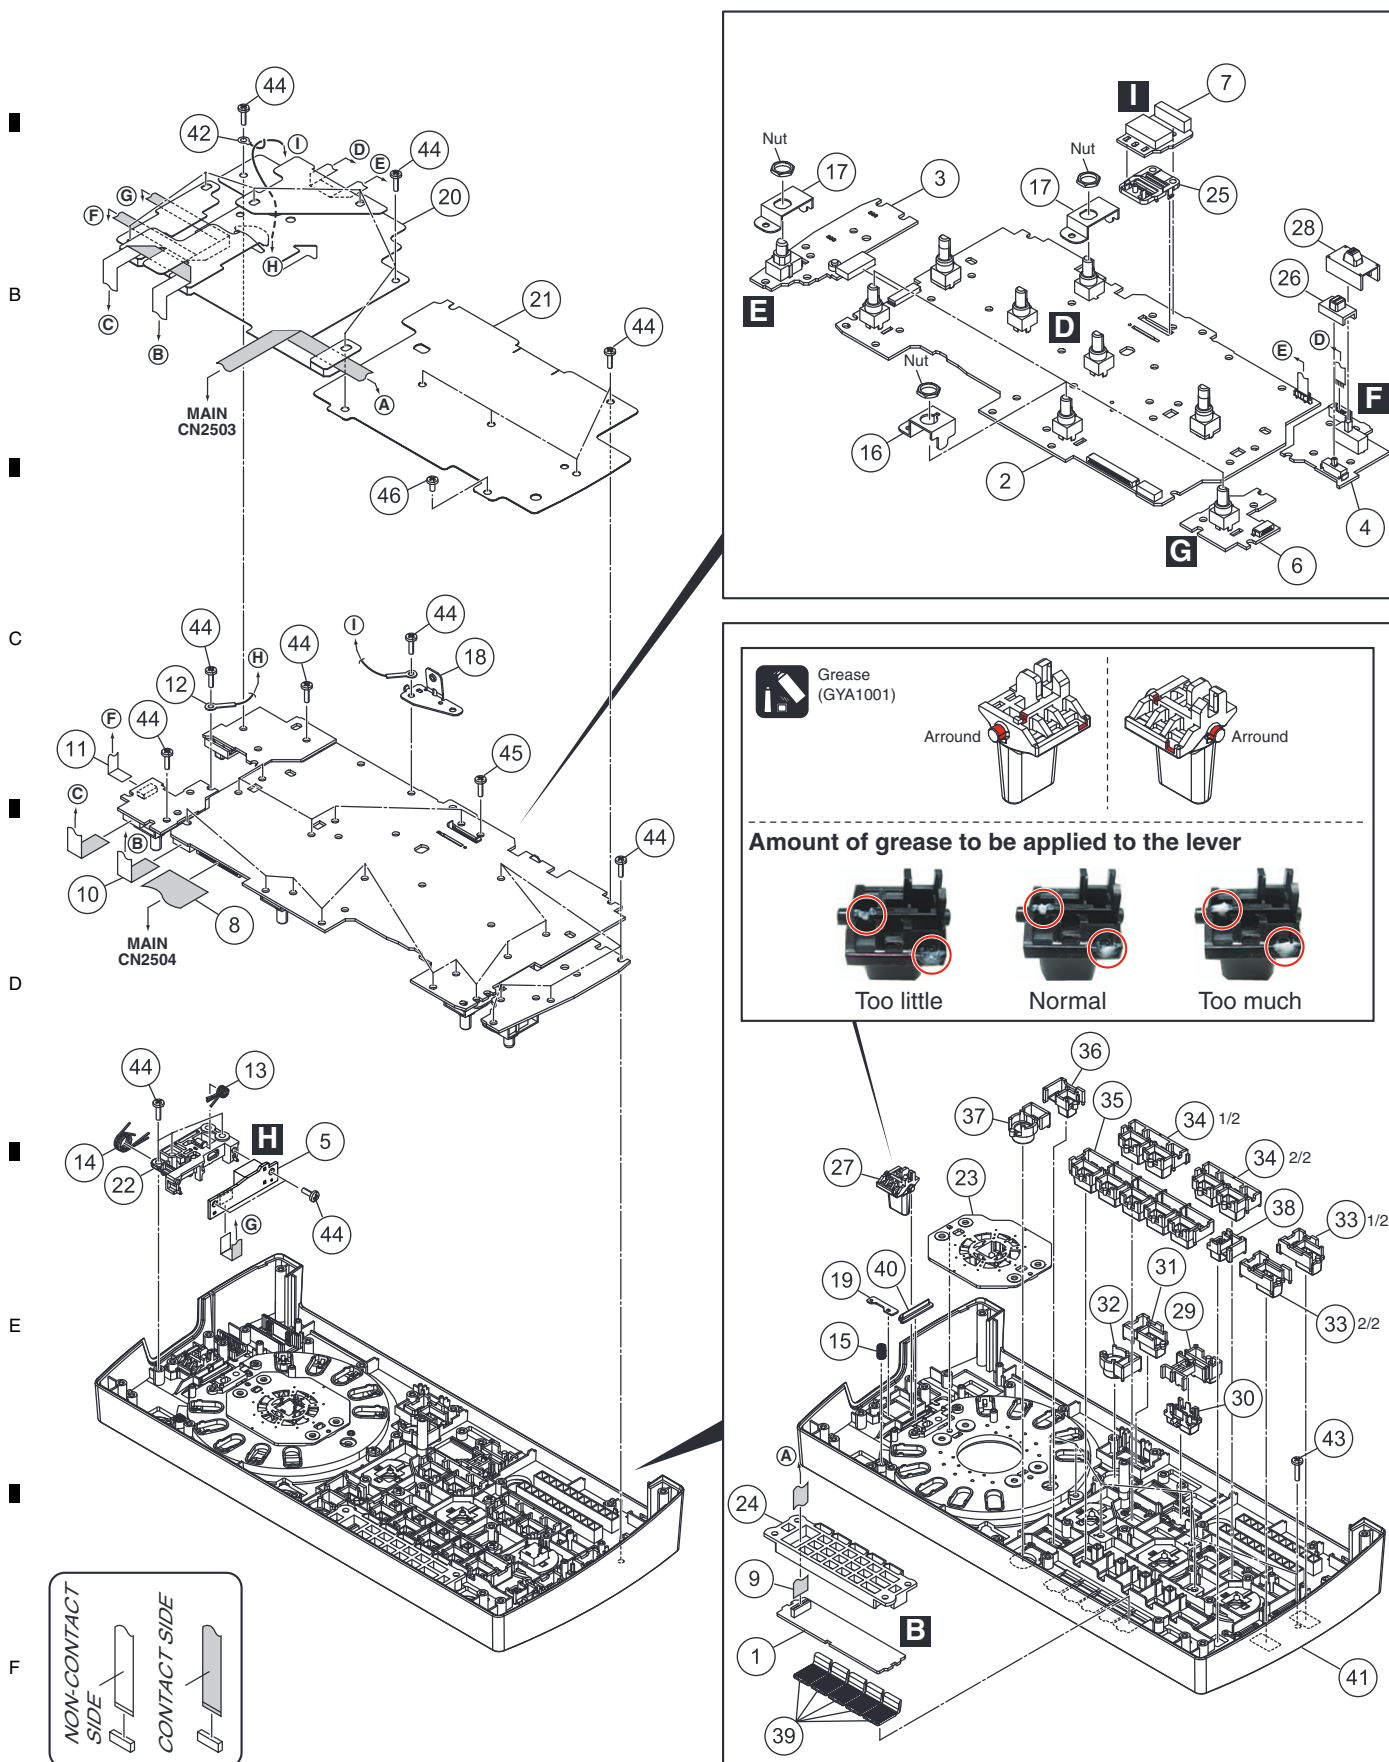

CONTROL PANEL SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	
	1 CDCB Assy	DWX3316	
	2 PNCE Assy	DWX3317	A
	3 PNLE Assy	DWX3318	
	4 SSWB Assy	DWX3320	
	5 SPFX Assy	DWX3321	
	6 PARAM Assy	DWX3322	■
	7 7SEG Assy	DWX3323	
	8 FFC/30P	DDD1593	
	9 FFC/11P	DDD1594	
	10 FFC/10P	DDD1595	
	11 FFC/7P	DDD1596	B
NSP	12 Cord With Plug	DE015VE0	
	13 Torsion Spring/LVR	DBH1790	
	14 Torsion Spring/PRS	DBH1791	
	15 Coil Spring/SFX	DBH1796	■
	16 Angle/VRA	DNF1892	
	17 Angle/VRB	DNF1893	
	18 Stay/PNL	DNF1897	
	19 Cushion	DEB1999	
	20 Insulating Sheet	DEC3398	C
	21 I-Shield Sheet	DEC3406	
	22 Holder/LVR	DNK6025	
	23 Reflector	DNK6027	
	24 Holder/CDC	DNK6029	
	25 Holder/PCB	DNK6049	■
	26 Cap/MIC	DAC2773	
	27 Lever	DAC2804	
	28 Cap/SSW	DAC2805	
	29 Button/BT	DAC2811	D
	30 Button/ADJ	DAC2812	
	31 Button/AT	DAC2813	
	32 Button/TAP	DAC2814	
	33 Button/SLT	DAC2815	■
	34 Button/ISO	DAC2817	
	35 Button/RBN	DAC2819	
	36 Button/SDL	DAC2820	
	37 Button/HLD	DAC2821	
	38 Button/SFT	DAC2867	E
	39 Lens/CDC	DNK6028	
	40 Lens/LVR	DNK6035	
⚠	41 Control Panel	DNK6031	
	42 Cord Clamper (Steel)	RNH-184	■
	43 Screw	BPZ30P080FTC	
	44 Screw	BPZ30P100FTC	
	45 Screw	BPZ30P120FTB	
	46 Screw	BBZ30P060FTB	F