


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

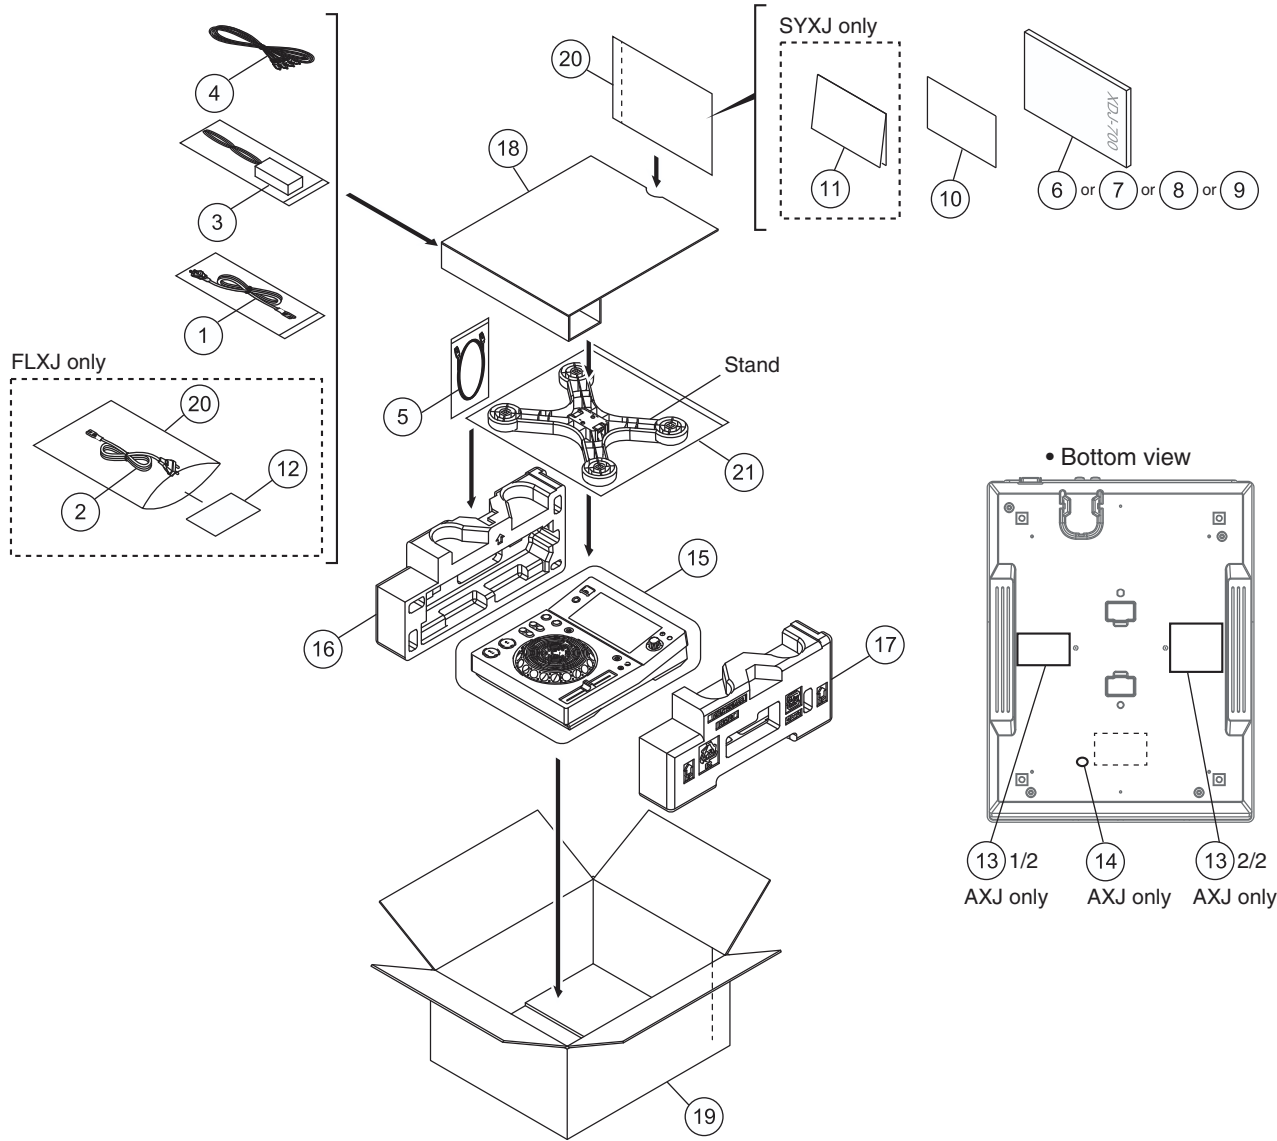

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)	9	Operating Instructions (Quick Start Guide)	See Contrast table (2)
⚠ 2	Power Cord	See Contrast table (2)	NSP 10	Leaflet	See Contrast table (2)
⚠ 3	AC Adapter	DWR1546	NSP 11	Warranty	See Contrast table (2)
4	Audio Cable	XDE3045	12	Caution Card SB	See Contrast table (2)
5	LAN Cable	DDE1141	NSP 13	Name Label	See Contrast table (2)
6	Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 14	CCC S & E Label	See Contrast table (2)
7	Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Packing Sheet	AHG7053
8	Operating Instructions (Quick Start Guide)	See Contrast table (2)	16	Packing Pad	DHA1933
			17	Packing Pad	DHA1934
			18	Partition	DHC1087
			19	Packing Case	See Contrast table (2)
			NSP 20	Polyethylene Bag	AHG7117
			NSP 21	Poly Bag	DHL1198

(2) CONTRAST TABLE


XDJ-700/UXJCB, SYXJ, FLXJ and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-700 /UXJCB	XDJ-700 /SYXJ	XDJ-700 /FLXJ	XDJ-700 /AXJ
⚠	1	Power Cord	XDG3052	ADG1154	ADG1154	ADG7079
⚠	2	Power Cord	Not used	Not used	ADG7097	Not used
	6	Operating Instructions (Quick Start Guide)(En)	DRH1313	Not used	Not used	Not used
	7	Operating Instructions (Quick Start Guide) (En, Fr, De, It, NI, Es, Pt,Ru)	Not used	DRH1314	Not used	Not used
	8	Operating Instructions (Quick Start Guide)(En, Es, Zhtw)	Not used	Not used	DRH1315	Not used
	9	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	Not used	DRH1316
NSP	10	Leaflet	DRH1275	DRH1275	DRH1275	DRH1274
NSP	11	Warranty	Not used	ARY7158	Not used	Not used
D	12	Caution Card SB	Not used	Not used	ARM7064	Not used
NSP	13	Name Label	Not used	Not used	Not used	DAL1290
NSP	14	CCC S & E Label	Not used	Not used	Not used	DRW2310
	19	Packing Case	DHG3431	DHG3430	DHG3432	DHG3434



9.2 EXTERIOR SECTION

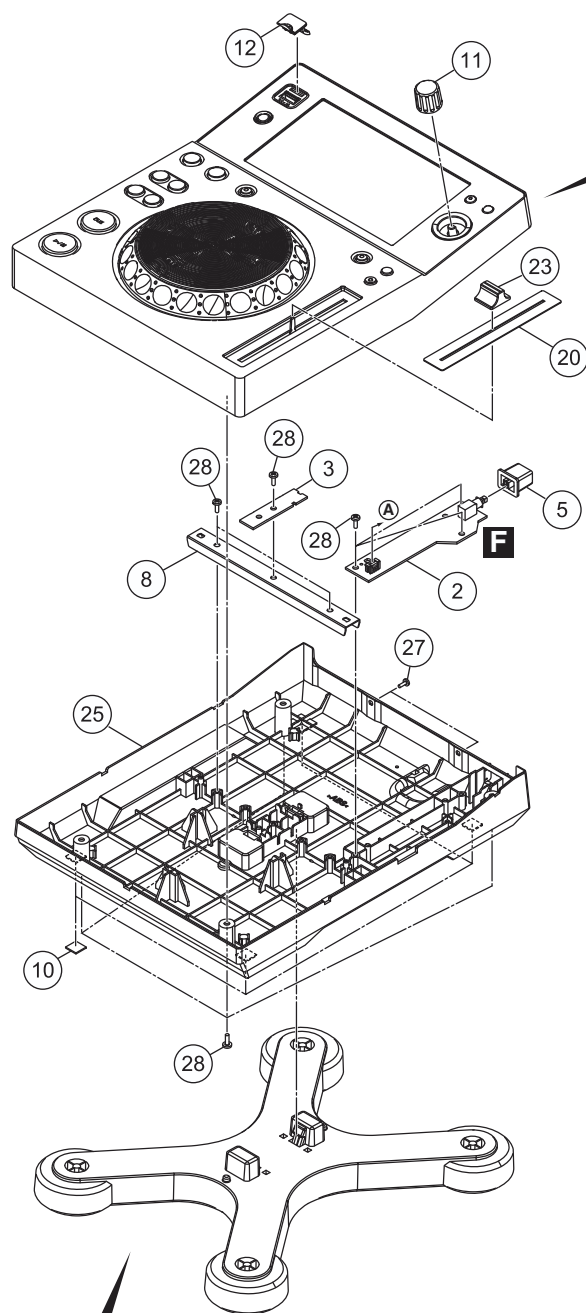



• Bottom view

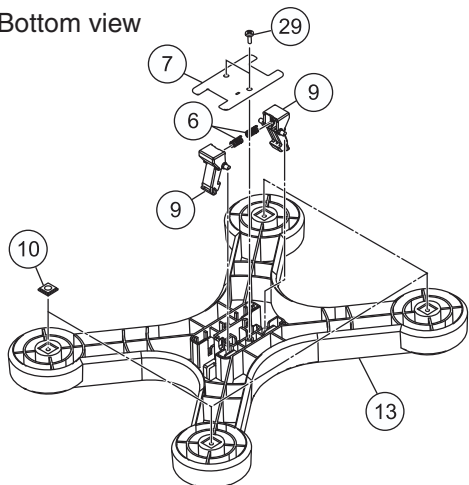

• Bottom view

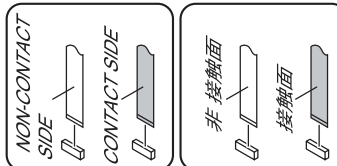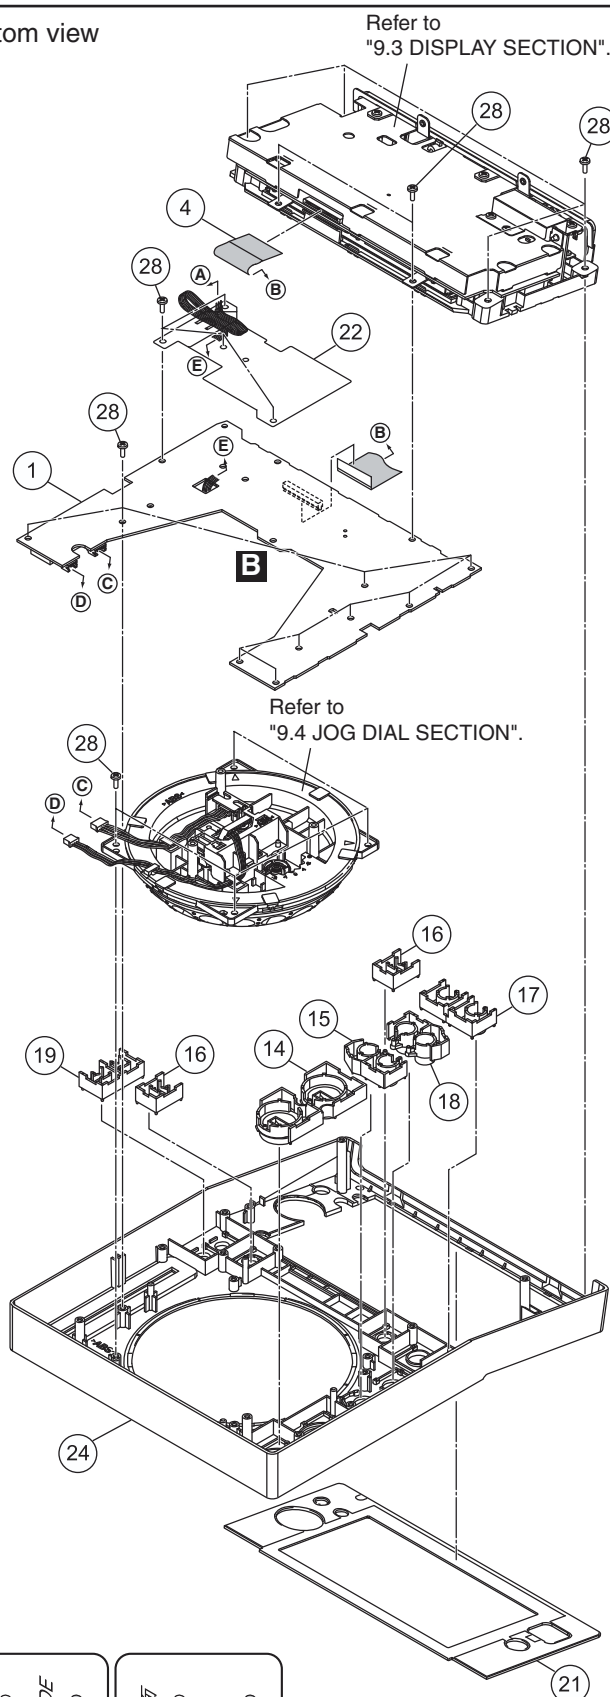

9.3 DISPLAY SECTION

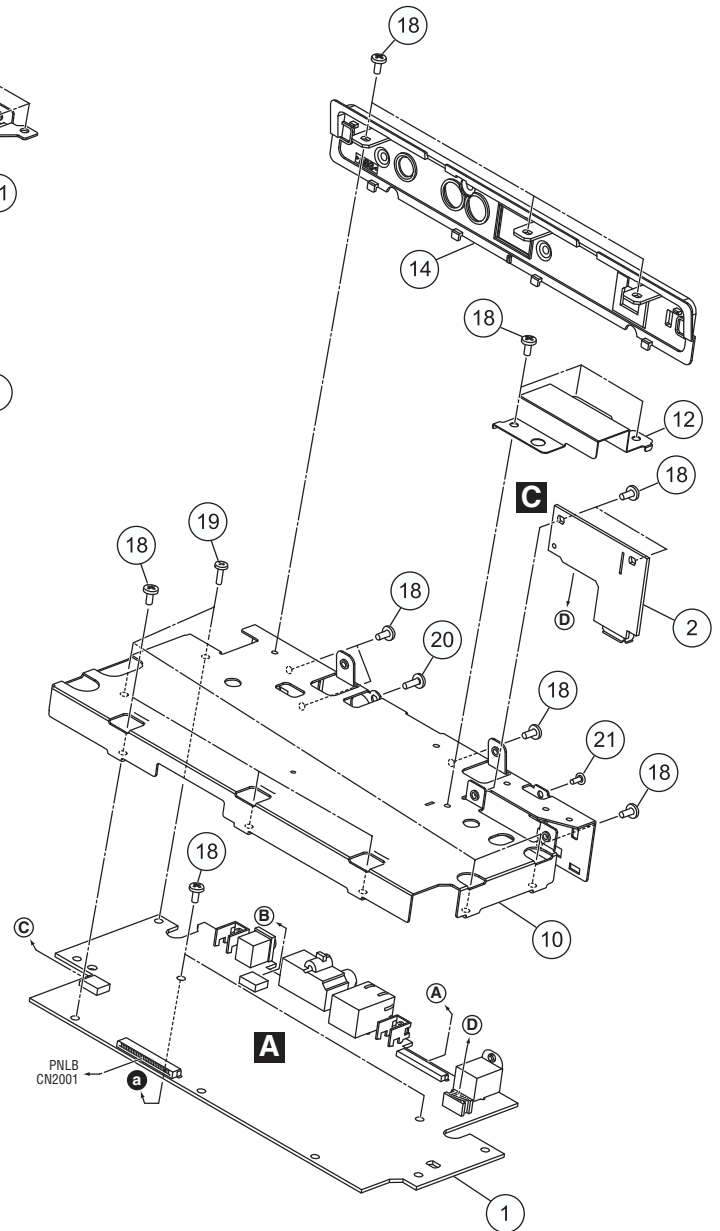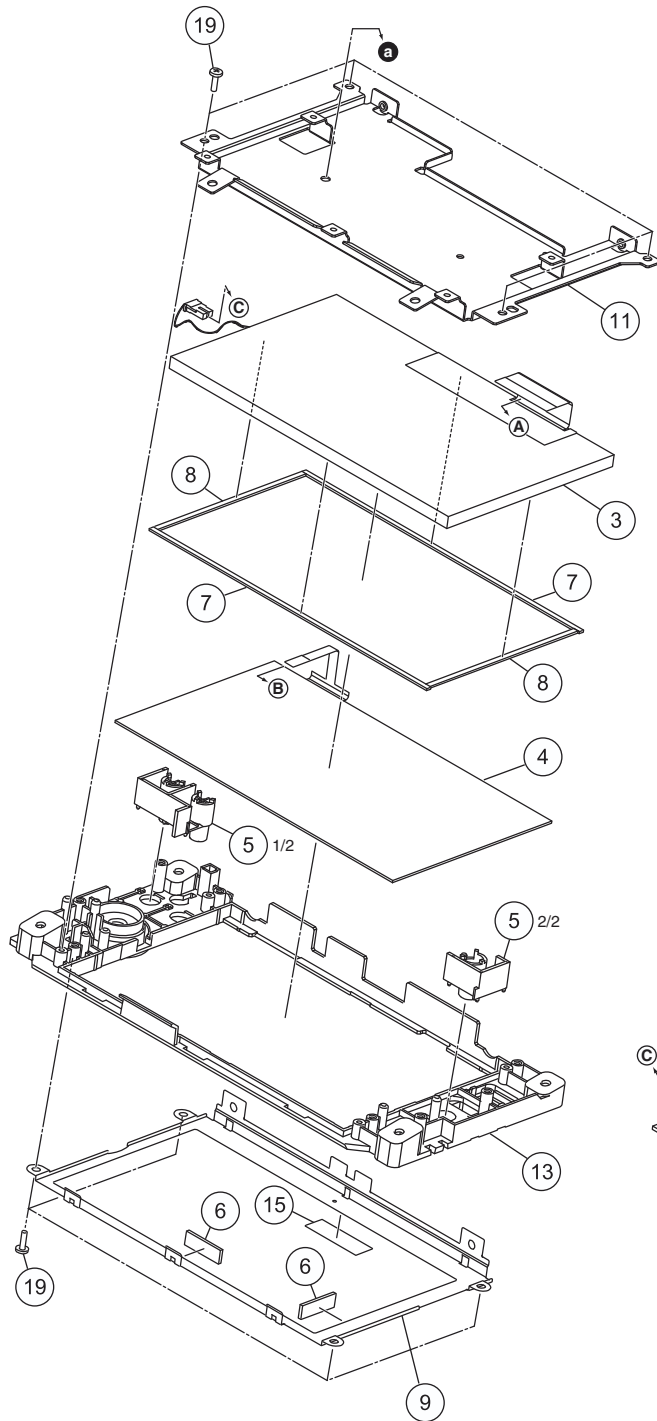


DISPLAY SECTION PARTS LIST



Mark No.	Description	Part No.
A	1 MAIN Assy	DWX3744
	2 USBA Assy	DWX3749
	3 TFT LCD	CWX4352
	4 Touch Panel	DSX1130
	5 Button	DAC3145
	6 Packing/LCD	DEC3565
	7 Packing/L	DEC3568
	8 Packing/S	DEC3569
	9 Bracket	DNH3234
	10 Shield Case	DNH3235
B	11 Stay	DNH3236
	12 Bridge	DNH3242
	13 Base	DNK6525
	14 Rear Panel	DNK6528
	15 Tape	DEC3655
	16	
	17	
	18 Screw	BBZ30P060FTB
	19 Screw	BPZ26P080FTC
	20 Screw	BPZ30P080FNI
C	21 Screw (M3*5)	DBA1340

9.4 JOG DIAL SECTION

• Bottom view

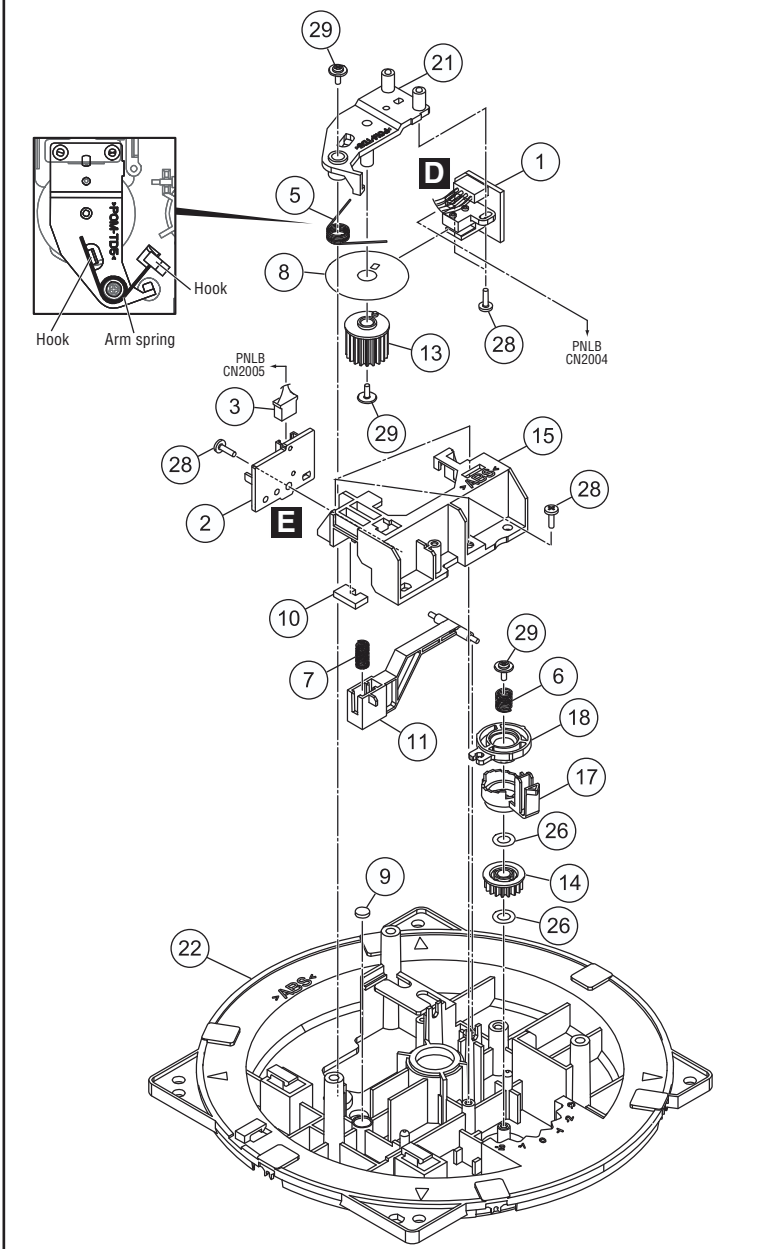

■ Locations of grease application / グリス塗布位置

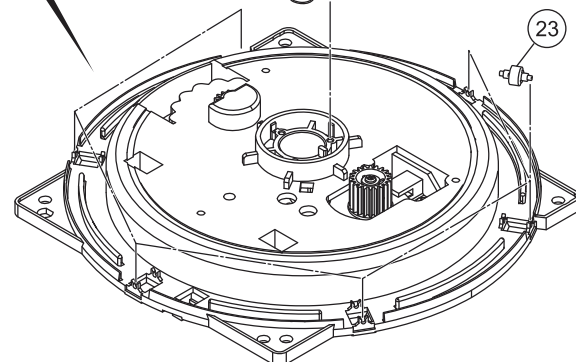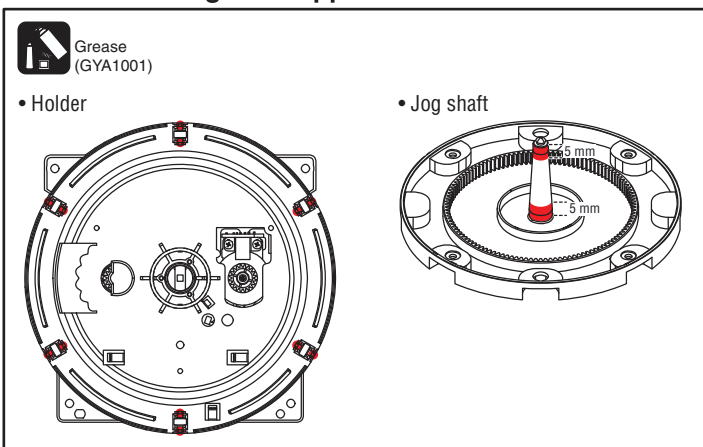

JOG DIAL SECTION PARTS LIST

	Mark No.	Description	Part No.
A	1	JOGB Assy	DWX3746
	2	TCHB Assy	DWX3747
	3	Connector Assy	PF03PP-B17
	4	Plate	DAH3058
	5	Arm Spring	DBH1612
	6	Load Spring	DBH1676
	7	Lever Spring	DBH1726
	8	Encorder Plate	DEC2889
	9	Lever Cushion (A)	DEC3001
	10	Cushion	DEC3654
B	11	Jog Lever	DNK4763
	12	Jog Shaft	DNK4934
	13	Encorder Gear	DNK4937
	14	Load Gear	DNK5178
	15	Lever Holder	DNK5206
	16	Shaft Holder	DNK5514
	17	Cam Plate	DNK5546
	18	Push Plate	DNK5547
	19	Jog Dial A	DNK5574
	20	Jog Dial	DNK6522
C	21	Arm	DNK6523
	22	Holder	DNK6524
	23	Roller A Assy	DXB1825
	24		
	25		
	26	Washer	WA41D070D025
	27	Washer	WT32D080D050
	28	Screw	BPZ20P060FTC
	29	Screw (FE)	DBA1265

E

F