


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

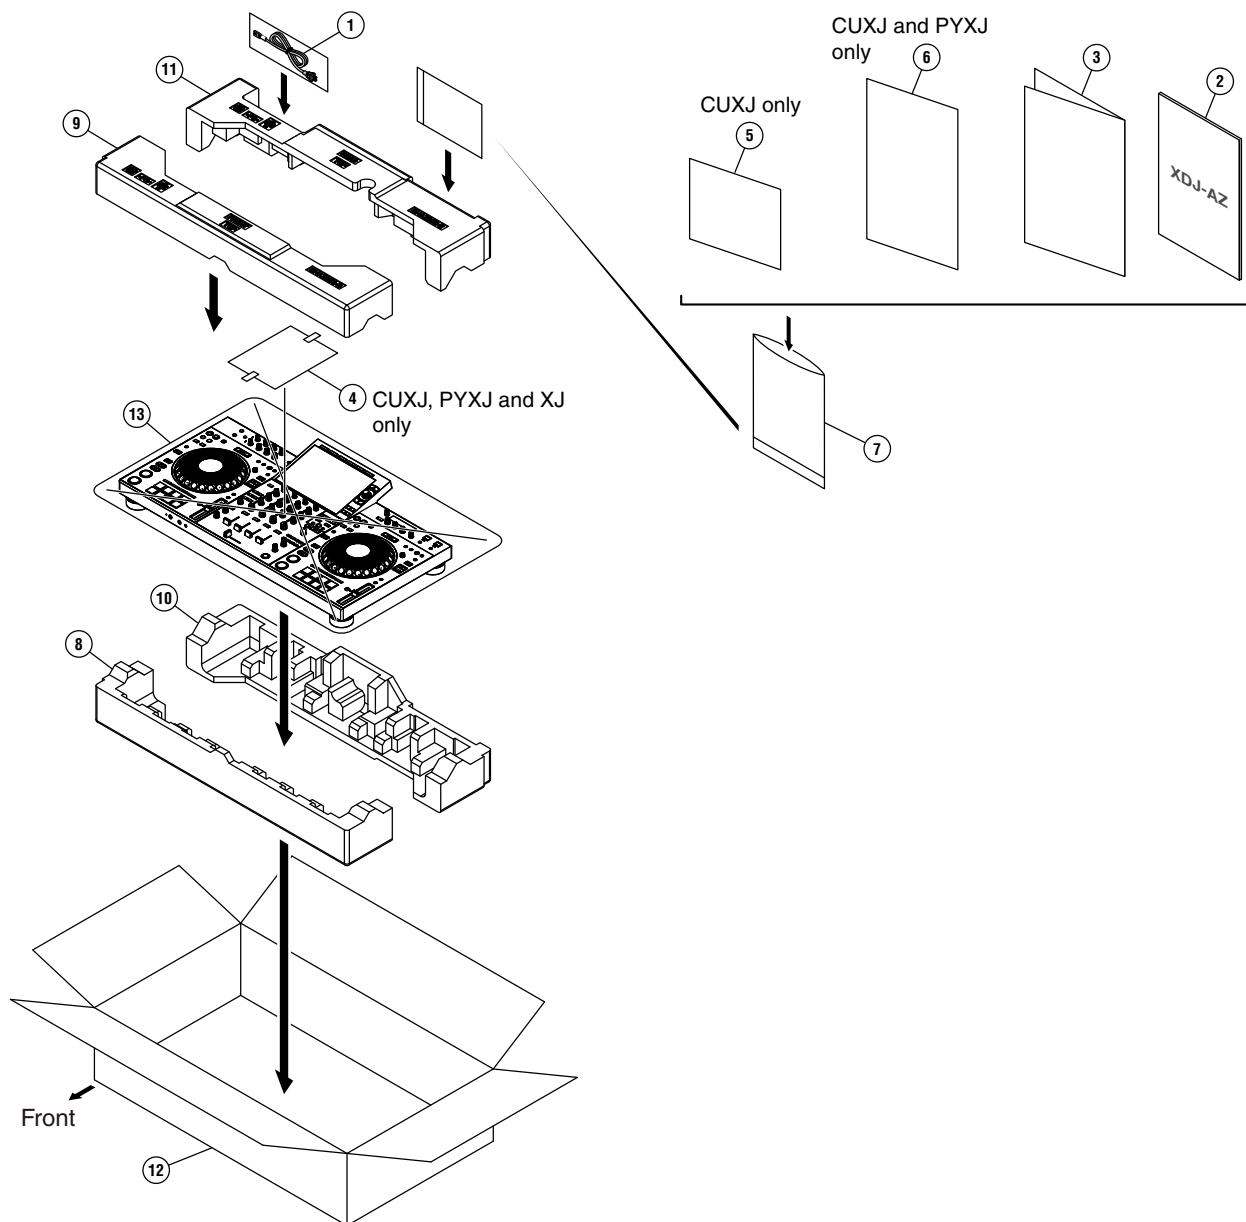

(1) PACKING SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A		1 Power cord	See Contrast table (2)	NSP 6	Warranty	See Contrast table (2)
		2 Quick Start Guide	See Contrast table (2)	NSP 7	Polyethylene Bag 0.06*230*340	AHG7117
		3 Precautions for Use	See Contrast table (2)	8	Packing Pad	DHA2059
	NSP 4	Leaflet	See Contrast table (2)	9	Packing Pad	DHA2060
	NSP 5	Leaflet	See Contrast table (2)	10	Packing Pad	DHA2061
				11	Packing Pad	DHA2062
				12	Packing Case	See Contrast table (2)
				13	Mirror Mat	DHL1201

(2) CONTRAST TABLE

XDJ-AZ/CUXJ, PYXJ, XJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-AZ/CUXJ	XDJ-AZ/PYXJ	XDJ-AZ/XJ	XDJ-AZ/XJCN
NSP	1	 Power cord	DDG1108	ADG1244	ADG1244	DDG1114
	2	Quick Start Guide	DRH1792	DRH1792	DRH1792	DRH1793
	3	Precautions for Use	DRH1794	DRH1794	DRH1794	DRH1796
	4	Leaflet	DRH1797	DRH1797	DRH1797	Not used
	5	Leaflet	DRH1799	Not used	Not used	Not used
NSP	6	Warranty	DRY1283	DRY1280	Not used	Not used
	12	Packing Case	DHG3939	DHG3937	DHG3938	DHG3941

A



Refer to
"9.7 LCD SECTION".

Refer to /
"9.4 CONTROL PANEL SECTION (1/3)".

Refer to
"9.3 CHASSIS SECTION".

C

D

E

F

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 USBA Assy	DWX5019	26	Slider Knob 2	DAC2685
	2 MCTR Assy	DWX5038	27	Knob	DAC3238
	3 STL1 Assy	DWX5053	28	Knob	DAC3705
	4 STL2 Assy	DWX5054	29	Slider Knob Stopper	DNK5888
	5 STL3 Assy	DWX5055	30	Stopper	DNK6440
B	6 Shielded Conn-Cable	DDA1115	31	Knob/SLD	DNK5981
	7 Shielded Conn-Cable	DDA1116	32	Knob	DAA1435
	8 FFC	DDD2205	33	Knob	DAA1470
	9 FFC	DDD2206	34	Knob	DAA1444
	10 Complex Conn-Cable	DDE1159	35	Panel	DNK7136
C	11 Gasket	DEC4155	NSP	36 Rear Panel	See Contrast table (2)
	12 Stay	DNH3614		37 Label	See Contrast table (2)
	13 Stay	DNH3615		38 Screw	BBZ30P060FTB
	14 Chassis	DNK7189		39 Screw	BBZ30P060FTC
	15 Insulator	DXB2215		40 Screw	BPZ30P080FTC
D	16 Holder	VEC1355		41 Screw	BPZ30P120FTB
	17 Cord Clamper	DEX1025		42 DM Screw (FTC)	DBA1260
	18 Rotary SW Knob (C)	DAA1180			
	19 Select Knob	DAA1205			
	20 Knob/RSW	DAA1305			
E	21 Knob	DAA1462			
	22 Knob	DAA1490			
	23 Knob	DAA1409			
	24 Knob	DAA1432			
	25 Knob	DAA1434			

(2) CONTRAST TABLE

XDJ-AZ/CUXJ, PYXJ, XJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-AZ/CUXJ	XDJ-AZ/PYXJ	XDJ-AZ/XJ	XDJ-AZ/XJCN
NSP	36	Rear Panel	DAH3441	DAH3441	DAH3441	DAH3442
	37	Label	DRW3080	DRW3080	DRW3080	Not used

9.3 CHASSIS SECTION


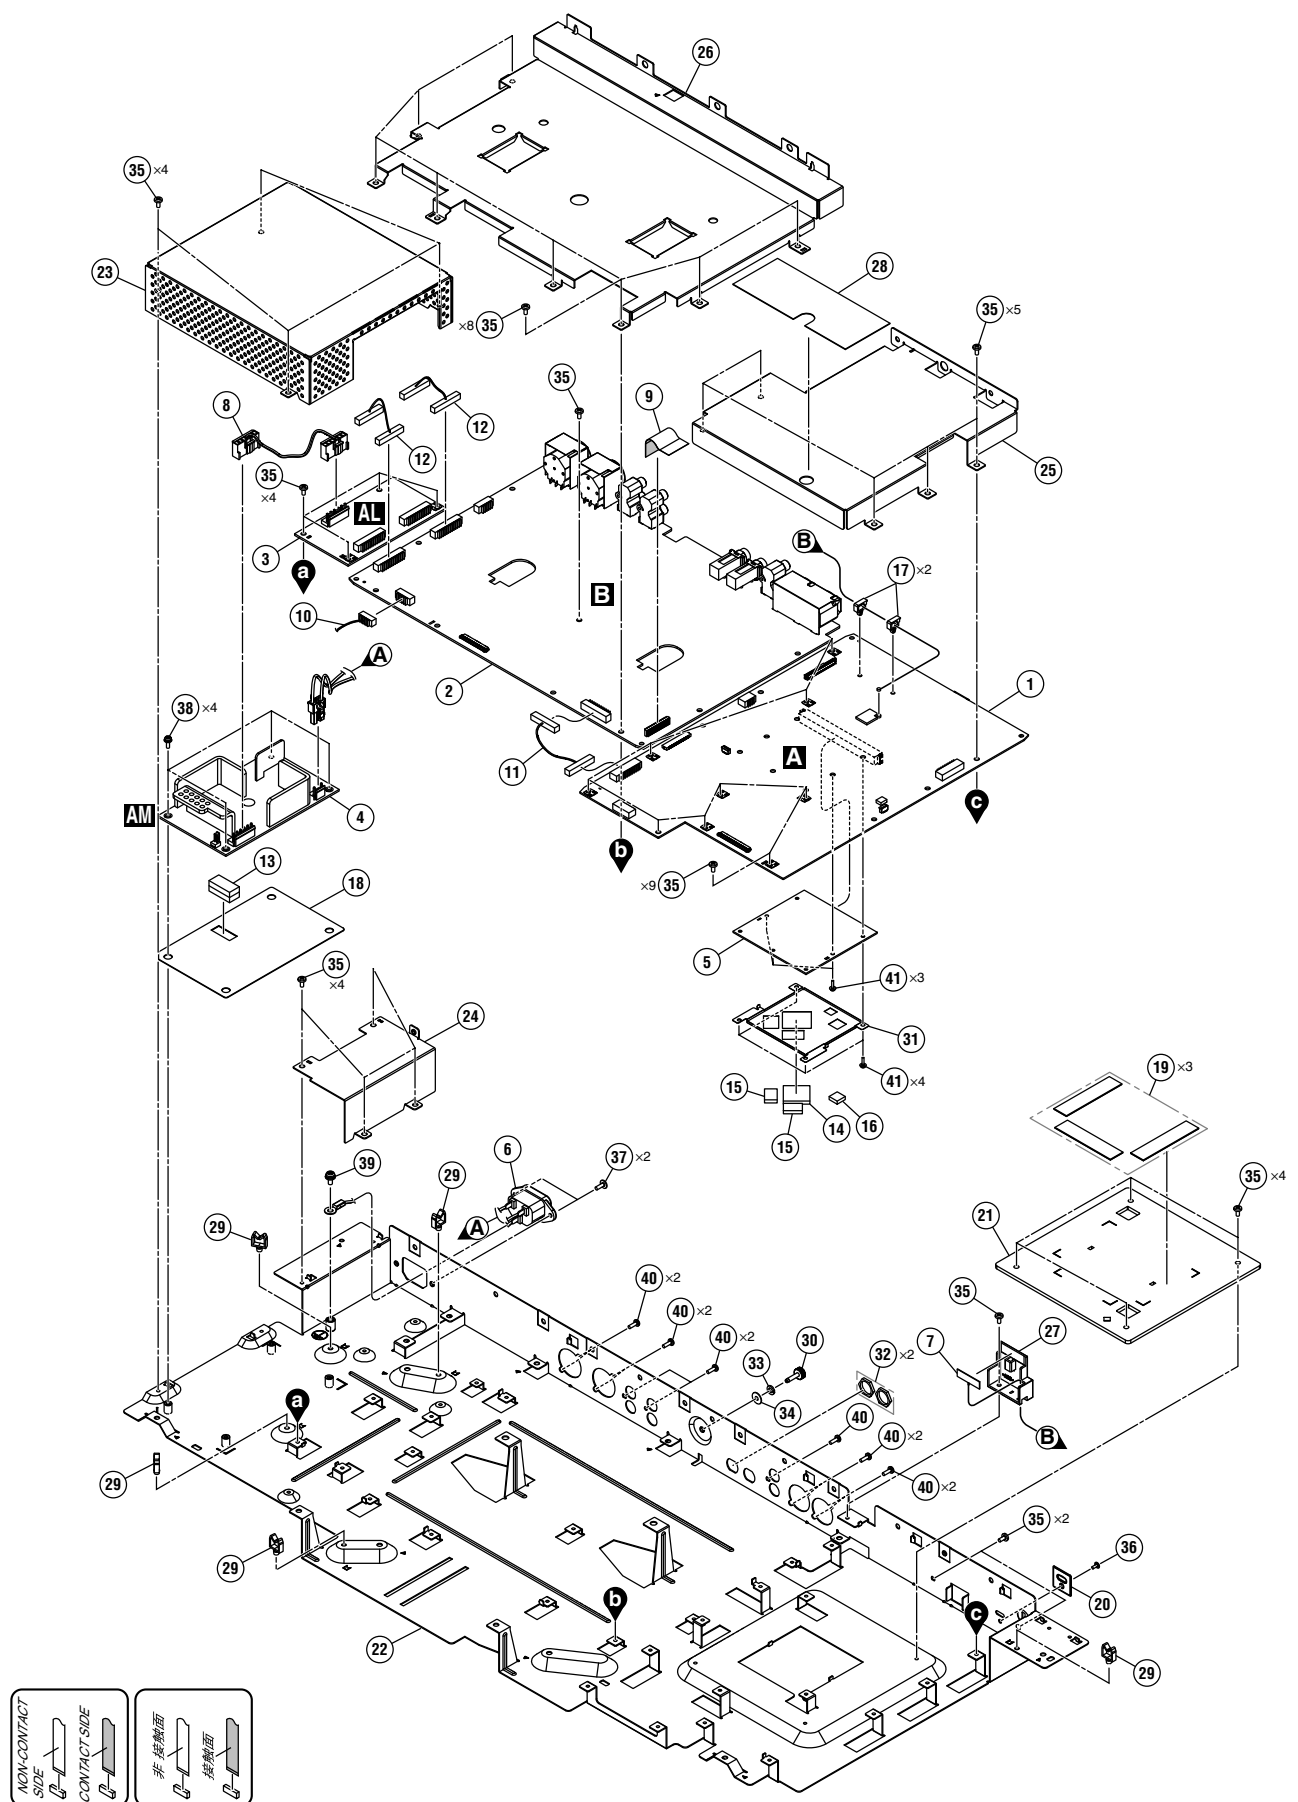


CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 MAIN Assy	DWX5013
	2 AUDIO Assy	DWX5014
	3 PWRB Assy	DWX5028
	⚠ 4 SW POWER SUPPLY	DWR1590
	5 SoM Module	DWX4722
B	⚠ 6 AC Inlet	DKP4000
	7 Wi-Fi Antenna	DSD1005
	8 Crimp Connector	DDC1059
	9 FFC	DDD2204
	10 Parallel Jumper	PF06HH-D35A
C	11 Parallel Jumper	PF12HH-S10A
	12 Parallel Jumper	PF13HH-S05A
	13 Heat Cond Sheet	DEB2091
	14 Heat Cond Sheet	DEB2092
	15 Heat Cond Sheet	DEB2093
D	16 Heat Cond Sheet	DEB2094
	17 Locking Mini Clamp	DEC2439
	⚠ 18 Barrier	DEC4052
	19 EMI Absorb Sheet	DEC4091
	20 Sheet	DEC4182
E	21 Heat Sink	DNH3535
	22 Stay	DNH3616
	23 Shield Case	DNH3617
	24 Shield Case	DNH3618
	25 Shield Case	DNH3619
F	26 Shield Case	DNH3620
	27 Holder	DNK7188
	28 EMI Absorb Sheet	DEC4213
	29 Holder	VEC1355
	30 Earth Terminal	DKE1015
G	31 Shield Case	DNH3526
	32 Nut (M12)	NKX2FNI
	33 Washer	WA32F100Q050
	34 Spring Lock Washer	WS40FNI
	35 Screw	BBZ30P060FTC
H	36 Screw (M3*5)	DBA1340
	37 Screw	IBZ30P080FTB
	38 Screw	PMH30P080FTB
	39 Screw	PMH40P080FTC
	40 Screw	PPZ30P080FTB
I	41 Screw	PMB20P080FNI

9.4 CONTROL PANEL SECTION (1/3)

• Bottom view

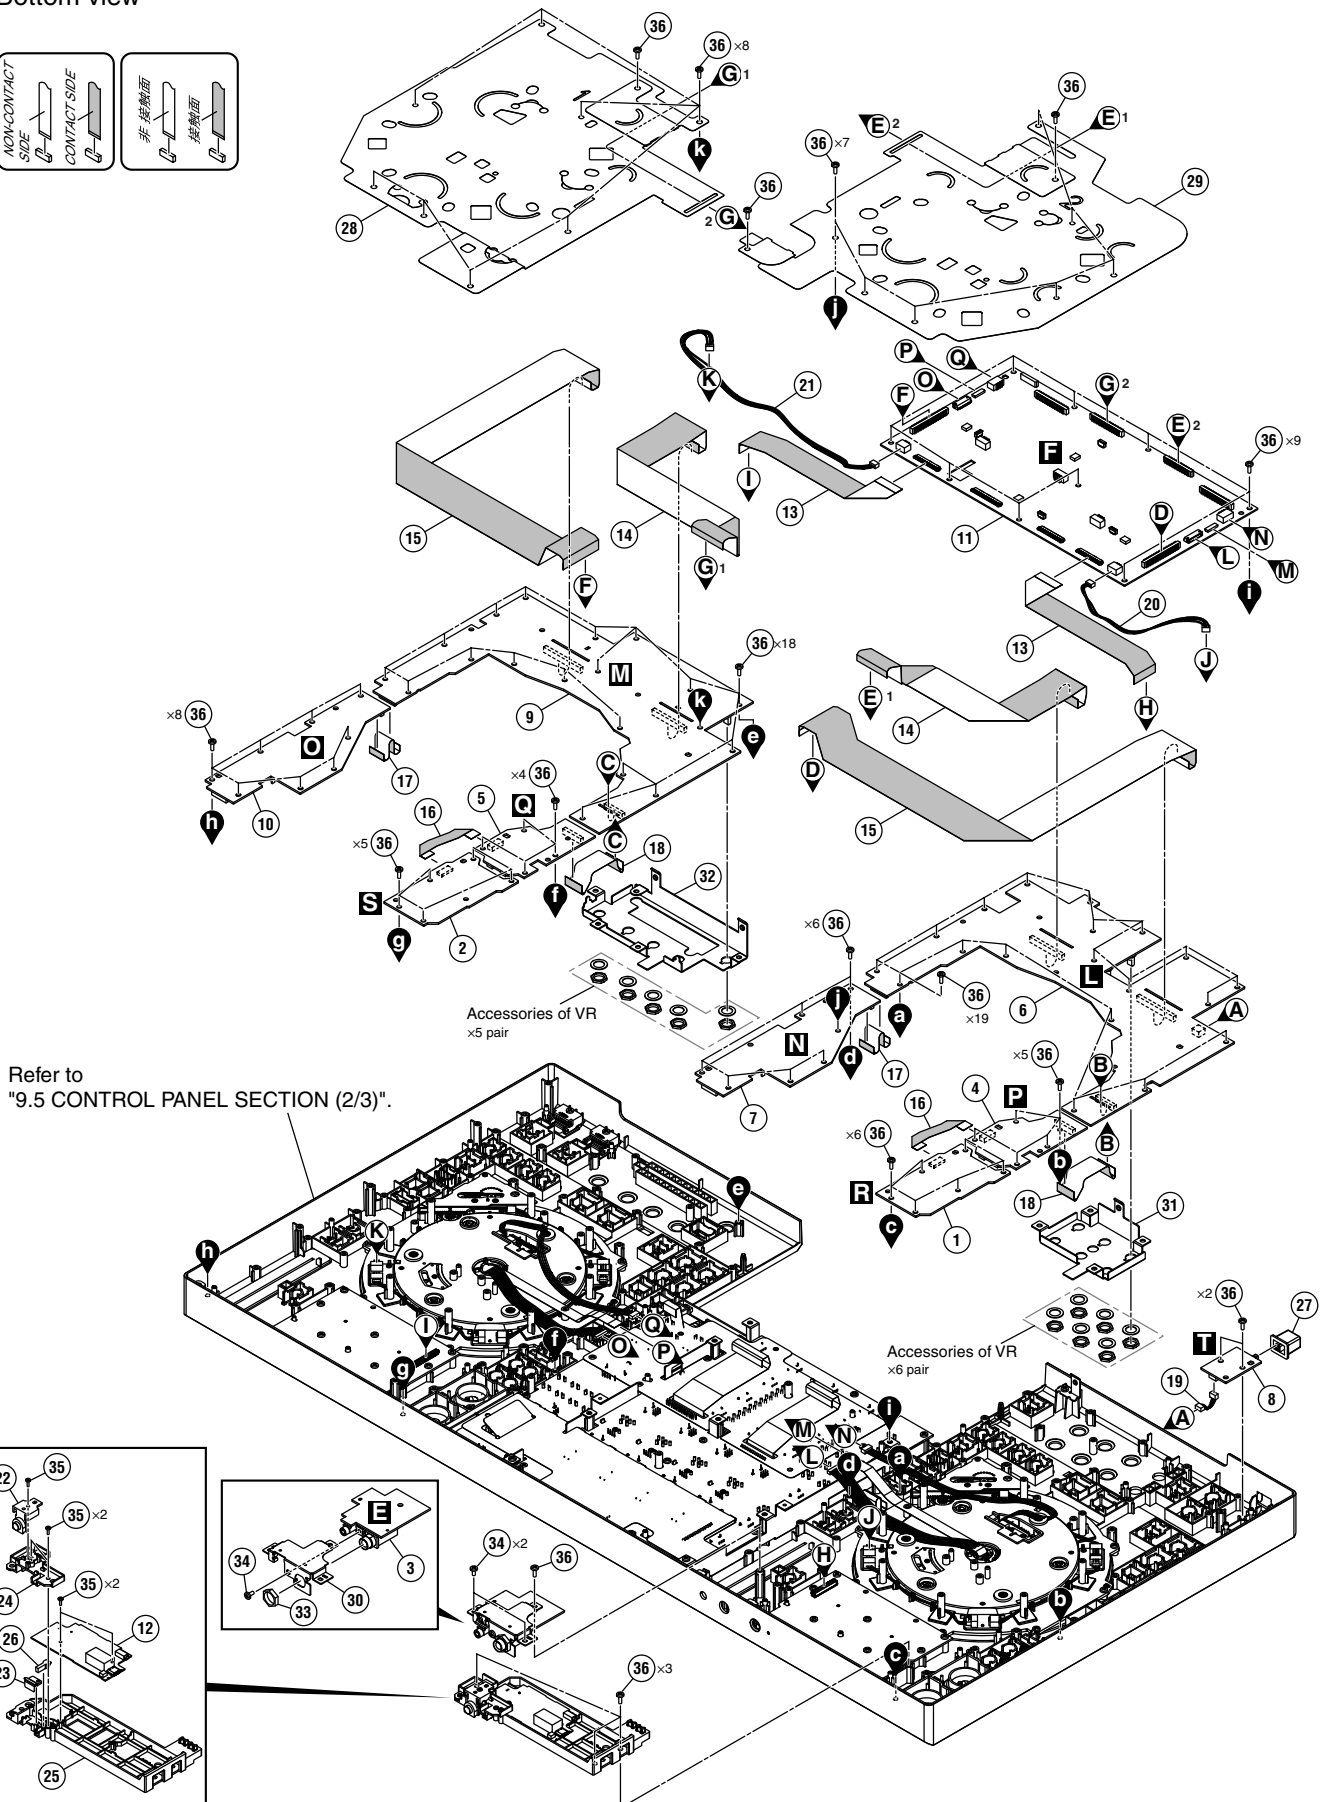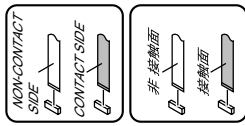


1 2 3 4

CONTROL PANEL SECTION (1/3) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	PLAY1 Assy	DWX5041
	2	PLAY2 Assy	DWX5042
	3	HPJK Assy	DWX5037
	4	SER1 Assy	DWX5039
	5	SER2 Assy	DWX5040
B	6	DCKL Assy	DWX5044
	7	TMP1 Assy	DWX5045
	8	PWSW Assy	DWX5050
	9	DCKR Assy	DWX5046
	10	TMP2 Assy	DWX5047
C	11	UCOM Assy	DWX5015
	12	SonicLink Module	DWX5139
	13	FFC	DDD2209
	14	FFC	DDD2213
	15	FFC	DDD2214
D	16	FFC	DDD2215
	17	FFC	DDD2218
	18	FFC	DDD2219
	19	Parallel Jumper	PF03HH-B05A
	20	Parallel Jumper	PF03HH-B15A
E	21	Parallel Jumper	PF03HH-B30A
	22	Button	DAC3738
	23	Lever	DNK7196
	24	Holder	DNK7197
	25	Case	DNK7198
F	26	Lens	DNK7199
	27	Power Knob	DAC2306
	28	Barrier	DEC4170
	29	Barrier	DEC4171
	30	Stay/HP	DNH3182
G	31	Stay	DNH3625
	32	Stay	DNH3626
	33	Nut	DBN1028
	34	Screw	BBZ30P060FTC
	35	Screw	BPZ20P060FTC
H	36	Screw	BPZ30P080FTC

9.5 CONTROL PANEL SECTION (2/3)

• Bottom view

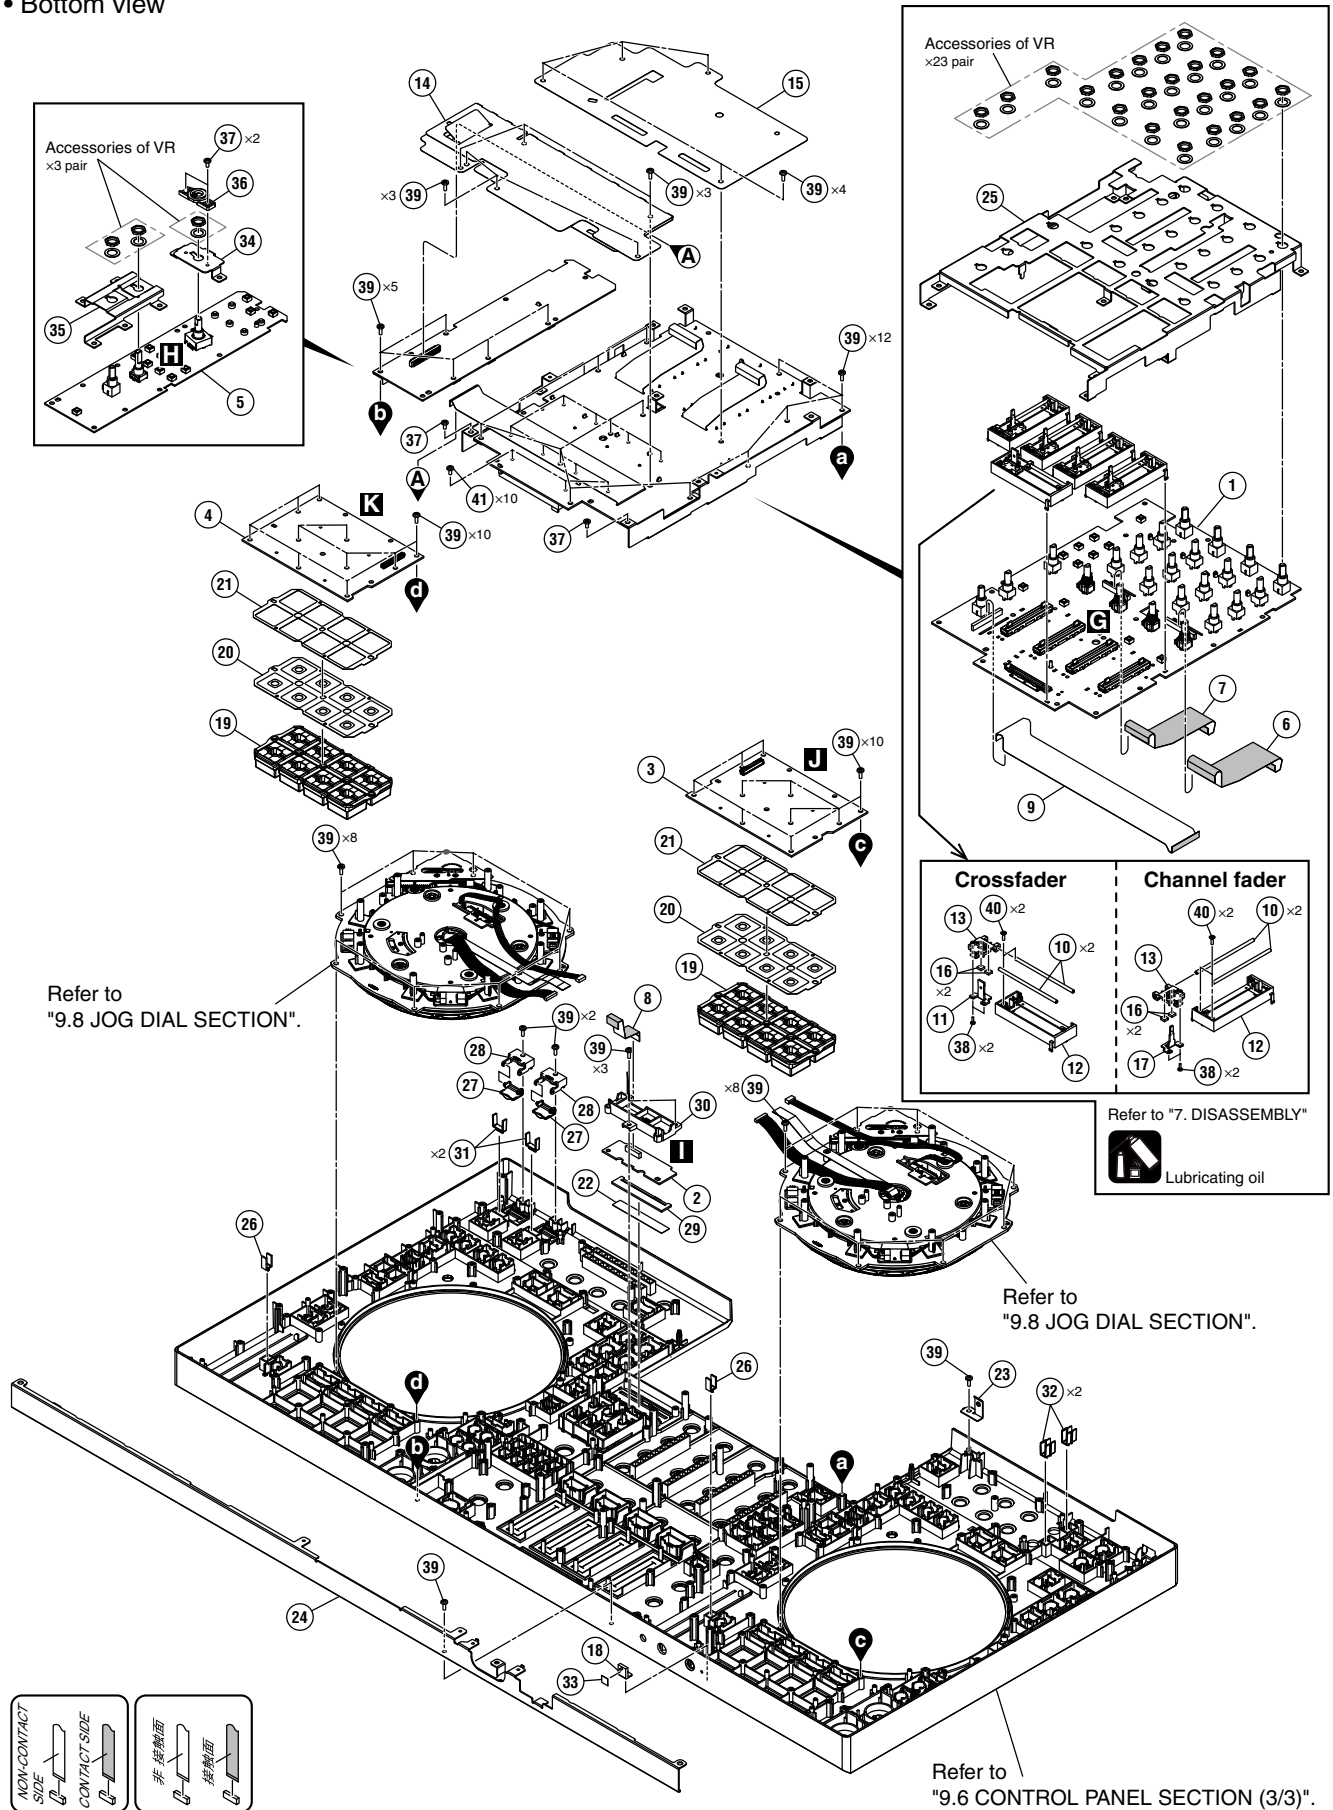


1 2 3 4

CONTROL PANEL SECTION (2/3) PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 MIXER Assy	DWX5016
	2 XPAD Assy	DWX5018
	3 PADL Assy	DWX5024
	4 PADR Assy	DWX5025
	5 EFSW Assy	DWX5043
B	6 FFC	DDD2211
	7 FFC	DDD2212
	8 FFC	DDD2216
	9 FFC	DDD2217
	10 Guide Shaft VK1	DLA1978
C	11 Lever	DNH3505
	12 Holder	DNK7070
	13 Slider	DNK7071
	14 Barrier	DEC4172
	15 Barrier	DEC4173
D	16 Cushion	DEC3640
	17 Lever	DNH3504
	18 Lens	DNK7200
	19 Button	DEB2075
	20 Sheet	DEC3739
E	21 Spacer	DEC3740
	22 DS Tape	DEH1125
	23 Bracket	DNH3312
	24 Frame	DNH3624
	25 Stay	DNH3629
F	26 Lens	DNK5862
	27 Door	DNK6497
	28 Holder	DNK6710
	29 Lens	DNK7052
	30 Holder	DNK7068
G	31 Lens	DNK7201
	32 Lens	DNK7202
	33 DS Tape	DEH1111
	34 Stay	DNH3627
	35 Stay	DNH3628
H	36 Stopper	DNK7069
	37 Screw	BBZ30P060FTC
	38 Screw	BPZ20P060FTC
	39 Screw	BPZ30P080FTC
	40 Screw	CPZ26P080FTC
I	41 Screw	IPZ20P080FTC

5 6 7 8

9.6 CONTROL PANEL SECTION (3/3)

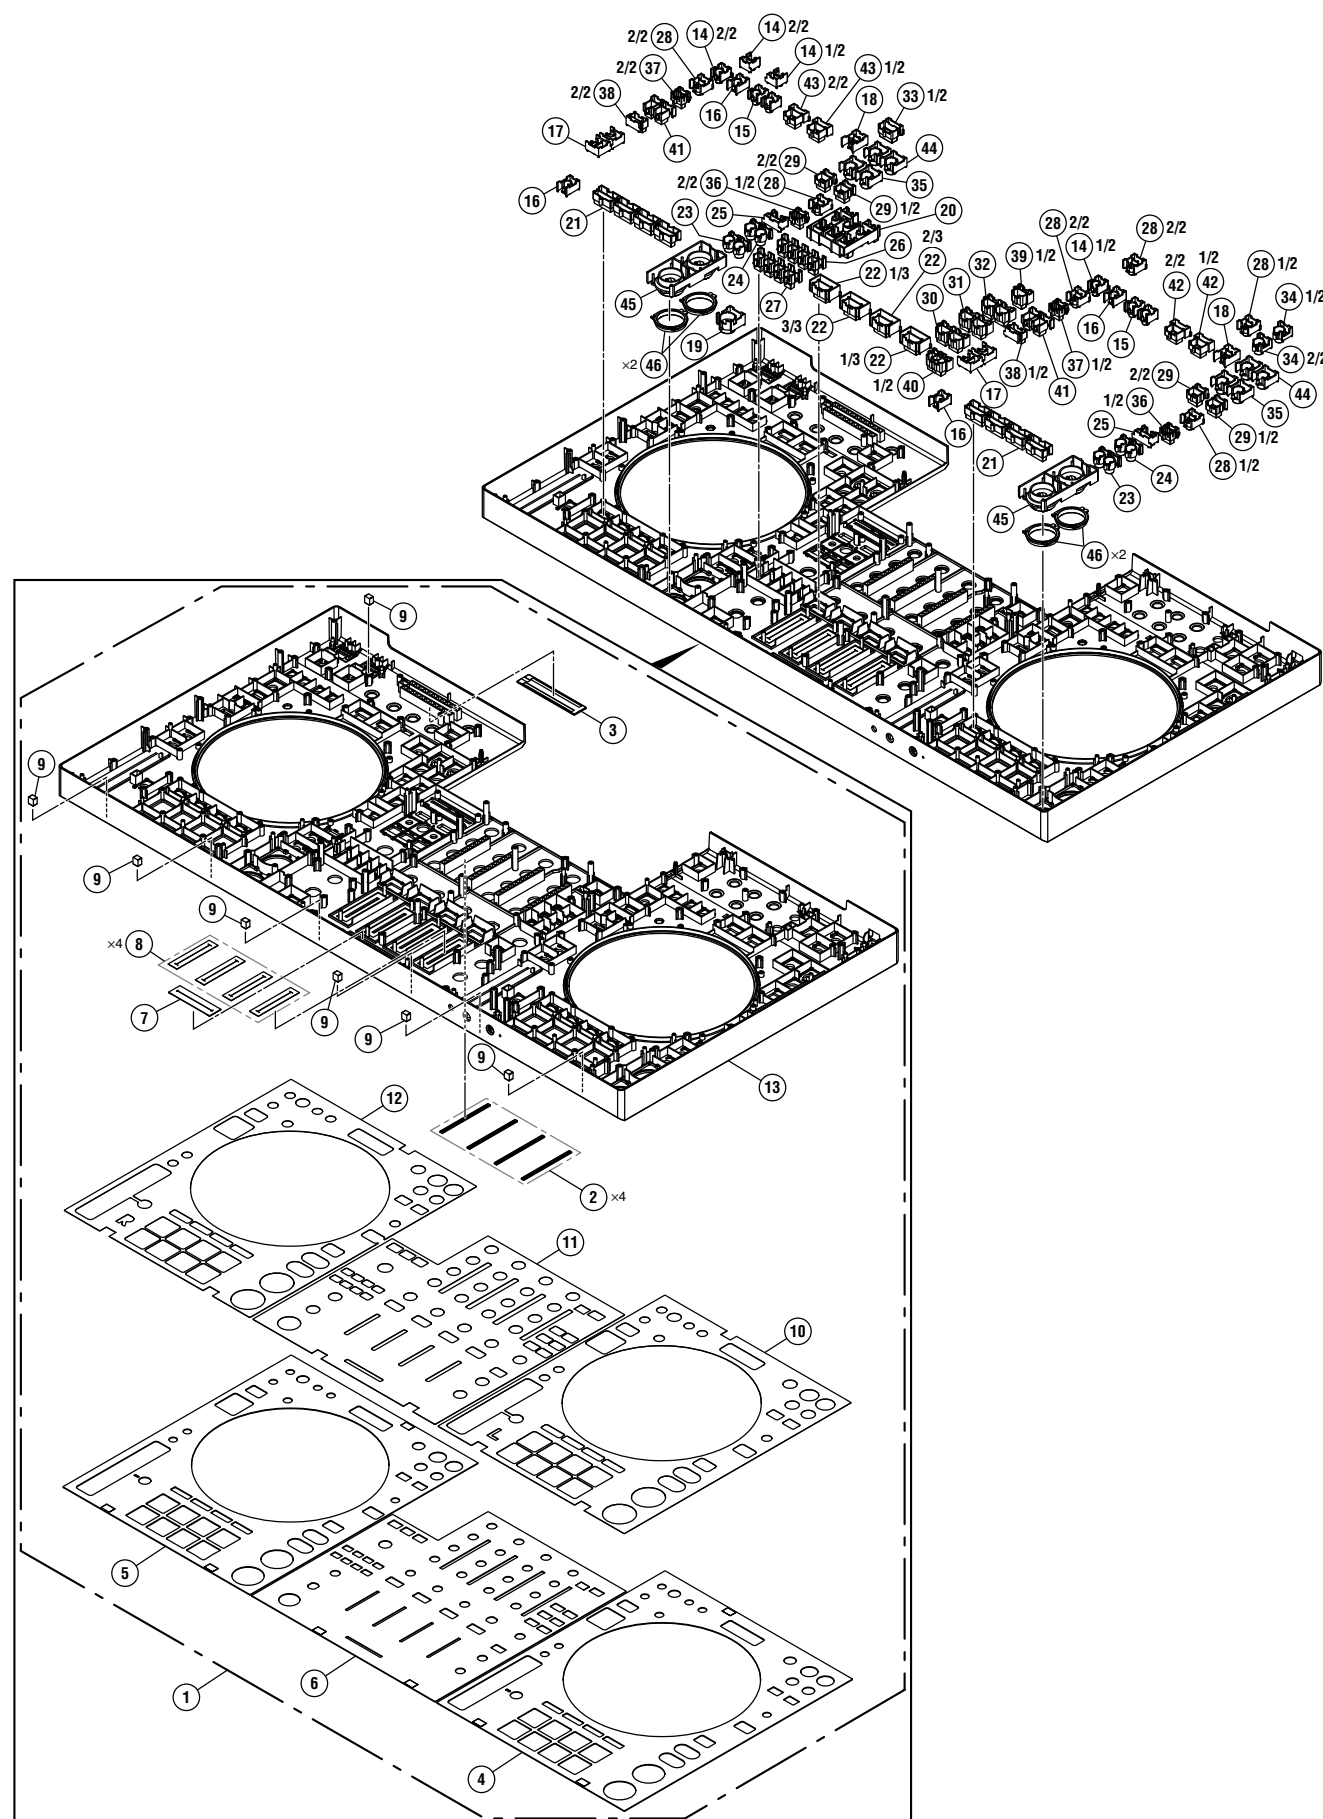


● Cut position

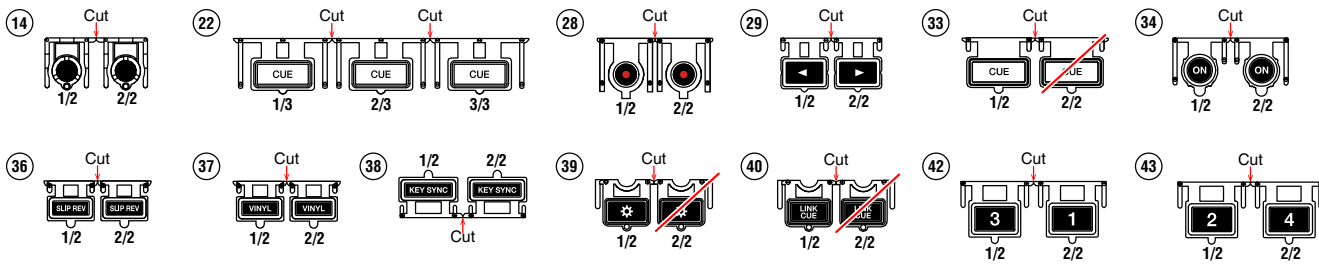


CONTROL PANEL SECTION (3/3) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	1..XDJ-AZ Panel Service Assy	DEA1181	31	Button	DAC3666
NSP 2	2..Plate	DAH3267	32	Button	DAC3667
NSP 3	2..Plate	DAH3437	33	Button	DAC3739
NSP 4	2..Plate	DAH3438	34	Button	DAC3740
NSP 5	2..Plate	DAH3439	35	Button	DAC3741
NSP 6	2..Plate	DAH3440	36	Button	DAC3742
7	2..Packing	DEC3642	37	Button	DAC3743
8	2..Sheet	DEC3795	38	Button	DAC3744
9	2..Gasket	DEC4159	39	Button	DAC3745
NSP 10	2..DS Tape	DEH1154	40	Button	DAC3746
NSP 11	2..DS Tape	DEH1155	41	Button	DAC3747
NSP 12	2..DS Tape	DEH1156	42	Button	DAC3748
NSP 13	2..Control Panel	DNK7203	43	Button	DAC3773
14	Button/TMP	DAC2845	44	Button	DAC3774
15	Button/CAL	DAC3020	45	Button Unit	DXB2238
16	Button/DLT	DAC3021	46	Ring Lens (PLAY)	DNK5315
17	Button/MT	DAC3029			
18	Button/REL	DAC3030			
19	Button	DAC3670			
20	Button	DAC3142			
21	Button	DAC3285			
22	Button	DAC3287			
23	Button	DAC3363			
24	Button	DAC3413			
25	Button	DAC3502			
26	Button	DAC3807			
27	Button	DAC3634			
28	Button	DAC3646			
29	Button	DAC3663			
30	Button	DAC3665			

9.7 LCD SECTION

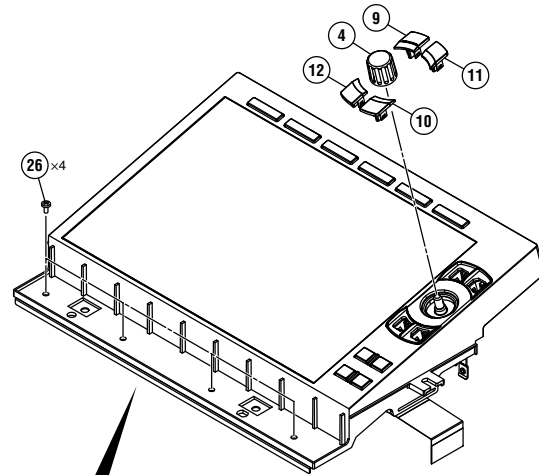

• Bottom view

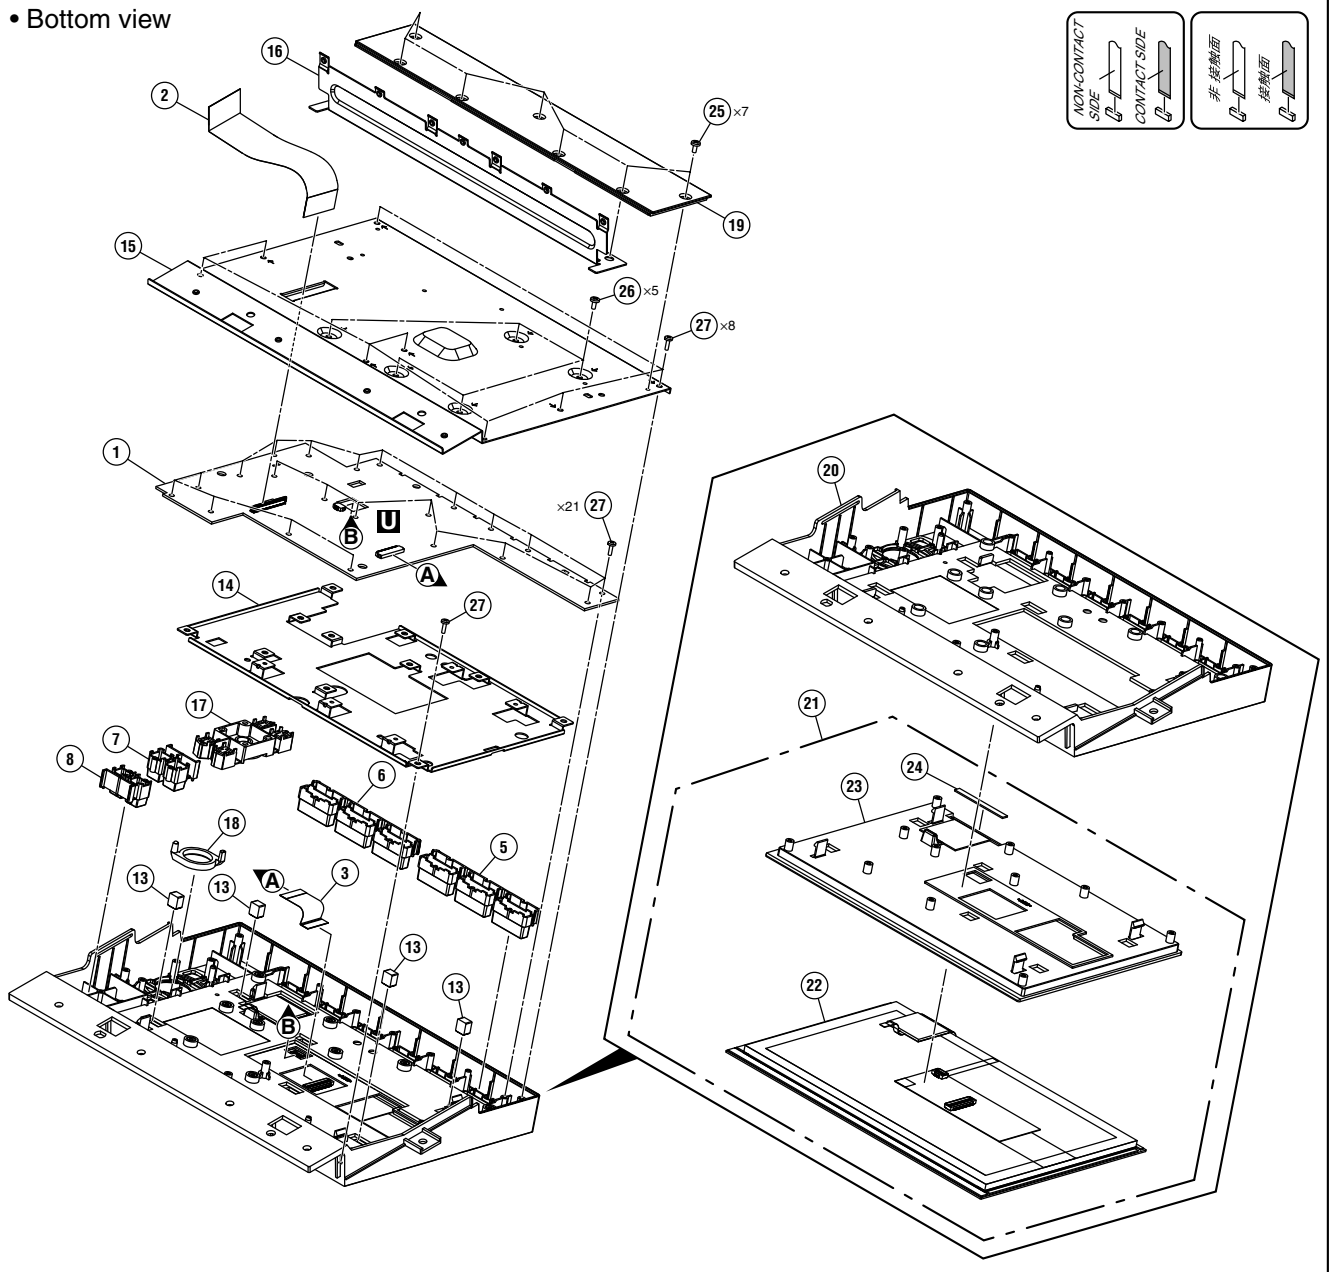

1

2

3

4

LCD SECTION PARTS LIST



Mark No.	Description	Part No.
A	1 LCDB Assy	DWX5017
	2 FFC	DDD2207
	3 FFC	DDD2208
	4 Knob	DAA1489
	5 Button	DAC3804
	6 Button	DAC3805
	7 Button	DAC3589
	8 Button	DAC3737
	9 Button	DAC3749
	10 Button	DAC3750
B	11 Button	DAC3751
	12 Button	DAC3752
	13 Gasket	DEC4159
	14 Stay	DNH3621
	15 Shield Case	DNH3622
	16 Angle	DNH3623
	17 Button	DNK7190
	18 Lens	DNK7191
	19 Cover	DNK7193
	20 Panel	DNK7194
C	21 1..LCD Holder Assy	DEA1183
	NSP 22 2..LCD Module	
	NSP 23 2..Holder	
	NSP 24 2..Cushion	
	25 Screw	BBZ30P060FTB
	26 Screw	BBZ30P060FTC
	27 Screw	BPZ26P080FTC

D


E

F


9.8 JOG DIAL SECTION

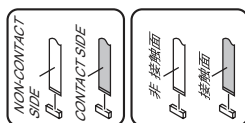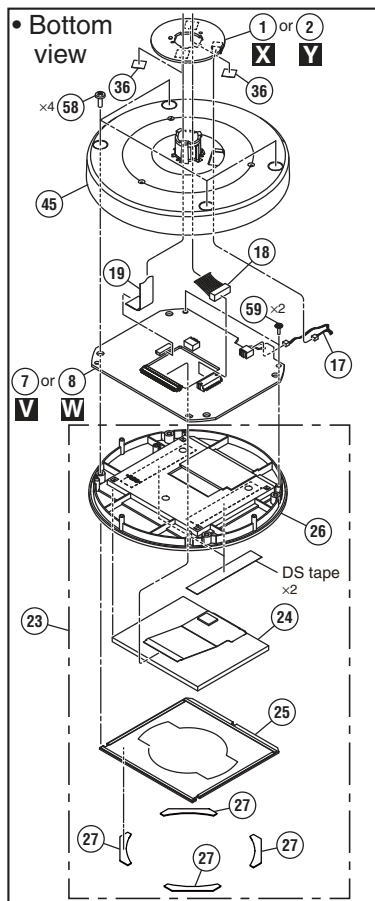



Refer to "7. DISASSEMBLY"

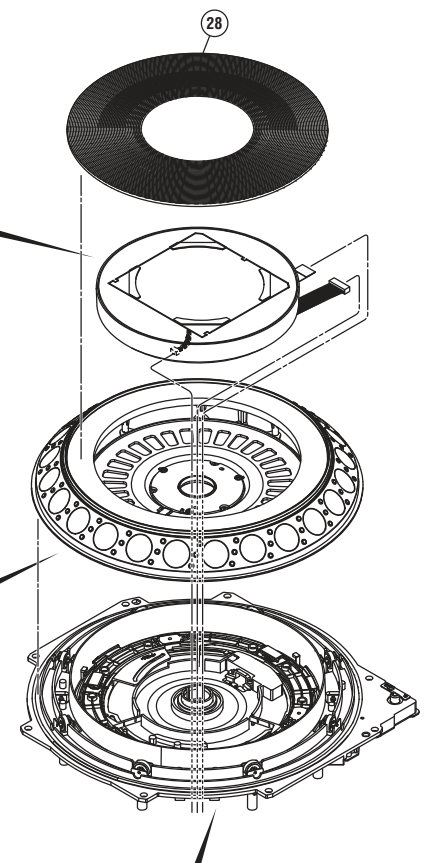

• Bottom view

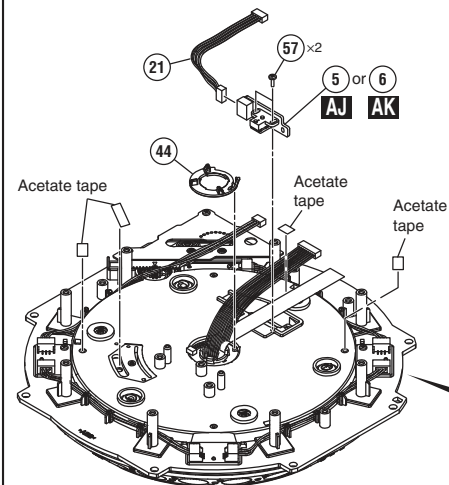

• Bottom view

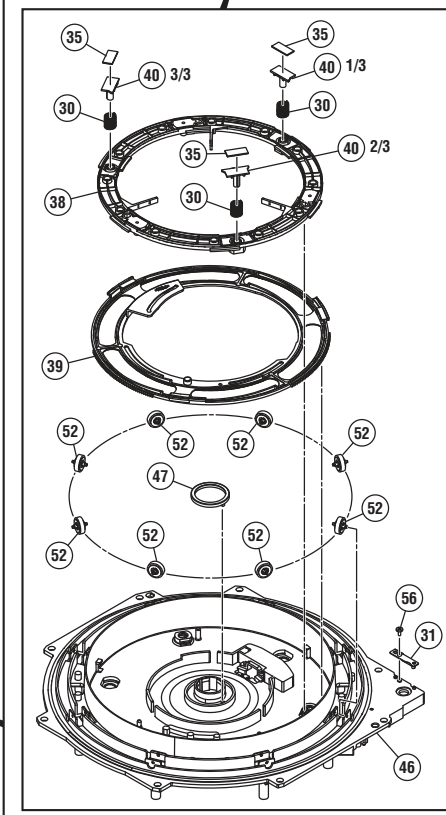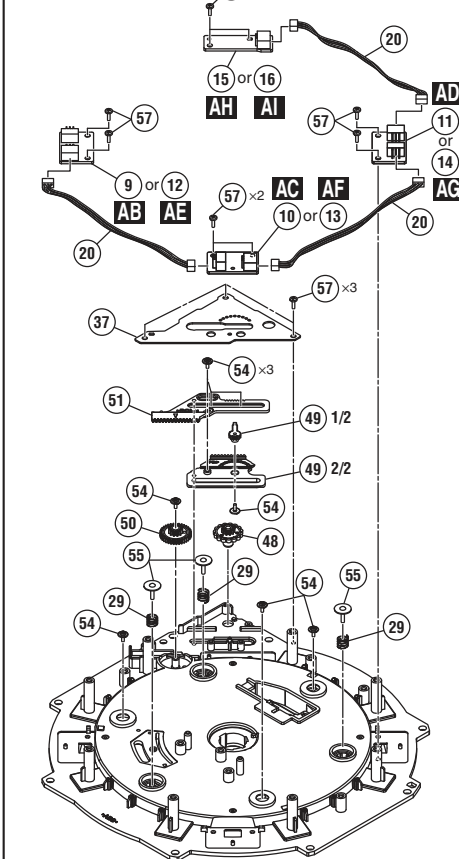

JOG DIAL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	COILU1 Assy	DWX5020	46	Holder	DNK6784
	2	COILU2 Assy	DWX5021	47	Shaft	DNK6785
	3	COILD1 Assy	DWX5022	48	Gear	DNK6786
	4	COILD2 Assy	DWX5023	49	Gear	DNK6787
	5	JOG1 ASSY	DWX5048	50	Gear	DNK6788
	6	JOG2 ASSY	DWX5049	51	Gear	DNK6789
	7	JLCDL Assy	DWX5026	52	Roller	DXB2178
	8	JLCDR Assy	DWX5027	53	Damper	DEB2083
	9	JILM1 Assy	DWX5029	54	Screw (FE)	DBA1265
	10	JILM2 Assy	DWX5030	55	Float Screw	DBA1286
B	11	JILM3 Assy	DWX5031	56	Screw	BPZ20P040FTB
	12	JILM4 Assy	DWX5032	57	Screw	BPZ20P060FTC
	13	JILM5 Assy	DWX5033	58	Screw	BPZ30P080FTC
	14	JILM6 Assy	DWX5034	59	Screw	IPZ20P060FTC
	15	JILME1 Assy	DWX5035	60	Screw	IPZ20P080FTC
	16	JILME2 Assy	DWX5036			
	17	Crimp Connector	DDC1033			
	18	Crimp Connector	DDC1058			
	19	FFC	DDD2210			
	20	Parallel Jumper	PF03HH-B12A			
C	21	Parallel Jumper	PF04HH-C22A			
	22	Sensor	DSX1139			
	23	1..JOG LCD Holder Assy	DEA1167			
	NSP 24	2..TFT LCD				
	NSP 25	2..Cover				
	NSP 26	2..Holder				
	NSP 27	2..Sheet				
	28	Window	DAH3206			
	29	Spring	DBH1816			
	30	Spring	DBH1817			
D	31	Leaf Spring	DBK1394			
	32	SW Cushion HH48/2	DEC2538			
	33	Slit	DEC3589			
	34	Cushion	DEC3807			
	35	Brake	DED1189			
	36	DS Tape	DEH1111			
	37	Cover	DNH3367			
	38	Base	DNK6774			
	39	Cam	DNK6775			
	40	Base	DNK6776			
E	41	Jog Dial	DNK6777			
	42	Jog Dial	DNK6778			
	43	Base	DNK6779			
	44	Holder	DNK6780			
	45	Holder	DNK6782			
F						