


- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

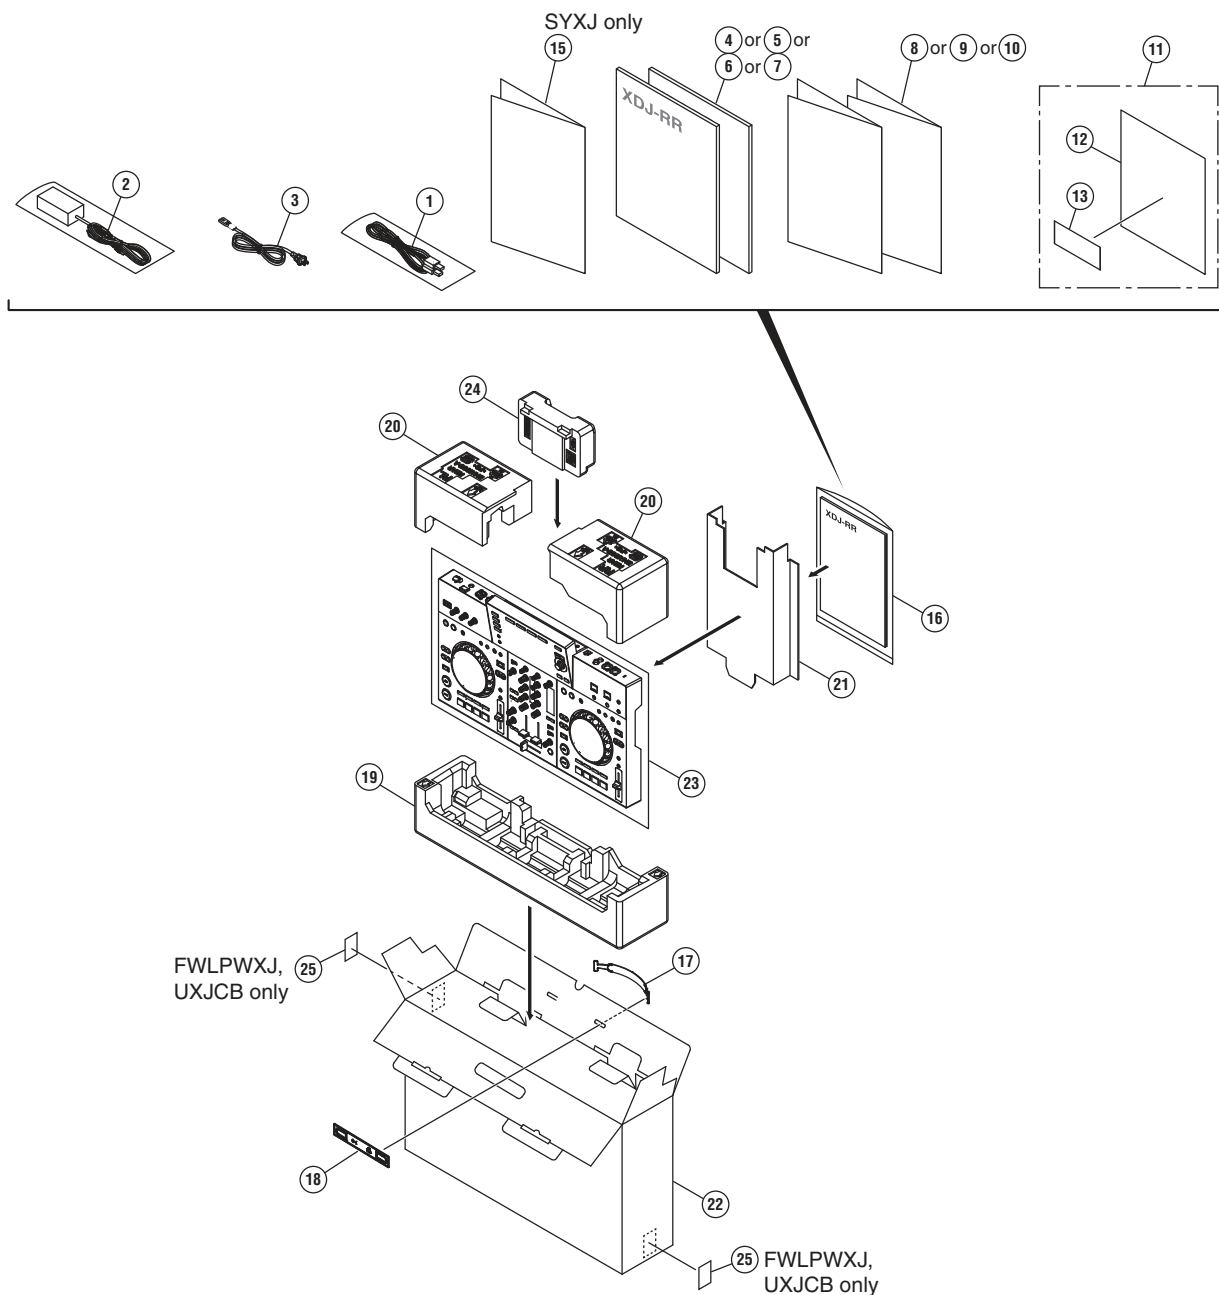

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 USB Cable	DDE1150	8	Software License Notice	See Contrast table (2)
	2 AC Adapter	DWR1574	9	Software License Notice	See Contrast table (2)
	3 Power Cord	See Contrast table (2)	10	Software License Notice	See Contrast table (2)
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 11	1..License Key Card Assy	DEA1046
B	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 12	2..Leaflet	DRM1410
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 13	2..License Key Label Assy	DXA2304
	7 Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	•••••	
			NSP 15	Warranty Card	See Contrast table (2)
C			NSP 16	Polyethylene Bag	AHG7117
			17	Handle	DEC3783
			18	Spacer	DEC3784
			19	Packing Pad	DHA1984
D			20	Packing Pad	DHA1985
			21	Partition	DHC1104
			22	Packing Case	See Contrast table (2)
			23	Packing Sheet	RHC1023
E			24	Packing Pad	DHA1988
			25	Label	See Contrast table (2)

(2) CONTRAST TABLE



XDJ-RR/AXJ, FWLPWXJ, SYXJ and UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RR /AXJ	XDJ-RR /FWLPWXJ	XDJ-RR /SYXJ	XDJ-RR /UXJCB
D	3	Power Cord	ADG7079	ADG1154	ADG1154	XDG3052
	4	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	Not used	Not used	DRH1515
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Ne, Es, Po, Ru)	Not used	Not used	DRH1516	Not used
	6	Operating Instructions (Quick Start Guide)(En, Es)	Not used	DRH1517	Not used	Not used
NSP	7	Operating Instructions (Quick Start Guide)(Zhcn)	DRH1518	Not used	Not used	Not used
	8	Software License Notice	Not used	DRH1451	DRH1451	DRH1451
	9	Software License Notice	Not used	DRH1452	DRH1452	DRH1452
	10	Software License Notice	DRH1453	Not used	Not used	Not used
F	15	Warranty Card	Not used	Not used	DRY1270	Not used
	22	Packing Case	DHG3647	DHG3646	DHG3646	DHG3646
	25	Label	Not used	DRW2774	Not used	DRW2773

9.2 BOTTOM SECTION

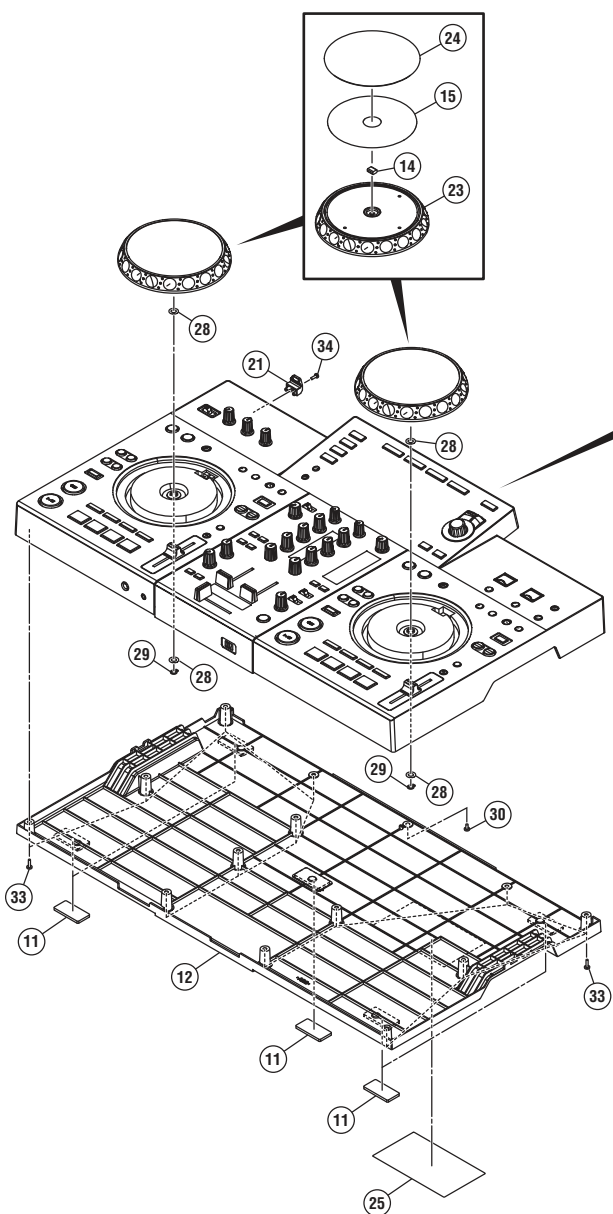

• Bottom view

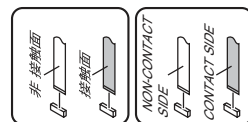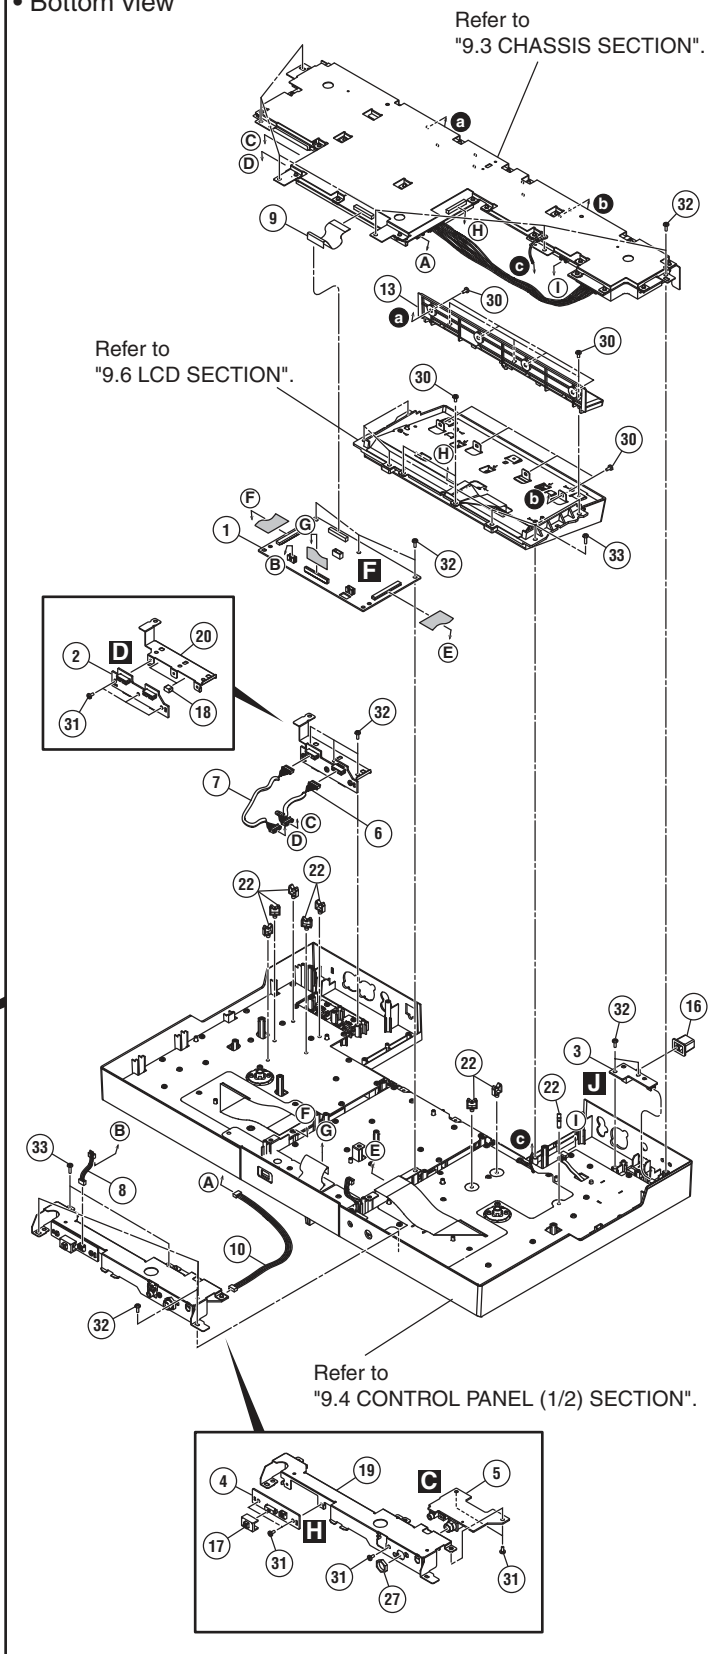

(1) BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 UCOM Assy	DWX4167	21	Hook	DNK6755
	2 USBB Assy	DWX4169	22	Holder	VEC1355
	3 PSWB Assy	DWX4171	23	JOG Dial	DNK6763
	4 CRVB Assy	DWX4172	24	Plate	DAH3222
	5 HPJK Assy	DWX4174	NSP 25	Name Label	See Contrast table (2)
	6 Shielded Conn-Cable	DDA1087	26	•••••	
	7 Shielded Conn-Cable	DDA1088	27	Nut M12	DBN1018
	8 Crimp Connector	DDC1031	28	Washer	WA62D095D050
	9 FFC	DDD1874	29	Washer	YC60FAC
	10 Connector Assy	PF04PP-D22	30	Screw	BBZ30P060FTB
B	11 Sheet/Leg	DEC3534	31	Screw	BBZ30P060FTC
	⚠ 12 Chassis	DNK6770	32	Screw	BPZ30P080FNI
	13 Cover	DNK6773	33	Screw	BPZ30P100FTB
	14 Gasket/JOG	DEC3539	34	Screw	PPZ30P080FTB
	15 DS Tape/JOG	DEH1042			
	16 Power Knob	DAC2306			
	17 Cap	DAC3284			
	18 Gasket/JOG	DEC3562			
	19 Stay	DNH3359			
	20 Stay	DNH3360			
C					

(2) CONTRAST TABLE

XDJ-RR/AXJ, FWLPWXJ, SYXJ and UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RR /AXJ	XDJ-RR /FWLPWXJ	XDJ-RR /SYXJ	XDJ-RR /UXJCB
NSP	25	Name Label	DRW2772	DRW2771	DRW2771	DRW2771


D

E

F

9.3 CHASSIS SECTION



• Bottom view

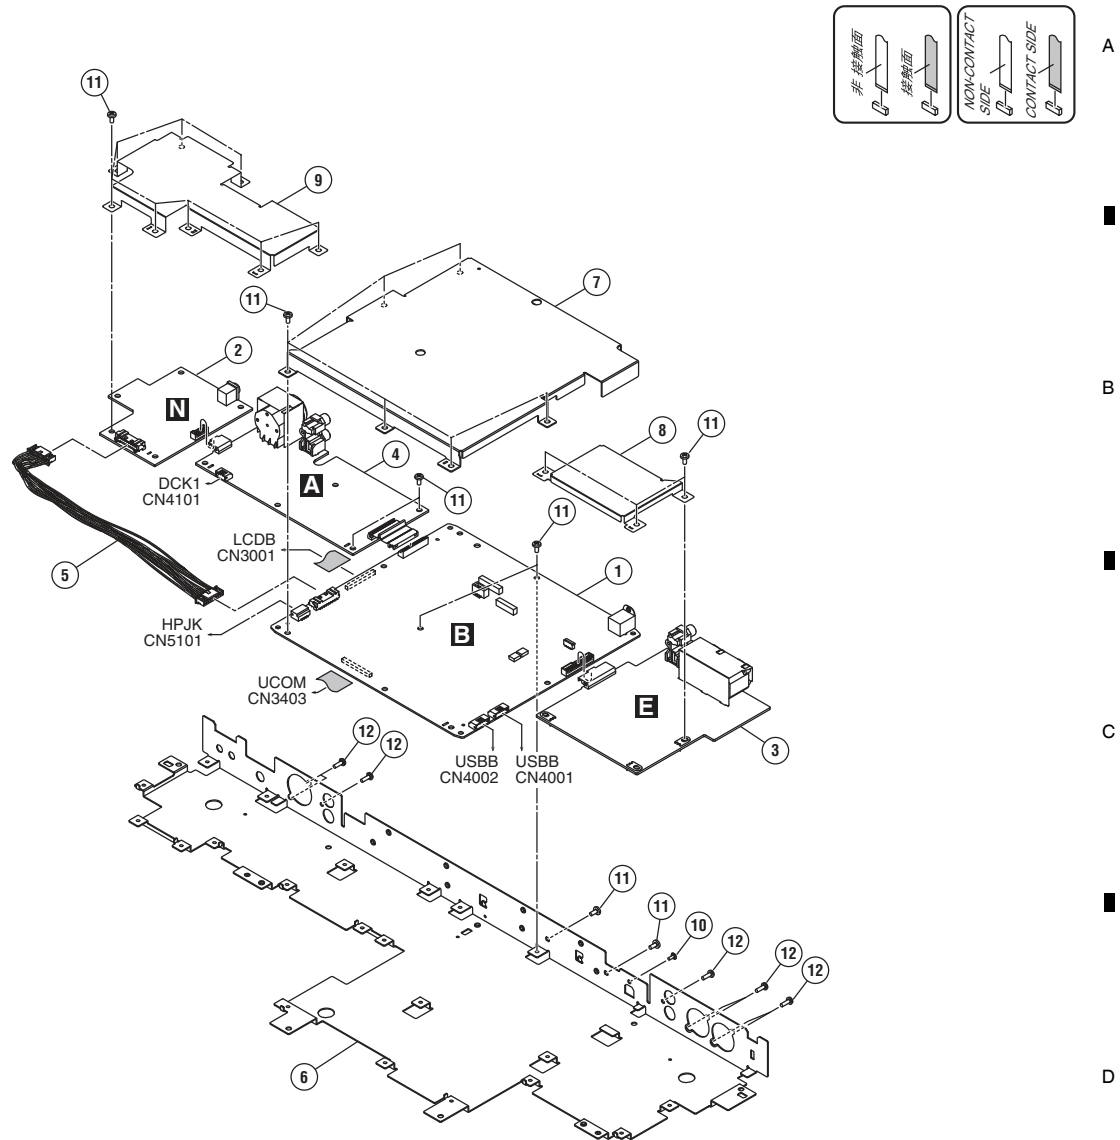


CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWX4165	11	Screw	BBZ30P060FTC
2	DCIN Assy	DWX4168	12	Screw	PPZ30P080FTB
3	AOUT Assy	DWX4176			
4	AINB Assy	DWX4178			
5	Crimp Connector	DDC1029			
6	Stay	DNH3355			
7	Shield Case	DNH3363			
8	Shield Case	DNH3364			
9	Shield Case	DNH3365			
10	Screw (M3*5)	DBA1340			


9.4 CONTROL PANEL SECTION (1/2)

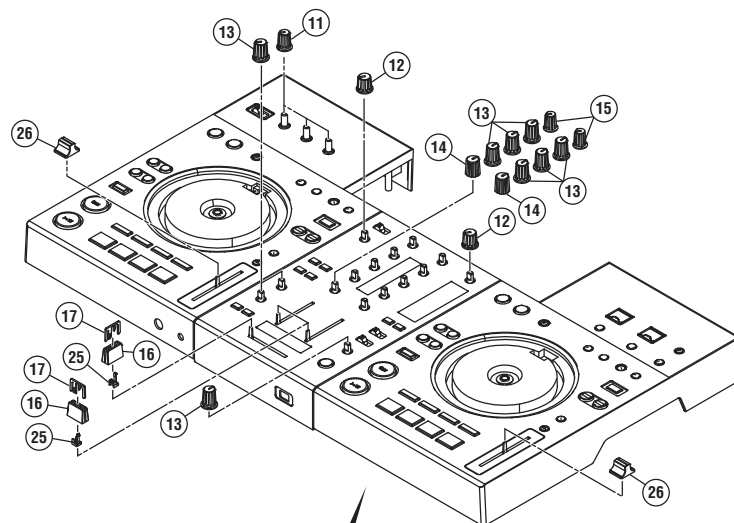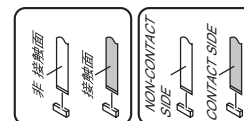


• Bottom view

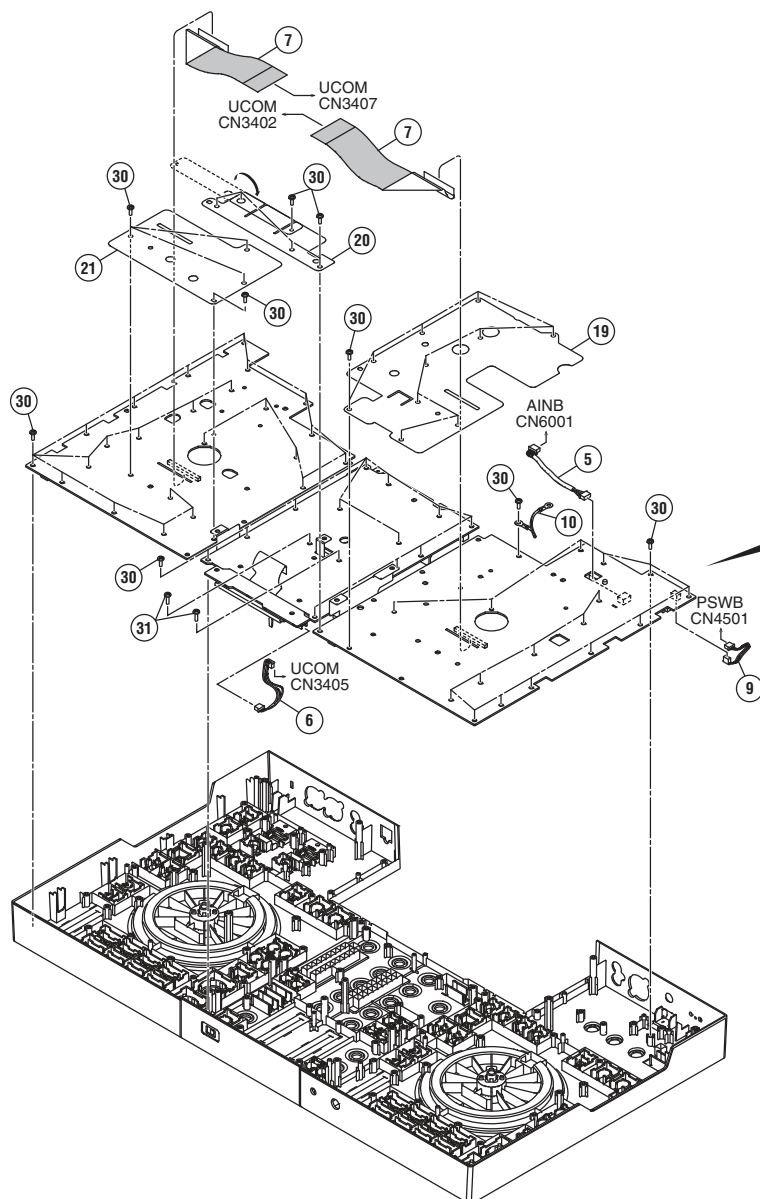


DCK1 Assy

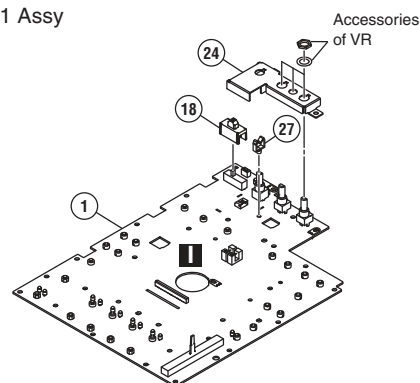

MXRB Assy

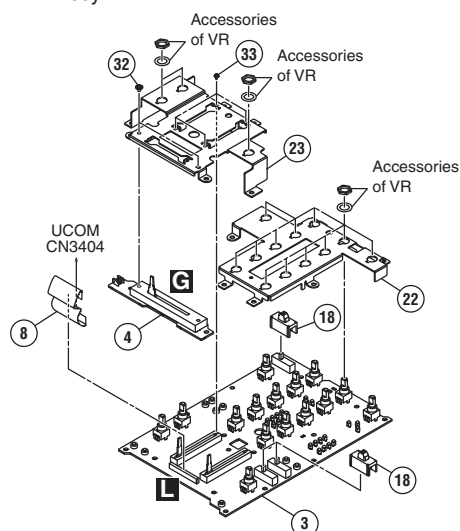

DCK2 Assy

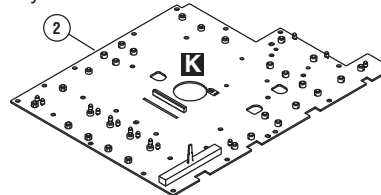

CONTROL PANEL SECTION (1/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	DCK1 Assy	DWX4170
2	DCK2 Assy	DWX4173
3	MXRB Assy	DWX4175
4	CRFD Assy	DWX4177
5	Shielded Conn-Cable	DDA1089
6	Crimp Connector	DDC1030
7	FFC	DDD1870
8	FFC	DDD1871
9	Connector Assy	PF03PP-B05
10	Earth Lead Unit	DE005VC0
11	Knob/LBK	DAA1284
12	Knob	DAA1360
13	Knob	DAA1361
14	Knob	DAA1366
15	Knob	DAA1392
16	Slider Knob 1	DAC2684
17	Slider Knob 2	DAC2685
18	SW Cap	DAC2753
19	Barrier	DEC3802
20	Barrier	DEC3803
21	Barrier	DEC3810
22	Stay	DNH3356
23	Stay	DNH3357
24	Stay	DNH3358
25	Stopper/SLD	DNK6009
26	Knob	DNK6769
27	Holder	VEC1355
28	•••••	
29	•••••	
30	Screw	BPZ30P080FNI
31	Screw	BPZ30P100FTB
32	Screw	IMZ30P040FTC
33	Screw	PMH20P040FTC

A

B

C



D

E

F

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

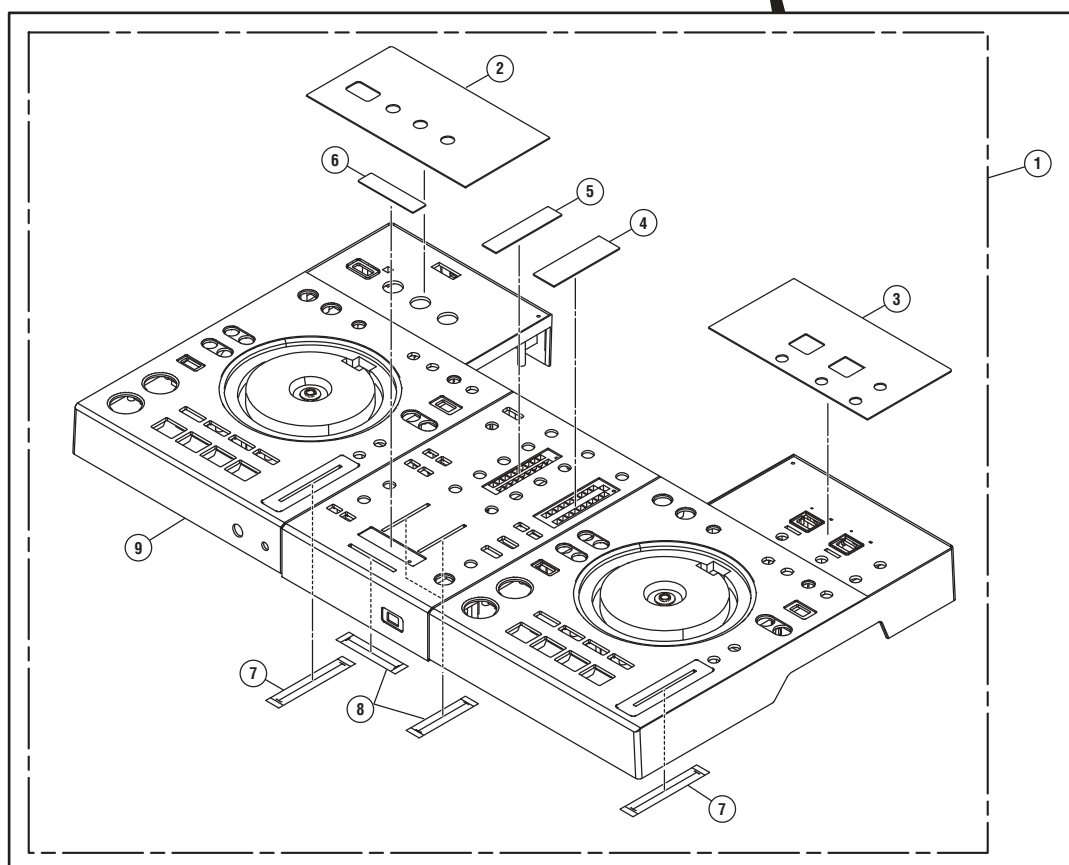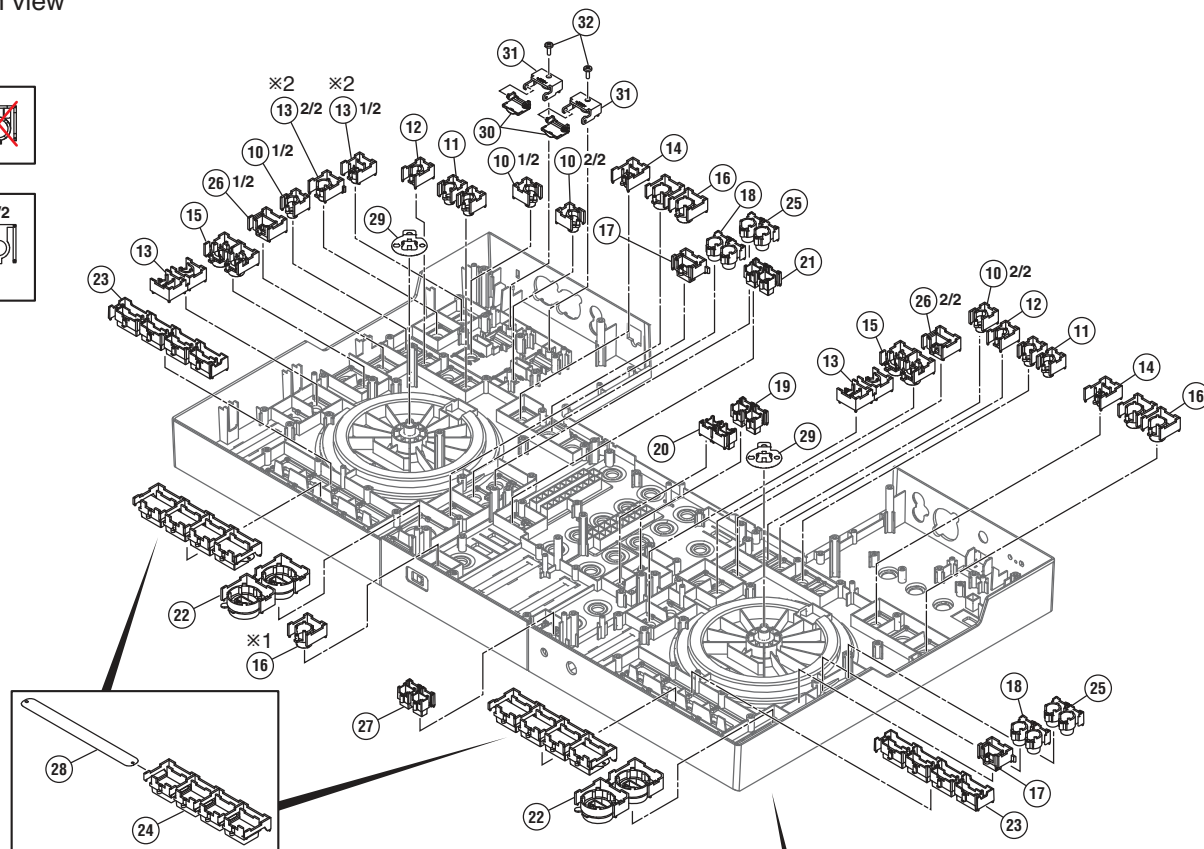

CONTROL PANEL SECTION (2/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	1..XDJ-RR Panel Service Assy	DEA1089
2	2..Plate	DAH3218
3	2..Plate	DAH3219
4	2..Plate	DAH3220
5	2..Plate	DAH3221
6	2..Plate	DAH3223
7	2..Packing/TMP	DEC3392
8	2..Sheet	DEC3795
⚠ NSP 9	2..Control Panel	DNK6771
10	Button/TMP	DAC2845
11	Button/CAL	DAC3020
12	Button/DLT	DAC3021
13	Button/MT	DAC3029
14	Button/REL	DAC3030
15	Button/SYN	DAC3032
16	Button/LOP	DAC3074
17	Button	DAC3288
18	Button	DAC3363
19	Button	DAC3370
20	Button	DAC3371
21	Button	DAC3372
22	Button	DAC3409
23	Button	DAC3410
24	Button	DAC3411
25	Button	DAC3413
26	Button	DAC3414
27	Button	DAC3415
28	Diffuser	DEC3804
29	Plate/CND	DNH3137
30	Door	DNK6497
31	Holder	DNK6710
32	Screw	BPZ30P080FNI

1 2 3 4

9.6 LCD SECTION

A

B




C

D

E

F

• Bottom view

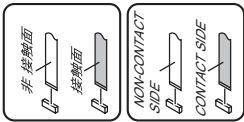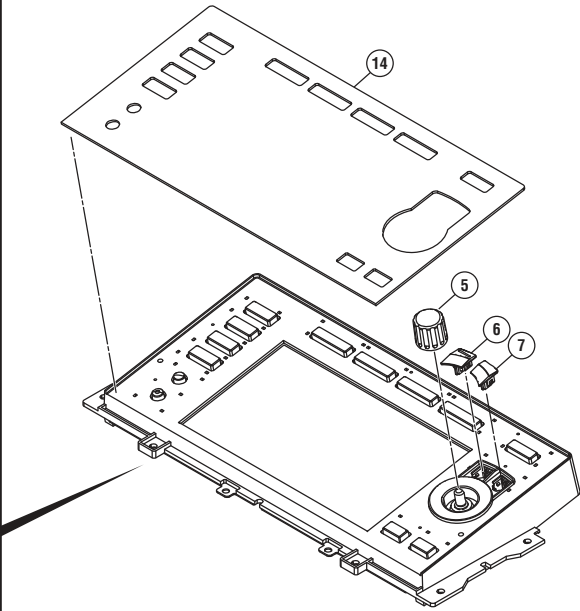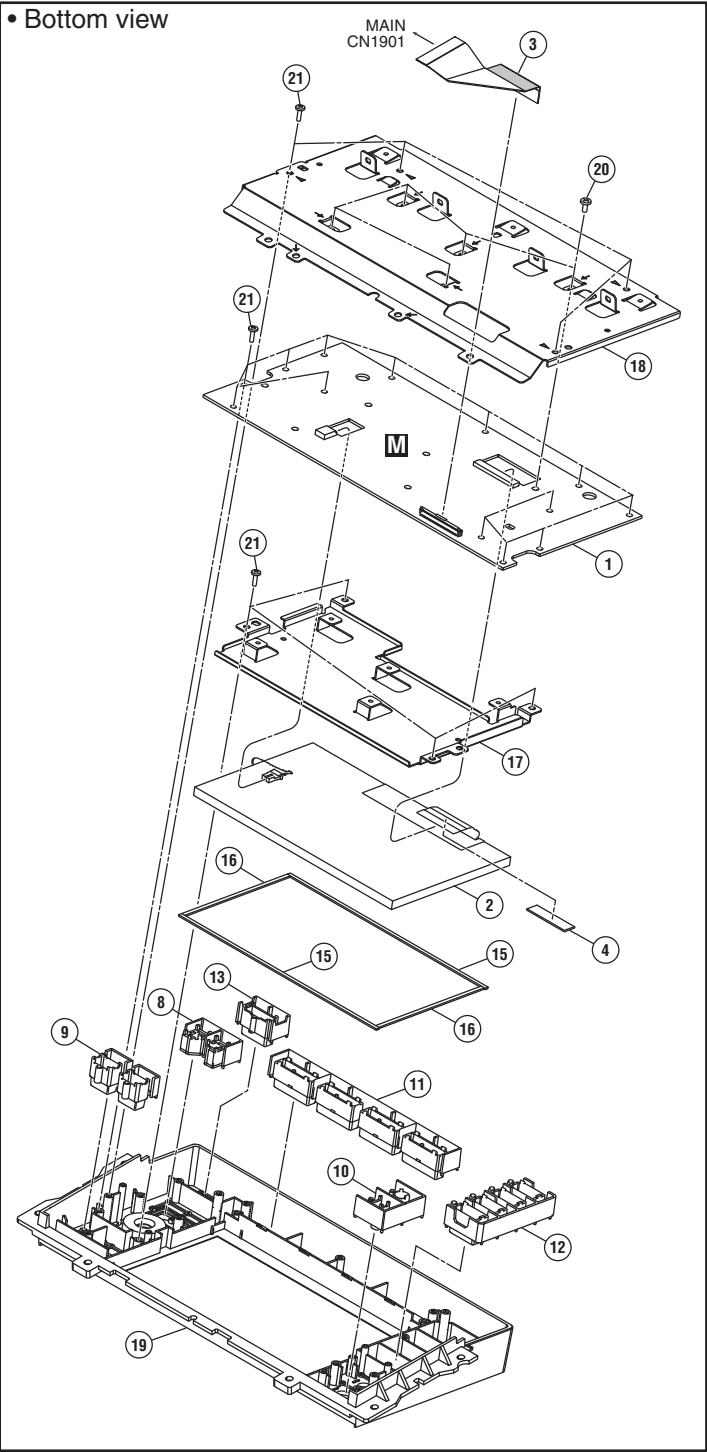

LCD SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	LCDB Assy	DWX4166
2	TFT LCD	CWX4352
3	FFC	DDD1873
4	Ferrite Clamper	DTX1011
5	Dial Knob	DAA1246
6	Button	DAC3113
7	Button	DAC3118
8	Button	DAC3289
9	Button	DAC3290
10	Button	DAC3291
11	Button	DAC3292
12	Button	DAC3293
13	Button	DAC3412
14	Window	DAH3217
15	Packing/L	DEC3568
16	Packing/S	DEC3569
17	Stay	DNH3361
18	Shield Case	DNH3362
⚠ 19	Panel	DNK6772
20	Screw	BBZ30P060FTB
21	Screw	BPZ26P080FTC

A

B

C

D

E

F