


NOTES:

- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

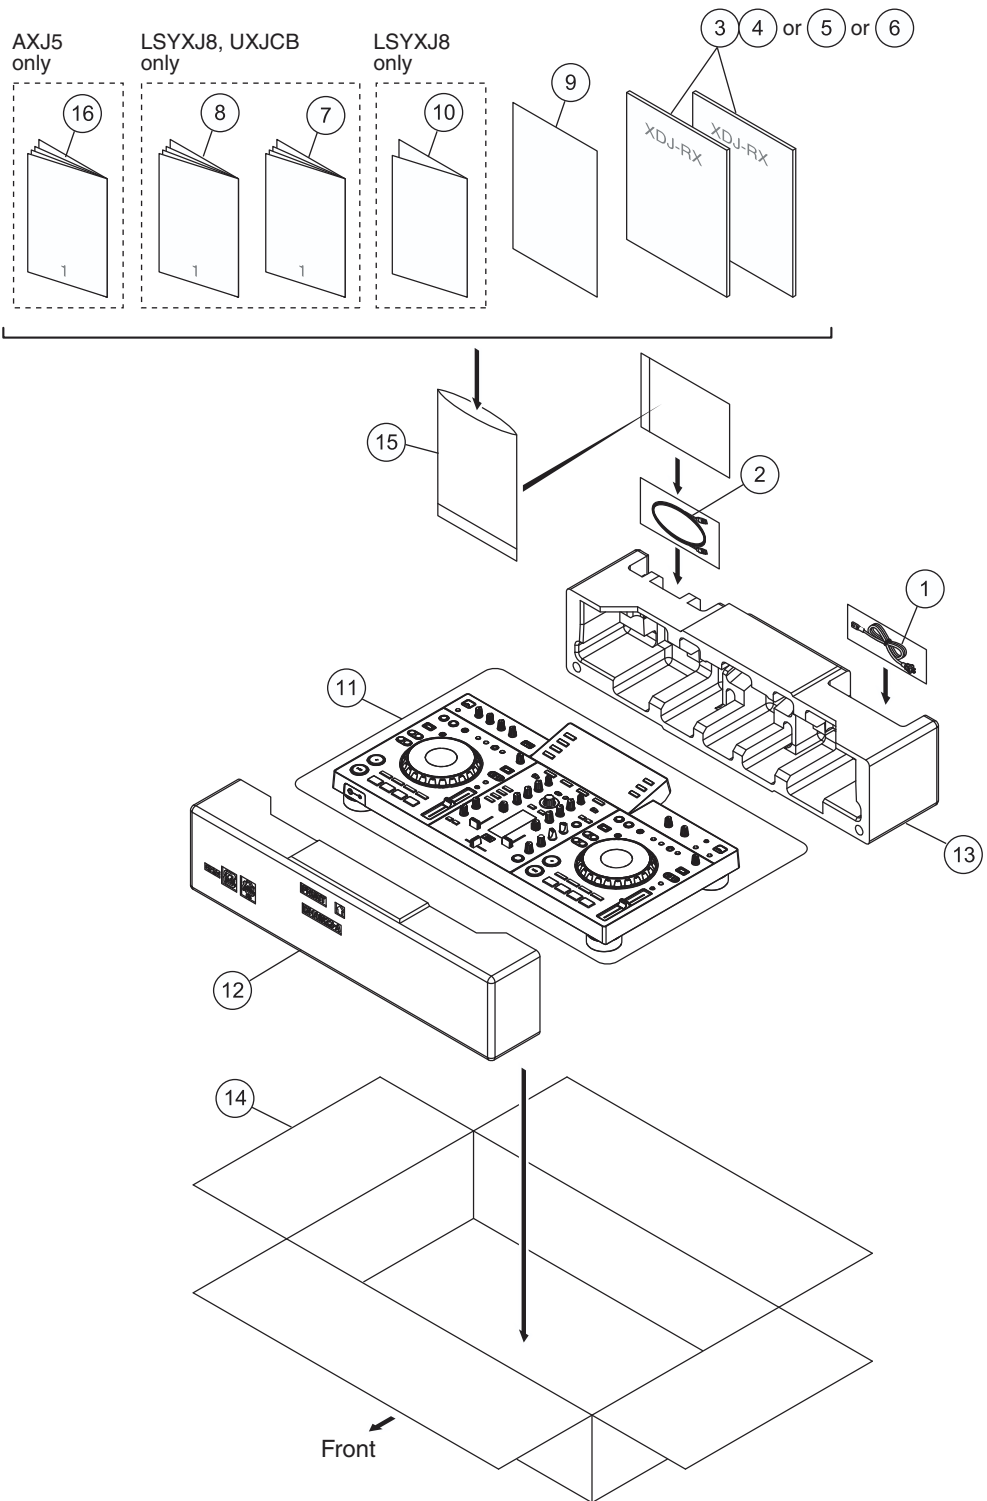

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)
	2 LAN Cable	DDE1141
	3 Operating Instructions (Quick Start Guide)	See Contrast table (2)
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)
	7 Sub Manual/LI1	See Contrast table (2)
	8 Sub Manual/LI2	See Contrast table (2)
	9 Software Information	DRH1305
NSP	10 Warranty	See Contrast table (2)
	11 Mirror Mat (1200*1000)	DHL1169
	12 Pad	DHA1922
	13 Pad	DHA1923
	14 Packing Case	See Contrast table (2)
NSP	15 Polyethylene Bag	AHG7117
	16 Sub Manual/LIC	See Contrast table (2)

(2) CONTRAST TABLE

XDJ-RX/LSYXJ8, UXJCB and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RX/LSYXJ8	XDJ-RX/UXJCB	XDJ-RX/AXJ5
⚠	1	Power Cord	ADG1244	DDG1108	DDG1114
	3	Operating Instructions (Quick Start Guide)(En, Fr, De, It)	DRH1293	Not used	Not used
	4	Operating Instructions (Quick Start Guide)(NI, Es, Pt, Rs)	DRH1294	Not used	Not used
	5	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1292	Not used
	6	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1296
	7	Sub Manual/LI1	DRH1285	DRH1285	Not used
	8	Sub Manual/LI2	DRH1286	DRH1285	Not used
NSP	10	Warranty	ARY7158	Not used	Not used
	14	Packing Case	DHG3382	DHG3391	DHG3393
	16	Sub Manual/LIC	Not used	Not used	DRH1299

9.2 BOTTOM SECTION

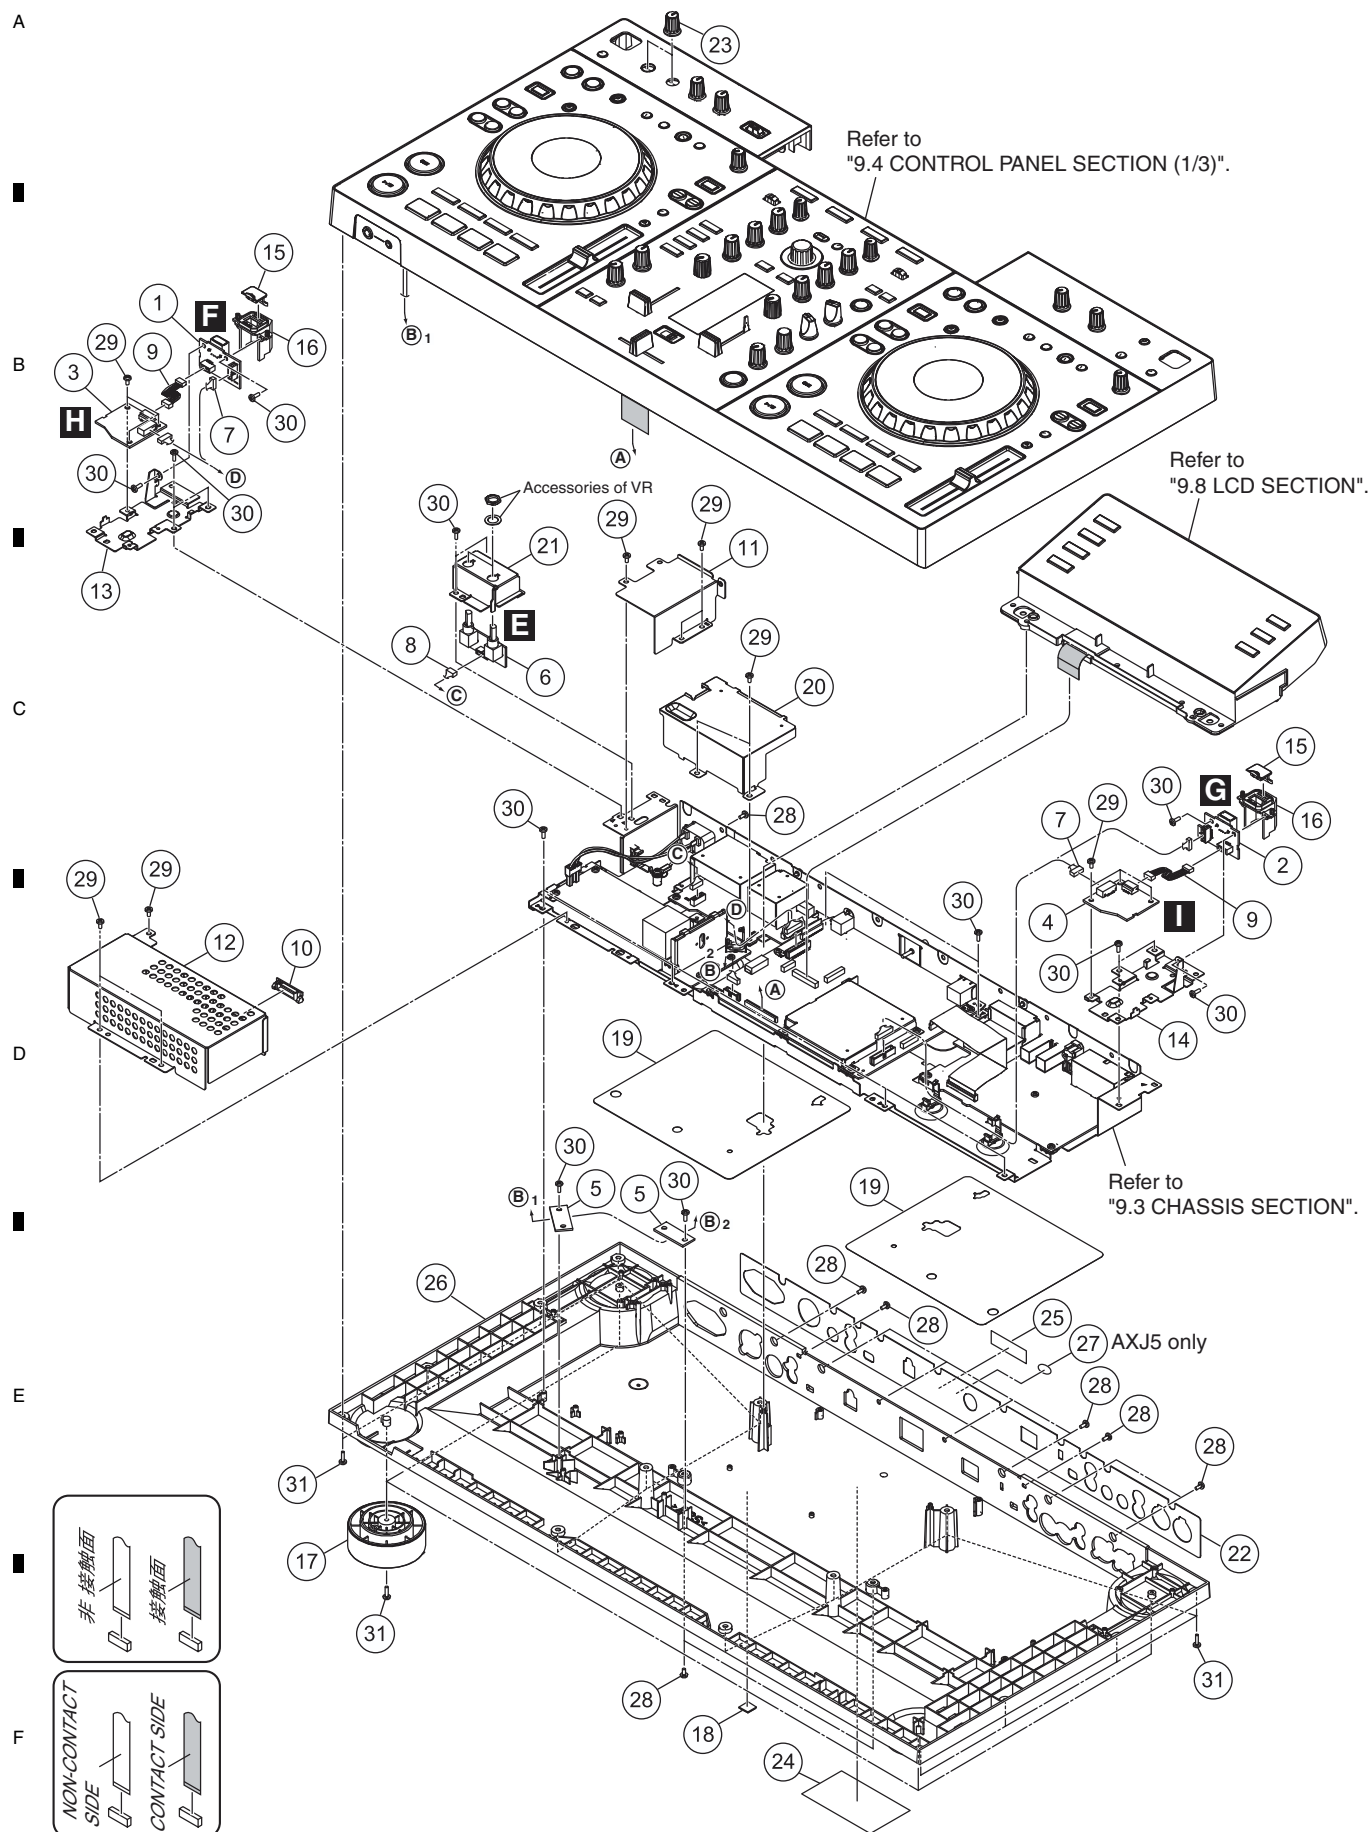

(1) BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	
1	USB1 Assy	DWX3620	
2	USB2 Assy	DWX3621	A
3	USBP1 Assy	DWX3636	
4	USBP2 Assy	DWX3637	
5	HLD3 Assy	DWX3647	
6	MICT Assy	DWX3623	
7	Shielded Conn-Cable	DDA1050	
8	Shielded Conn-Cable	DDA1051	
9	Connector Assy	PF04PP-C05	
10	Guard/EDG	DEC3580	
11	Shield Case/AC	DNH3184	B
12	Shield Case	DNH3202	
13	Stay/US1	DNH3192	
14	Stay/US2	DNH3194	
15	Cover/USB	DNK6041	
16	Holder/USB	DNK6390	
17	Insulator Assy	DXB2131	
18	Rubber Foot	VEB1349	
19	Shield Plate	DNH3204	
20	Shield Case	DNH3203	C
21	Stay	DNH3205	
22	Rear Panel	See Contast table (2)	
23	Knob/LBK	DAA1284	
NSP	24 Label/SY	DRW2637	
NSP	25 Serial Label (UPC)	DRW2311	
26	Chassis	DNK6387	
NSP	27 CCC S&E Label	See Contast table (2)	
28	Screw	BBZ30P060FTB	
29	Screw	BBZ30P060FTC	D
30	Screw	BPZ30P080FNI	
31	Screw	BPZ30P100FTB	




(2) CONTRAST TABLE

XDJ-RX/LSYXJ8, UXJCB and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-RX/LSYXJ8	XDJ-RX/UXJCB	XDJ-RX/AXJ5	
	22	Rear Panel	DAH3030	DAH3030	DAH3027	E
NSP	27	CCC S&E Label	Not used	Not used	DRW2310	

△

A

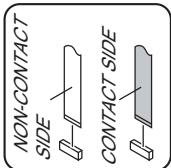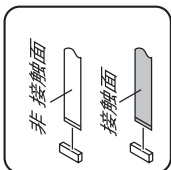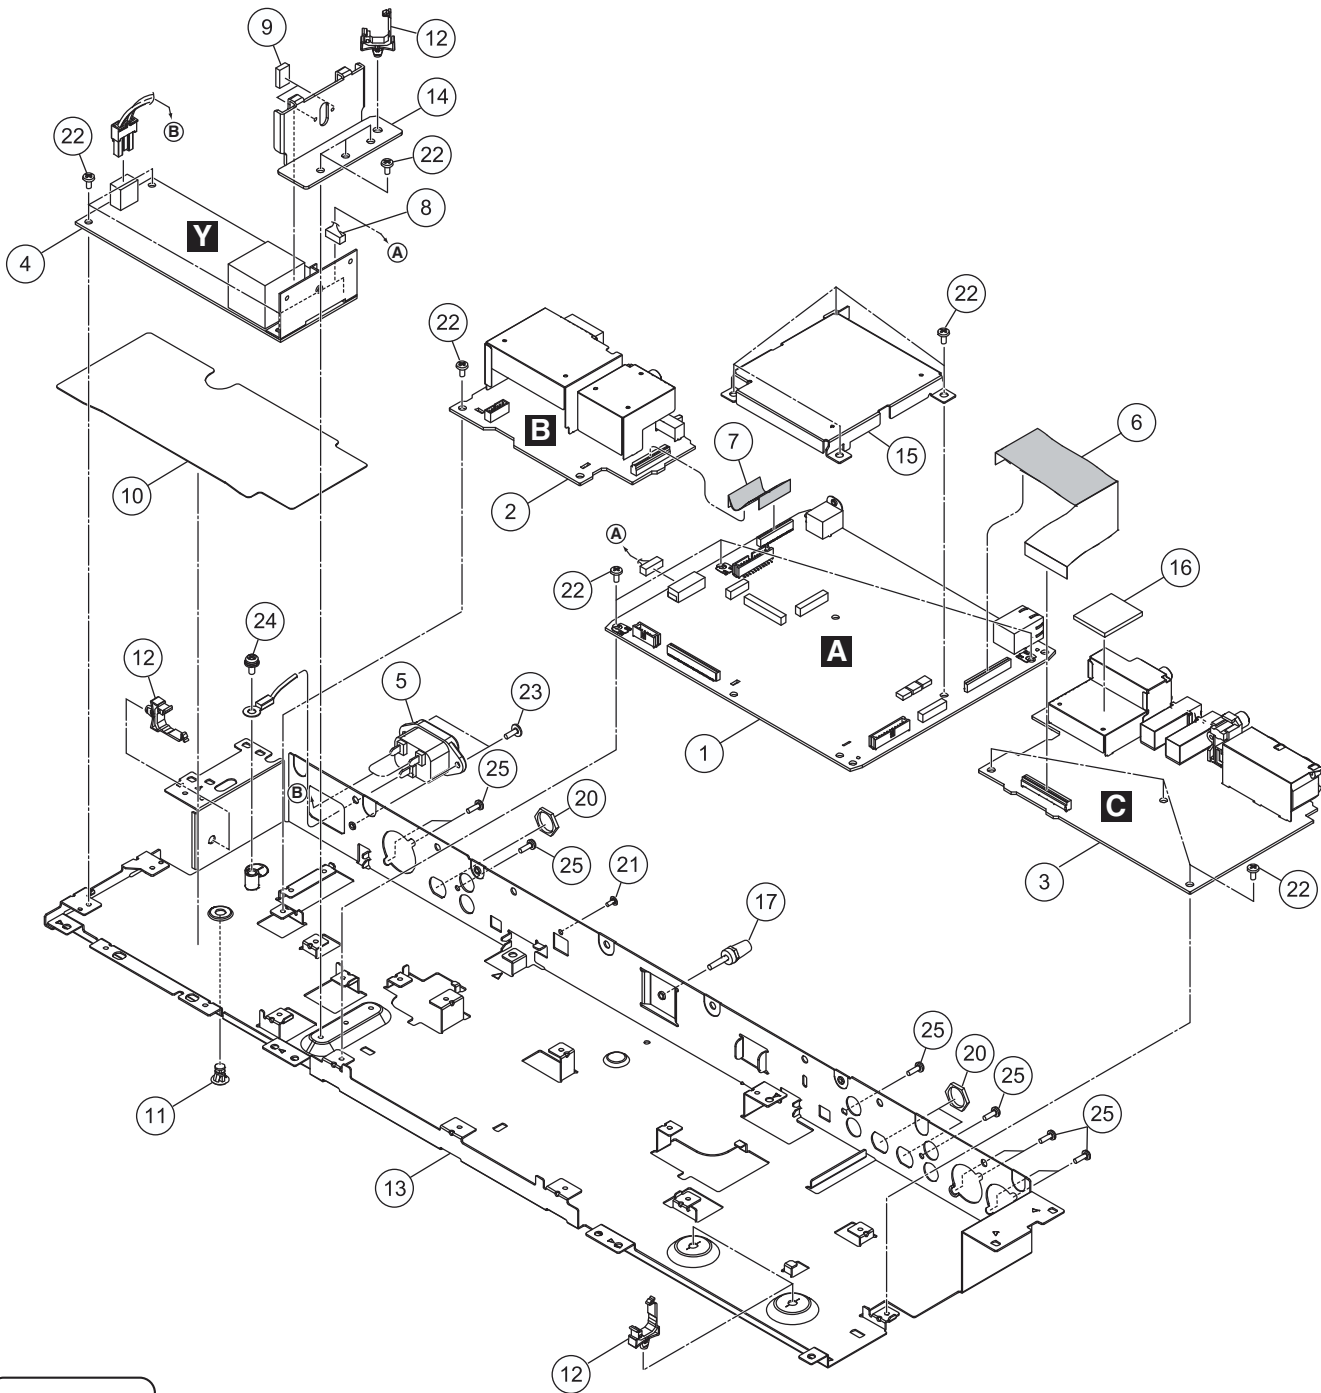

CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	
1	MAIN Assy	DWX3590	
2	JACK1 Assy	DWX3615	A
3	JACK2 Assy	DWX3616	
⚠	4 POWER SUPPLY Assy	DWR1463	
⚠	5 AC Inlet/3P	DKP3961	
6	FFC/31P	DDD1685	■
7	FFC	DDD1694	
8	Crimp Connector/6P	DKP3963	
9	Heat Cond Sheet	DEB2001	
10	Sheet	DEC3591	
11	Spacer/PCB	DEC3574	B
12	Cord Clamper	DEC3579	
13	Stay/PCB	DNH3183	
14	Heat Sink/AL	DNH3195	
15	Shield Case/MAI	DNH3181	■
16	Cushion	DEC3592	
17	Terminal Screw	AKE-031	
18			
19			
20	Nut (M12)	NKX2FNI	C
21	Screw (M3*5)	DBA1340	
22	Screw	BBZ30P060FTC	
23	Screw	IBZ30P080FTB	
24	Screw	PMH40P080FTC	■
25	Screw	PPZ30P080FTB	

D

E

F

1 2 3 4

9.4 CONTROL PANEL SECTION (1/3)

A


B

C

D

E

F

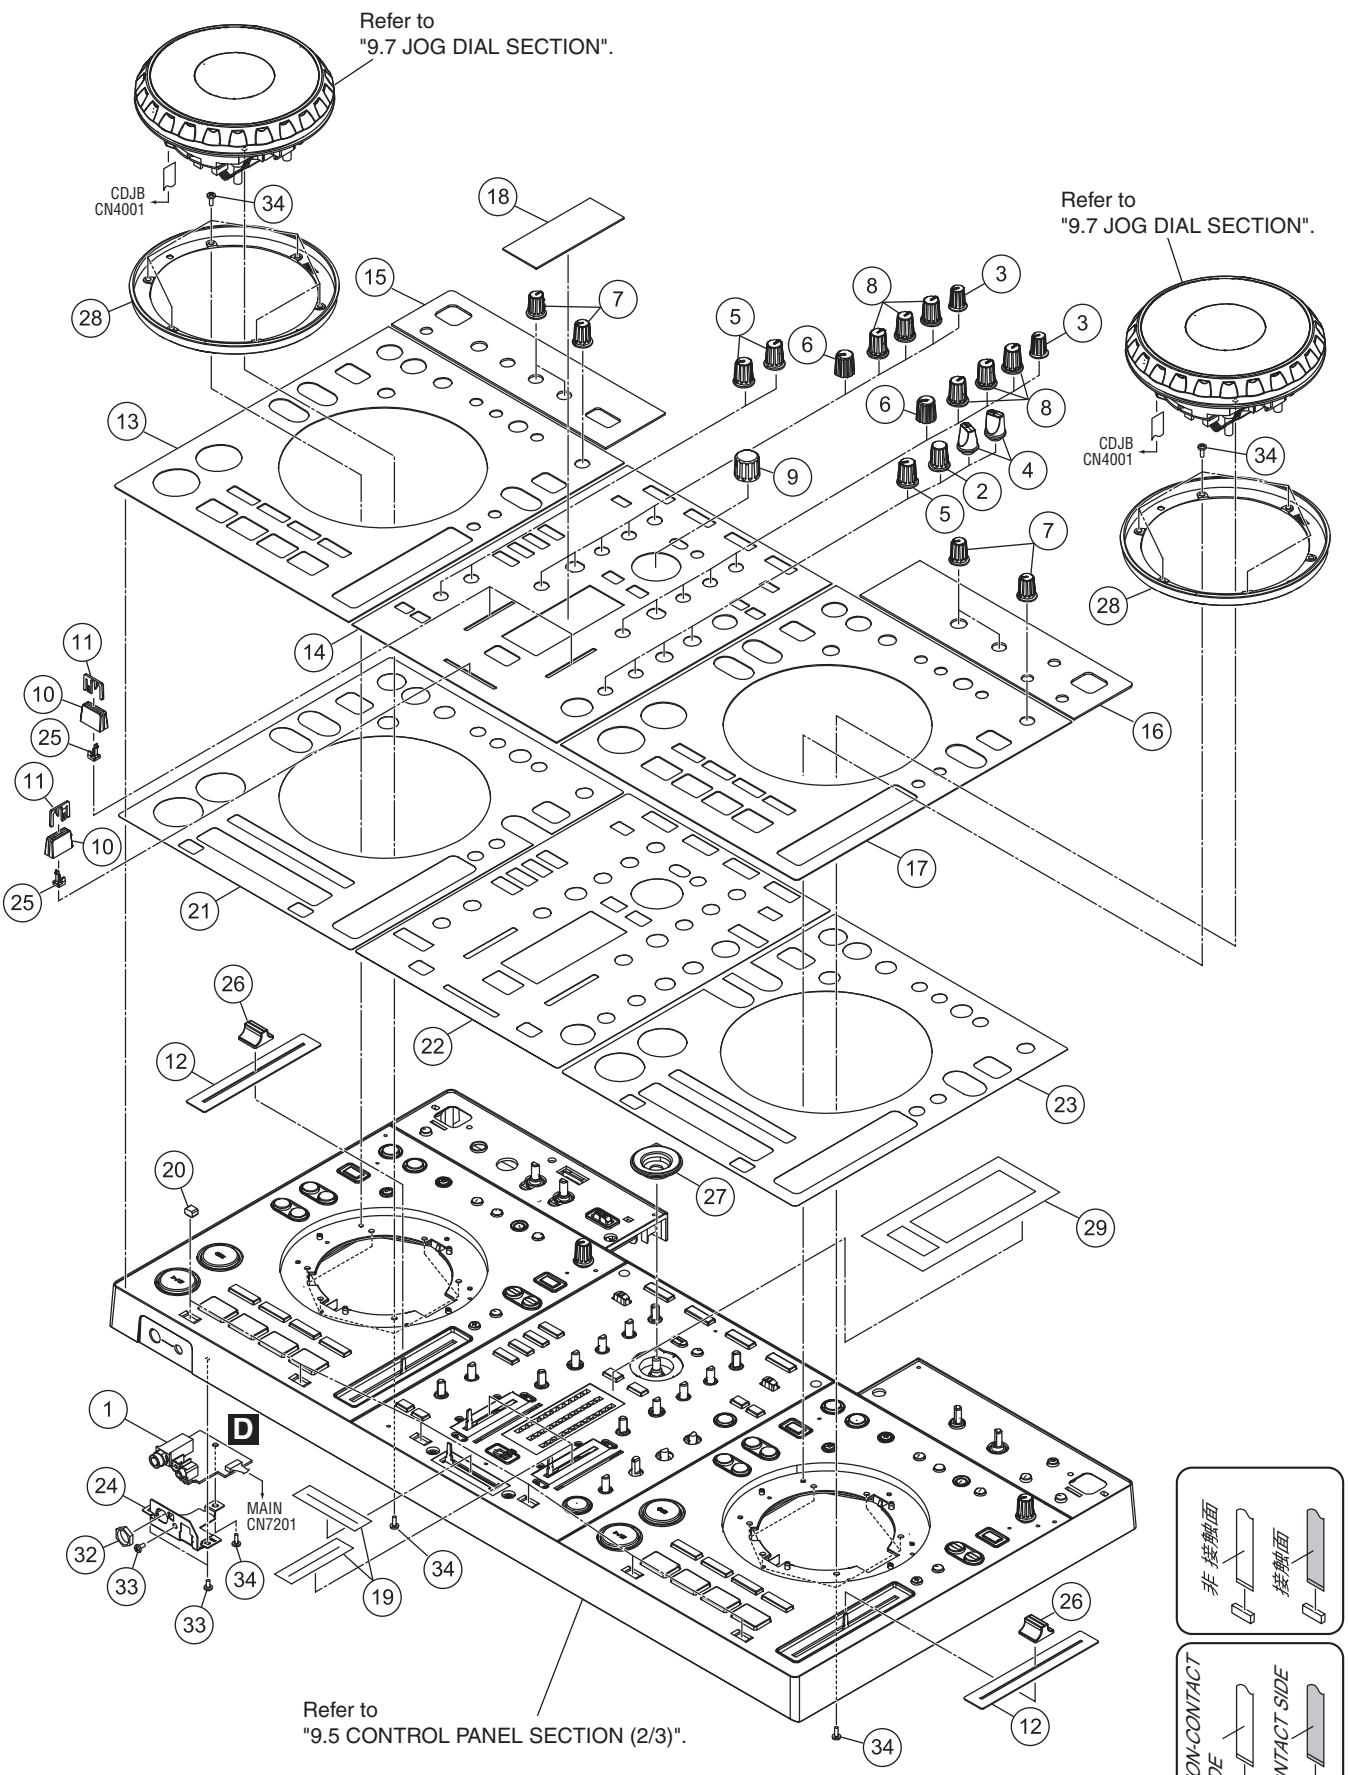

CONTROL PANEL SECTION (1/3) SECTION PARTS LIST


Mark No.	Description	Part No.	
1	HPJB Assy	DWX3633	
2	Rotary SW Knob (C)	DAA1180	A
3	Rotary SW Knob S (C)	DAA1204	
4	FX SEL Knob	DAA1213	
5	Rotary Knob (BN)	DAA1220	
6	Knob/CL	DAA1320	■
7	Knob/LBK	DAA1284	
8	Knob/RSW	DAA1305	
9	Knob/BRS	DAA1342	
10	Slider Knob 1	DAC2684	
11	Slider Knob 2	DAC2685	B
12	Slide Sheet 1C	DAH2404	
13	Plate/DC1	DAH3009	
14	Plate/MIX	DAH3010	
15	Panel/PM1	DAH3011	■
16	Panel/PM2	DAH3012	
17	Plate/DC2	DAH3014	
18	Panel/LVL	DAH3016	
19	Fader Packing	DEC3355	
20	Gasket/JOG	DEC3562	C
21	DS Tape/DC1	DEH1061	
22	DS Tape/MIX	DEH1062	
23	DS Tape/DC2	DEH1063	
24	Stay/HP	DNH3182	
25	Slider Knob Stopper	DNK5888	■
26	Knob/SLD	DNK5981	
27	Ring/BRS	DNK6312	
28	Ring/JOG	DNK6396	
29	DS Tape	DEH1066	D
30			
31			
32	Nut M12	DBN1018	
33	Screw	BBZ30P060FTC	■
34	Screw	BPZ30P080FNI	

E

F

△

 
F



Accessories of VR

3

Diagram illustrating the cross-sectional view of the contact assembly. The assembly consists of a contact member (1) and a contact member (2) positioned on a substrate (3). The contact member (1) is labeled "NON-CONTACT SIDE" and the contact member (2) is labeled "CONTACT SIDE".

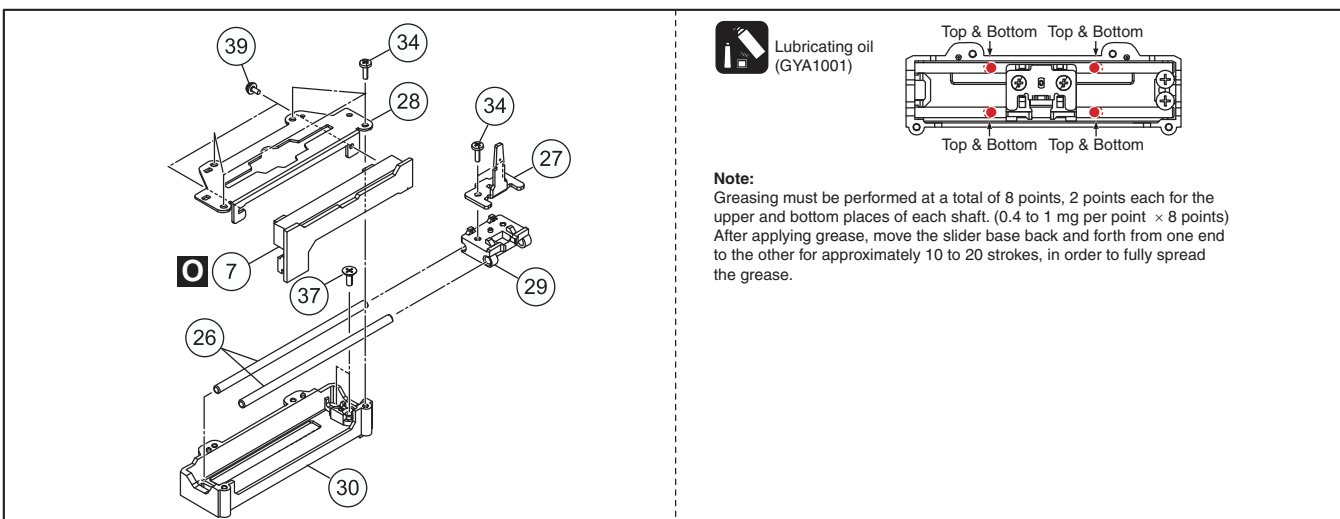

CONTROL PANEL SECTION (2/3) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MIXB Assy	DWX3613	NSP 26	Guide Shaft (S)	DLA1918
2	CDJB Assy	DWX3614	27	Lever Plate	DNH2954
3	PNL1 Assy	DWX3628	28	VR Stay	DNH2955
4	PNL2 Assy	DWX3629	29	Slider Base	DNK5851
5	LLED Assy	DWX3638	30	Shaft Holder	DNK5852
6	CRFB Assy	DWX3626	31	Insulation Sheet	DEC3594
7	CHF1 Assy	DWX3624	32	•••••	
8	HLD1 Assy	DWX3645	33	Screw	BBZ30P060FTC
9	HLD2 Assy	DWX3646	34	Screw	BPZ20P060FTC
10	FFC/35P	DDD1683	35	Screw	BPZ30P080FNI
11	FFC/17P	DDD1684	36	Screw	BSZ20P040FTB
12	FFC/39P	DDD1687	37	Screw	CPZ26P080FTC
13	FFC/19P	DDD1689	38	Screw	IMZ30P040FTC
14	FFC/15P	DDD1691	39	Screw	PMH20P040FTC
15	Power Knob	DAC2306			
16	Slide SW Cap	DAC2400			
17	Slide SW Cap (W)	DAC2401			
18	SW Cap	DAC2753			
19	Barrier/1	DEC3563			
20	Barrier/2	DEC3572			
21	VR Stay S	DNH2964			
22	Stay/MC2	DNH3189			
23	Stay/MST	DNH3190			
24	Stay/VR	DNH3191			
25	FFC Cushion	DEC3248			

1 2 3 4

9.6 CONTROL PANEL SECTION (3/3)

A


B

C

D

E

F

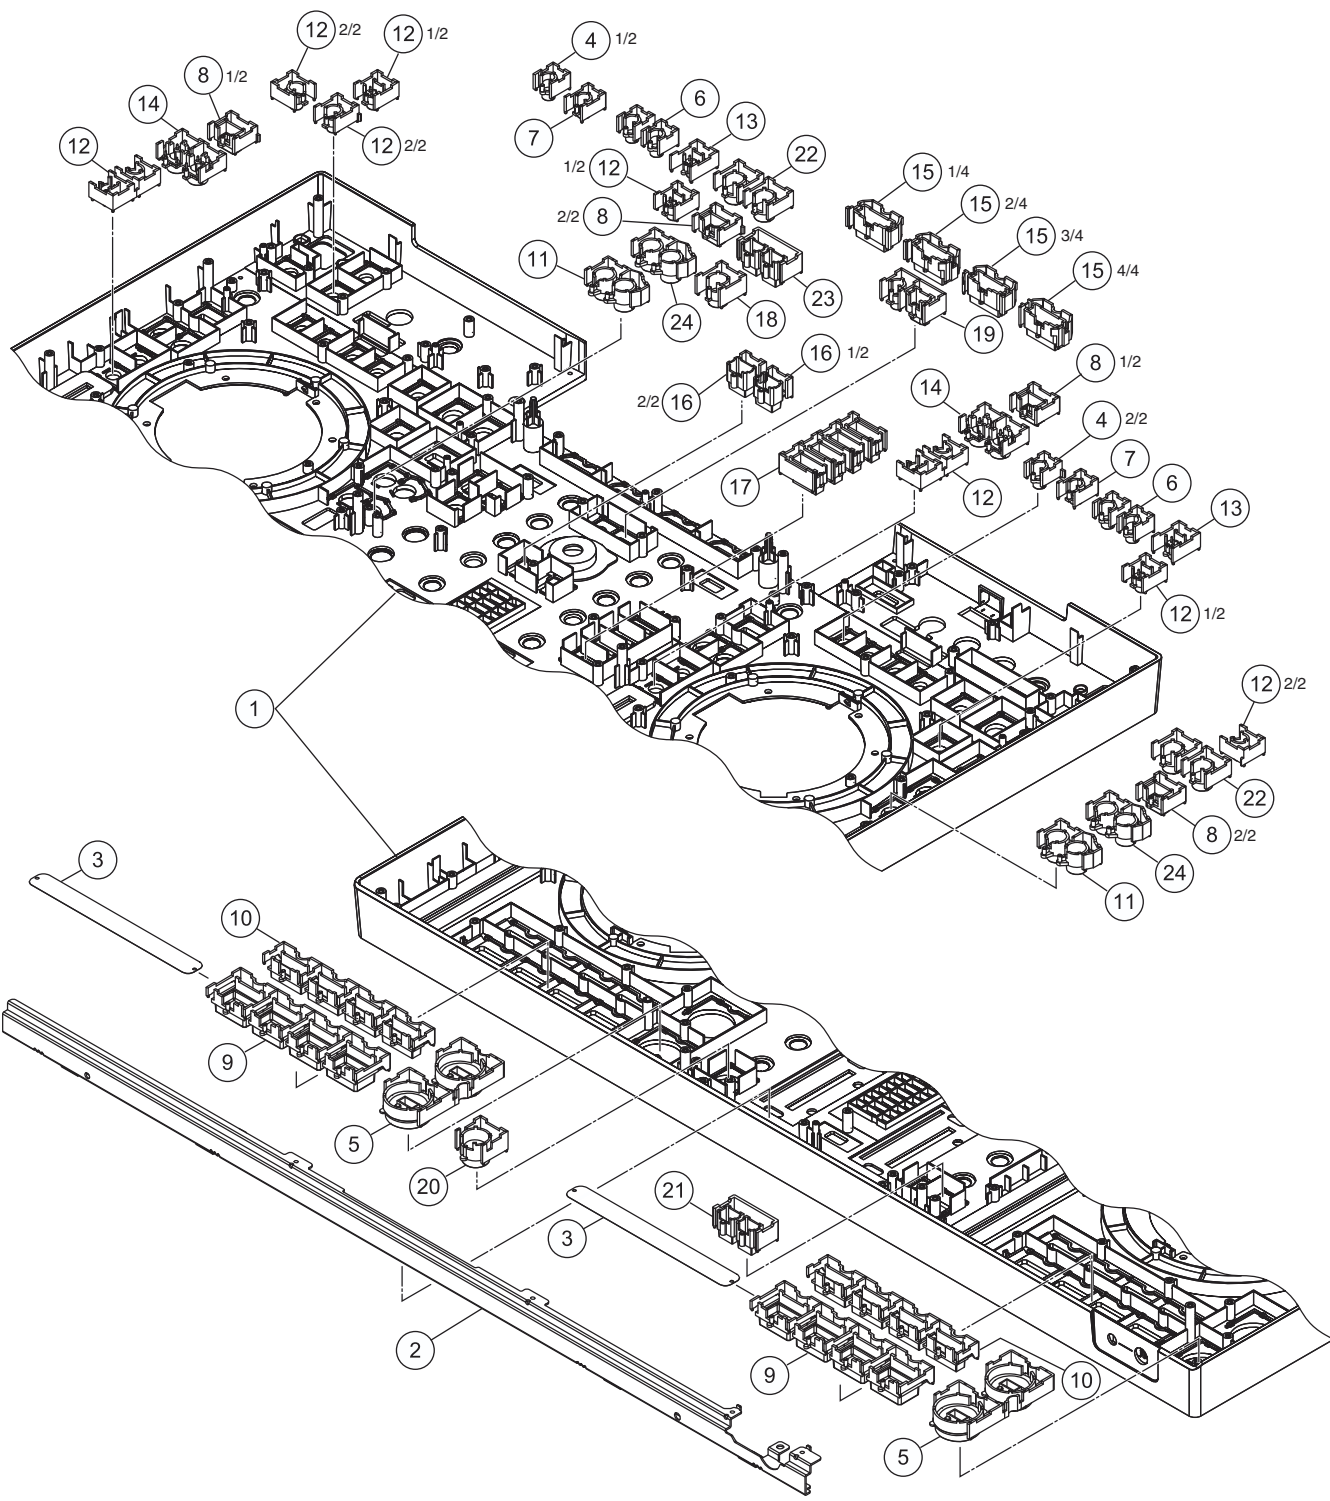

CONTROL PANEL SECTION (3/3) SECTION PARTS LIST

Mark No.	Description	Part No.
1	Control Panel	DNK6393
2	Frame/FRT	DNH3187
3	Diffuser/BTN	DEC3582
4	Button/TMP	DAC2845
5	Button/PLY	DAC3018
6	Button/CAL	DAC3020
7	Button/DLT	DAC3021
8	Button/RVL	DAC3023
9	Button/HC	DAC3026
10	Button/SEL	DAC3027
11	Button/SRC	DAC3028
12	Button/MT	DAC3029
13	Button/REL	DAC3030
14	Button/SYN	DAC3032
15	Button/MOD	DAC3035
16	Button/LOD	DAC3036
17	Button/COL	DAC3037
18	Button/TAP	DAC3038
19	Button/BAC	DAC3039
20	Button/EF	DAC3040
21	Button/HPC	DAC3073
22	Button/LOP	DAC3074
23	Button/BEF	DAC3075
24	Button/TSR	DAC3076

A

B



C

D


E

F

A • Bottom view

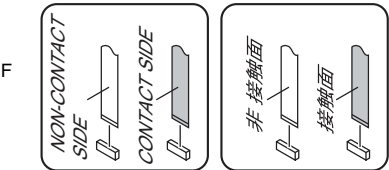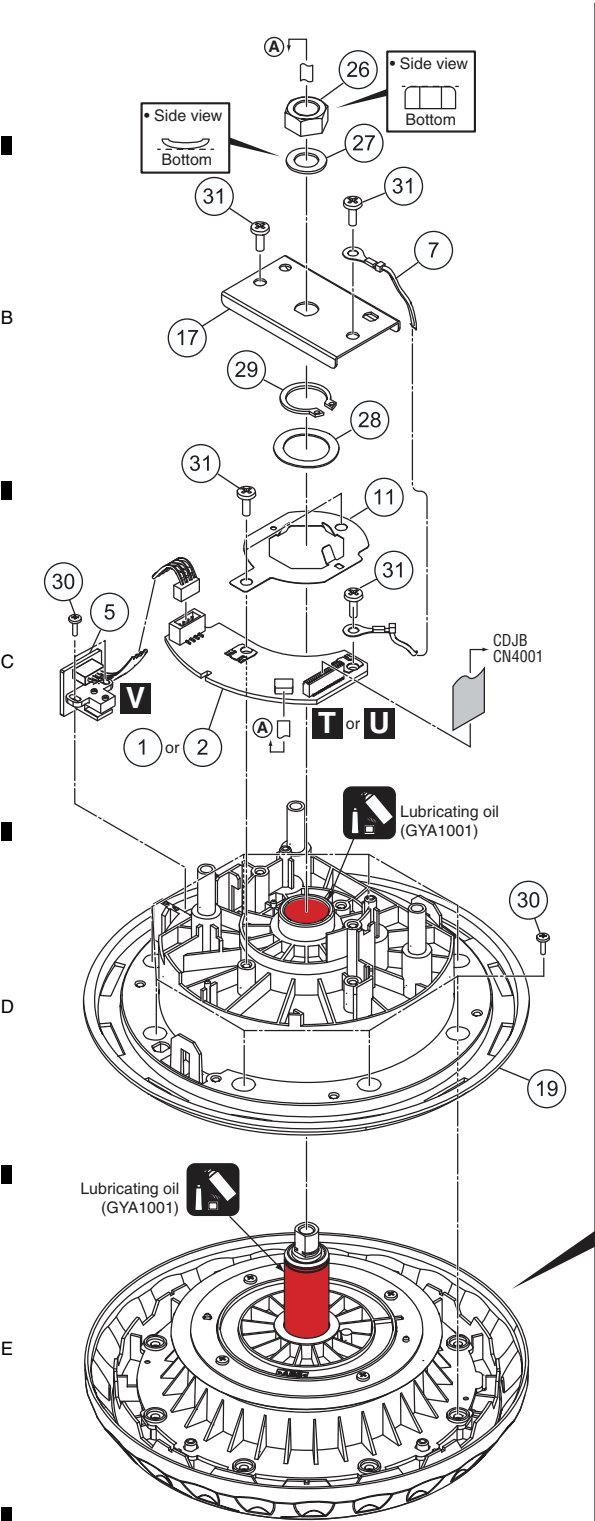

• Top view

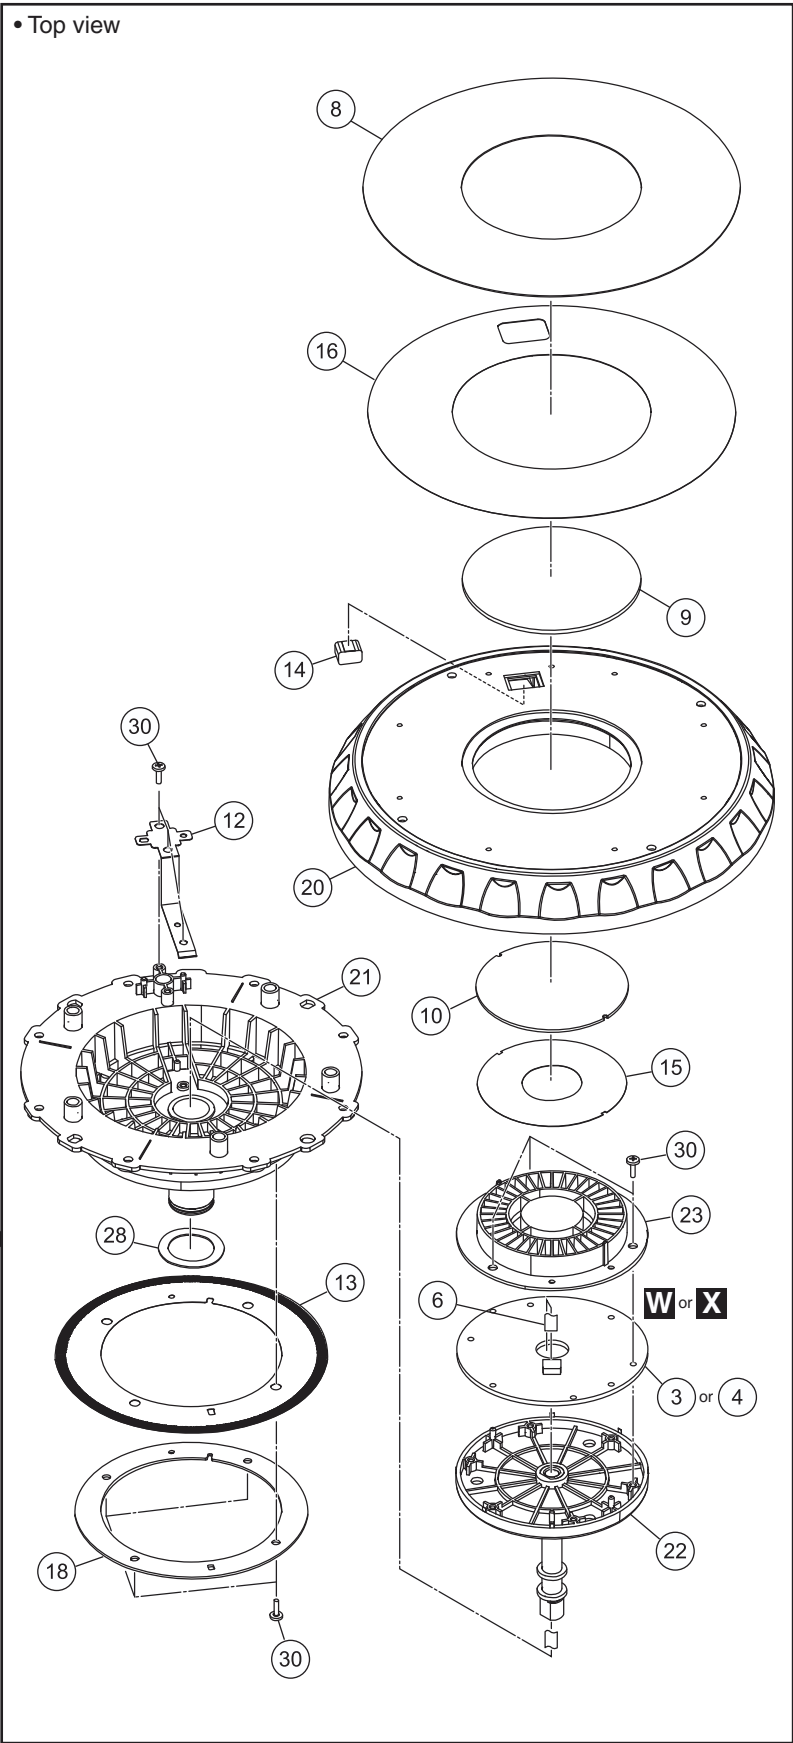


JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JOGT1 Assy	DWX3618	
2	JOGT2 Assy	DWX3631	A
3	JLED1 Assy	DWX3617	
4	JLED2 Assy	DWX3630	
5	JOGR1 Assy	DWX3619	
6	FFC/6P	DDD1690	■
7	Earth Lead Unit	DE005VC0	
8	Plate/JOG	DAH3002	
9	Window/JOG	DAH3003	
10	Window	DAH3004	
11	Leaf Spring/1	DBK1383	B
12	Leaf Spring/2	DBK1384	
13	Slit/JOG	DEC3515	
14	Gasket/JOG	DEC3562	
15	Diffuser/LED	DEC3575	■
16	DS Tape/JOG	DEH1058	
17	Stay/LED	DNH3167	
18	Bracket/SLT	DNH3168	
19	Holder/JOG	DNK6371	
20	JOG Dial/OUT	DNK6372	C
21	JOG Dial/IN	DNK6373	
22	Holder/LED	DNK6374	
23	Spacer/LED	DNK6375	
24			■
25			
26	Nut	NA80FTC	
27	Spring Washer	WN80FTC	
28	Washer	WA154D225D050	
29	Washer	YC150FAC	D
30	Screw	BPZ20P060FTC	
31	Screw	BPZ30P080FNI	■

△

F

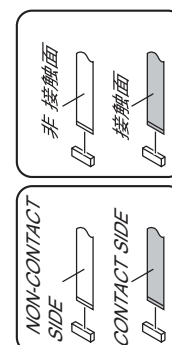

LCD SECTION PARTS LIST

Mark No.	Description	Part No.
1	EXTB Assy	DWX3622
2	DPNL1 Assy	DWX3634
3	DPNL2 Assy	DWX3635
4	TFT LCD	CWX4352
5	FFC/50P	DDD1686
6	FFC/11P	DDD1692
7	FFC/5P	DDD1693
8	Button/DIV	DAC3041
9	Button/TIM	DAC3042
10	Window/LCD	DAH3008
11	Packing/L	DEC3568
12	Packing/S	DEC3569
13	Stay/LCD	DND1282
14	Bracket/LCD	DND1283
15	Angle/LCD	DNH3186
16	Panel/BTM	DNK6388
17	Panel/LCD	DNK6389
18	Insulating Sheet/LCD	DEC3583
19		
20		
21	Screw	BBZ26P060FTB
22	Screw	BBZ30P060FTB
23	Screw	BBZ30P080FTC
24	Screw	BPZ26P080FTC

A

B

C

D

E

F