


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

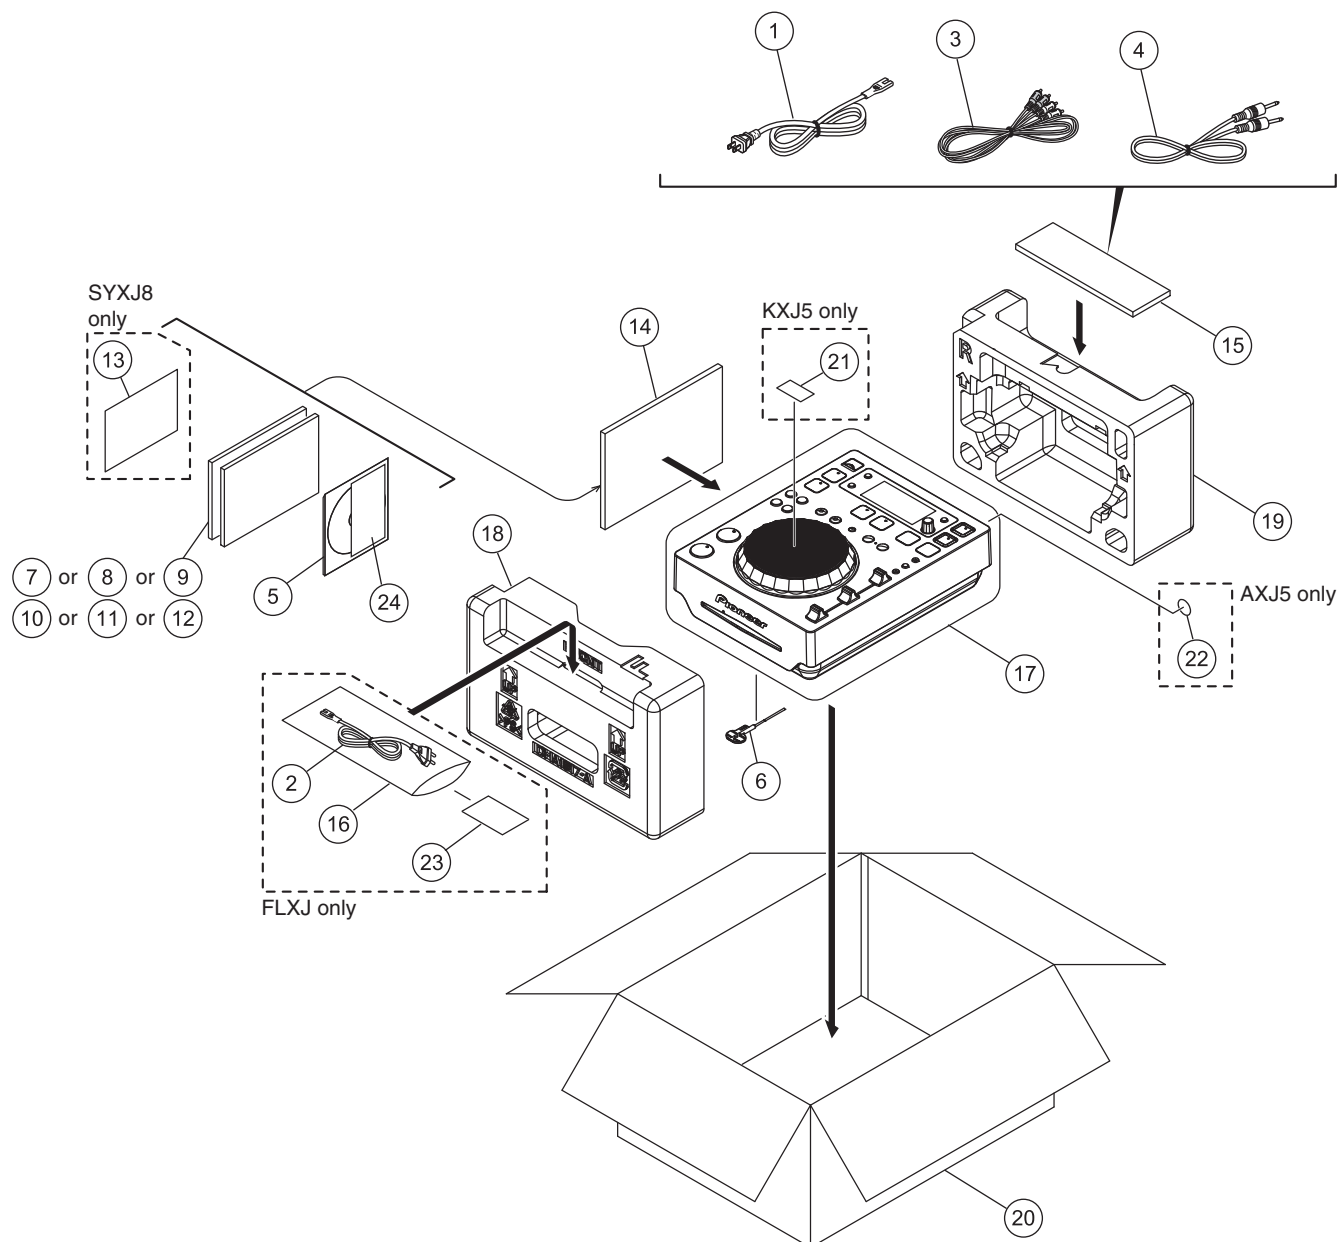

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cable	See Contrast table (2)	15	Vinyl Bag	Z21-013
⚠ 2	Power Cord (Taiwan)	See Contrast table (2)	16	Vinyl Bag	See Contrast table (2)
3	Audio Cable	XDE3045	17	Packing Sheet	AHG7015
4	Control Cord	XDE3063	18	Pad F	See Contrast table (2)
5	CD-ROM (rekordbox license key attached)	DXX2653	19	Pad R	See Contrast table (2)
6	Disc Force Eject Pin (mounted on bottom of product)	DEX1008	20	Packing Case	See Contrast table (2)
7	Operating Instructions	See Contrast table (2)	21	Recycle Label (M)	See Contrast table (2)
8	Operating Instructions	See Contrast table (2)	NSP 22	CCC S & E Label	See Contrast table (2)
9	Operating Instructions	See Contrast table (2)	23	Caution Card SB	See Contrast table (2)
10	Operating Instructions)	See Contrast table (2)	NSP 24	License Key Label Assy	DXA2190
11	Operating Instructions	See Contrast table (2)			
12	Operating Instructions	See Contrast table (2)			
NSP 13	Warranty Card	See Contrast table (2)			
NSP 14	Polyethylene Bag	AHG7117			

(2) CONTRAST TABLE

CDJ-350/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-350 /SYXJ8	CDJ-350 /CUXJ	CDJ-350 /FLXJ	CDJ-350 /KXJ5	CDJ-350 /AXJ5
⚠	1	Power Cable	ADG1154	ADG7022	ADG1154	XDG3054	ADG7079
⚠	2	Power Cord (Taiwan)	Not used	Not used	ADG7097	Not used	Not used
	7	Operating Instructions (En, Fr, De)	DRB1508	Not used	Not used	Not used	Not used
	8	Operating Instructions (It, NI, Es, Ru)	DRB1534	Not used	Not used	Not used	Not used
	9	Operating Instructions (En, Fr)	Not used	DRB1507	Not used	Not used	Not used
	10	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1509	Not used	Not used
	11	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1511	Not used
	12	Operating Instructions (Zhcn, En)	Not used	Not used	Not used	Not used	DRB1510
NSP	13	Warranty Card	ARY7107	Not used	Not used	Not used	Not used
	16	Vinyl Bag	Not used	Not used	Z21-013	Not used	Not used
	18	Pad F	DHA1817	DHA1817	DHA1817	DHA1819	DHA1817
	19	Pad R	DHA1818	DHA1818	DHA1818	DHA1820	DHA1818
	20	Packing Case	DHG2957	DHG2958	DHG2960	DHG2962	DHG2961
	21	Recycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
NSP	22	CCC S & E Label	Not used	Not used	Not used	Not used	DRW2310
	23	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used

9.2 EXTERIOR SECTION

A

B



C

D


E

F

Refer to "9.3 CONTROL PANEL SECTION".

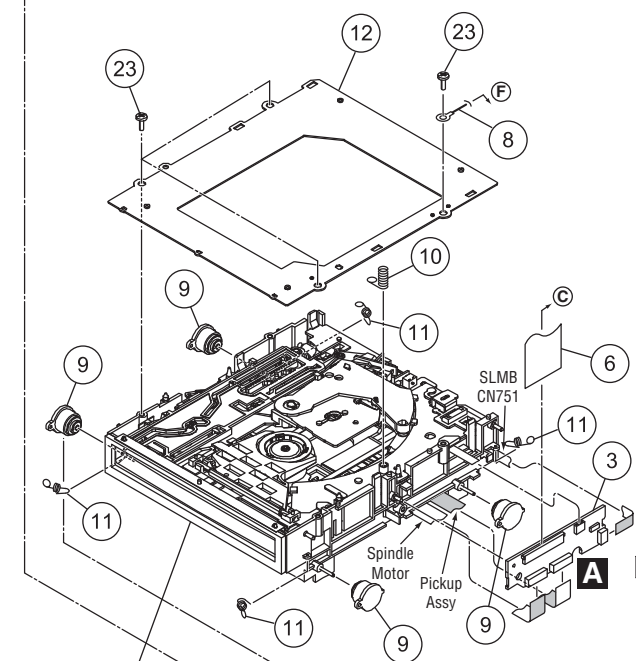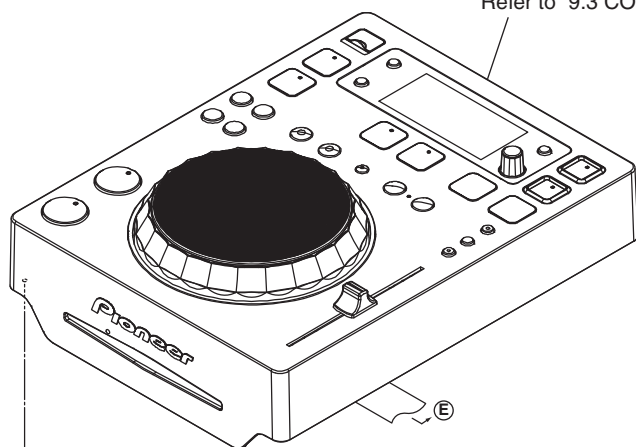


Refer to "9.4 SLOTIN MECHA SECTION".

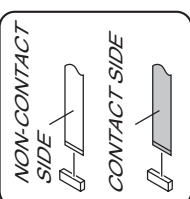

50

CDJ-350

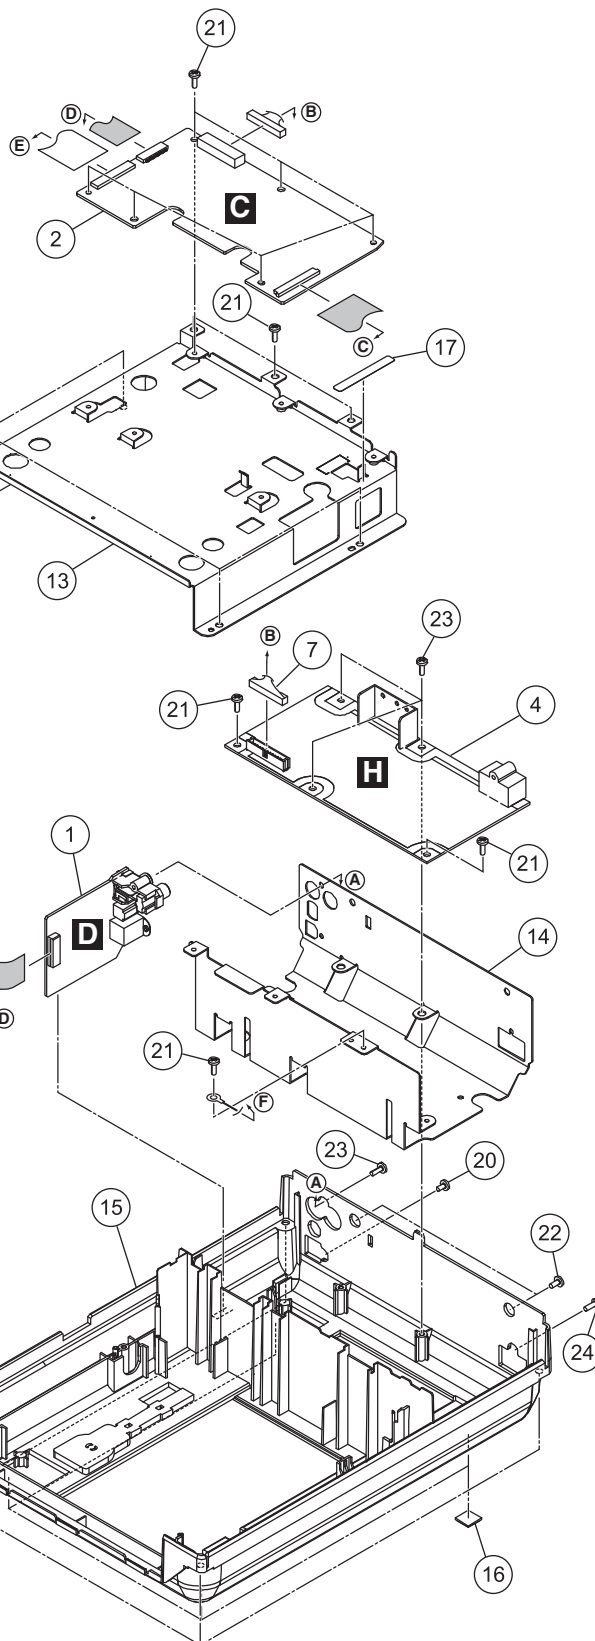

2

3

4

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	JACK Assy	DWX3107
2	MAIN Assy	DWX3105
3	CNCT Assy	DWX3111
⚠ 4	SMPS Assy	See Contrast table (2)
5	17P FFC	DDD1494
6	50P FFC	DDD1536
7	Connector Assy 13P	DKP3865
8	Earth Lead wire	DE007VE0
9	Damper	CNV6011
10	Earth Spring	DBH1398
11	Float Spring (G5)	DBH1494
12	Mecha Plate	DNH2642
13	Main PCB Stay	DNH2914
14	Rear Chassis	DNH2915
⚠ NSP 15	Chassis	See Contrast table (2)
16	Rubber Foot	VEB1349
NSP 17	P. U. Caution Label	DRW2448
18	•••••	
19	•••••	
20	Screw (M3 x 5)	DBA1340
21	Screw	ABZ30P060FTC
22	Screw	BBZ30P060FTB
23	Screw	BPZ30P080FTB
24	Screw	PPZ30P080FTB

(2) CONTRAST TABLE

CDJ-350/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-350 /SYXJ8	CDJ-350 /CUXJ	CDJ-350 /FLXJ	CDJ-350 /KXJ5	CDJ-350 /AXJ5
⚠	4	SMPS Assy	DWR1482	DWR1481	DWR1482	DWR1482	DWR1482
⚠ NSP	15	Chassis	DNK5576	DNK5780	DNK5781	DNK5784	DNK5782

△



Lubricating oil
(GYA1001)

Lubricating oil
(GYA1001)

During reassembly, be careful not to scratch the sliding surface of the back side of the Jog dial B.
(Scratches on the sliding surface may cause noise during turning of the Jog dial.)



The diagram shows two views of a component. The left view is labeled "NON-CONTACT SIDE" and shows a white component with a small rectangular feature on its left side. The right view is labeled "CONTACT SIDE" and shows the same component from the opposite side, which is shaded gray, with the same rectangular feature on its left side.

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	PNLB Assy	DWX3106	46	Standby Button Assy	DXB2065	
2	TCHB Assy	DWX3109	47	•••••		A
3	JOGB Assy	DWX3124	48	•••••		
4	27P FFC	DDD1537	49	•••••		
5	Connector Assy	PF03PP-B17	50	•••••		
6	Display Button	DAC2574	51	Washer	WA41D070D025	
7	Loop Button	DAC2575	52	Washer	WT32D080D050	
8	Search Button	DAC2576	53	Screw (FE)	DBA1265	
9	Vinyl Tempo Button	DAC2577	54	Screw	BPZ20P060FTC	
			55	Screw	BPZ30P080FTB	
10	Beat Loop Button	DAC2578				
11	Dial Knob	DAC2579				B
12	Play Button	DAC2580				
13	Slide Knob	DAC2594				
14	Jog Plate	DAH2775				
15	Display Panel	DAH2789				
16	Arm Spring	DBH1612				
17	Lever Spring	DBH1726				
18	Load Spring	DBH1727				
19	Encoder Plate	DEC2889				
20	Lever Cushion (A)	DEC3001				C
21	Lever Cushion (B)	DEC3002				
22	Slide Sheet	DEC3227				
23	Ground Holder	DNH2917				
24	Jog Lever	DNK4763				
25	Jog Shaft	DNK4934				
26	Encoder Arm	DNK4936				
27	Encoder Gear	DNK4937				
28	Load Gear	DNK5178				
29	Lever Holder	DNK5206				D
30	Shaft Holder	DNK5514				
31	Cam Plate	DNK5546				
32	Push Plate	DNK5547				
33	Beat Loop Lens	DNK5548				
⚠ 34	Control Panel	DNK5549				
35	Color Ring A	DNK5550				
36	Jog Holder	DNK5552				
37	Jog Dial B	DNK5571				
38	Jog Dial A	DNK5574				E
39	USB Cover	DNK5657				
40	Source Select B Assy	DXB2063				
41	•••••					
42	•••••					
43	USB Stop Button Assy	DXB2064				
44	•••••					
45	•••••					

9.4 SLOTIN MECHA SECTION

A


B

C

D

E

F

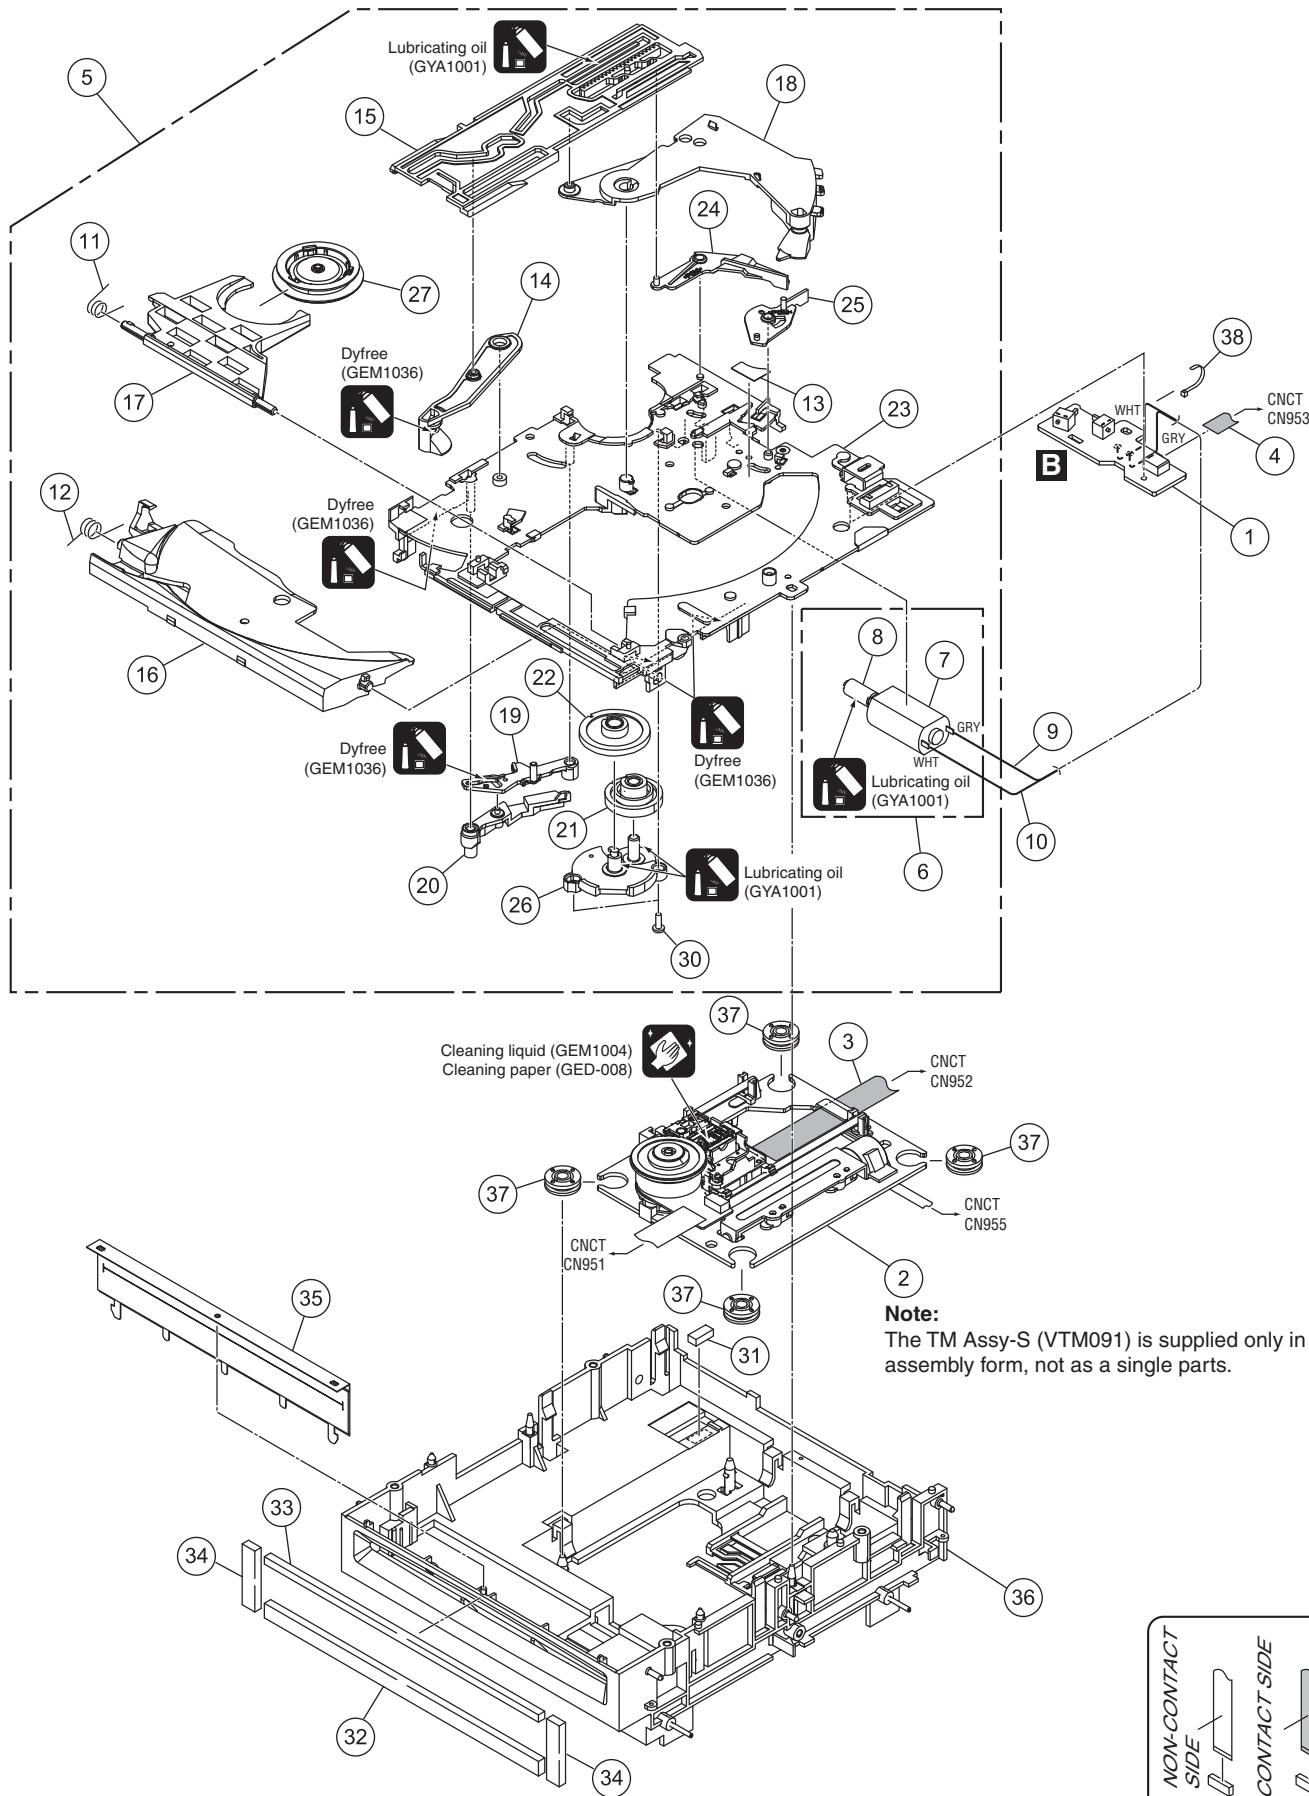

SLOTIN MECHA SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 SLMB Assy	DWX3108	
	2 TM Assy-S (VTM091)	DXX2616	A
	3 24P FFC	DDD1491	
	4 5P FFC	DDD1492	
NSP	5 SLOTIN MECHA Assy	DXA2206	
	6 Loading Motor Assy-S	DXX2615	
NSP	7 DC Motor	DXM1384	
NSP	8 Worm Gear	DNK3910	
	9 Lead Wire	ZWNN1007G28-8-06A	
	10 Lead Wire	ZWNN1007G28-9-06A	
	11 Clamp Spring	DBH1374	B
	12 Guide Spring	DBH1375	
	13 SW. Lever Spacer SV	DEC2831	
	14 Loading Lever	DNK3406	
	15 Main Cam	DNK3407	
	16 Disc Guide	DNK3478	
	17 Clamp Arm	DNK3576	
	18 Eject Lever	DNK3684	
	19 Lever AP	DNK3835	
	20 Lever BP	DNK3836	C
	21 Loading Gear	DNK3911	
	22 Drive Gear	DNK3912	
	23 Loading Base SV	DNK4369	
	24 SW Lever SV1	DNK4370	
	25 SW Lever SV2	DNK4371	
	26 Gear Holder SV	DNK4372	
	27 Clamper Assy-S	DXX2661	
	28 ●●●●●		
	29 ●●●●●		D
	30 Screw	BPZ20P060FTC	
	31 Spacer POR (T3)	DEB1566	
	32 Vessel Cushion A	DEC2852	
	33 Vessel Cushion B	DEC2853	
	34 Vessel Cushion C	DEC2854	
	35 Front Sheet	DED1132	
	36 Float Base 05 Assy	DXB2068	
	37 Floating Rubber (SI)	VEB1351	
	38 Binder	ZCA-SKB90BK	E