


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

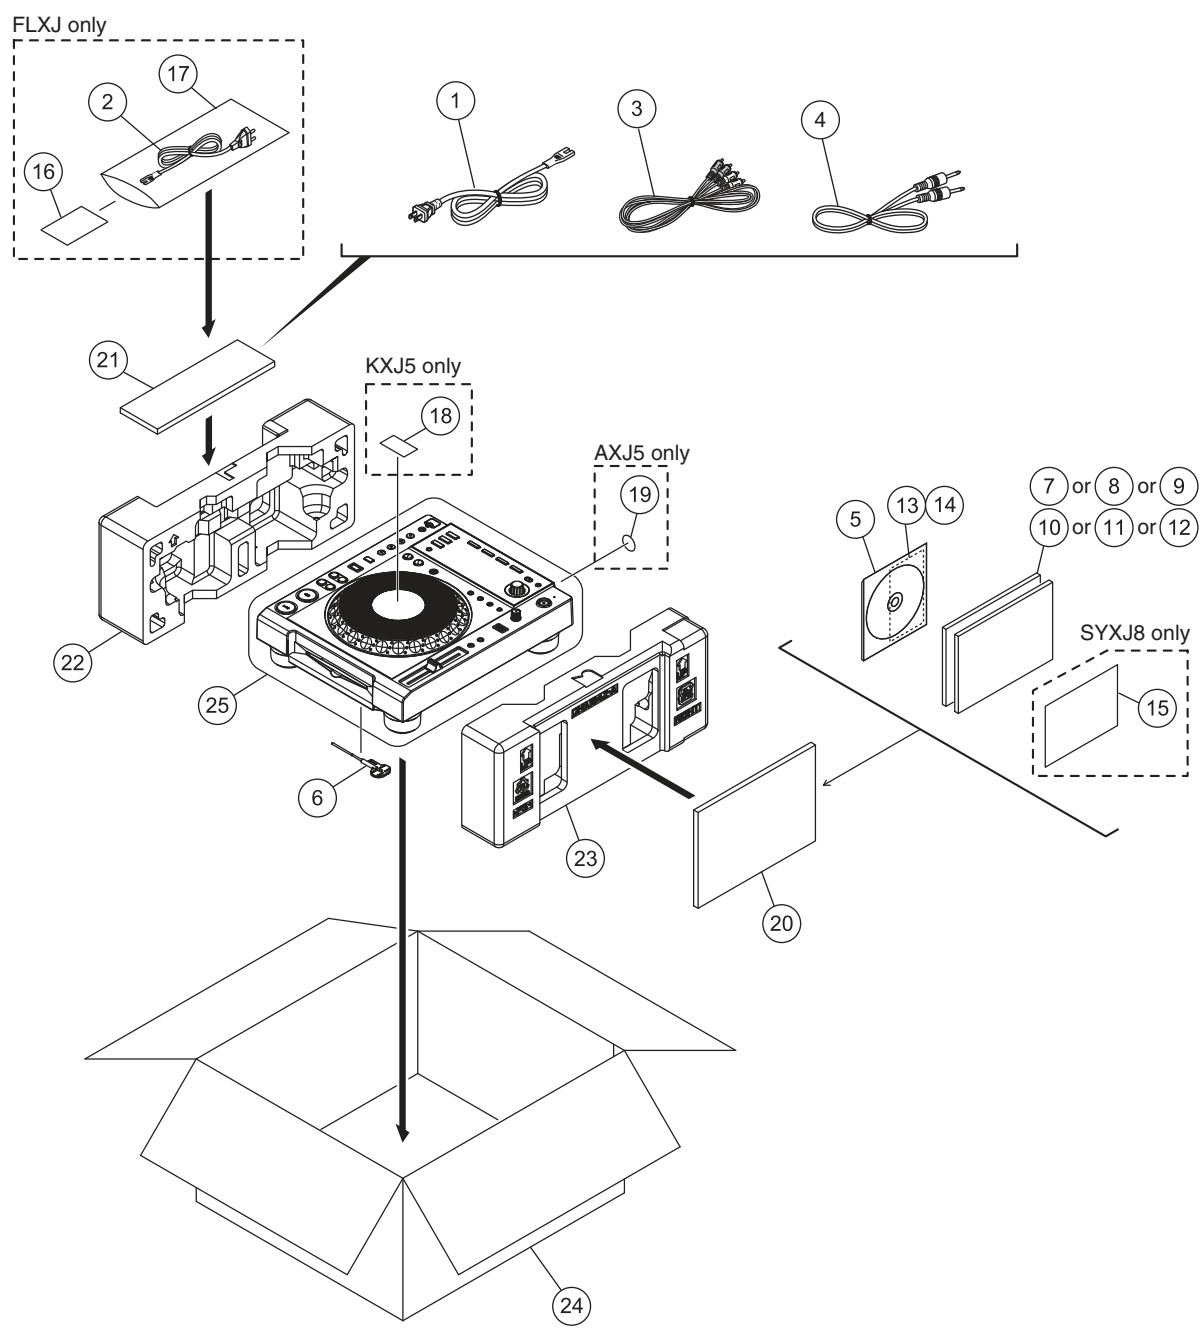

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
⚠	1 Power Cord	See Contrast table (2)	NSP 15	Warranty Card	See Contrast table (2)	
⚠	2 Power Cord	See Contrast table (2)	16	Caution Card SB	See Contrast table (2)	A
	3 Audio cable	XDE3045	17	Vinyl Bag	See Contrast table (2)	
	4 Control cord	XDE3063	18	Recycle Label (M)	See Contrast table (2)	
	5 CD-ROM (rekordbox license key attached)	DXX2654	NSP 19	CCC S & E Label	See Contrast table (2)	
	6 Disc force eject pin (mounted on bottom of product)	DEX1008	NSP 20	Polyethylene Bag	AHG7117	
	7 Operating Instructions	See Contrast table (2)	21	Vinyl Bag	Z21-013	
	8 Operating Instructions	See Contrast table (2)	22	Pad L	DHA1841	
	9 Operating Instructions	See Contrast table (2)	23	Pad R	DHA1842	
	10 Operating Instructions	See Contrast table (2)	24	Packing Case	See Contrast table (2)	
	11 Operating Instructions	See Contrast table (2)	25	Sheet	RHX1006	B
	12 Operating Instructions	See Contrast table (2)				
NSP 13	License Key Label	DRW2402				
NSP 14	License Key Label Assy	DXA2190				

(2) CONTRAST TABLE

CDJ-850/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>CDJ-850 /SYXJ8</u>	<u>CDJ-850 /CUXJ</u>	<u>CDJ-850 /FLXJ</u>	<u>CDJ-850 /KXJ5</u>	<u>CDJ-850 /AXJ5</u>
⚠	1	Power Cord	ADG1154	ADG7022	ADG1154	XDG3054	ADG7079
⚠	2	Power Cord	Not used	Not used	ADG7097	Not used	Not used
	7	Operating Instructions (En, Fr, De)	DRB1527	Not used	Not used	Not used	Not used
	8	Operating Instructions (It, NI, Es, Ru)	DRB1535	Not used	Not used	Not used	Not used
	9	Operating Instructions (En, Fr)	Not used	DRB1526	Not used	Not used	Not used
	10	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1528	Not used	Not used
	11	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1530	Not used
	12	Operating Instructions (Zhcn, En)	Not used	Not used	Not used	Not used	DRB1529
NSP	15	Warranty Card	ARY7107	Not used	Not used	Not used	Not used
	16	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used
	17	Vinyl Bag	Not used	Not used	Z21-013	Not used	Not used
	18	Recycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
NSP	19	CCC S & E Label	Not used	Not used	Not used	Not used	DRW2310
	24	Packing Case	DHG2918	DHG2919	DHG2920	DHG2923	DHG2922

9.2 EXTERIOR SECTION

A

B


C

D

E

F

Refer to
"9.3 CONTROL PANEL SECTION".

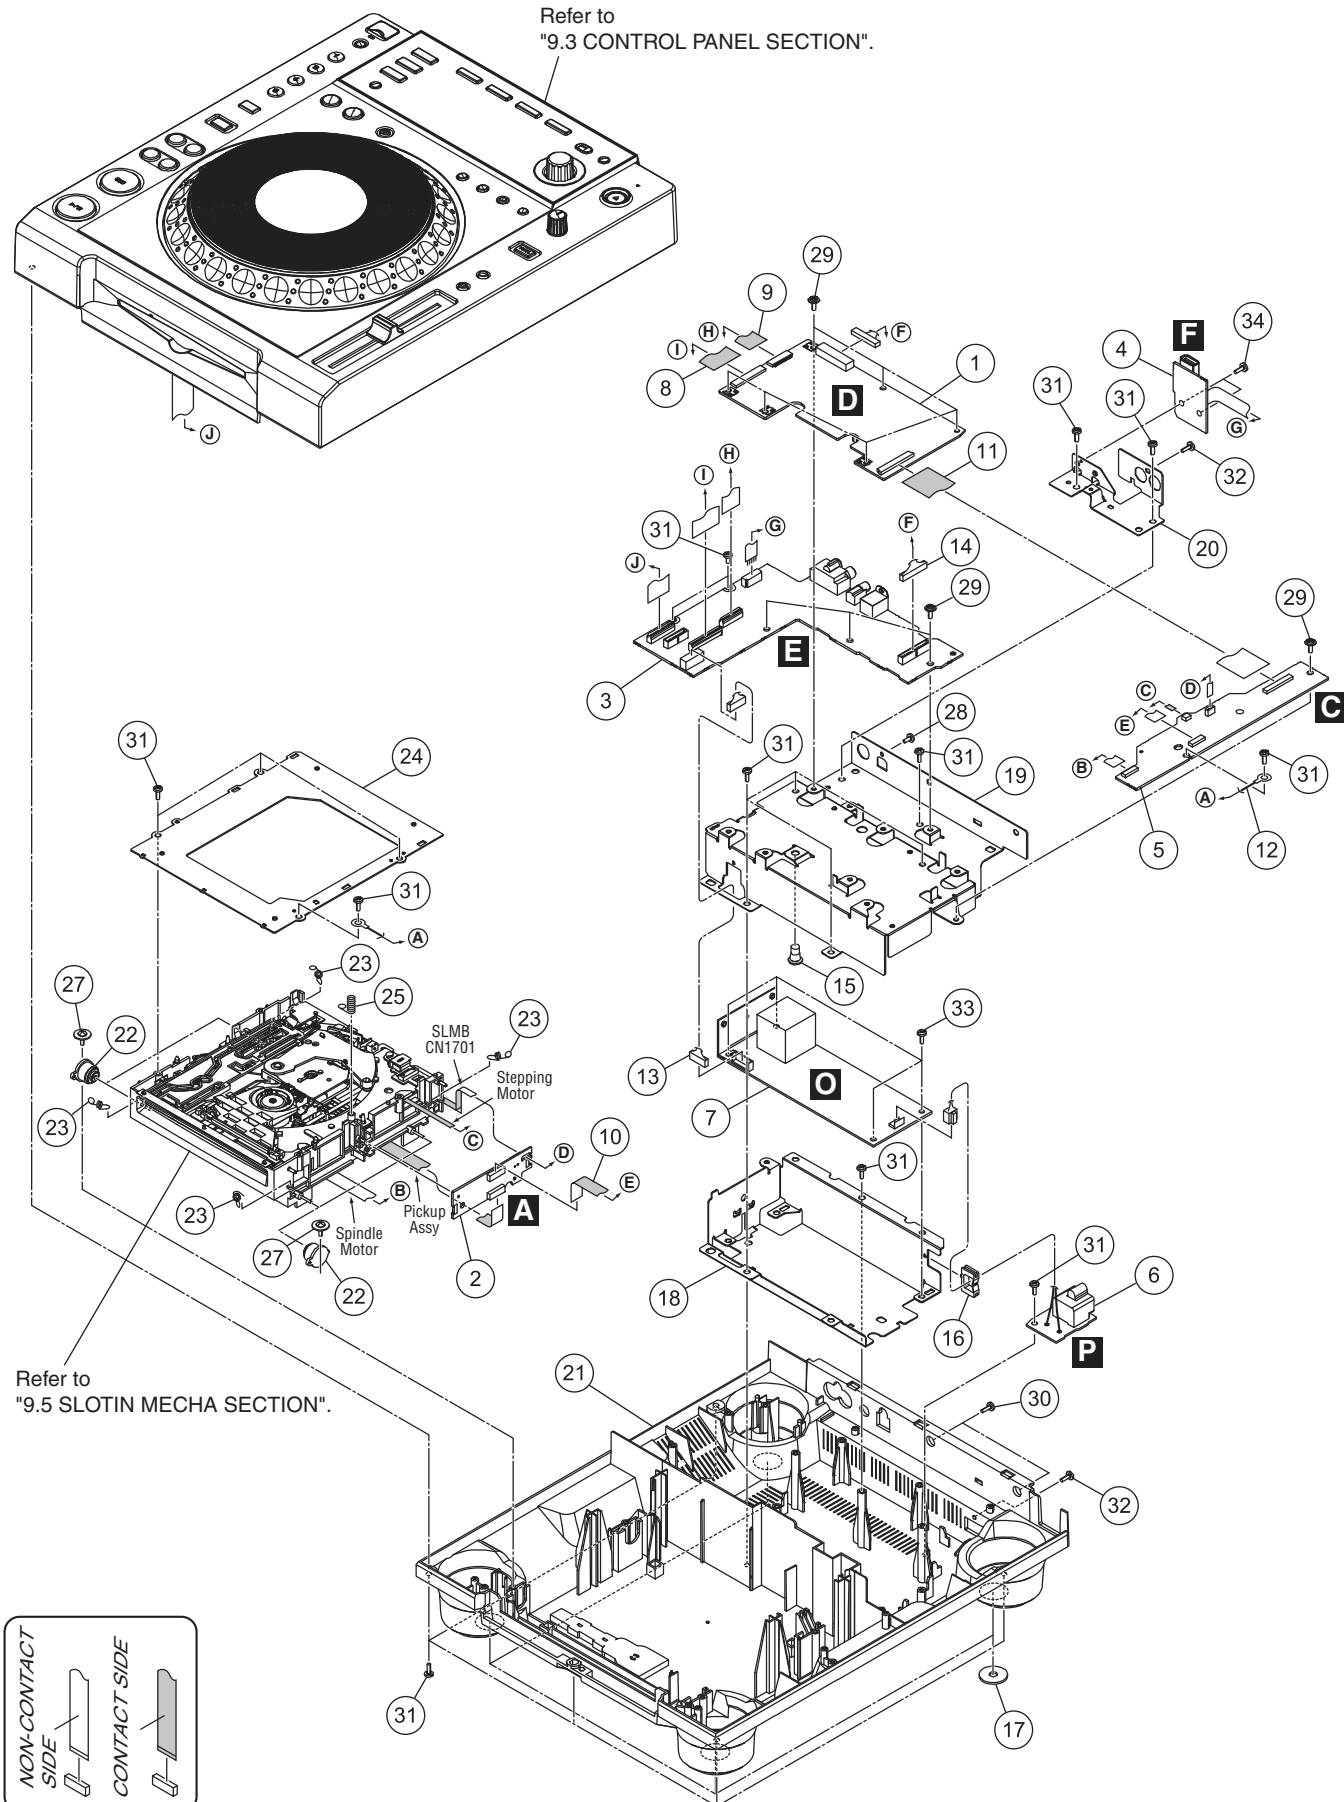


	5		6		7		8	
(1) EXTERIOR SECTION SECTION PARTS LIST								
	Mark No.	Description	Part No.		Mark No.	Description	Part No.	
	1	MAIN Assy	DWX3174		⚠ 21	Chassis	See Contrast table (2)	
	2	CNCT Assy	DWX3151		22	Damper	CNV6011	A
	3	CMPX Assy	DWX3153		23	Float Spring G5	DBH1494	
	4	USBA Assy	DWX3156		24	Mecha Plate	DNH2642	
	5	JINT Assy	DWX3157		25	Earth Spring	DBH1398	
	6	ACIN Assy	See Contrast table (2)		26	•••••		
	⚠ 7	POWER SUPPLY Assy	DWR1463		27	DM Screw (FTC)	DBA1260	
	8	27P FFC	DDD1523		28	Screw (M3 x 5)	DBA1340	
	9	17P FFC	DDD1524		29	Screw	ABZ30P060FTC	
	10	24P FFC	DDD1535		30	Screw	BBZ30P060FTB	
					31	Screw	BPZ30P080FNI	B
	11	50P FFC	DDD1536					
NSP	12	Cord With Plug	DE010VE0		32	Screw	BPZ30P080FTB	
	13	Connector Assy 6P	DKP3869		33	Screw	BPZ30P100FTC	
	14	Connector Assy	PF13PP-S07		34	Screw	BSZ30P060FTC	
	15	Card Spacer	AEC7133					
	16	Edge Saddle	AEC7582					
	17	Cushion	DEC3177					
	18	Power Supply Stay	DNH2936					
	19	Main PCB Stay	DNH2937					
NSP	20	USB Stay	DNH2938					C

(2) CONTRAST TABLE

CDJ-850/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-850 /SYXJ8	CDJ-850 /CUXJ	CDJ-850 /FLXJ	CDJ-850 /KXJ5	CDJ-850 /AXJ5	
⚠	6 21	ACIN Assy Chassis	DWX3158 DNK5785	DWX3173 DNK5819	DWX3158 DNK5820	DWX3158 DNK5823	DWX3158 DNK5822	D

9.3 CONTROL PANEL SECTION

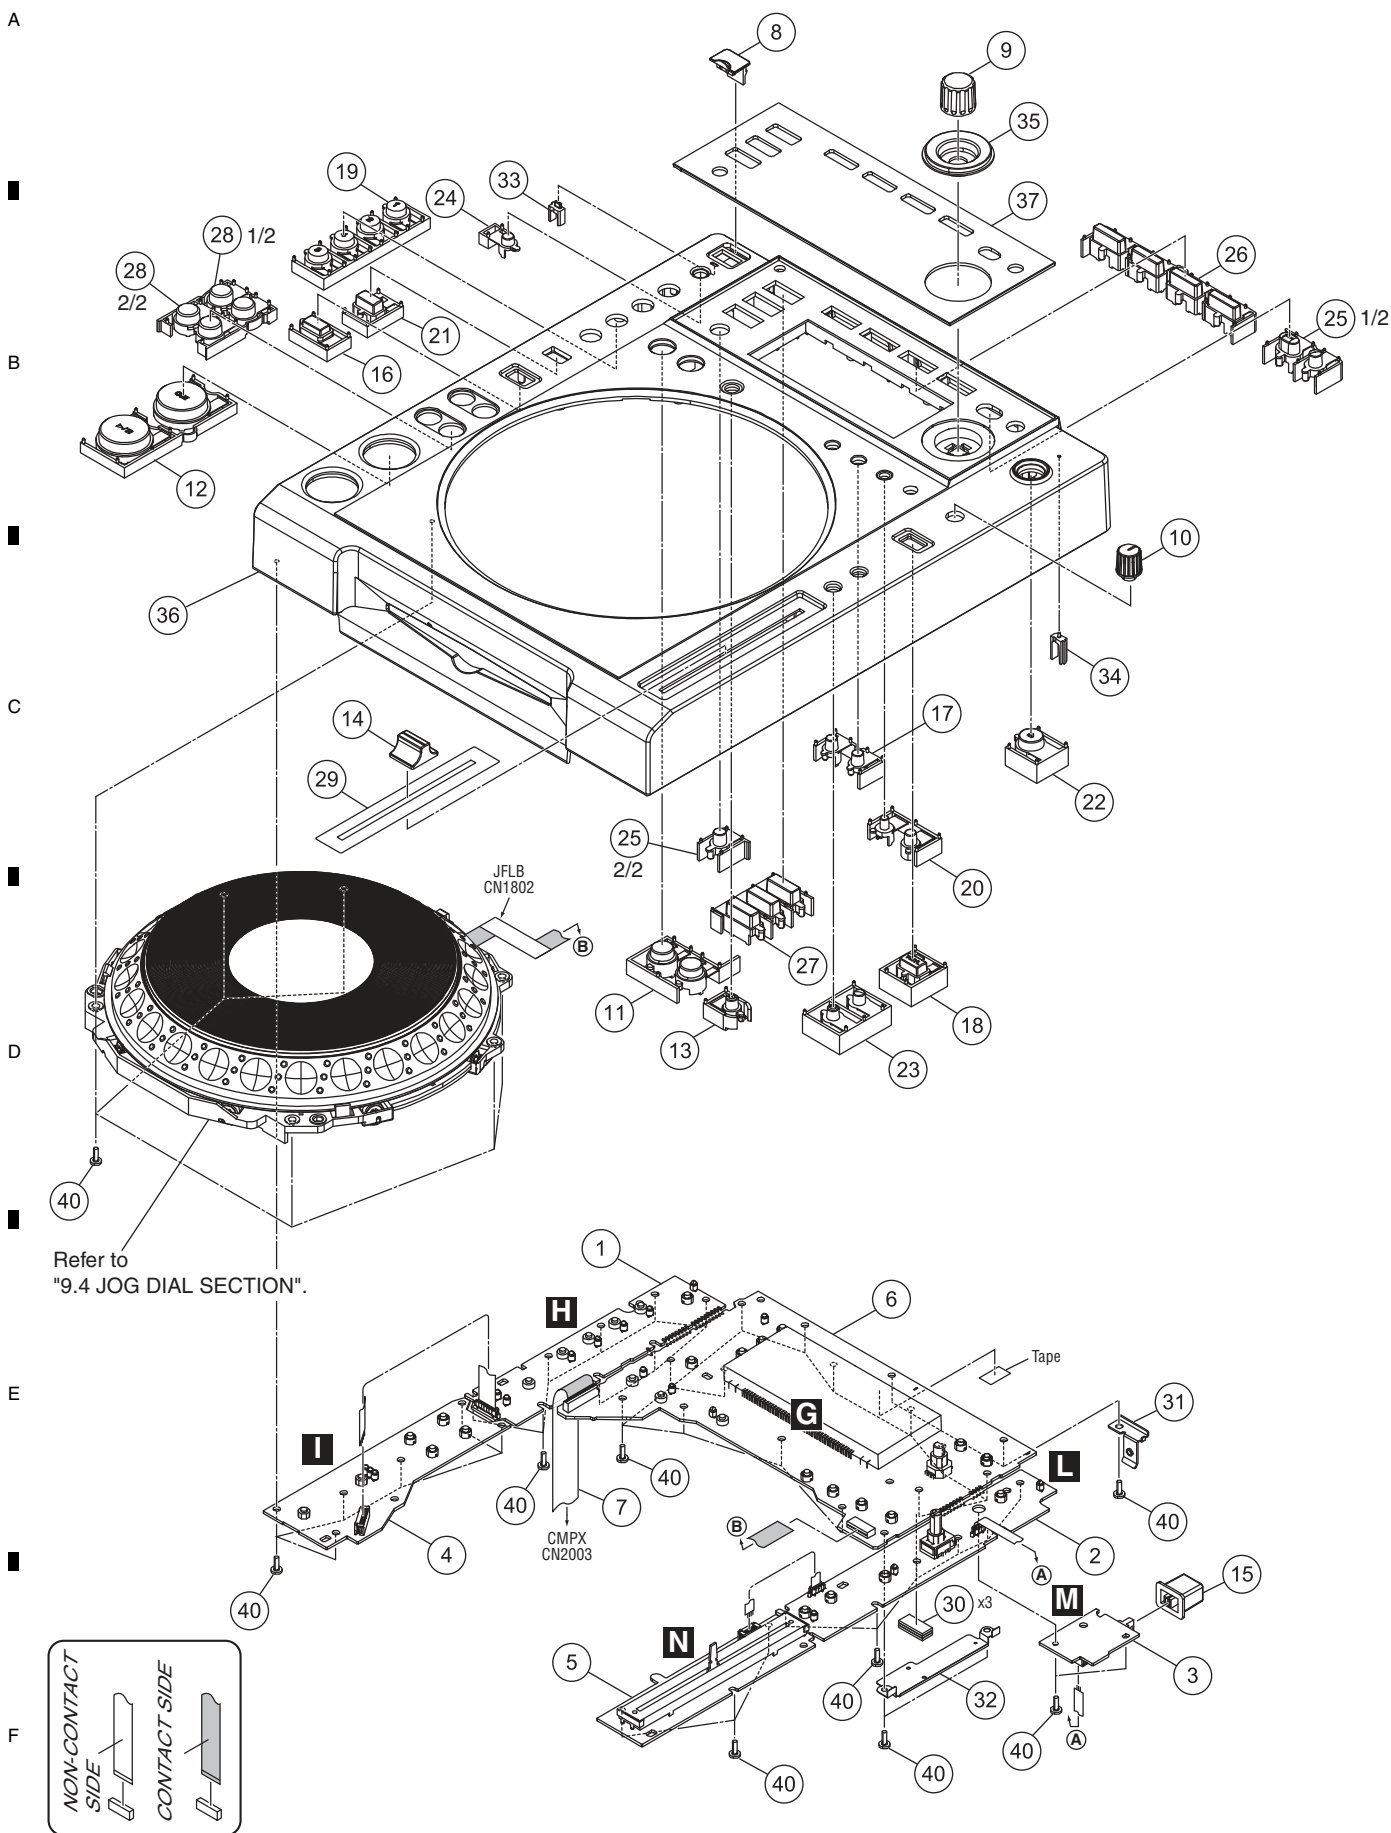

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	
NSP 1	KSW1 Assy	DWS1422	
NSP 2	SLD1 Assy	DWS1423	A
3	PSWB Assy	DWS1424	
4	KSW2 Assy	DWS1426	
5	SLD2 Assy	DWS1427	
6	DFLB Assy	DWX3152 *	■
7	21P FFC	DDD1522	
8	USB Cover	DNK4999	
9	Rotary Knob C	DAA1194	
10	Dial Knob	DAA1259	
11	Loop Knob	DAC2066	B
12	Play Knob	DAC2286	
13	Reloop Knob	DAC2291	
14	Slide Knob	DAC2292	
15	Power Knob	DAC2306	■
16	Reverse Knob	DAC2364	
17	Set Button (CALL)	DAC2497	
18	Vinyl Knob	DAC2542	
19	Auto Beat Roop Knob	DAC2543	
20	Del/Memo Knob	DAC2545	C
21	Beat Select Button	DAC2546	
22	Eject Button	DAC2548	
23	Tempo Button	DAC2549	
24	USB Stop Button	DAC2550	
25	Back Button	DAC2613	■
26	Device Select Button	DAC2614	
27	Mode Select Button	DAC2615	
28	Search Button Silver	DAC2627	
29	Slide Sheet 1C	DAH2404	D
NSP 30	Silicon Rubber D5 L	DEB1456	
31	Earth Bracket	DNH2941	
32	Heatsink	DNH2958	
33	USB Lens	DNK5353	■
34	EUP Lens	DNK5408	
35	Encoder Ring	DNK5489	
⚠ 36	Control Panel	DNK5786	
37	Display Window	DNK5793	
38	●●●●●		E
39	●●●●●		
40	Screw	BPZ30P080FNI	

* The service part of DFLB Assy (DWX3152) is supplied with KSW1 Assy (DWS1422) and SLD1 Assy (DWS1423).
(There assemblies are connected with the jumper wires.)

■

9.4 JOG DIAL SECTION

A


B

C

D

E

F

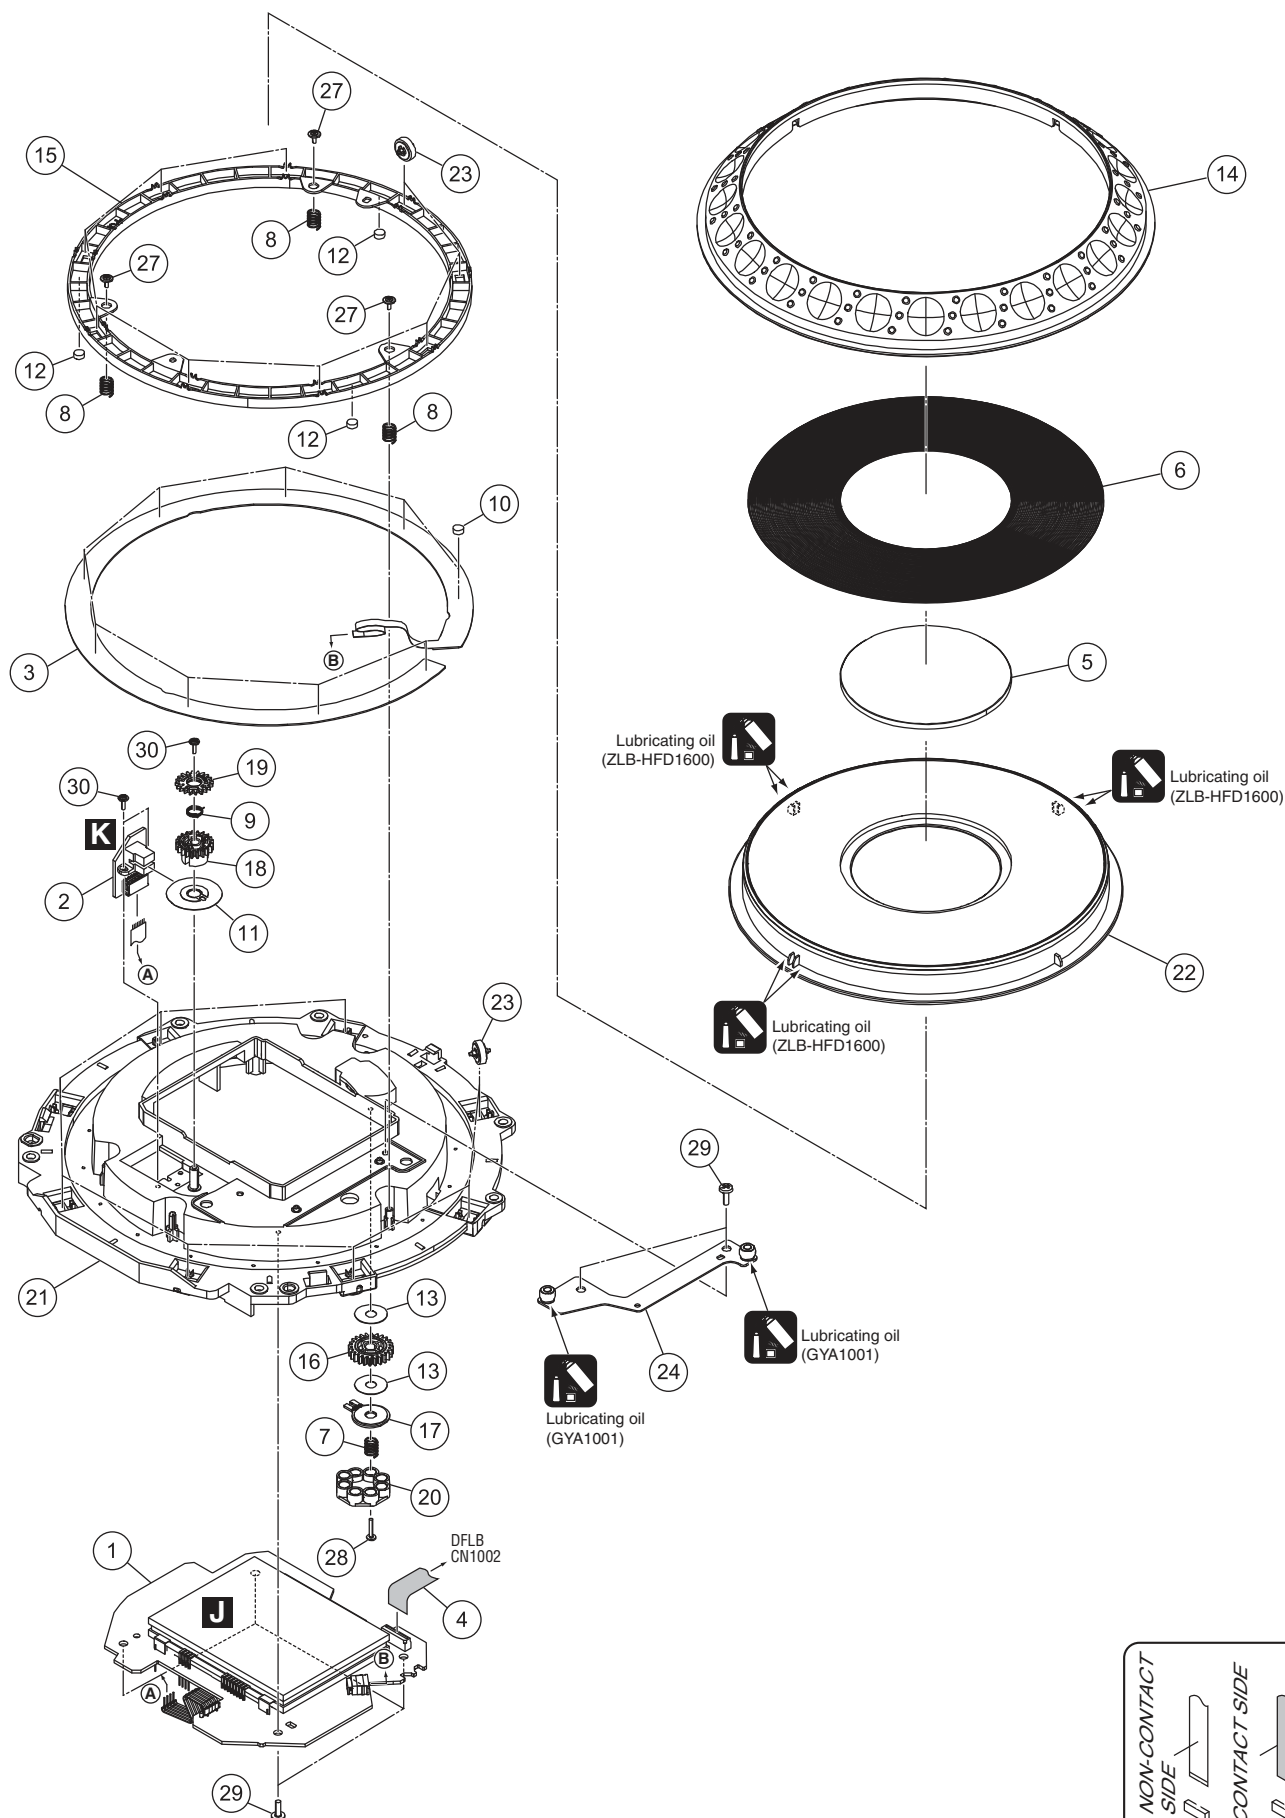

JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JFLB Assy	DWX3154	
2	JOGB Assy	DWX3155	A
3	Sheet SW	DSX1078	
4	13P FFC	DDD1521	
5	JOG Panel	DAH2609	
6	JOG Plate	DAH2839	
7	Load Spring	DBH1680	■
8	SW Spring	DBH1681	
9	Encoder Spring	DBH1710	
10	SW Cushion HH48/2	DEC2538	
11	Encoder Plate	DEC2889	B
12	Ring Cushion L24/2.0	DEC2958	
13	Washer	DEC3137	
14	JOG B	DNK4068	
15	SW Ring	DNK5233	■
16	Load Gear	DNK5236	
17	Smoother	DNK5237	
18	Gear A	DNK5241	
19	Gear B	DNK5242	
20	Adjust Plate	DNK5300	C
21	JOG Holder M	DNK5356	
22	JOG Dial A	DNK5357	
23	Roller A Assy	DXB2010	
24	JOG Stay Assy	DXB2015	
25			■
26			
27	Screw (FE)	DBA1265	
28	Screw	BPZ20P100FTC	
29	Screw	BPZ30P080FNI	D
30	Screw	IPZ20P060FTC	

SLOTIN MECHA SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 SLMB Assy	DWS1425	
	2 TM Assy-S (VTM091)	DXX2616	A
	3 24P FFC	DDD1491	
	4 5P FFC	DDD1527	
NSP	5 SLOTIN MECHA Assy	DXA2206	
	6 Loading Motor Assy-S	DXX2615	
NSP	7 DC Motor	DXM1384	
NSP	8 Worm Gear	DNK3910	
	9 Lead Wire	ZWNN1007G28-8-06A	
	10 Lead Wire	ZWNN1007G28-9-06A	
	11 Clamp Spring	DBH1374	B
	12 Guide Spring	DBH1375	
	13 SW. Lever Spacer SV	DEC2831	
	14 Loading Lever	DNK3406	
	15 Main Cam	DNK3407	
	16 Disc Guide	DNK3478	
	17 Clamp Arm	DNK3576	
	18 Eject Lever	DNK3684	
	19 Lever AP	DNK3835	
	20 Lever BP	DNK3836	C
	21 Loading Gear	DNK3911	
	22 Drive Gear	DNK3912	
	23 Loading Base SV	DNK4369	
	24 SW Lever SV1	DNK4370	
	25 SW Lever SV2	DNK4371	
	26 Gear Holder SV	DNK4372	
	27 Clamper Assy-S	DXX2661	
	28 ●●●●●		
	29 ●●●●●		D
	30 Screw	BPZ20P060FTC	
	31 Spacer POR (T3)	DEB1566	
	32 Vessel Cushion (C)	DEC2854	
	33 Vessel Cushion T	DEC3349	
	34 Vessel Cushion U	DEC3350	
	35 Front Sheet	DED1132	
	36 Float Base 05 Assy	DXB2068	
	37 Floating Rubber	VEB1351	
	38 Binder	ZCA-SKB90BK	E