


# 9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.  
(In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

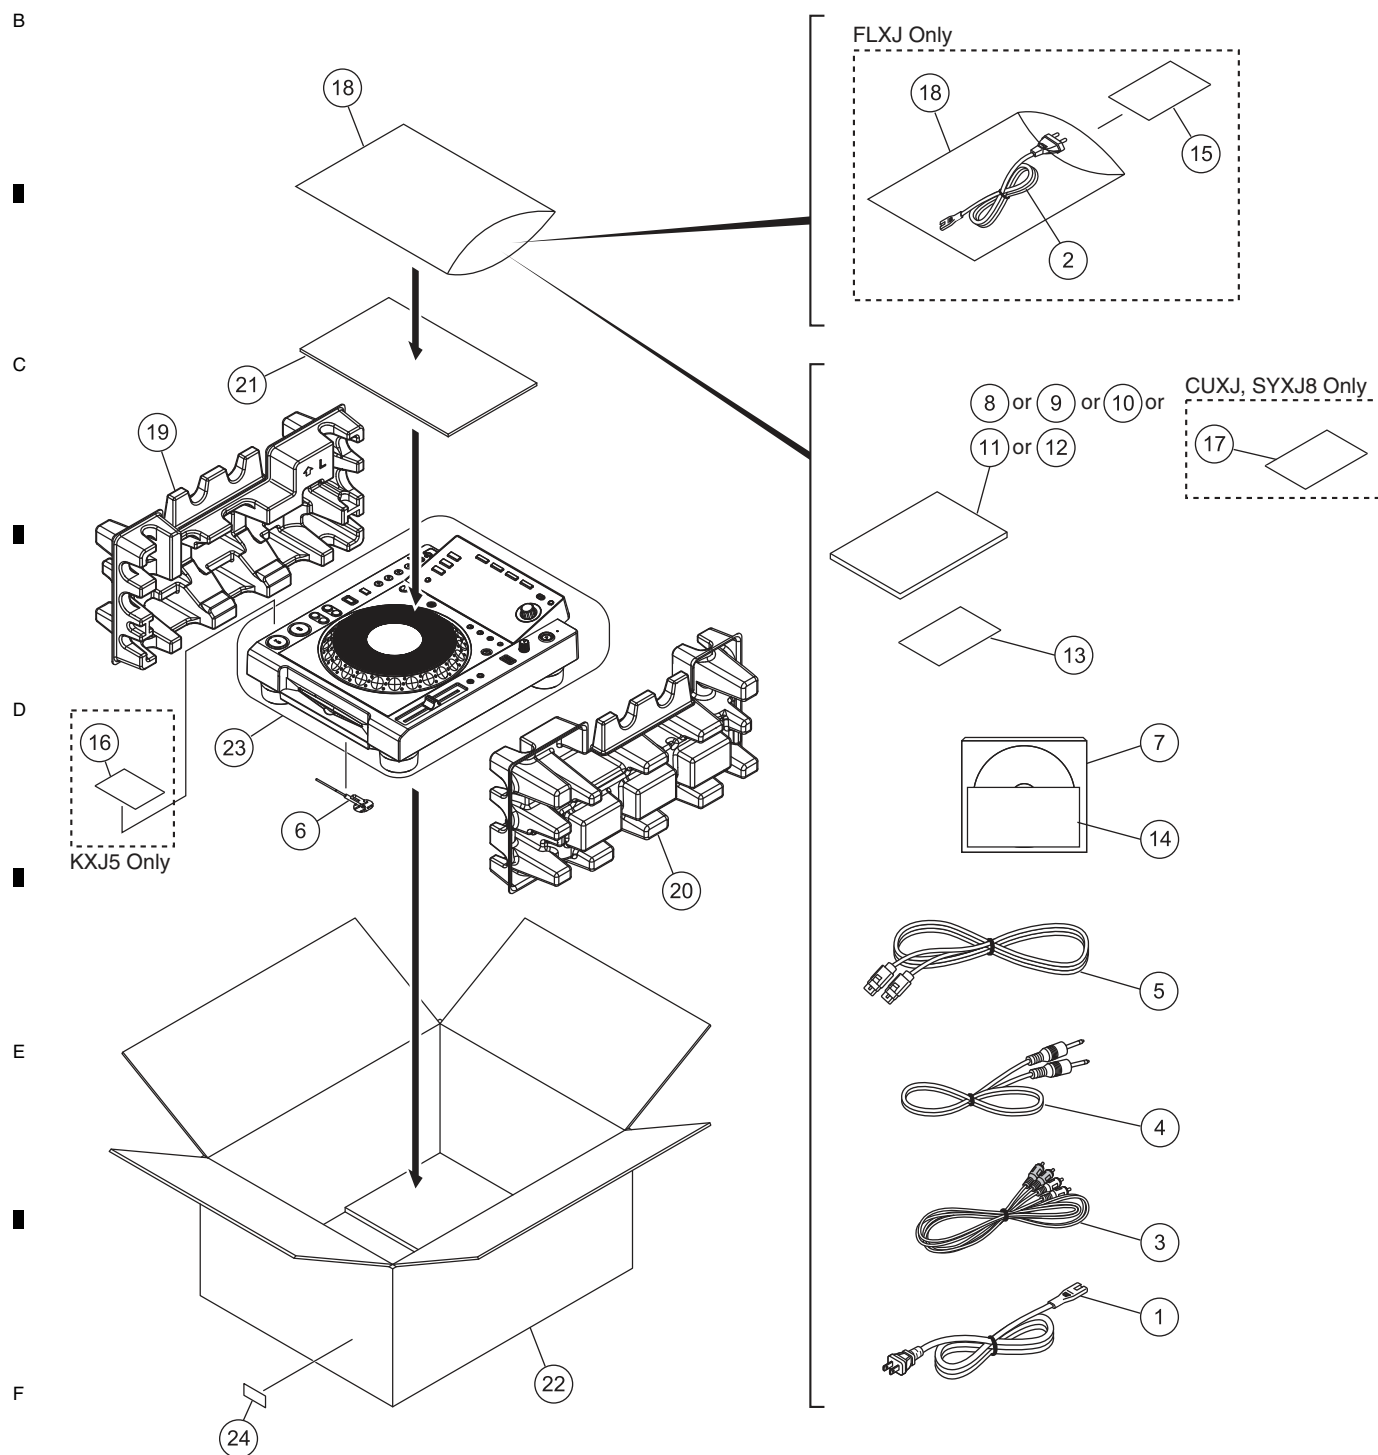

## (1) PACKING SECTION PARTS LIST


| Mark | No. | Description             | Part No.               | Mark | No. | Description                            | Part No.               |
|------|-----|-------------------------|------------------------|------|-----|----------------------------------------|------------------------|
| ⚠    | 1   | Power Cable             | See Contrast table (2) |      | 16  | Recycle Label M                        | See Contrast table (2) |
| ⚠    | 2   | Power Cable             | See Contrast table (2) | NSP  | 17  | Warranty Card                          | See Contrast table (2) |
|      | 3   | Audio Cable (L = 1.5 m) | XDE3045                | NSP  | 18  | Polyethylene Bag<br>(0.06 x 230 x 340) | AHG7117                |
|      | 4   | Control Cord (L = 1 m)  | XDE3063                |      | 19  | Pad L                                  | DHA1792                |
|      | 5   | LAN Cable (1M UTP)      | DDE1130                |      | 20  | Pad R                                  | DHA1793                |
|      | 6   | Disc Force Eject Pin    | DEX1008                |      | 21  | Accessory Pad                          | DHA1803                |
|      | 7   | CD-ROM (rekord box)     | DXX2598                |      | 22  | Packing Case                           | See Contrast table (2) |
|      | 8   | Operating Instructions  | See Contrast table (2) |      | 23  | Packing Sheet                          | RHC1023                |
|      | 9   | Operating Instructions  | See Contrast table (2) |      | 24  | Serial Label                           | VRW1629                |
|      | 10  | Operating Instructions  | See Contrast table (2) |      |     |                                        |                        |
|      | 11  | Operating Instructions  | See Contrast table (2) |      |     |                                        |                        |
|      | 12  | Operating Instructions  | See Contrast table (2) |      |     |                                        |                        |
|      | 13  | Information Sheet       | DRM1338                |      |     |                                        |                        |
| NSP  | 14  | License Key Label       | DXA2190                |      |     |                                        |                        |
|      | 15  | Caution Card SB         | See Contrast table (2) |      |     |                                        |                        |

## (2) CONTRAST TABLE

CDJ-900/CUXJ, SYXJ8, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description                              | CDJ-900<br>/CUXJ | CDJ-900<br>/SYXJ8 | CDJ-900<br>/FLXJ | CDJ-900<br>/KXJ5 | CDJ-900<br>/AXJ5 |
|------|-----|-----------------------------------------------------|------------------|-------------------|------------------|------------------|------------------|
| ⚠    | 1   | Power Cable                                         | ADG7021          | ADG1154           | ADG1154          | XDG3054          | ADG7079          |
| ⚠    | 2   | Power Cable                                         | Not used         | Not used          | ADG7097          | Not used         | Not used         |
|      | 8   | Operating Instructions (En, Fr)                     | DRB1486          | Not used          | Not used         | Not used         | Not used         |
|      | 9   | Operating Instructions (En, Fr, De, It, Ni, Es, Ru) | Not used         | DRB1484           | Not used         | Not used         | Not used         |
|      | 10  | Operating Instructions (En, Es, Zhtw)               | Not used         | Not used          | DRB1487          | Not used         | Not used         |
|      | 11  | Operating Instructions (Ko)                         | Not used         | Not used          | Not used         | DRB1489          | Not used         |
|      | 12  | Operating Instructions (ZHcn, En)                   | Not used         | Not used          | Not used         | Not used         | DRB1488          |
|      | 15  | Caution Card SB                                     | Not used         | Not used          | ARM7064          | Not used         | Not used         |
|      | 16  | Recycle Label M                                     | Not used         | Not used          | Not used         | DRW2307          | Not used         |
| NSP  | 17  | Warranty Card                                       | ARY7043          | ARY7107           | Not used         | Not used         | Not used         |
|      | 22  | Packing Case                                        | DHG2806          | DHG2805           | DHG2807          | DHG2810          | DHG2808          |

## 9.2 EXTERIOR SECTION

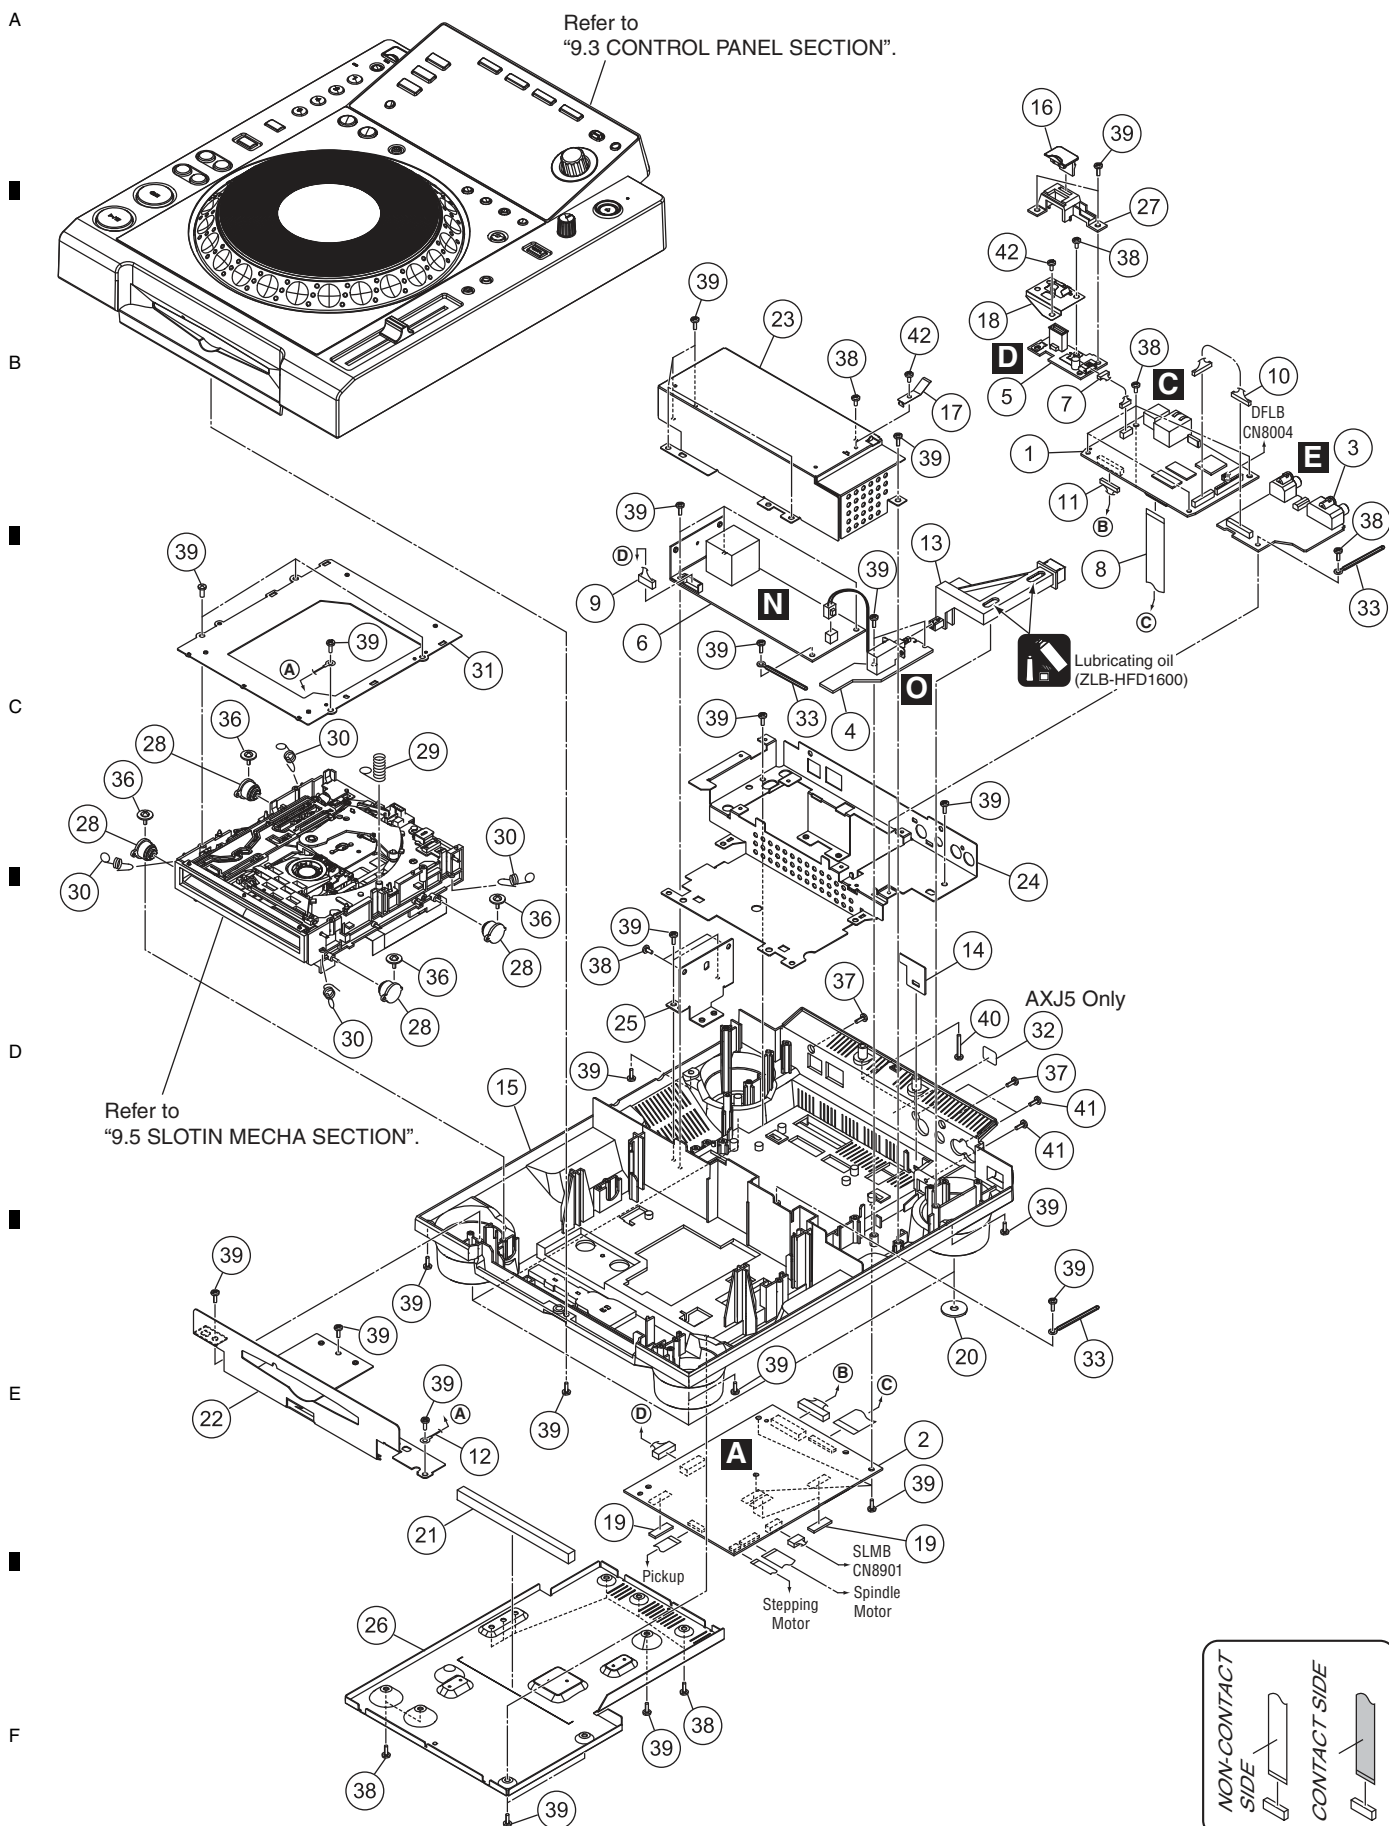

## (1) EXTERIOR SECTION PARTS LIST

| Mark No. | Description            | Part No.               | Mark No. | Description          | Part No.               |   |
|----------|------------------------|------------------------|----------|----------------------|------------------------|---|
|          | 1 MAIN Assy            | DWX3019                | 21       | Bottom Packing       | DEC3186                |   |
|          | 2 SRV Assy             | DWX3020                | 22       | Front Plate          | DNH2869                | A |
|          | 3 JACB Assy            | DWX3023                | 23       | Shield Case          | DNH2872                |   |
|          | 4 ACIN Assy            | See Contrast table (2) | 24       | Main PCB Stay        | DNH2874                |   |
|          | 5 USBA Assy            | DWX3044                | 25       | Heatsink             | DNH2885                |   |
| ⚠        | 6 POWER SUPPLY Assy    | DWR1463                | 26       | Bottom Plate         | See Contrast table (2) |   |
|          | 7 USB Cable            | DDA1040                | 27       | USB Holder           | DNK5423                |   |
|          | 8 40P FFC              | DDD1500                | 28       | Damper               | CNV6011                |   |
|          | 9 Connector Assy 6P    | DKP3831                | 29       | Earth Spring         | DBH1398                |   |
|          | 10 Connector Assy 12P  | DKP3838                | 30       | Float Spring (G5)    | DBH1494                |   |
|          | 11 Connector Assy 13P  | DKP3849                | 31       | Mecha Plate          | DNH2642                | B |
| NSP      | 12 Earth Lead Unit     | DE007VF0               | NSP      | 32 CCC S & E Label   | See Contrast table (2) |   |
|          | 13 Power Knob          | DAC2484                | 33       | Cord Clamper (Steel) | RNH-184                |   |
|          | 14 Lock Plate          | DNH2905                | 34       | •••••                |                        |   |
| ⚠        | 15 Chassis             | See Contrast table (2) | 35       | •••••                |                        |   |
|          | 16 USB Cover           | DNK4999                | 36       | DM Screw (FTC)       | DBA1260                |   |
|          | 17 Earth Plate         | DBK1224                | 37       | Screw                | BBZ30P060FTB           |   |
|          | 18 USB Earth Plate     | DBK1351                | 38       | Screw                | BBZ30P060FTC           |   |
| NSP      | 19 Silicon Rubber D5 L | DEB1456                | 39       | Screw                | BPZ30P080FNI           |   |
|          | 20 Cushion             | DEC3177                | 40       | Screw                | BPZ30P200FTB           | C |
|          |                        |                        | 41       | Screw                | BPZ30P080FTB           |   |
|          |                        |                        | 42       | Screw                | BSZ30P060FTC           |   |

## (2) CONTRAST TABLE

CDJ-900/CUXJ, SYXJ8, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | CDJ-900<br>/CUXJ | CDJ-900<br>/SYXJ8 | CDJ-900<br>/FLXJ | CDJ-900<br>/KXJ5 | CDJ-900<br>/AXJ5 |
|------|-----|------------------------|------------------|-------------------|------------------|------------------|------------------|
| ⚠    | 4   | ACIN Assy              | DWR1461          | DWR1462           | DWR1462          | DWR1462          | DWR1462          |
|      | 15  | Chassis                | DNK5358          | DNK5352           | DNK5359          | DNK5362          | DNK5360          |
|      | 26  | Bottom Plate           | DNH2895          | DNH2871           | DNH2896          | DNH2899          | DNH2897          |
| NSP  | 32  | CCC S & E Label        | Not used         | Not used          | Not used         | Not used         | DRW2310          |



®

Diagram illustrating the wafer structure. The top surface is labeled **NON-CONTACT SIDE**, and the bottom surface is labeled **CONTACT SIDE**.

# CONTROL PANEL SECTION PARTS LIST

| Mark No. | Description         | Part No.   | Mark No. | Description          | Part No.     |   |
|----------|---------------------|------------|----------|----------------------|--------------|---|
| 1        | KSWB Assy           | DWS1416    | 46       | Cord Clamper (Steel) | RNH-184      |   |
| 2        | SLDB Assy           | DWS1417    | 47       | Earth Lead Unit      | DDF1032      | A |
| 3        | DFLB Assy           | DWX3021    | 48       | •••••                |              |   |
| 4        | ENCB Assy           | DWX3022    | 49       | •••••                |              |   |
| 5        | MSWB Assy           | DWS1415    | 50       | Screw                | BBZ30P060FTC |   |
| 6        | BFLB Assy           | DWX3025    | 51       | Screw                | BPZ30P080FNI |   |
| 7        | 26P FFC             | DDD1445    |          |                      |              |   |
| 8        | 13P FFC             | DDD1449    |          |                      |              |   |
| 9        | 22P FFC             | DDD1489    |          |                      |              |   |
| 10       | 20P FFC             | DDD1501    |          |                      |              |   |
| 11       | Connector Assy      | PF04PP-Q17 |          |                      |              | B |
| 12       | •••••               |            |          |                      |              |   |
| 13       | Rotary Knob C       | DAA1194    |          |                      |              |   |
| 14       | Dial Knob           | DAA1246    |          |                      |              |   |
| 15       | Loop Knob           | DAC2066    |          |                      |              |   |
| 16       | Slide Knob          | DAC2067    |          |                      |              |   |
| 17       | Reloop Knob         | DAC2291    |          |                      |              |   |
| 18       | Reverse Knob        | DAC2364    |          |                      |              |   |
| 19       | Menu Button         | DAC2490    |          |                      |              |   |
| 20       | Media Select Button | DAC2491    |          |                      |              | C |
| 21       | Mode Select Button  | DAC2492    |          |                      |              |   |
| 22       | Set Button (SEARCH) | DAC2495    |          |                      |              |   |
| 23       | Set Button (CALL)   | DAC2497    |          |                      |              |   |
| 24       | Time Button         | DAC2498    |          |                      |              |   |
| 25       | Vinyl Knob          | DAC2542    |          |                      |              |   |
| 26       | Auto Beat Roop Knob | DAC2543    |          |                      |              |   |
| 27       | Quick Return Knob   | DAC2544    |          |                      |              |   |
| 28       | DEL MEMO Knob       | DAC2545    |          |                      |              |   |
| 29       | Beat Select Button  | DAC2546    |          |                      |              | D |
| 30       | Eject Button        | DAC2548    |          |                      |              |   |
| 31       | Tempo Button        | DAC2549    |          |                      |              |   |
| 32       | USB Stop Button     | DAC2550    |          |                      |              |   |
| 33       | Play Knob           | DAC2596    |          |                      |              |   |
| 34       | Slide Sheet 1C      | DAH2404    |          |                      |              |   |
| 35       | Earth Plate         | DBK1224    |          |                      |              |   |
| 36       | FFC Guard           | DEC2586    |          |                      |              |   |
| 37       | Encoder Stay        | DNF1840    |          |                      |              |   |
| 38       | Earth Plate         | DNH2875    |          |                      |              | E |
| 39       | Earth Plate S       | DNH2906    |          |                      |              |   |
| 40       | Earth Plate L       | DNH2907    |          |                      |              |   |
| 41       | USB Lens            | DNK5353    |          |                      |              |   |
| 42       | EUP Lens            | DNK5408    |          |                      |              |   |
| ⚠ 43     | Control Panel       | DNK5440    |          |                      |              |   |
| 44       | Display Panel       | DNK5442    |          |                      |              |   |
| 45       | Encoder Ring        | DNK5489    |          |                      |              | F |

1 2 3 4

# 9.4 JOG DIAL SECTION

A


B

C

D

E


F

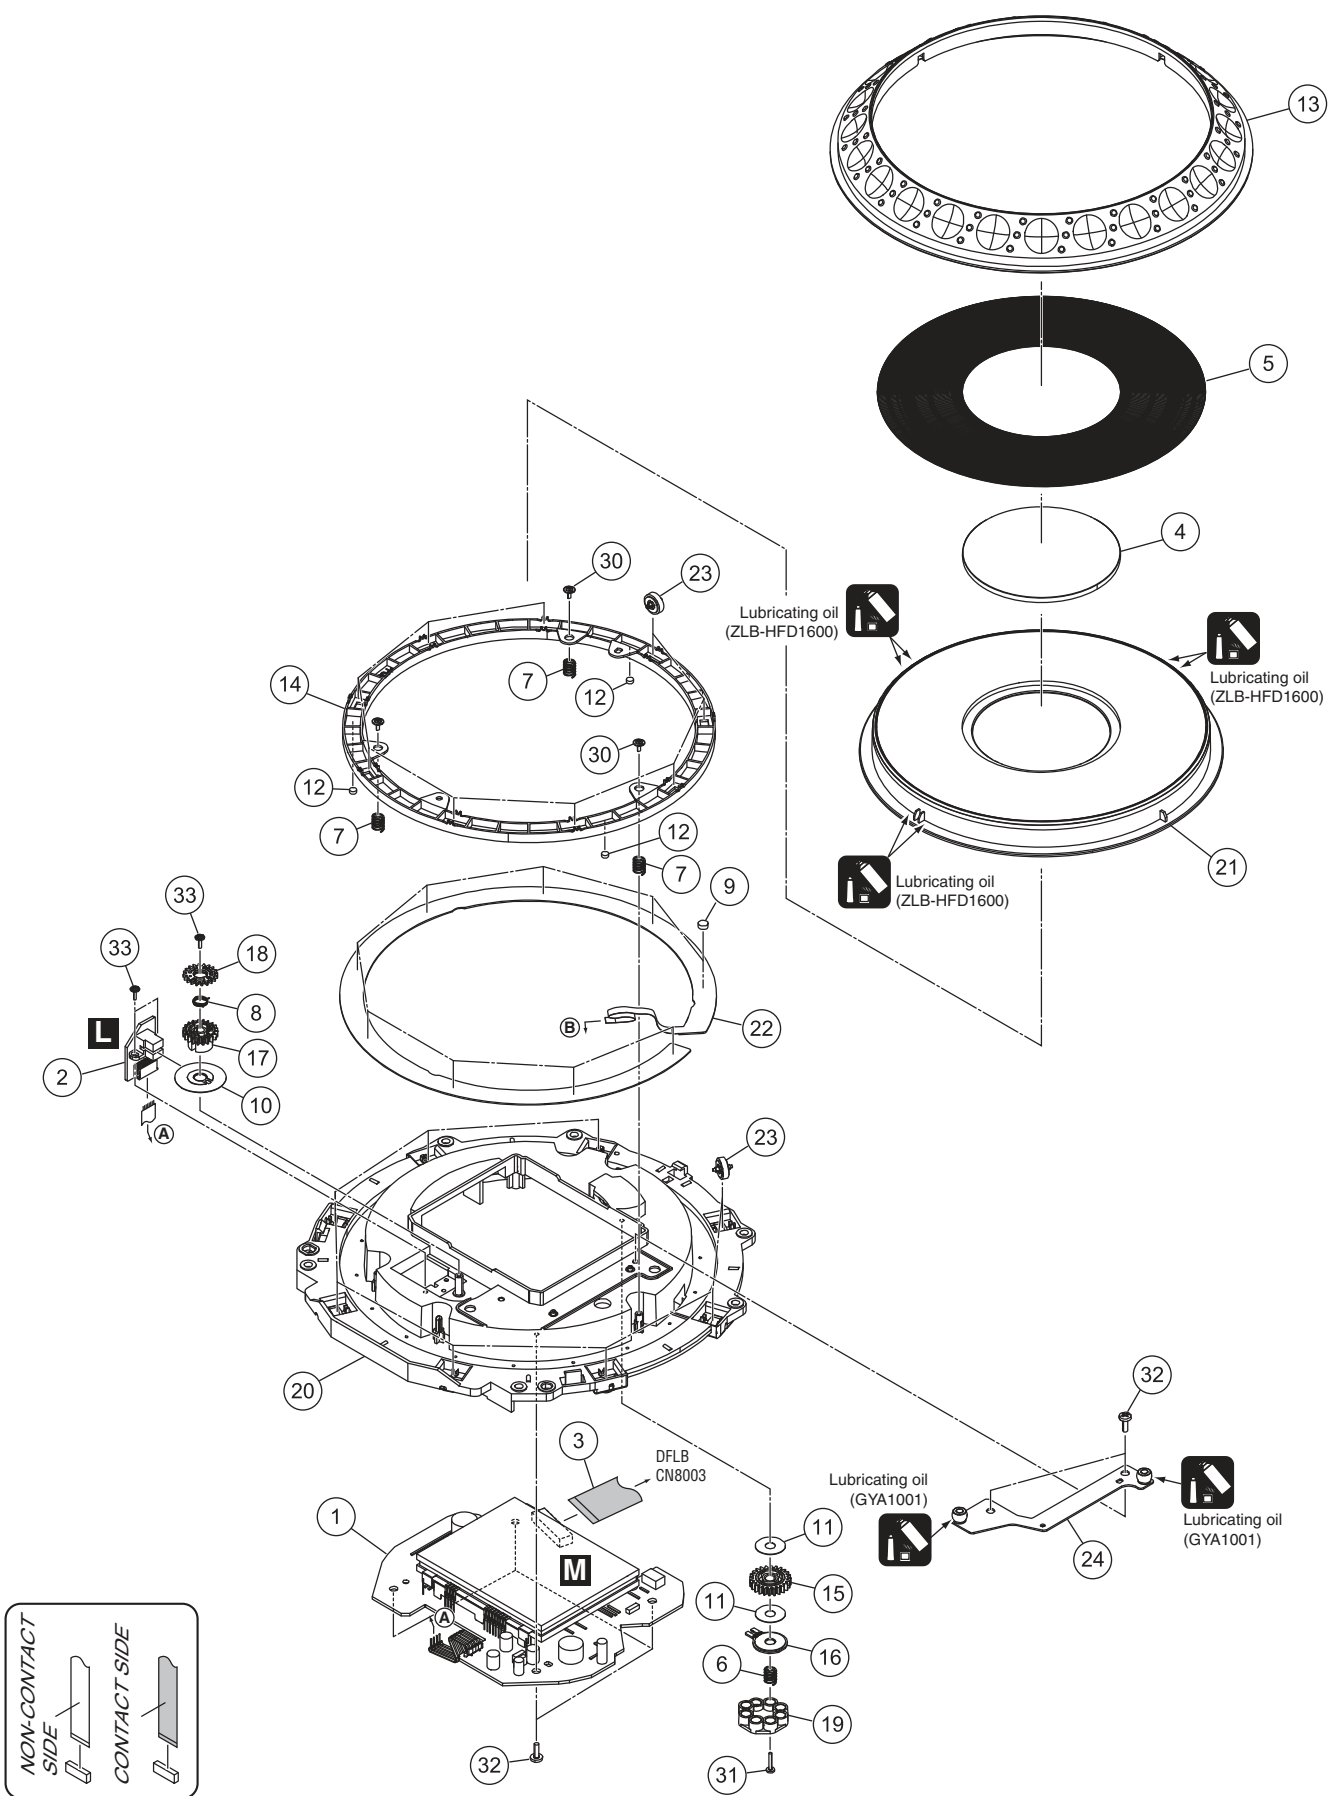

# JOG DIAL SECTION PARTS LIST

| Mark No. | Description          | Part No.     |   |
|----------|----------------------|--------------|---|
| 1        | JFLB Assy            | DWX3024      |   |
| 2        | JOGB Assy            | DWX3026      | A |
| 3        | 19P FFC              | DDD1490      |   |
| 4        | JOG Panel            | DAH2609      |   |
| 5        | JOG Plate M          | DAH2690      |   |
| 6        | Load Spring          | DBH1680      |   |
| 7        | SW spring            | DBH1681      |   |
| 8        | Encoder Spring       | DBH1710      |   |
| 9        | SW Cushion HH48/2    | DEC2538      |   |
| 10       | Encoder Plate        | DEC2889      |   |
| 11       | Washer               | DEC3137      | B |
| 12       | Ring Cushion L24/2.0 | DEC2958      |   |
| 13       | JOG B                | DNK4068      |   |
| 14       | SW Ring              | DNK5233      |   |
| 15       | Load Gear            | DNK5236      |   |
| 16       | Smoother             | DNK5237      |   |
| 17       | Gear A               | DNK5241      |   |
| 18       | Gear B               | DNK5242      |   |
| 19       | Adjust Plate         | DNK5300      |   |
| 20       | JOG Holder M         | DNK5356      | C |
| 21       | JOG Dial A           | DNK5357      |   |
| 22       | Sheet SW             | DSX1078      |   |
| 23       | Roller A Assy        | DXB2010      |   |
| 24       | JOG Stay Assy        | DXB2015      |   |
| 25       | .....                |              |   |
| 26       | .....                |              |   |
| 27       | .....                |              |   |
| 28       | .....                |              |   |
| 29       | .....                |              |   |
| 30       | Screw (FE)           | DBA1265      | D |
| 31       | Screw                | BPZ20P100FTC |   |
| 32       | Screw                | BPZ30P080FNI |   |
| 33       | Screw                | IPZ20P060FTC |   |

## 9.5 SLOTIN MECHA SECTION

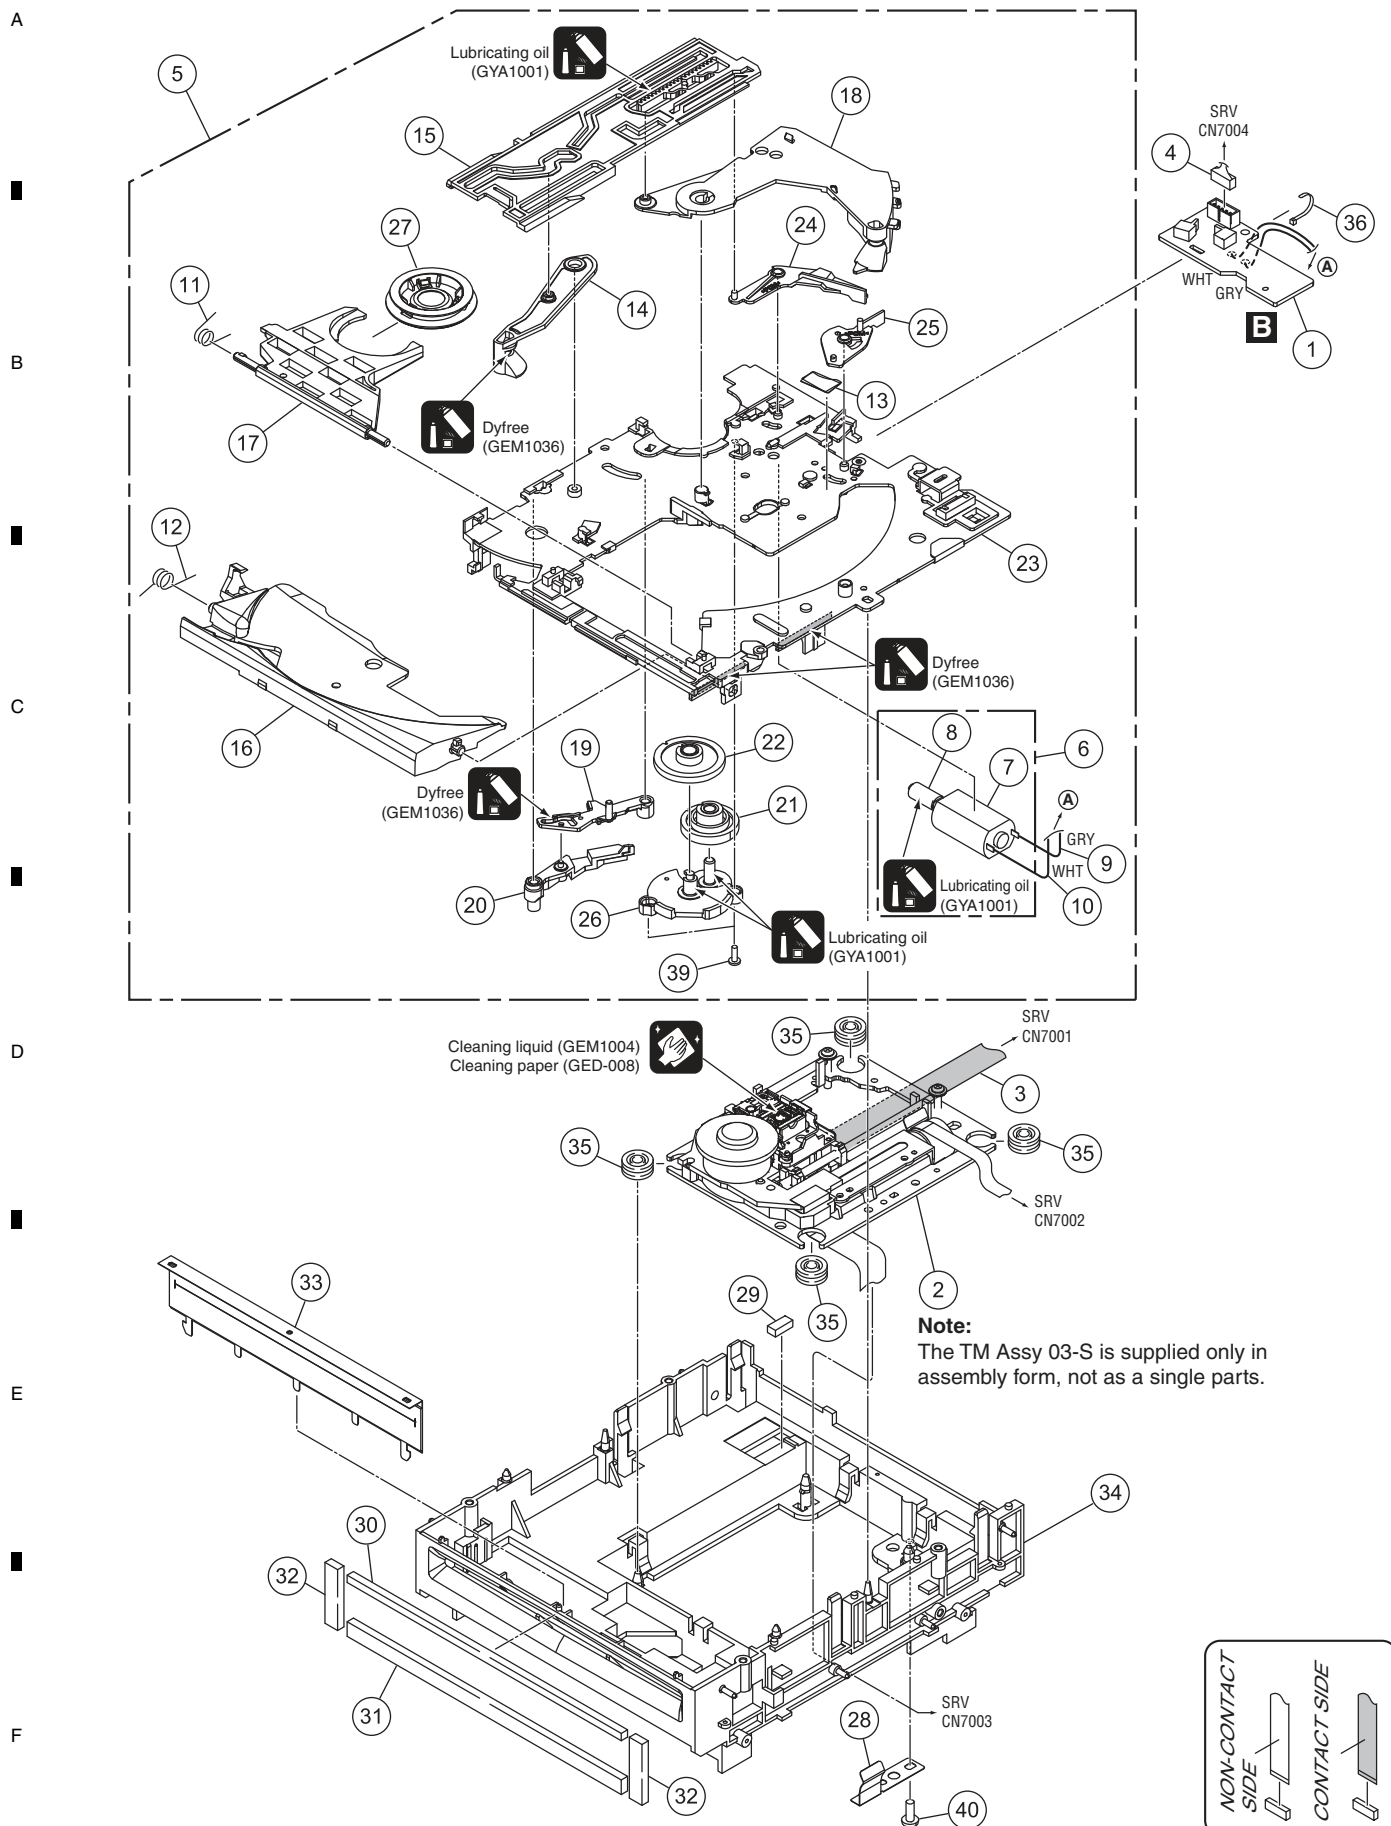

SLOTIN MECHA SECTION PARTS LIST

| <u>Mark No.</u> | <u>Description</u>     | <u>Part No.</u>   |   |
|-----------------|------------------------|-------------------|---|
|                 | 1 SLMB Assy            | DWS1418           |   |
|                 | 2 TM Assy 03-S         | VXX3125           | A |
|                 | 3 24P FFC              | DDD1450           |   |
|                 | 4 Connector Assy       | PF05PP-B17        |   |
| NSP             | 5 SLOTIN MECHA Assy    | DXA2121           |   |
|                 | 6 DC Motor Assy-S      | DXX2510           |   |
| NSP             | 7 DC Motor S           | DXM1230           | ■ |
| NSP             | 8 Worm Gear            | DNK3910           |   |
|                 | 9 Lead Wire            | ZWNN1007G28-8-06A |   |
|                 | 10 Lead Wire           | ZWNN1007G28-9-06A |   |
|                 | 11 Clamp Spring        | DBH1374           | B |
|                 | 12 Guide Spring        | DBH1375           |   |
|                 | 13 SW. Lever Spacer SV | DEC2831           |   |
|                 | 14 Loading Lever       | DNK3406           |   |
|                 | 15 Main Cam            | DNK3407           |   |
|                 | 16 Disc Guide          | DNK3478           | ■ |
|                 | 17 Clamp Arm           | DNK3576           |   |
|                 | 18 Eject Lever         | DNK3684           |   |
|                 | 19 Lever AP            | DNK3835           |   |
|                 | 20 Lever BP            | DNK3836           | C |
|                 | 21 Loading Gear        | DNK3911           |   |
|                 | 22 Drive Gear          | DNK3912           |   |
|                 | 23 Loading Base SV     | DNK4369           |   |
|                 | 24 SW Lever SV1        | DNK4370           |   |
|                 | 25 SW Lever SV2        | DNK4371           | ■ |
|                 | 26 Gear Holder SV      | DNK4372           |   |
|                 | 27 Clamper 04 Assy     | DXB1859           |   |
|                 | 28 FPC Guard           | DBK1282           |   |
|                 | 29 Spacer POR (T3)     | DEB1566           |   |
|                 | 30 Vessel Cushion A    | DEC2852           | D |
|                 | 31 Vessel Cushion B    | DEC2853           |   |
|                 | 32 Vessel Cushion C    | DEC2854           |   |
|                 | 33 Front Sheet         | DED1132           |   |
|                 | 34 Float Base 04 Assy  | DXB1838           | ■ |
|                 | 35 Floating Rubber     | VEB1351           |   |
|                 | 36 Binder (SKB090BK)   | ZCA-SKB90BK       |   |
|                 | 37 ●●●●●               |                   |   |
|                 | 38 ●●●●●               |                   | E |
|                 | 39 Screw               | BPZ20P060FTC      |   |
|                 | 40 Screw               | BPZ30P080FNI      |   |