


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

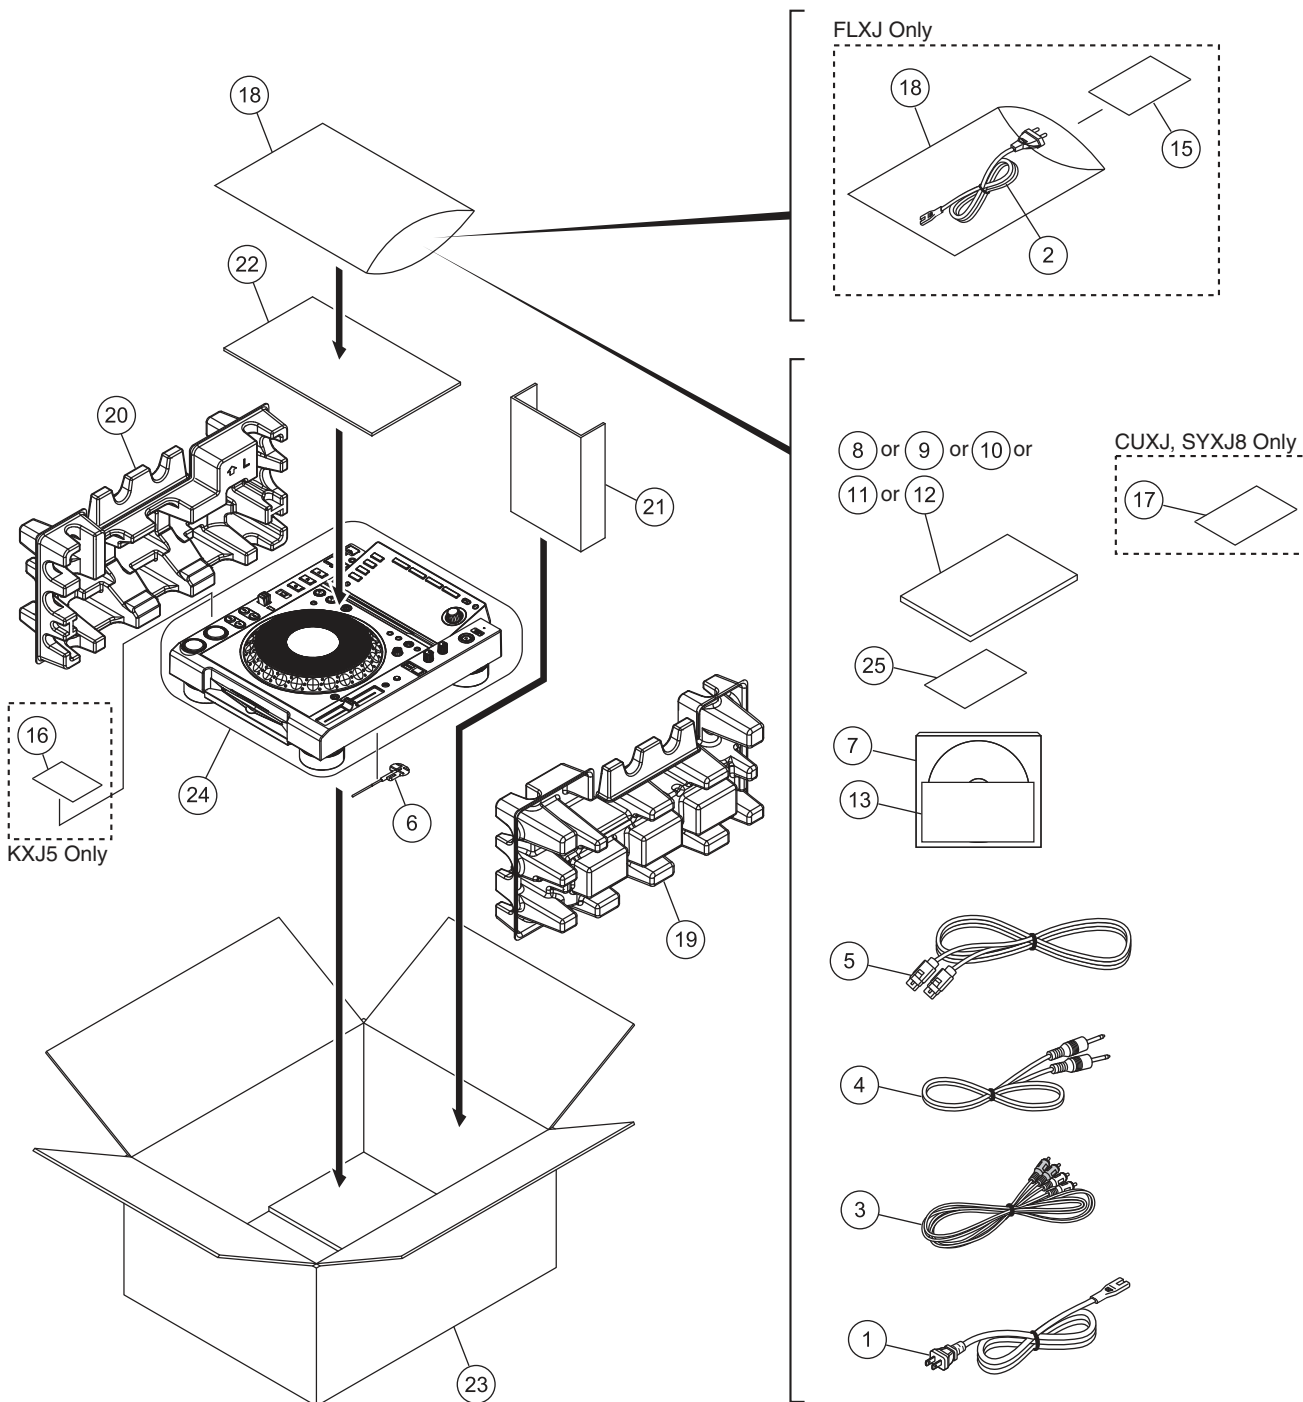

	5		6		7		8	
(1) PACKING SECTION PARTS LIST								
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
⚠	1	Power Cable	See Contrast table (2)	NSP	16	Recycle Label M	See Contrast table (2)	
⚠	2	Power Cable	See Contrast table (2)	NSP	17	Warranty Card	See Contrast table (2)	A
	3	Audio Cable (L = 1.5 m)	XDE3045	NSP	18	Polyethylene Bag (0.06 x 230 x 340)	AHG7117	
	4	Control Cord (L = 1 m)	XDE3063		19	Pad (R)	DHA1788	
	5	LAN Cable (1M UTP)	DDE1130					
	6	Disc Force Eject Pin	DEX1013		20	Pad (L)	DHA1789	
	7	CD-ROM (rekordbox)	DXX2598		21	Spacer	DHA1802	
	8	Operating Instructions	See Contrast table (2)		22	Accessory Pad	DHA1803	
	9	Operating Instructions	See Contrast table (2)		23	Packing Case	See Contrast table (2)	
	10	Operating Instructions	See Contrast table (2)		24	Packing Sheet	RHC1023	
					25	Information Sheet	DRM1338	
	11	Operating Instructions	See Contrast table (2)					B
	12	Operating Instructions	See Contrast table (2)					
NSP	13	License Key Label	DRW2402					
	14	•••••						
NSP	15	Caution Card SB	See Contrast table (2)					

(2) CONTRAST TABLE

CDJ-2000/CUXJ, SYXJ8, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-2000 /CUXJ	CDJ-2000 /SYXJ8	CDJ-2000 /FLXJ	CDJ-2000 /KXJ5	CDJ-2000 /AXJ5
⚠	1	Power Cable	ADG7021	ADG1154	ADG1154	XDG3054	ADG7079
⚠	2	Power Cable	Not used	Not used	ADG7097	Not used	Not used
	8	Operating Instructions (En, Fr)	DRB1474	Not used	Not used	Not used	Not used
	9	Operating Instructions (En, Fr, De, It, Ni, Es, Ru)	Not used	DRB1475	Not used	Not used	Not used
	10	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1476	Not used	Not used
	11	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1478	Not used
	12	Operating Instructions (ZHcn, En)	Not used	Not used	Not used	Not used	DRB1477
NSP	15	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used
NSP	16	Recycle Label M	Not used	Not used	Not used	DRW2307	Not used
NSP	17	Warranty Card	ARY7043	ARY7107	Not used	Not used	Not used
	23	Packing Case	DHG2800	DHG2799	DHG2801	DHG2804	DHG2803

9.2 EXTERIOR SECTION

A

Refer to
"9.3 CONTROL PANEL SECTION".



B

C

D

E

F

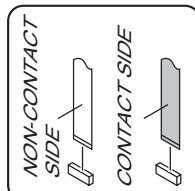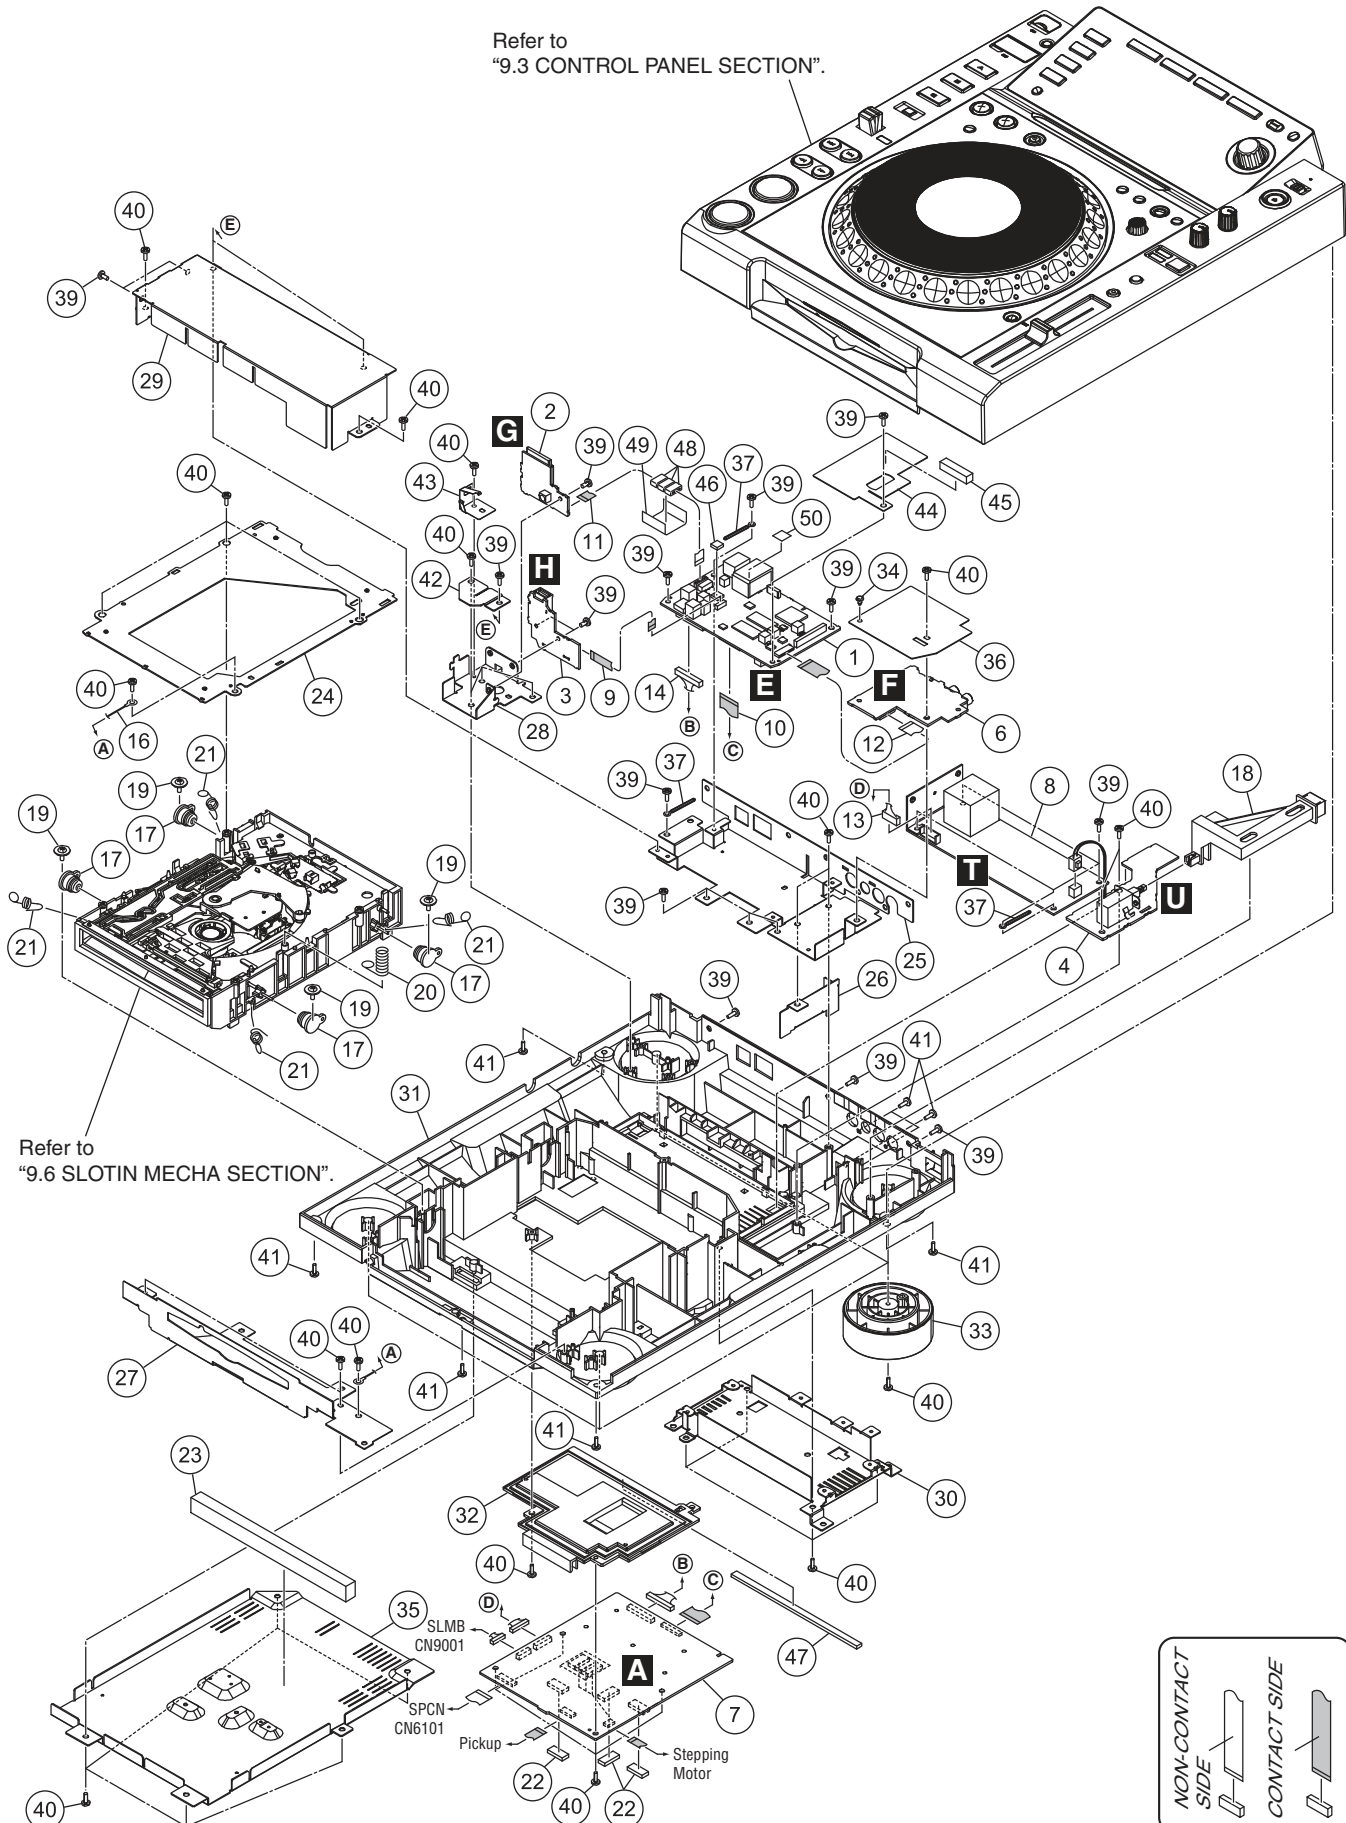

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWG1660	26	Inlet Shield	DNH2856
2	SDCB Assy	DWX2980	27	Front Plate	DNH2857
3	USBA Assy	DWX3043	28	SD Stay	DNH2858
4	ACIN Assy	See Contrast table (2)	29	Shield Case	DNH2859
5	•••••		30	SWPS Stay	DNH2890
6	JACB Assy	DWX2988	31	Chassis	See Contrast table (2)
7	SRVA Assy	DWX2948	32	Servo Cover	DNK5492
8	POWER SUPPLY Assy	DWR1463	33	Insulator Assy	DXB2057
9	14P FFC	DDD1478	34	Rivet (3 x 4.5)	RBM-003
10	40P FFC	DDD1479	35	Bottom Plate	See Contrast table (2)
11	10P FFC	DDD1480	36	Jack Cover	DEC3205
12	13P FFC	DDD1484	37	Cord Clamper (Steel)	RNH-184
13	Connector Assy	DKP3844	38	•••••	
14	Connector Assy 12P	DKP3845	39	Screw	BBZ30P060FTB
15	•••••		40	Screw	BPZ30P080FNI
16	Cord with Plug	DE007VE0	41	Screw	BPZ30P080FTB
17	Damper	CNV6011	42	SD Earth Plate	DNH2925
18	Power Knob	DAC2484	43	SD Earth Spring	DBK1357
19	DM Screw (FTC)	DBA1260	44	Main Cover	DEC3258
20	Earth Spring	DBH1398	45	FFC Cushion	DEC3248
21	Float Spring (G5)	DBH1494	46	EMC Sheet	DEC3259
22	Silicon Rubber D5 L	DEB1456	47	Vessel Cushion A	DEC2852
23	Bottom Packing	DEC3209	48	Ferrite Core	BTX1037
24	Mecha Plate	DNH2339	49	Cushion (FC)	DEC3249
25	MAIN PCB Stay	DNH2854	50	Tape	DEC3053

(2) CONTRAST TABLE

CDJ-2000/CUXJ, SYXJ8, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-2000 /CUXJ	CDJ-2000 /SYXJ8	CDJ-2000 /FLXJ	CDJ-2000 /KXJ5	CDJ-2000 /AXJ5
	4	ACIN Assy	DWR1475	DWR1453	DWR1453	DWR1453	DWR1453
	31	Chassis	DNK5444	DNK5324	DNK5445	DNK5448	DNK5447
	35	Bottom Plate	DNH2893	DNH2852	DNH2904	DNH2903	DNH2902

9.3 CONTROL PANEL SECTION

A


B

C

D

E

F

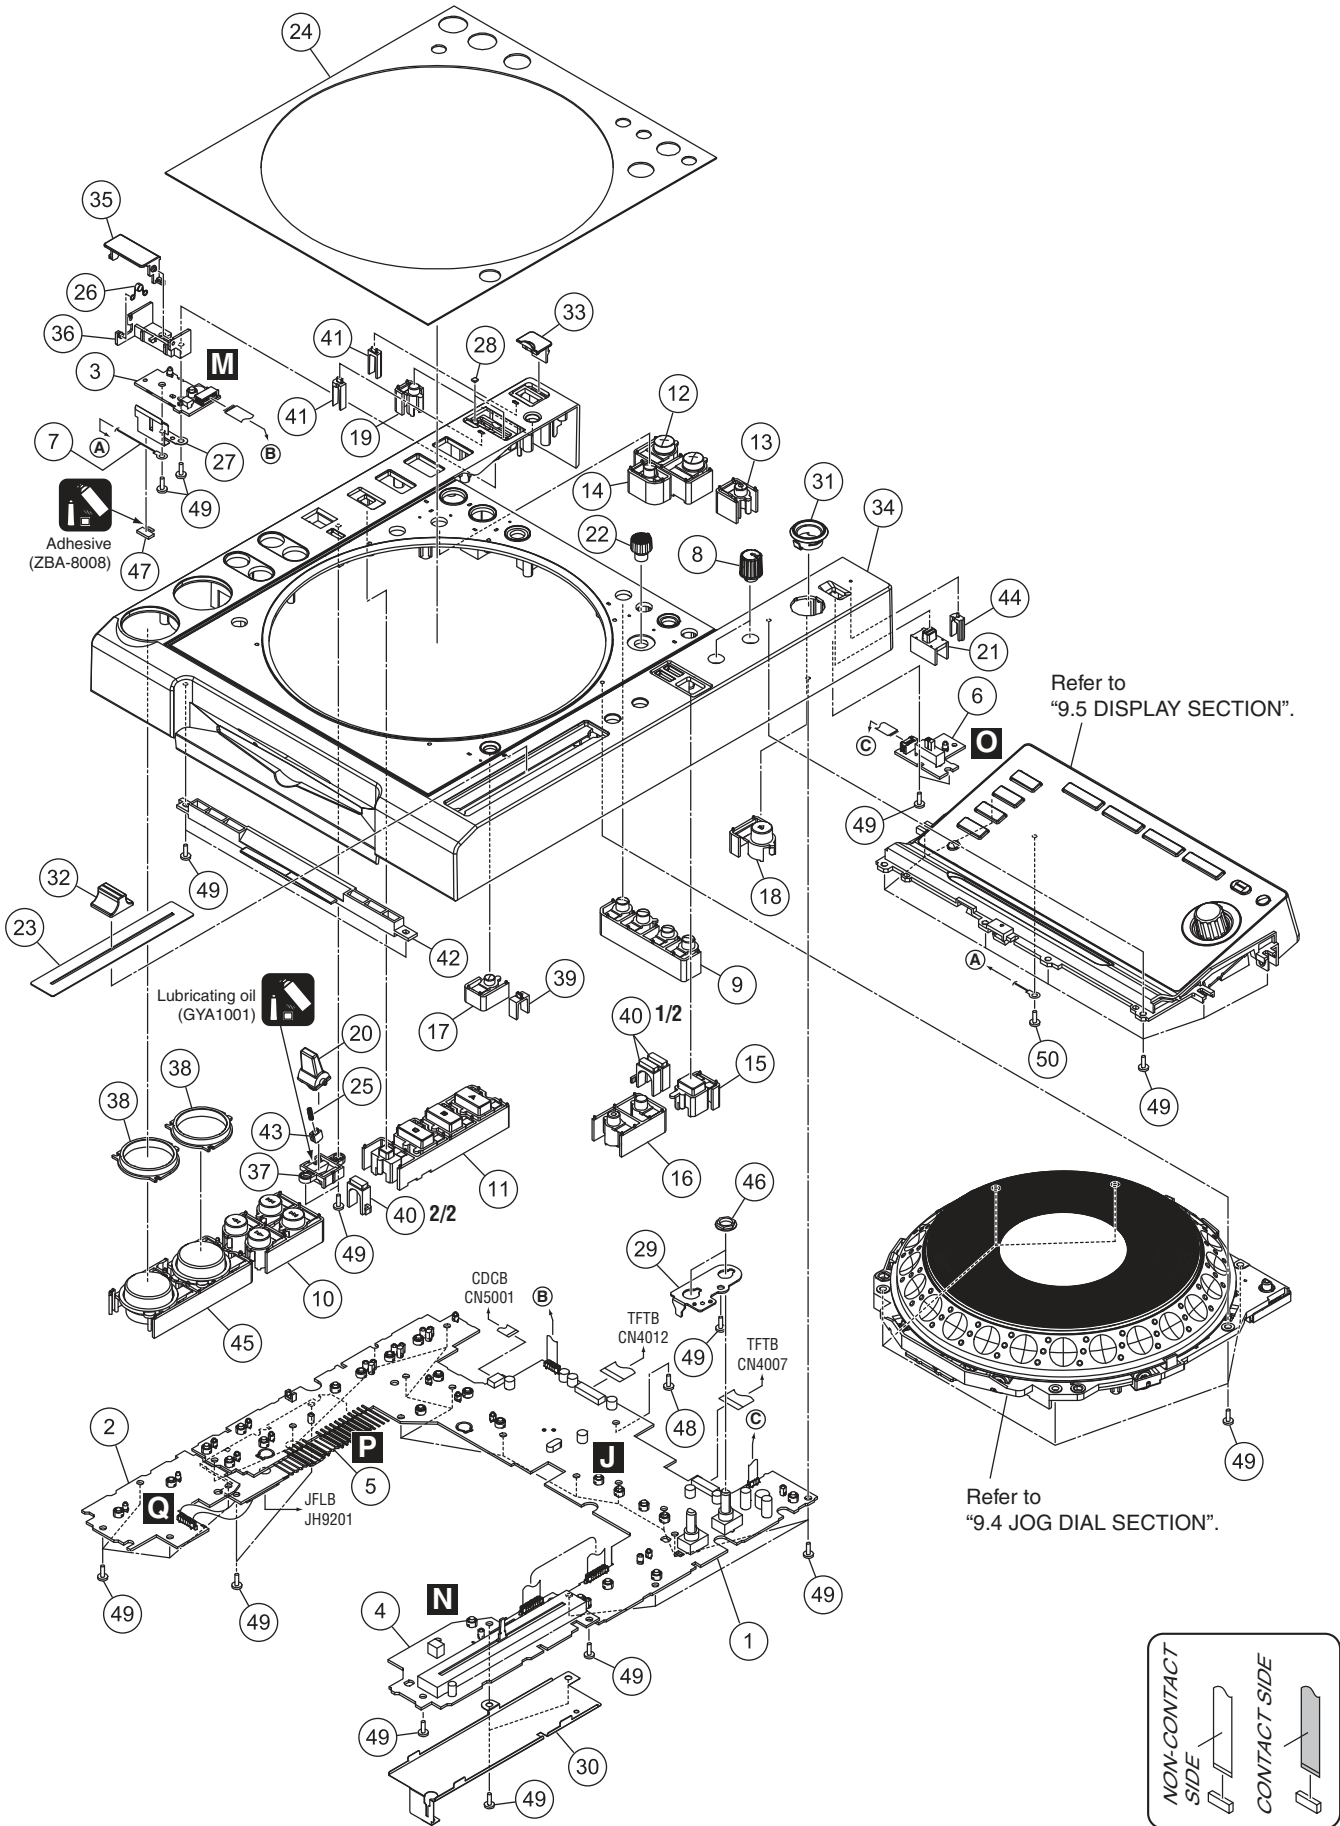

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	PNLB Assy	DWG1665	46	Flange Nut M9	DBN1008	
2	KSWB Assy	DWS1409	47	Gasket (7 x 15 x 1)	DEC3259	A
3	SDSW Assy	DWS1420	48	Screw	BBZ30P060FTB	
4	SLDB Assy	DWX2983	49	Screw	BPZ30P080FNI	
5	CNCT Assy	DWX3009	50	Screw	BBZ26P060FTB	
6	EUPB Assy	DWX3042				
7	Earth Lead Unit / 300V	DDF1032				
8	Rotary Knob C	DAA1194				
9	Button (CALL)	DAC2466				
10	Button (SERCH)	DAC2468				
11	Button (HOT CUE)	DAC2469				B
12	Button (LOOP)	DAC2470				
13	Button (RELOOP)	DAC2471				
14	Button (4-BEAT LOOP)	DAC2472				
15	Button (JOG MODE)	DAC2473				
16	Button (TEMPO)	DAC2474				
17	Button (TEMPO REST)	DAC2475				
18	Button (EJECT)	DAC2476				
19	Button (USB STOP)	DAC2477				
20	Lever	DAC2478				C
21	Slide SW Knob	DAC2479				
22	Adjust Knob Black	DAC2528				
23	Slide Sheet 1C	DAH2404				
24	Top Panel	DAH2703				
25	Lever Spring	DBH1702				
26	Spring	DBH1717				
27	Card Spring	DBK1340				
28	Door Cushion	DEB1780				
29	VR Stay	DNF1663				D
30	Earth Plate	DNH2849				
31	Eject Guard	DNK3958				
32	Slide Knob	DNK4498				
33	USB Cover	DNK4999				
34	Control Panel	DNK5306				
35	SD Card Door	DNK5308				
36	SD Door Holder	DNK5309				
37	Lever Plate	DNK5312				
38	Ring Lens (PLAY)	DNK5315				E
39	TEMPO Lens	DNK5316				
40	MODE Lens	DNK5317				
41	DEVICE Lens	DNK5318				
42	Front Lens	DNK5328				
43	Lever Cap	DNK5344				
44	EUP Lens	DNK5408				
45	PLAY Button Assy	DXB2069				F

9.4 JOG DIAL SECTION

A


B

C

D

E

F

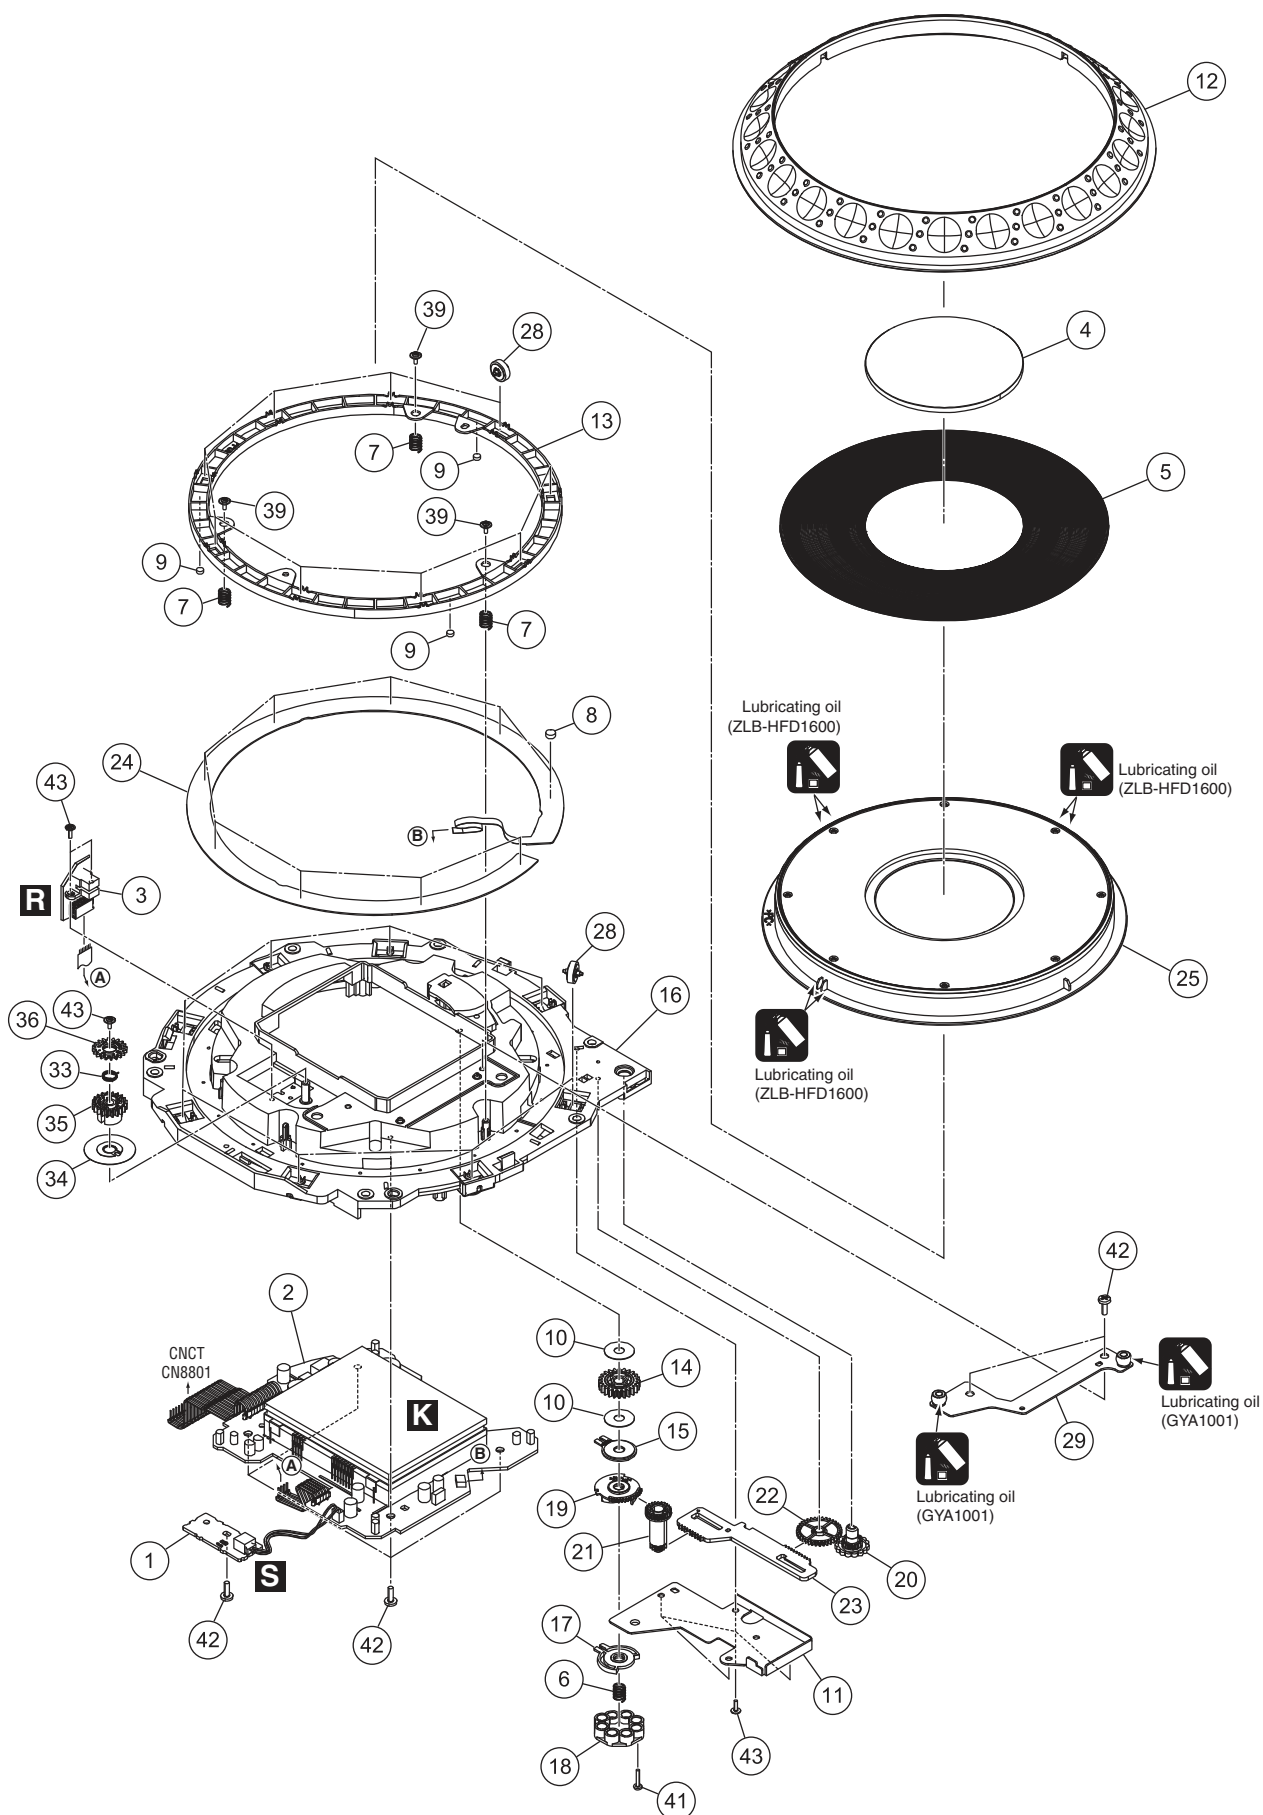

JOG DIAL SECTION PARTS LIST

Mark	No.	Description	Part No.	
	1	INDB Assy	DWX2986	
	2	JFLB Assy	DWX2984	A
	3	JOGB Assy	DWX2985	
	4	JOG Panel	DAH2609	
	5	JOG Plate	DAH2679	
	6	Load Spring	DBH1680	
	7	SW Spring	DBH1681	■
	8	SW Cushion HH48/2	DEC2538	
	9	Ring Cushion L24/2.0	DEC2958	
	10	Washer	DEC3137	
	11	Link Plate	DNH2848	B
	12	JOG B	DNK4068	
	13	SW Ring	DNK5233	
	14	Load Gear	DNK5236	
	15	Smoother	DNK5237	
	16	JOG Holder	DNK5240	■
	17	Comp Plate	DNK5243	
	18	Adjust Plate	DNK5300	
	19	Cam Plate	DNK5301	
	20	Dial Gear	DNK5302	C
	21	Link Gear A	DNK5303	
	22	Link Gear B	DNK5304	
	23	Rack Plate	DNK5305	
	24	Sheet SW	DSX1078	
	25	JOG Dial A Assy	DXA2159	■
	26			
	27			
	28	Roller A Assy	DXB2010	
	29	JOG Stay Assy	DXB2015	D
	30			
	31			
	32			
	33	Encoder Spring	DBH1710	
	34	Encoder Plate	DEC2889	■
	35	Gear A	DNK5241	
	36	Gear B	DNK5242	
	37			
	38			E
	39	Screw (FE)	DBA1265	
	40			
	41	Screw	BPZ20P100FTC	
	42	Screw	BPZ30P080FNI	■
	43	Screw	IPZ20P060FTC	

△



DISPLAY SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	TFTB Assy	DWX2882
2	CDCB Assy	DWX2987
3	LCD	DWX3126
4	29P FFC	DDD1481
5	18P FFC	DDD1482
6	16P FFC	DDD1483
7	7P FFC	DDD1485
8	Dial Knob	DAA1246
9	Button (MENU)	DAC2480
10	Button (MODE SELECT)	DAC2481
11	Button (DEVICE SELECT)	DAC2482
12	Button (TIME)	DAC2483
13	Display Window	DAH2680
14	LCD Packing (Bottom)	DEC3184
15	CDC Sheet	DEC3187
16	LCD Packing (Side)	DEC3192
17	LCD Packing (Top)	DEC3193
18	LCD Stay	DND1263
19	Rear Bracket	DND1264
20	LCD Holder	DNH2850
21	LCD Panel	DNK5319
22	CDC Stay	DNK5320
23	Ring Lens (BROWSE)	DNK5322
24	LCD Bottom Plate	DNK5323
25	Reflector	DNK5405
26		
27		
28	Screw	BBZ26P060FTB
29	Screw	BPZ26P080FTC
30	Screw	BBZ30P060FTB
31	Screw	BSZ20P040FTB
32	Rivet (Plastic)	RBM-003
33	FFC Cushion	DEC3248

A

B


C

D

E

F

9.6 SLOTIN MECHA SECTION

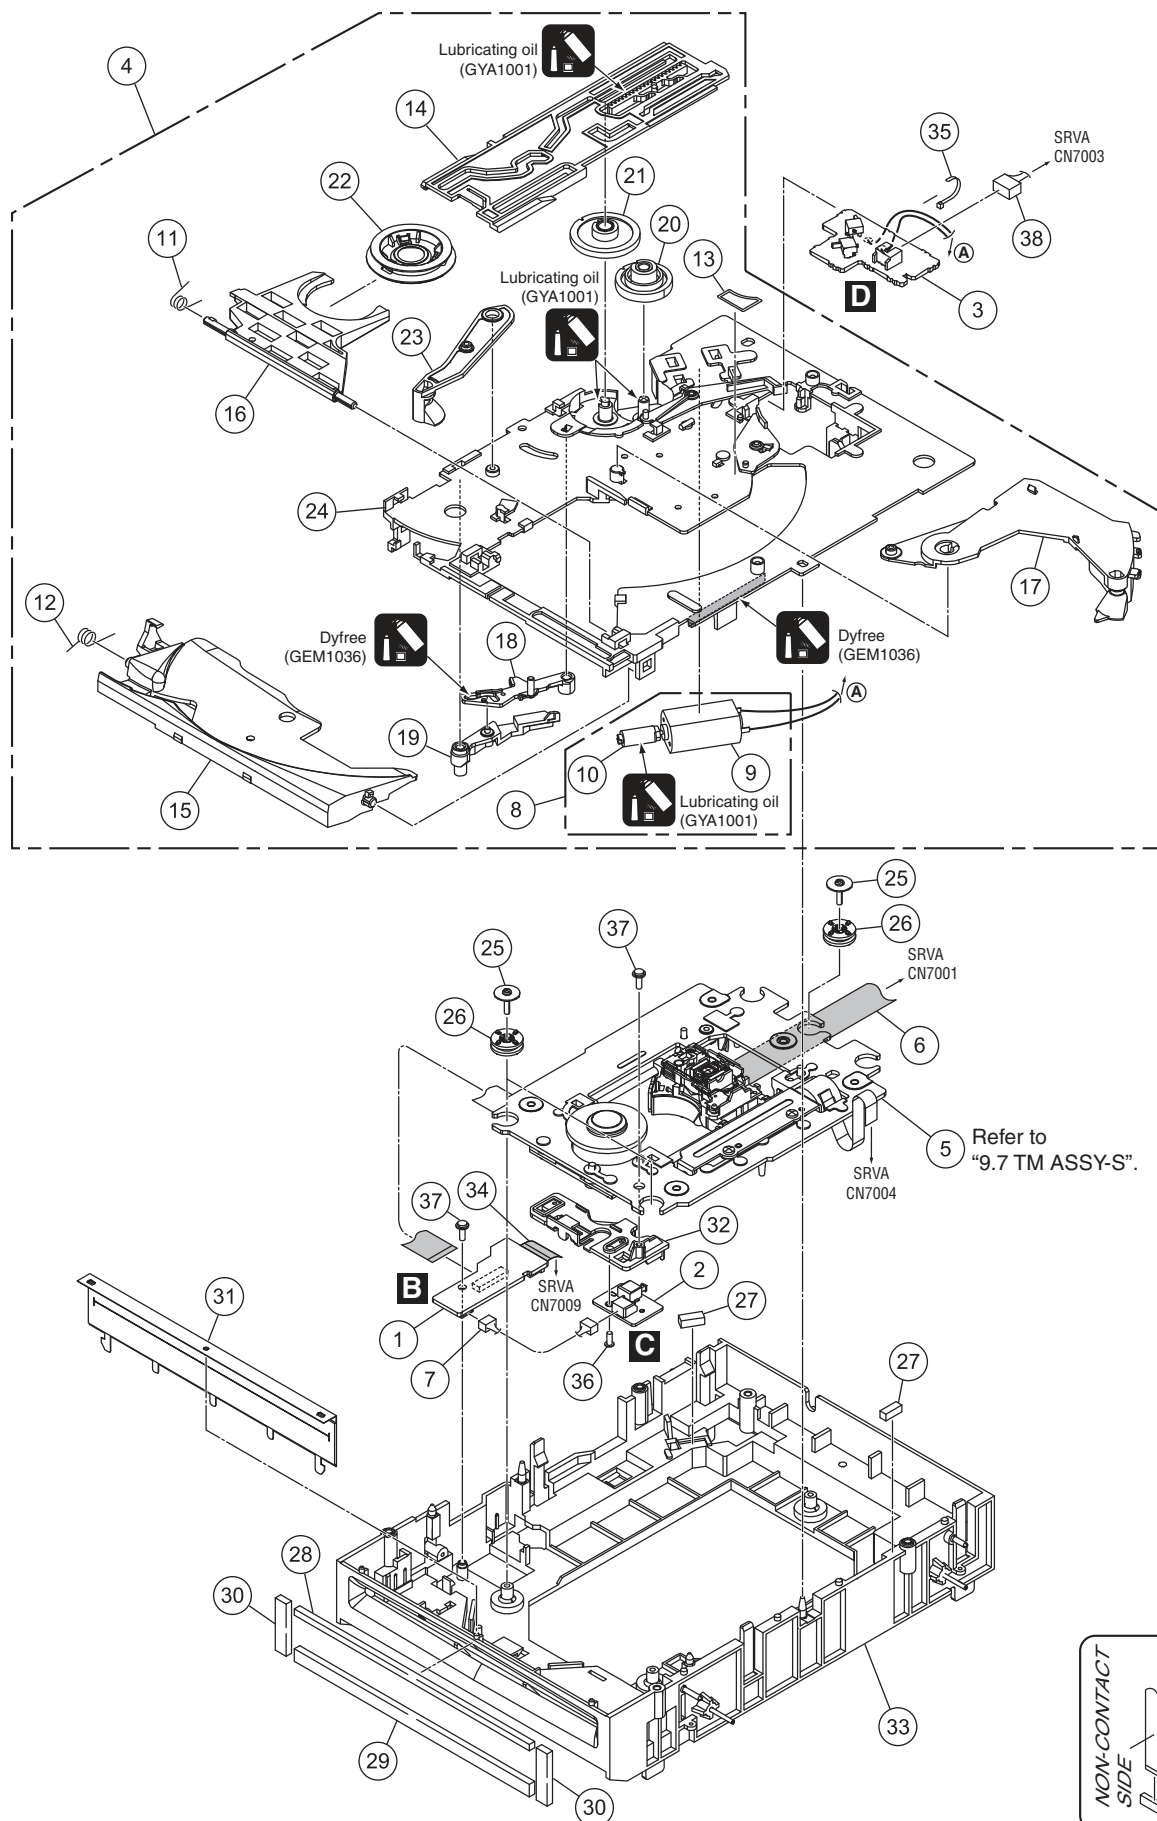

SLOTIN MECHA SECTION PARTS LIST

Mark	No.	Description	Part No.	
	1	SPCN Assy	DWX2979	
	2	INSW Assy	DWS1407	A
	3	SLMB Assy	DWS1408	
NSP	4	SLOTIN MECHA G11Assy	DXA2163	
	5	TM Assy-S	DXX2595	
	6	24P FFC	DDD1460	
	7	Connector Assy 2P	DKP3769	
	8	DC MOTOR Assy-S	DXX2510	
NSP	9	DC Motor S	DXM1230	
NSP	10	Worm Gear	DNK3910	
	11	Clamp Spring	DBH1374	B
	12	Guide Spring	DBH1375	
	13	SW Lever Spacer	DEC2420	
	14	Main Cam	DNK3407	
	15	Disc Guide	DNK3478	
	16	Clamp Arm	DNK3576	
	17	Eject Lever	DNK3684	
	18	Lever AP	DNK3835	
	19	Lever BP	DNK3836	
	20	Loading Gear	DNK3911	C
	21	Drive Gear	DNK3912	
	22	Clamper Assy	DXA2043	
	23	Loading Lever Assy	DXB1880	
	24	Loading Base Assy-S	DEA1022	
	25	Float Screw	DBA1286	
	26	Float Rubber D3	DEB1404	
	27	Spacer POR (T3)	DEB1566	
	28	Vessel Cushion A	DEC2852	
	29	Vessel Cushion B	DEC2853	D
	30	Vessel Cushion C	DEC2854	
	31	Front Sheet	DED1132	
	32	Inside SW Base	DNK4236	
	33	Float Base G11 Assy	DXB1793	
	34	13P FFC	DDD1452	
	35	Binder (SKB-90BK)	ZCA-SKB90BK	
	36	Screw (2 x 5)	VBA1062	
	37	Screw	IPZ20P060FTC	
	38	Connector Assy	PF05PP-C25	E

1 2 3 4

9.7 TM ASSY-S

A

B

C

D

E

F

