


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

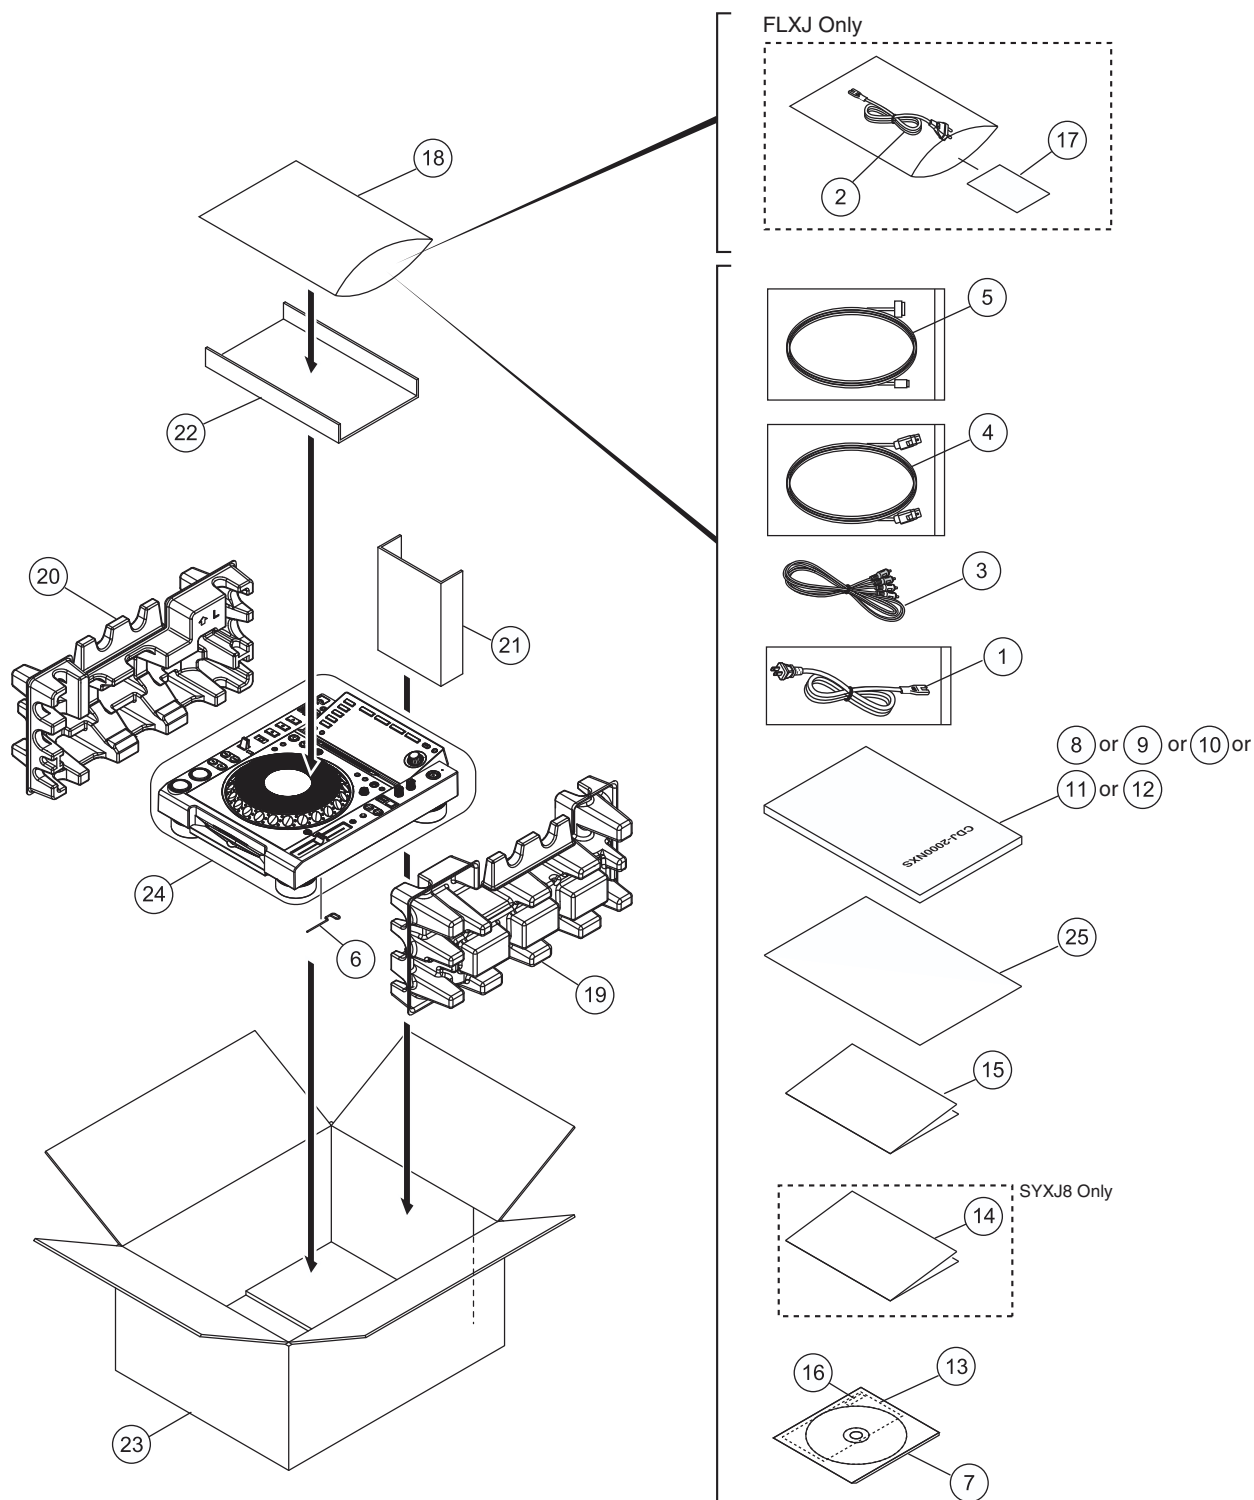

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cable	See Contrast table (2)	NSP 16	Label/L K	DRW2484
⚠	2 Power Cable	See Contrast table (2)	17	Caution Card SB	See Contrast table (2)
	3 Audio Cable (L = 1.5 m)	XDE3045	NSP 18	Polyethylene Bag	AHG7117
	4 LAN Cable	DDE1141	19	Pad (R)	DHA1788
	5 Cable/iPod	DDE1142	20	Pad (L)	DHA1789
	6 Disc Force Eject Pin	DEX1024	21	Spacer	DHA1802
	7 CD-ROM Assy/2KN	DXX2693	22	Spacer	DHA1892
	8 Sub Manual	See Contrast table (2)	23	Packing Case	See Contrast table (2)
	9 Sub Manual	See Contrast table (2)	24	Packing Sheet	RHC1023
	10 Sub Manual	See Contrast table (2)	25	Sub Manual/SNC	DRH1199
	11 Sub Manual	See Contrast table (2)			
	12 Sub Manual	See Contrast table (2)			
NSP	13 License Key Label Assy	DXA2190			
NSP	14 Warranty	See Contrast table (2)			
NSP	15 Leaflet	See Contrast table (2)			

(2) CONTRAST TABLE

CDJ-2000NXS/UXJCB, SYXJ8, FLXJ, AXJ5 and KXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-2000NXS /UXJCB	CDJ-2000NXS /SYXJ8	CDJ-2000NXS /FLXJ	CDJ-2000NXS /AXJ5	CDJ-2000NXS /KXJ5
⚠	1	Power Cable	DDG1108	XDG3061	ADG7076	ADG7105	ADG7115
⚠	2	Power Cable	Not used	Not used	XDG3061	Not used	Not used
	8	Sub Manual (En)	DRH1158	Not used	Not used	Not used	Not used
	9	Sub Manual (En, Fr, De, It, Ni, Es, Pt, Ru)	Not used	DRH1159	Not used	Not used	Not used
	10	Sub Manual (En, Es, Zhtw)	Not used	Not used	DRH1160	Not used	Not used
	11	Sub Manual (ZHcn, En)	Not used	Not used	Not used	DRH1161	Not used
	12	Sub Manual (Ko)	Not used	Not used	Not used	Not used	DRH1162
NSP	14	Warranty	Not used	ARY7158	Not used	Not used	Not used
NSP	15	Leaflet	DRH1189	DRH1189	DRH1189	DRH1188	DRH1188
	17	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used
	23	Packing Case	DHG3154	DHG3153	DHG3155	DHG3157	DHG3158

9.2 EXTERIOR SECTION

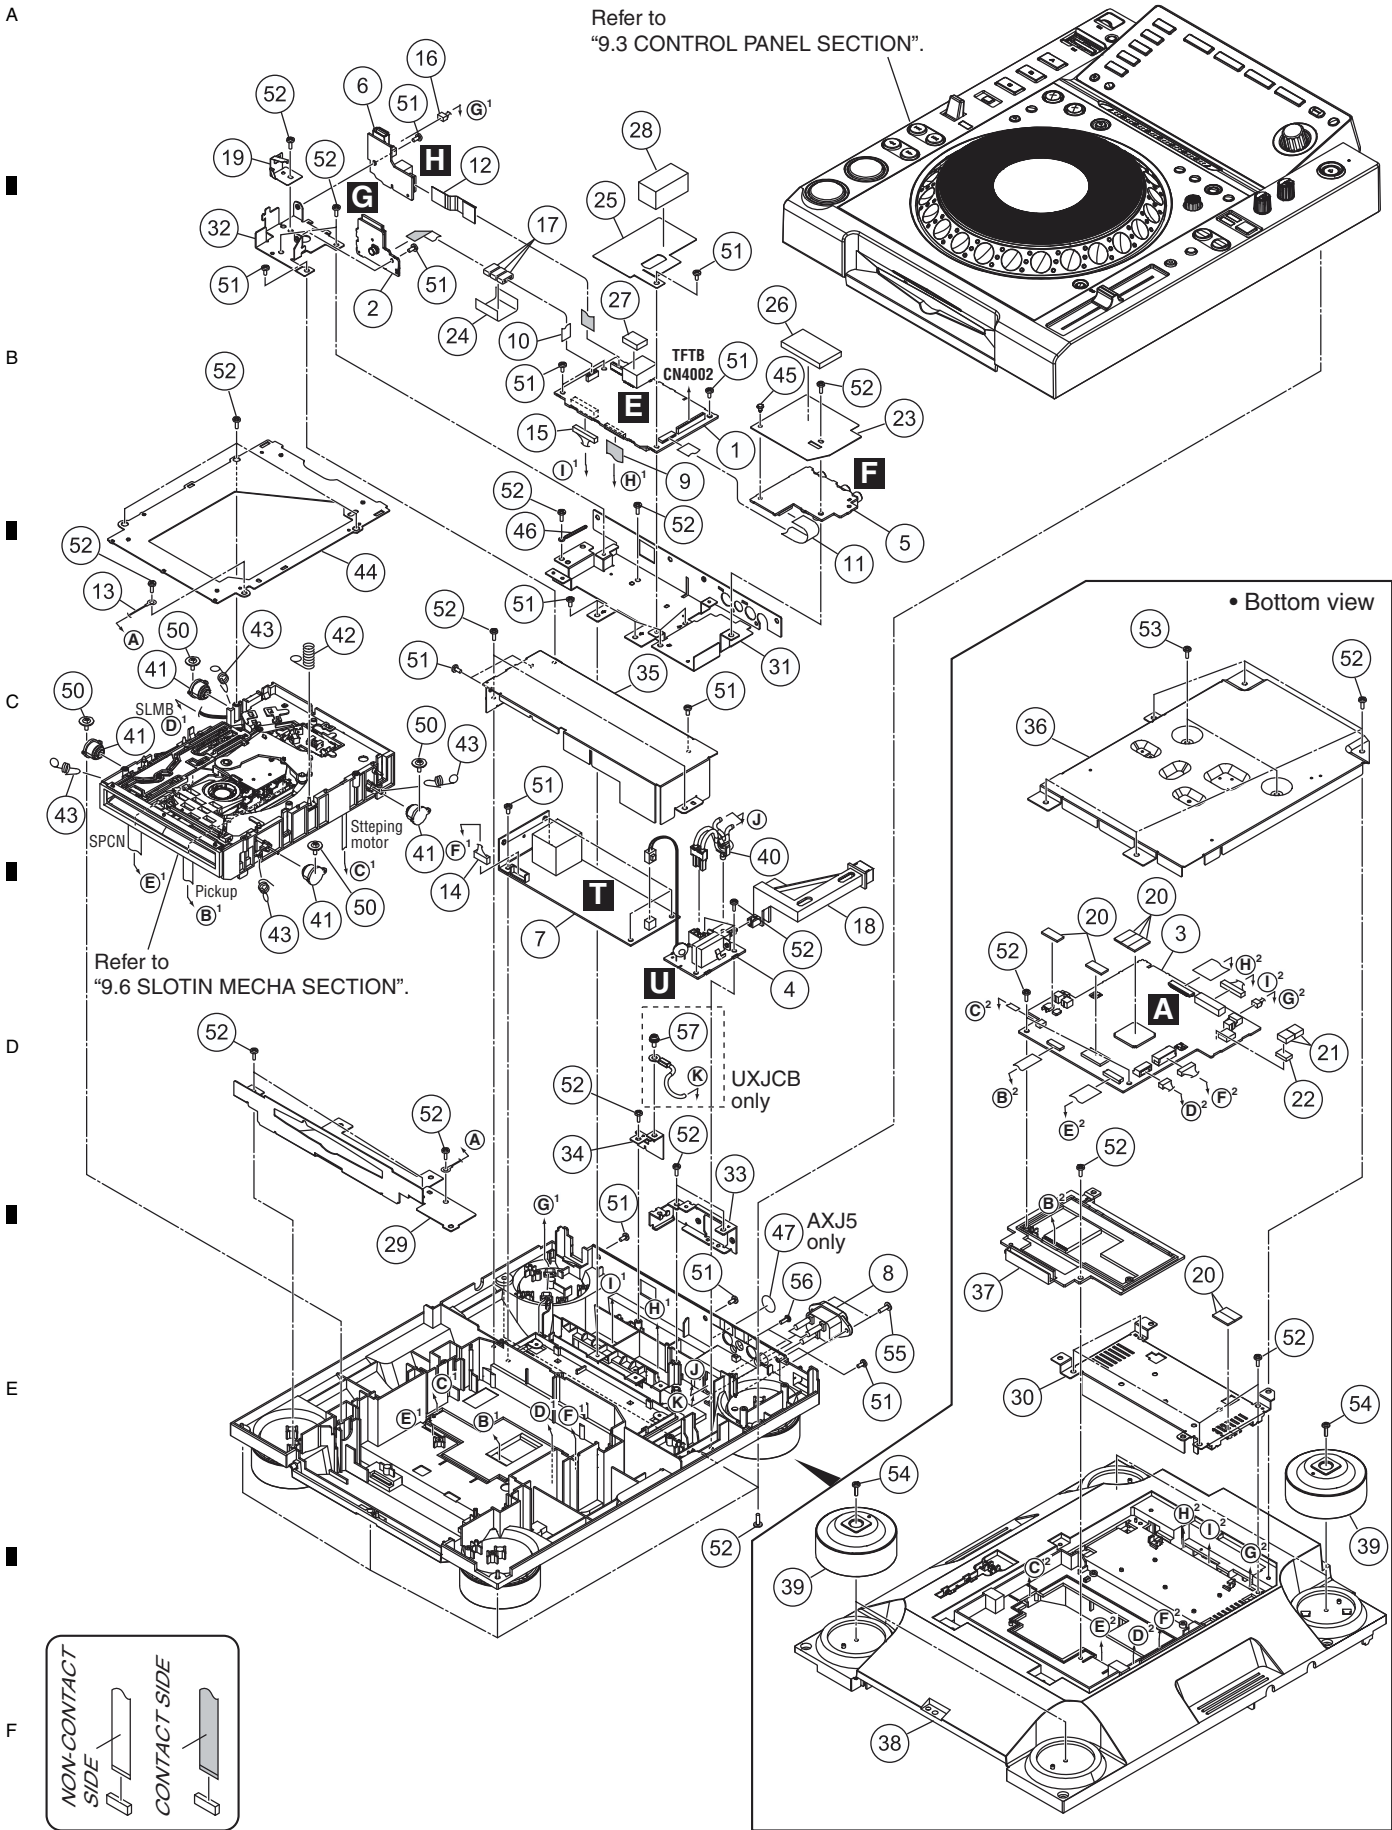

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
	1 MAIN Assy	DWX3312		31 Stay/PCB	DNH3011	
	2 SDCB Assy	DWX3333		32 Stay/USB	DNH3015	A
	3 SRVB Assy	DWX3334		33 Bracket/ACI	DNH3020	
	4 ACIN Assy	DWX3346		34 Stay/KST	DNH3021	
	5 JACB Assy	DWX3350		35 Shield Case	DNH3022	
	6 USBB Assy	DWX3395		36 Plate	See Contrast table (2)	
⚠	7 POWER SUPPLY Assy	DWR1463		37 Servo Cover	DNK5492	
⚠	8 AC Inlet	See Contrast table (2)	⚠	38 Chassis	See Contrast table (2)	
	9 40P FFC	DDD1479		39 Insulator Assy	DXB2057	
	10 10P FFC	DDD1480		40 Holder	VEC1355	
	11 13P FFC	DDD1484		41 Damper	CNV7618	B
	12 FFC/13P	DDD1606		42 Earth Spring	DBH1398	
	13 Cord With Plug	DE007VE0		43 Float Spring (G5)	DBH1494	
	14 Connector Assy	DKP3844		44 Mecha Plate	DNH2339	
	15 Connector Assy 12P	DKP3845		45 Rivet (Plastic)	RBM-003	
	16 Crimp Connector/3P	DKP3939		46 Cord Clamper (Steel)	RNH-184	
	17 Ferrite Core	BTX1037	NSP	47 CCC S Label	See Contrast table (2)	
	18 Power Knob	DAC2484		48 ●●●●●		
	19 SD Earth Spring	DBK1357		49 ●●●●●		
NSP	20 Silicon Rubber D5 L	DEB1456		50 DM Screw (FTC)	DBA1260	C
	21 Heat Cond Sheet	DEB2000		51 Screw	BBZ30P060FTB	
	22 Heat Cond Sheet	DEB2001		52 Screw	BPZ30P080FNI	
	23 Jack Cover	DEC3205		53 Screw	BPZ30P100FTB	
	24 Cushion (FC)	DEC3249		54 Screw	BPZ30P100FTC	
	25 Main Cover	DEC3258		55 Screw	IBZ30P100FTB	
	26 Cushion/FFC	DEC3430		56 Screw	PPZ30P080FTB	
	27 Cushion/LAN	DEC3431		57 Screw	See Contrast table (2)	
	28 Cushion/PCB	DEC3455				
	29 Front Plate	DNH2857				D
	30 SWPS Stay	DNH2890				

(2) CONTRAST TABLE

CDJ-2000NXS/UXJCB, SYXJ8, FLXJ, AXJ5 and KXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-2000NXS /UXJCB	CDJ-2000NXS /SYXJ8	CDJ-2000NXS /FLXJ	CDJ-2000NXS /AXJ5	CDJ-2000NXS /KXJ5	
⚠	8	AC Inlet/3P	DKP3934	Not used	Not used	Not used	Not used	
⚠	8	AC Inlet/2P	Not used	DKP3935	DKP3935	DKP3935	DKP3935	E
	36	Plate	DNH3026	DNH3019	DNH3026	DNH3019	DNH3019	
⚠	38	Chassis	DNK6077	DNK6039	DNK6078	DNK6080	DNK6081	
NSP	47	CCC S Label	Not used	Not used	Not used	DRW2310	Not used	
	57	Screw	PMH40P080FTC	Not used	Not used	Not used	Not used	


9.3 CONTROL PANEL SECTION

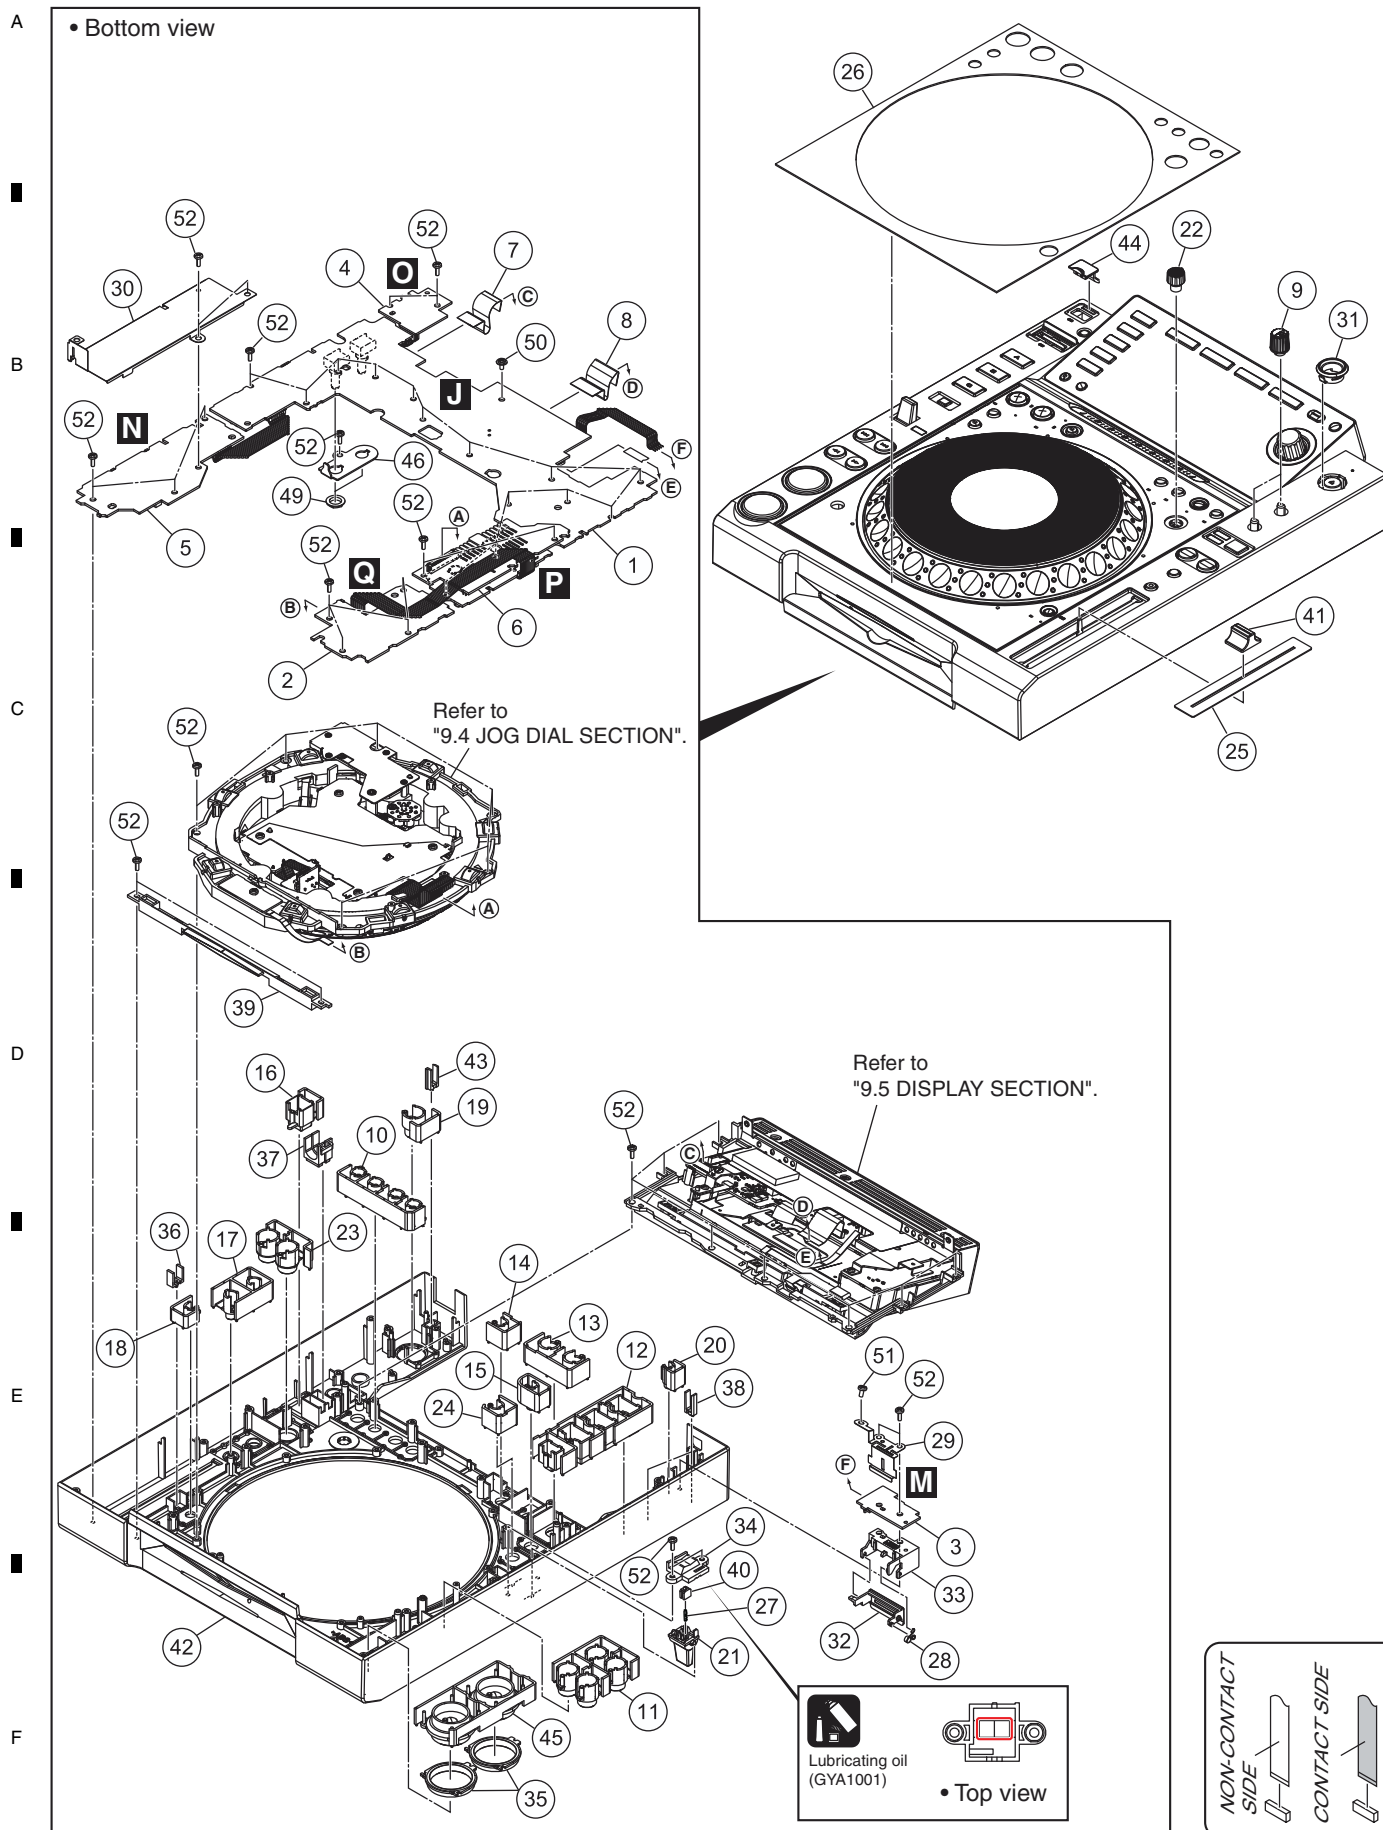

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
	1 PNLB Assy	DWX3338	46	Stay/VR	DNF1894	
	2 KSWB Assy	DWX3339	47	•••••		A
	3 SDSW Assy	DWX3340	48	•••••		
	4 EUPB Assy	DWX3341	49	Flange Nut M9	DBN1008	
	5 SLDB Assy	DWX3342	50	Screw	ABZ30P060FTC	
NSP	6 CNCT Assy	DWX3343	51	Screw	BBZ30P060FTB	■
	7 16P FFC	DDD1483	52	Screw	BPZ30P080FNI	
	8 FFC/22P	DDD1609				
	9 Knob	DAA1303				
	10 Button (CALL)	DAC2466				
	11 Button (SERCH)	DAC2468				B
	12 Button (HOT CUE)	DAC2469				
	13 Button (LOOP)	DAC2470				
	14 Button (RELOOP)	DAC2471				
	15 Button (4-BEAT LOOP)	DAC2472				■
	16 Button (JOG MODE)	DAC2473				
	17 Button (TEMPO)	DAC2474				
	18 Button (TEMPO REST)	DAC2475				
	19 Button (EJECT)	DAC2476				
	20 Button (USB STOP)	DAC2477				C
	21 Lever	DAC2478				
	22 Adjust Knob Black	DAC2528				
	23 Button/BSY	DAC2810				
	24 Button/SLP	DAC2865				■
	25 Slide Sheet 1C	DAH2404				
	26 Panel/TOP	DAH2871				
	27 Lever Spring	DBH1702				
	28 Spring	DBH1717				
	29 Leaf Spring/SD	DBK1375				D
	30 Earth Plate	DNH2849				
	31 Eject Guard	DNK3958				
	32 SD Card Door	DNK5308				
	33 SD Door Holder	DNK5309				■
	34 Lever Plate	DNK5312				
	35 Ring Rens (PLAY)	DNK5315				
	36 Tempo Lens	DNK5316				
	37 Mode Lens	DNK5317				
	38 Device Lens	DNK5318				E
	39 Front Lens	DNK5328				
	40 Lever Cap	DNK5344				
	41 Knob/SLD	DNK5981				
⚠	42 Control Panel	DNK6030				■
	43 Lens/EUP	DNK6040				
	44 Cover/USB	DNK6041				
	45 Button Assy/PLY	DXB2126				


9.4 JOG DIAL SECTION

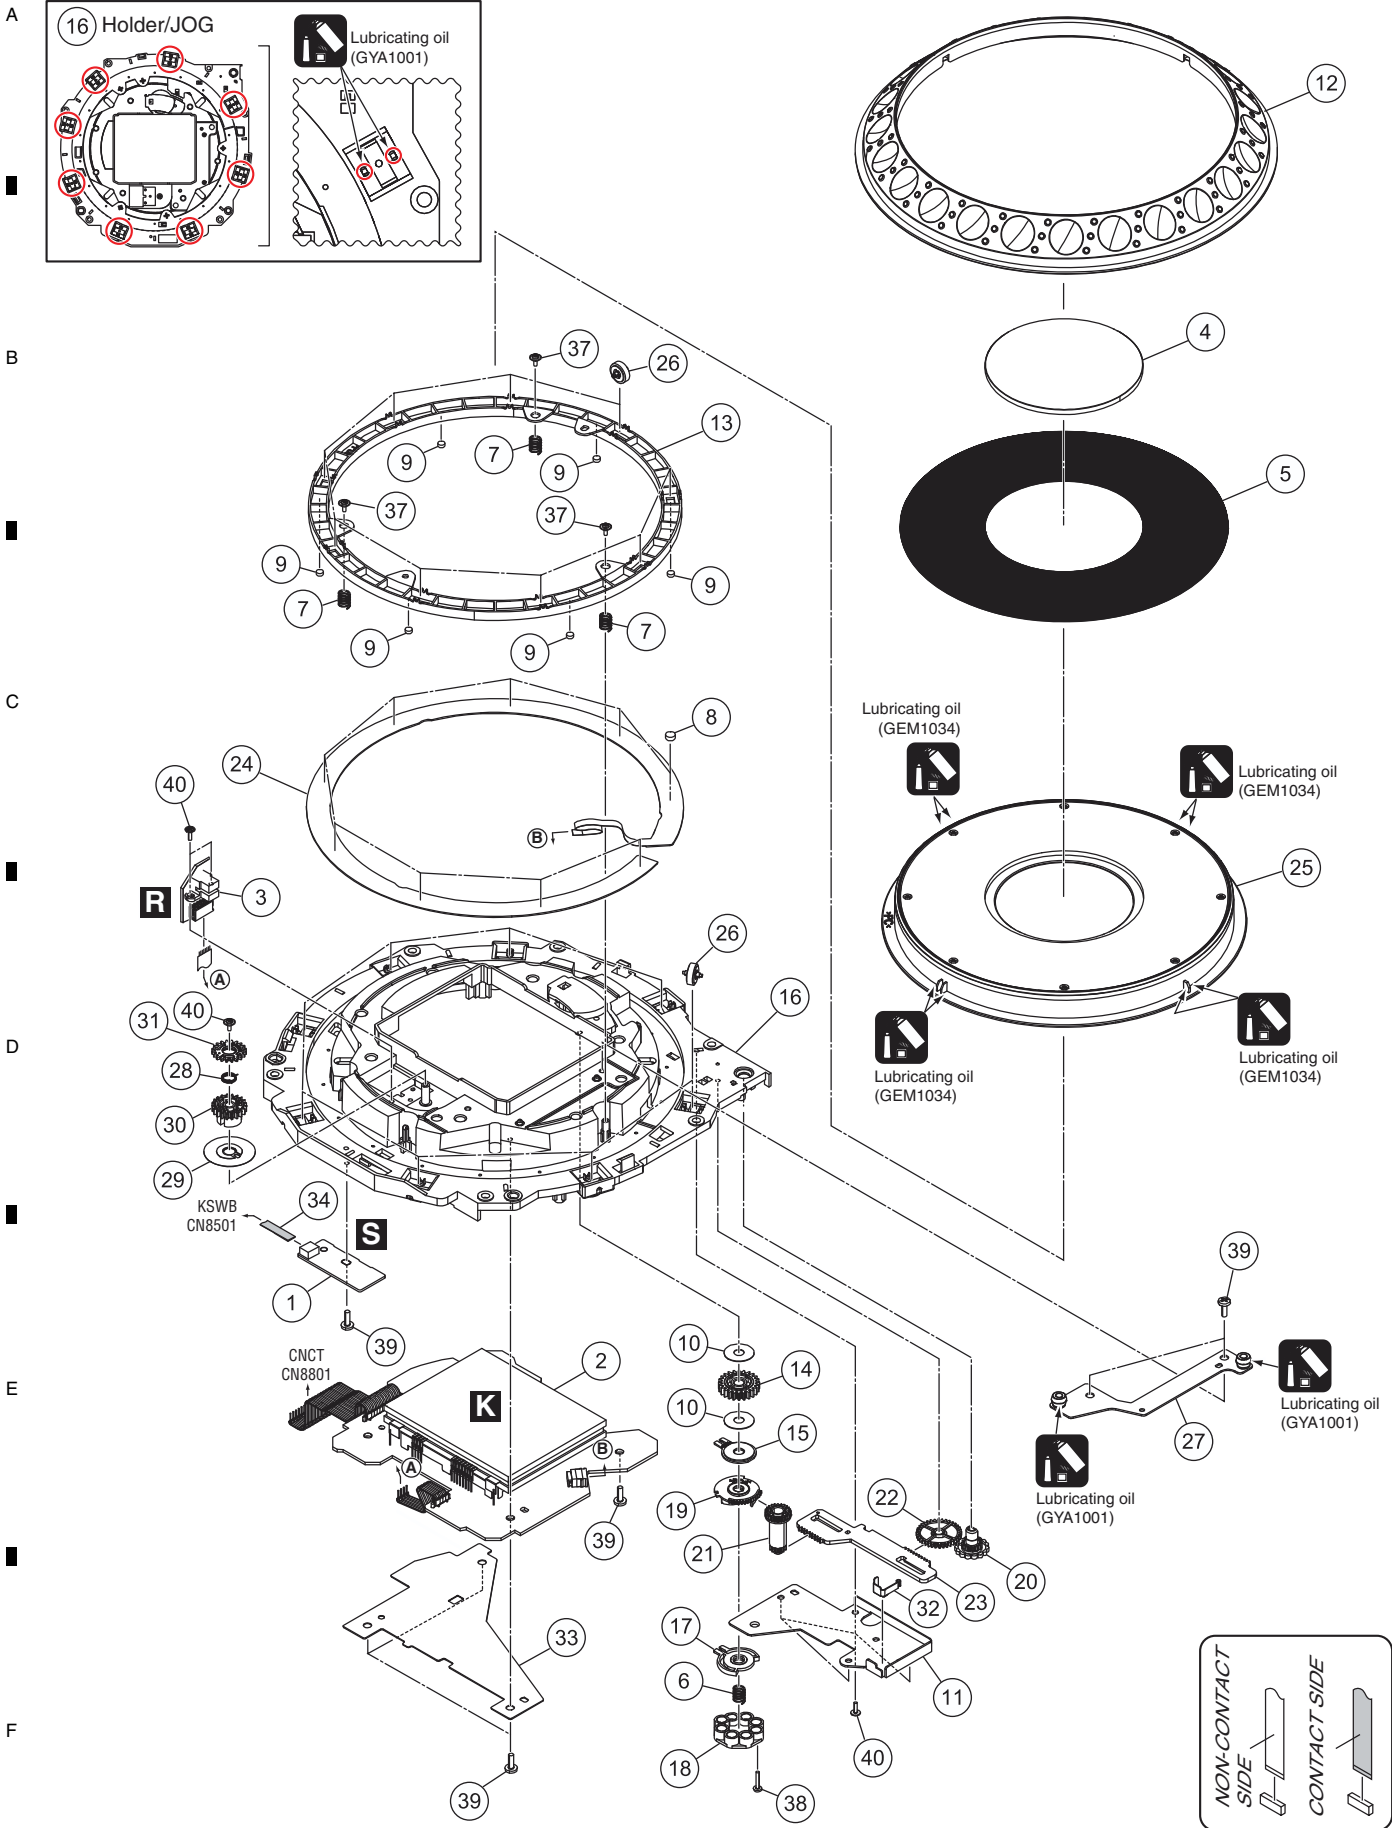

JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	INDB Assy	DWX3337	
2	JFLB Assy	DWX3348	A
3	JOGB Assy	DWX3349	
4	JOG Panel	DAH2609	
5	Plate/JOG	DAH2907	
6	Coil Spring/LD	DBH1798	■
7	SW Spring	DBH1681	
8	SW Cushion HH48/2	DEC2538	
9	Cushion/RNG	DEC3466	
10	Washer	DEC3137	
11	Link Plate	DNH2848	B
12	JOG Dial/B	DNK6064	
13	SW Ring	DNK5233	
14	Gear/LD	DNK6145	
15	Smoother	DNK5237	■
16	Holder/JOG	DNK6138	
17	Comp Plate	DNK5243	
18	Adjust Plate	DNK5300	
19	Cam Plate	DNK5301	
20	Dial Gear	DNK5302	C
21	Link Gear A	DNK5303	
22	Link Gear B	DNK5304	
23	Rack Plate	DNK5305	
24	Sheet SW	DSX1078	
25	JOG Dial A Assy	DXA2159	■
26	Roller Assy/A	DXB2118	
27	Stay Assy/JOG	DXB2133	
28	Encoder Spring	DBH1710	
29	Encorder Plate	DEC2889	D
30	Gear/A	DNK6143	
31	Gear/B	DNK6144	
32	Leaf Spring/ADJ	DBK1376	
33	Barrier/JFL	DEC3419	■
34	FFC/4P	DDD1608	
35			
36			
37	Screw (FE)	DBA1265	
38	Screw	BPZ20P100FTC	E
39	Screw	BPZ30P080FNI	
40	Screw	IPZ20P060FTC	




9.5 DISPLAY SECTION

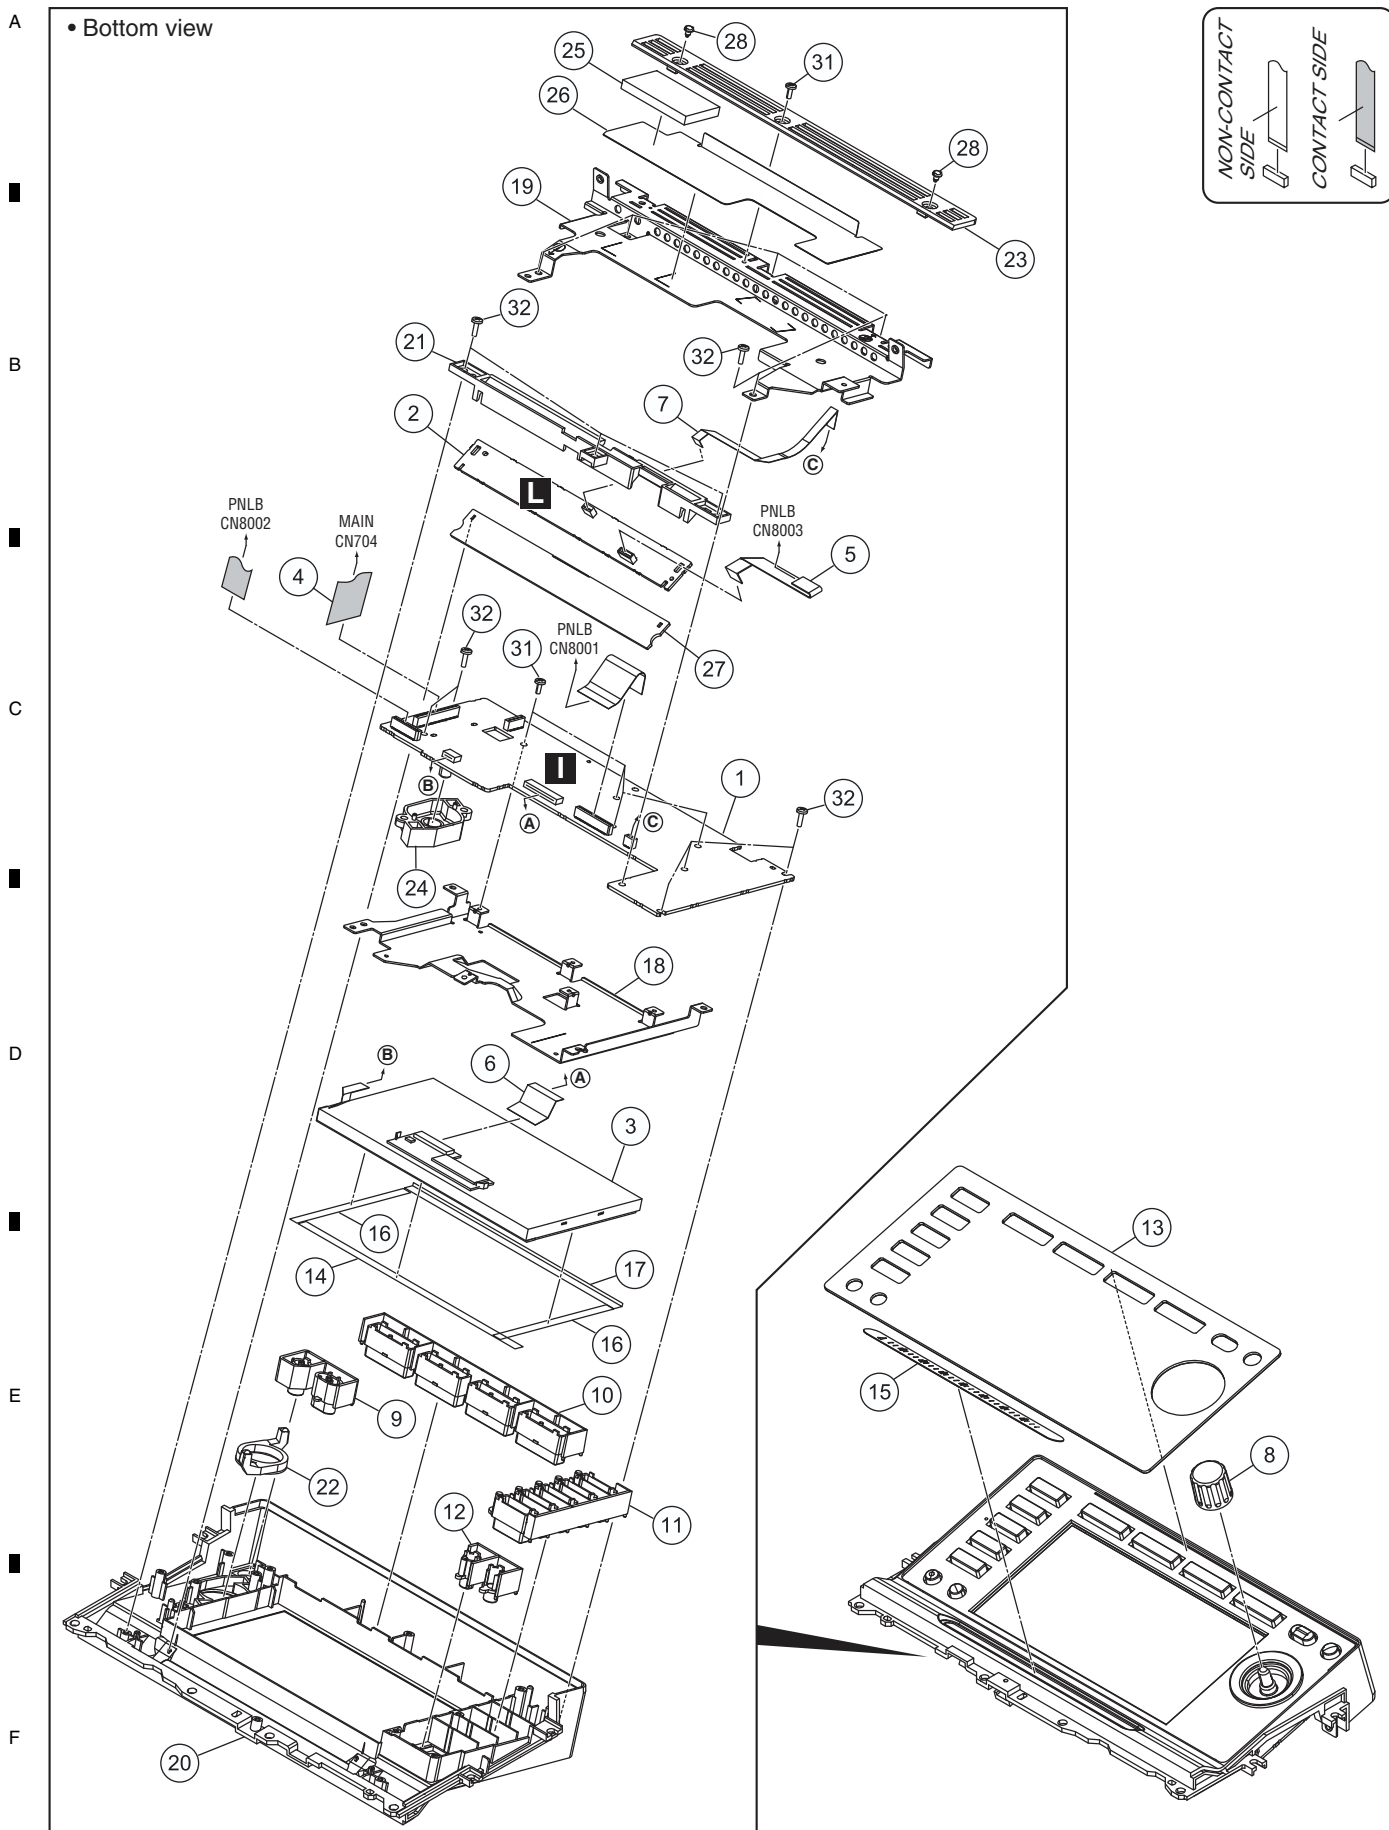

DISPLAY SECTION PARTS LIST

Mark No.	Description	Part No.	
1	TFTB Assy	DWX3331	
2	CDCB Assy	DWX3332	A
3	LCD Module	CWX3970	
4	29P FFC	DDD1481	
5	7P FFC	DDD1485	
6	40P FFC	DDD1541	
7	FFC/4P	DDD1607	
8	Dial Knob	DAA1246	
9	Button (MENU)	DAC2480	
10	Button/MOD	DAC2807	
11	Button/DEV	DAC2808	B
12	Button/QUA	DAC2809	
13	Panel/DIS	DAH2874	
14	LCD Packing (Bottom)	DEC3184	
15	Sheet/CDC	DEC3395	
16	LCD Packing (Side)	DEC3192	
17	Packing/TOP	DEC3376	
18	Stay/LCD	DND1269	
19	Bracket/LCD	DND1270	
⚠ 20	Control Panel/LCD	DNK6037	C
21	CDC Stay	DNK5320	
22	Ring Lens (BROWSE)	DNK5322	
23	LCD Bottom Plate	DNK5323	
24	Reflector	DNK5405	
25	Cushion/FFC	DEC3430	
26	Barrier/RB	DEC3421	
27	Lens/CDC	DNK6017	
28	Rivet (Plastic)	RBM-003	
29			D
30			
31	Screw	BBZ26P060FTB	
32	Screw	BPZ26P080FTC	

9.6 SLOT IN MECHA SECTION

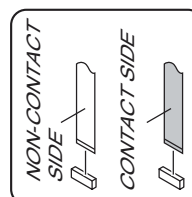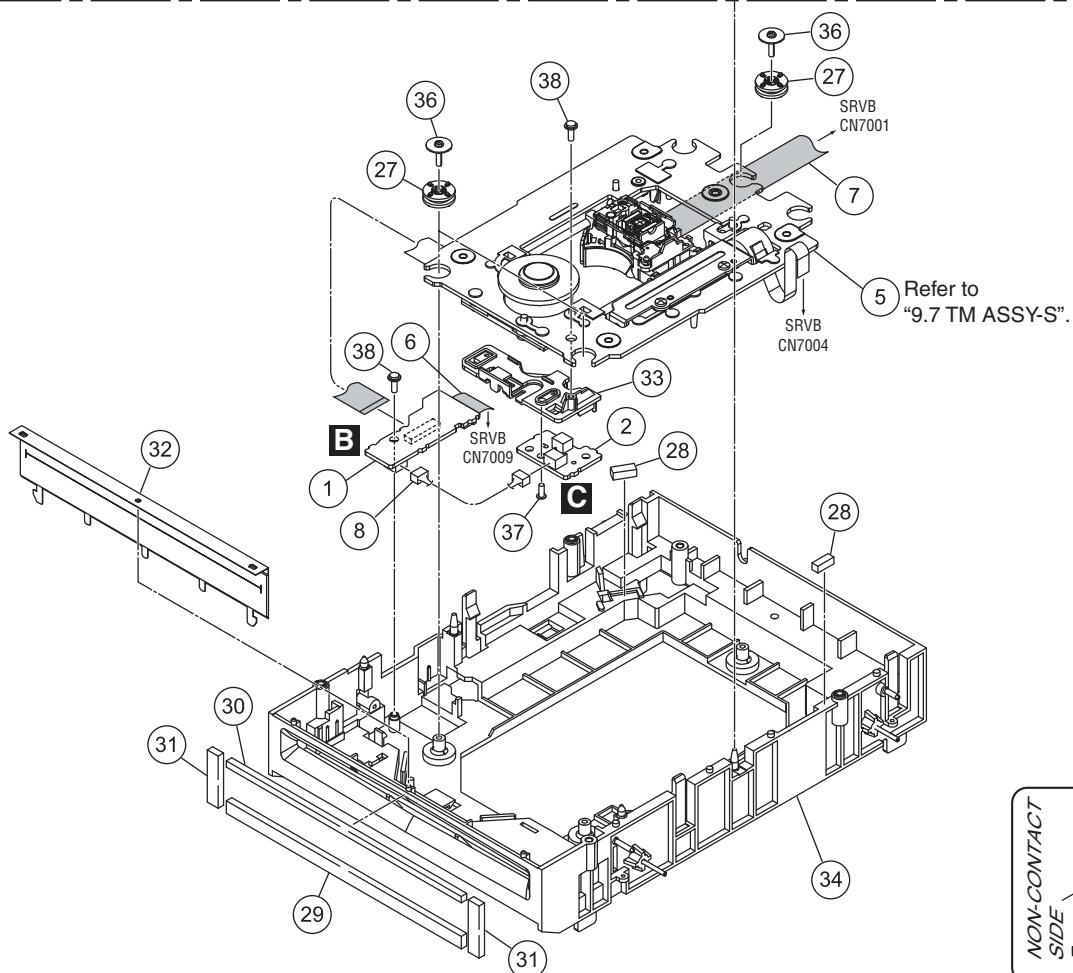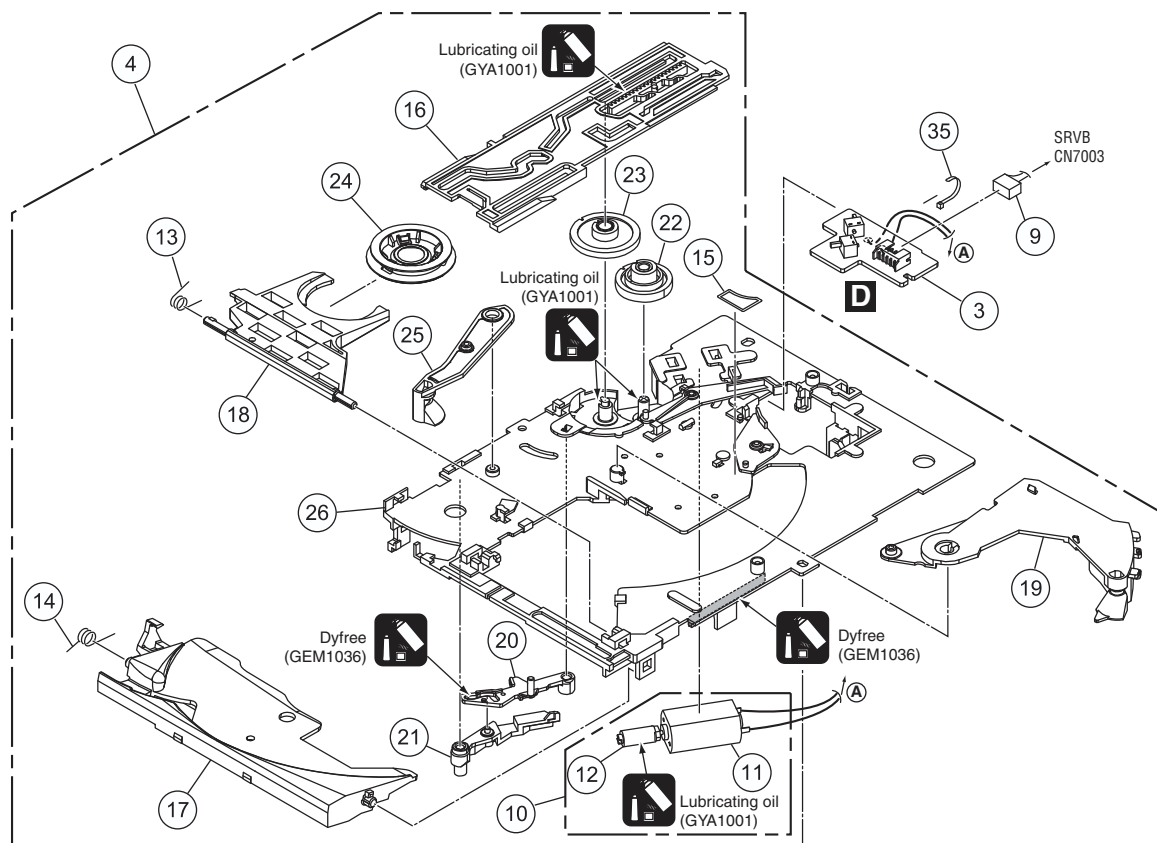

SLOT IN MECHA SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 SPCN Assy	DWX3336	
	2 INSW Assy	DWX3335	A
	3 SLMB Assy	DWX3345	
NSP	4 SLOTIN MECHA G11 Assy	DXA2163	
	5 TM Assy 09SD -S	DXX2697	
	6 13P FFC	DDD1452	
	7 24P FFC	DDD1460	
	8 Connector Assy 2P	DKP3769	
	9 Connector Assy	PF05PP-C25	
	10 DC Motor Assy-S	DXX2510	
NSP	11 DC Motor S	DXM1230	B
NSP	12 Worm Gear	DNK3910	
	13 Clamp Spring	DBH1374	
	14 Guide Spring	DBH1375	
	15 SW. Lever Spacer (PET)	DEC2420	
	16 Main Cam	DNK3407	
	17 Disc Guide	DNK3478	
	18 Clamp Arm	DNK3576	
	19 Eject Lever	DNK3684	
	20 Lever AP	DNK3835	C
	21 Lever BP	DNK3836	
	22 Loading Gear	DNK3911	
	23 Drive Gear	DNK3912	
	24 Clamper Assy	DXA2043	
	25 Loading Lever Assy	DXB1880	
	26 Loading Base Assy-S	DEA1022	
	27 Float Rubber D3	DEB1404	
	28 Spacer POR (T3)	DEB1566	
	29 Vessel Cushion A	DEC2852	D
	30 Vessel Cushion B	DEC2853	
	31 Vessel Cushion C	DEC2854	
	32 Front Sheet	DED1132	
	33 Inside SW Base	DNK4236	
	34 Float Base G11 Assy	DXB1793	
	35 Binder	ZCA-SKB90BK	
	36 Float Fastener	DBA1286	
	37 Screw	VBA1062	
	38 Screw	IPZ20P060FTC	E

1 2 3 4

9.7 TM ASSY-S

A


B

C

D

E

F

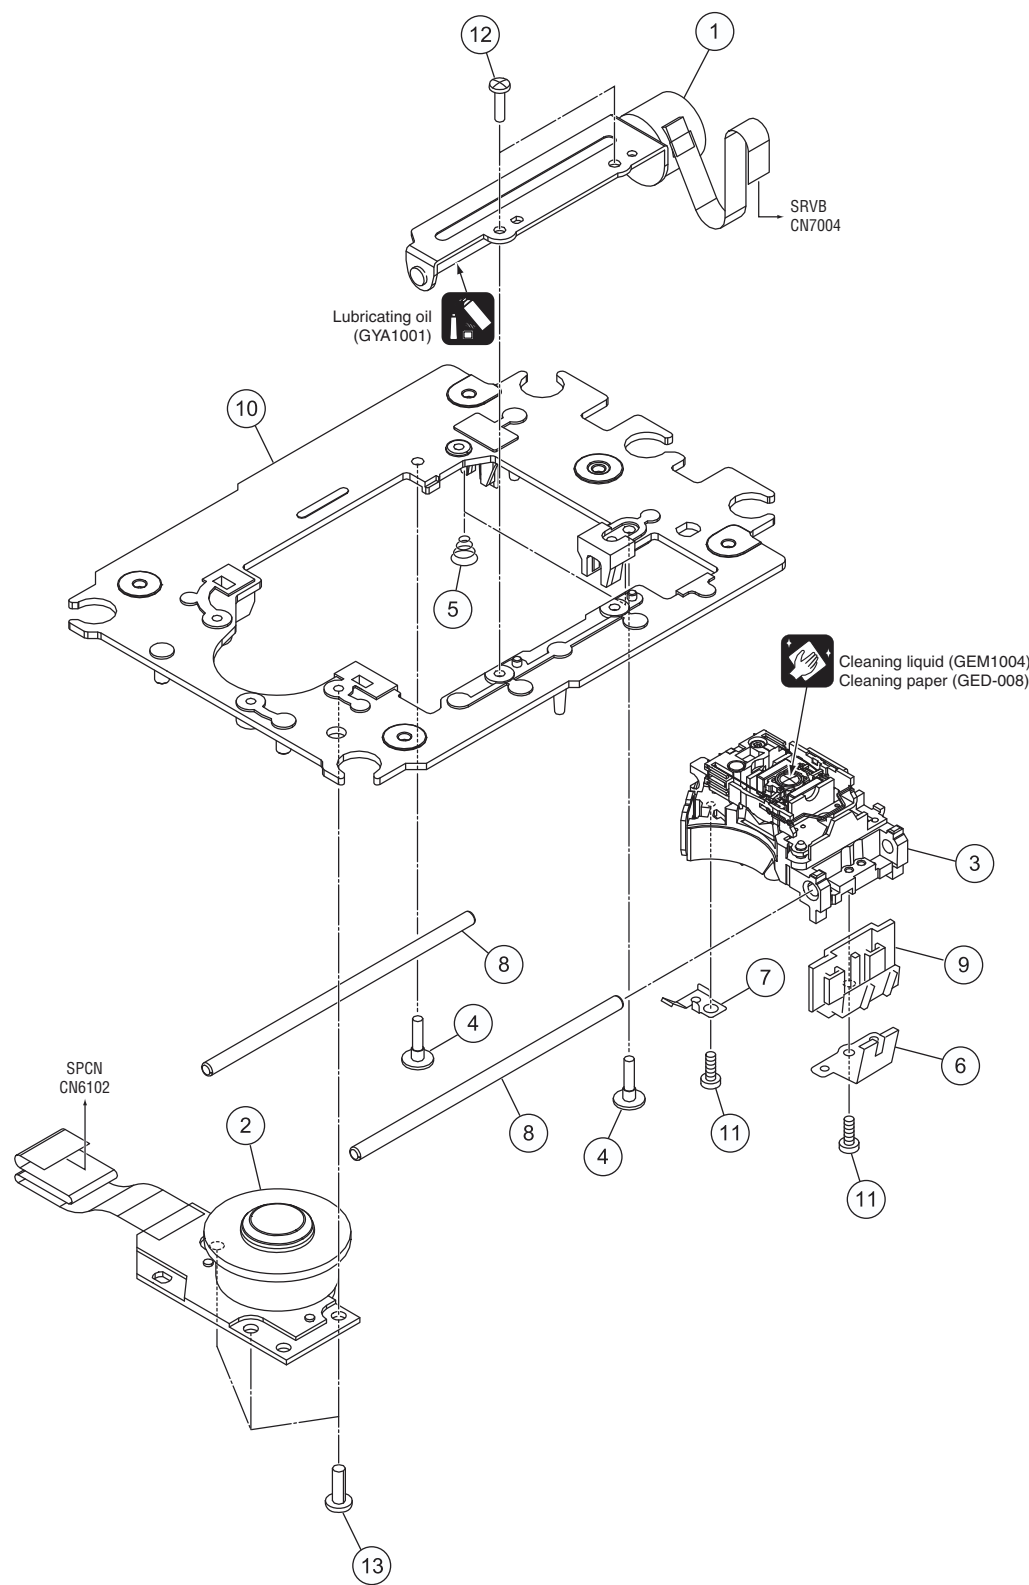

TM ASSY-S SECTION PARTS LIST

Mark No.	Description	Part No.	
NSP 1	Stepping Motor SK	DXM1227	
NSP 2	Spindle Motor G11(N)	DXM1231	A
NSP 3	09SD Pickup Assy	OWY8177	
NSP 4	Adjust Screw	DBA1263	
NSP 5	Skew Spring	DBH1437	
NSP 6	Joint Spring (J)	DBK1261	■
NSP 7	Slider Spring G11 (J)	DBK1262	
NSP 8	Guide Shaft (S)	DLA1918	
	Joint	DNK3858	
NSP 10	Mounting Plate G11(J)	DNK4307	
11	Tapping Screw 04	VBA1092	B
12	Screw	BPZ20P080FTC	
13	Screw	BPZ26P080FTC	
			■
			C
			■
			D
			■
			E
			■
			F