


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

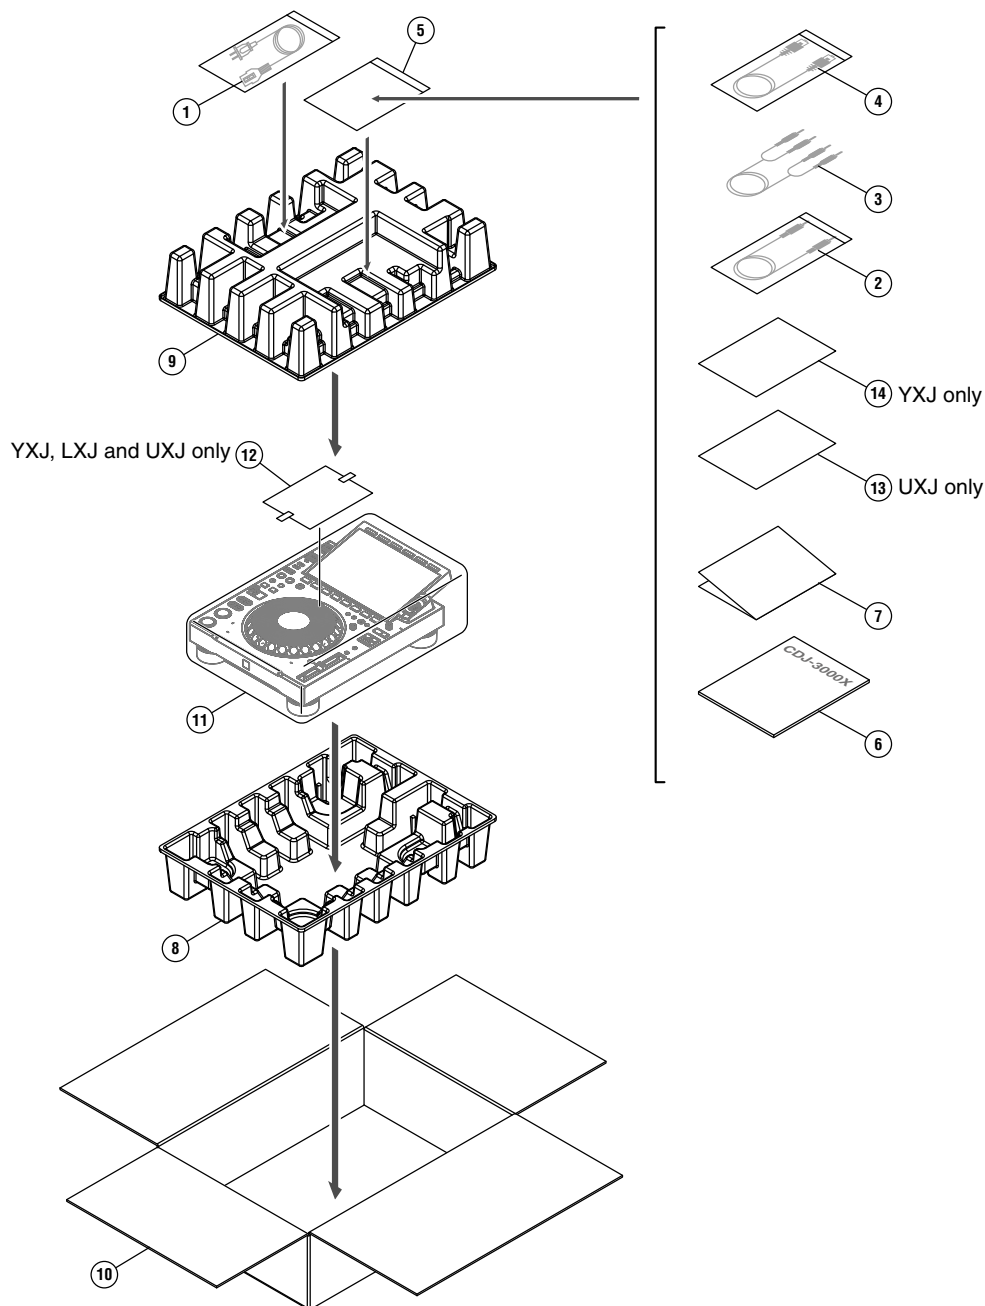

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 Power cord	See Contrast table (2)
	2 Digital audio cable	DDE1154
	3 Analog audio cable	XDE3045
	4 LAN cable	DDE1141
NSP	5 Polyethylene Bag (0.06*230*340)	AHG7117
B	6 Quick Start Guide	See Contrast table (2)
	7 Precautions for Use	See Contrast table (2)
	8 Packing Pad	DHA2070
	9 Packing Pad	DHA2071
	10 Packing Case	See Contrast table (2)
NSP	11 Mirror Mat (1200*1000)	DHL1169
NSP	12 Leaflet	See Contrast table (2)
NSP	13 Leaflet	See Contrast table (2)
NSP	14 Warranty	See Contrast table (2)


(2) CONTRAST TABLE

CDJ-3000X/YXJ, LXJ, UXJ and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-3000X/YXJ	CDJ-3000X/LXJ	CDJ-3000X/UXJ	CDJ-3000X/AXJ
C	1	Power cord	DDG1124	DDG1124	DDG1123	DDG1125
	6	Quick Start Guide	DRH1824	DRH1824	DRH1824	DRH1825
	7	Precautions for Use	DRH1826	DRH1826	DRH1826	DRH1828
	10	Packing Case	DHG3954	DHG3965	DHG3966	DHG3968
	12	Leaflet	DRH1797	DRH1797	DRH1797	Not used
NSP	13	Leaflet	Not used	Not used	DRH1799	Not used
NSP	14	Warranty	DRY1280	Not used	Not used	Not used

9.2 CHASSIS SECTION

• Top view

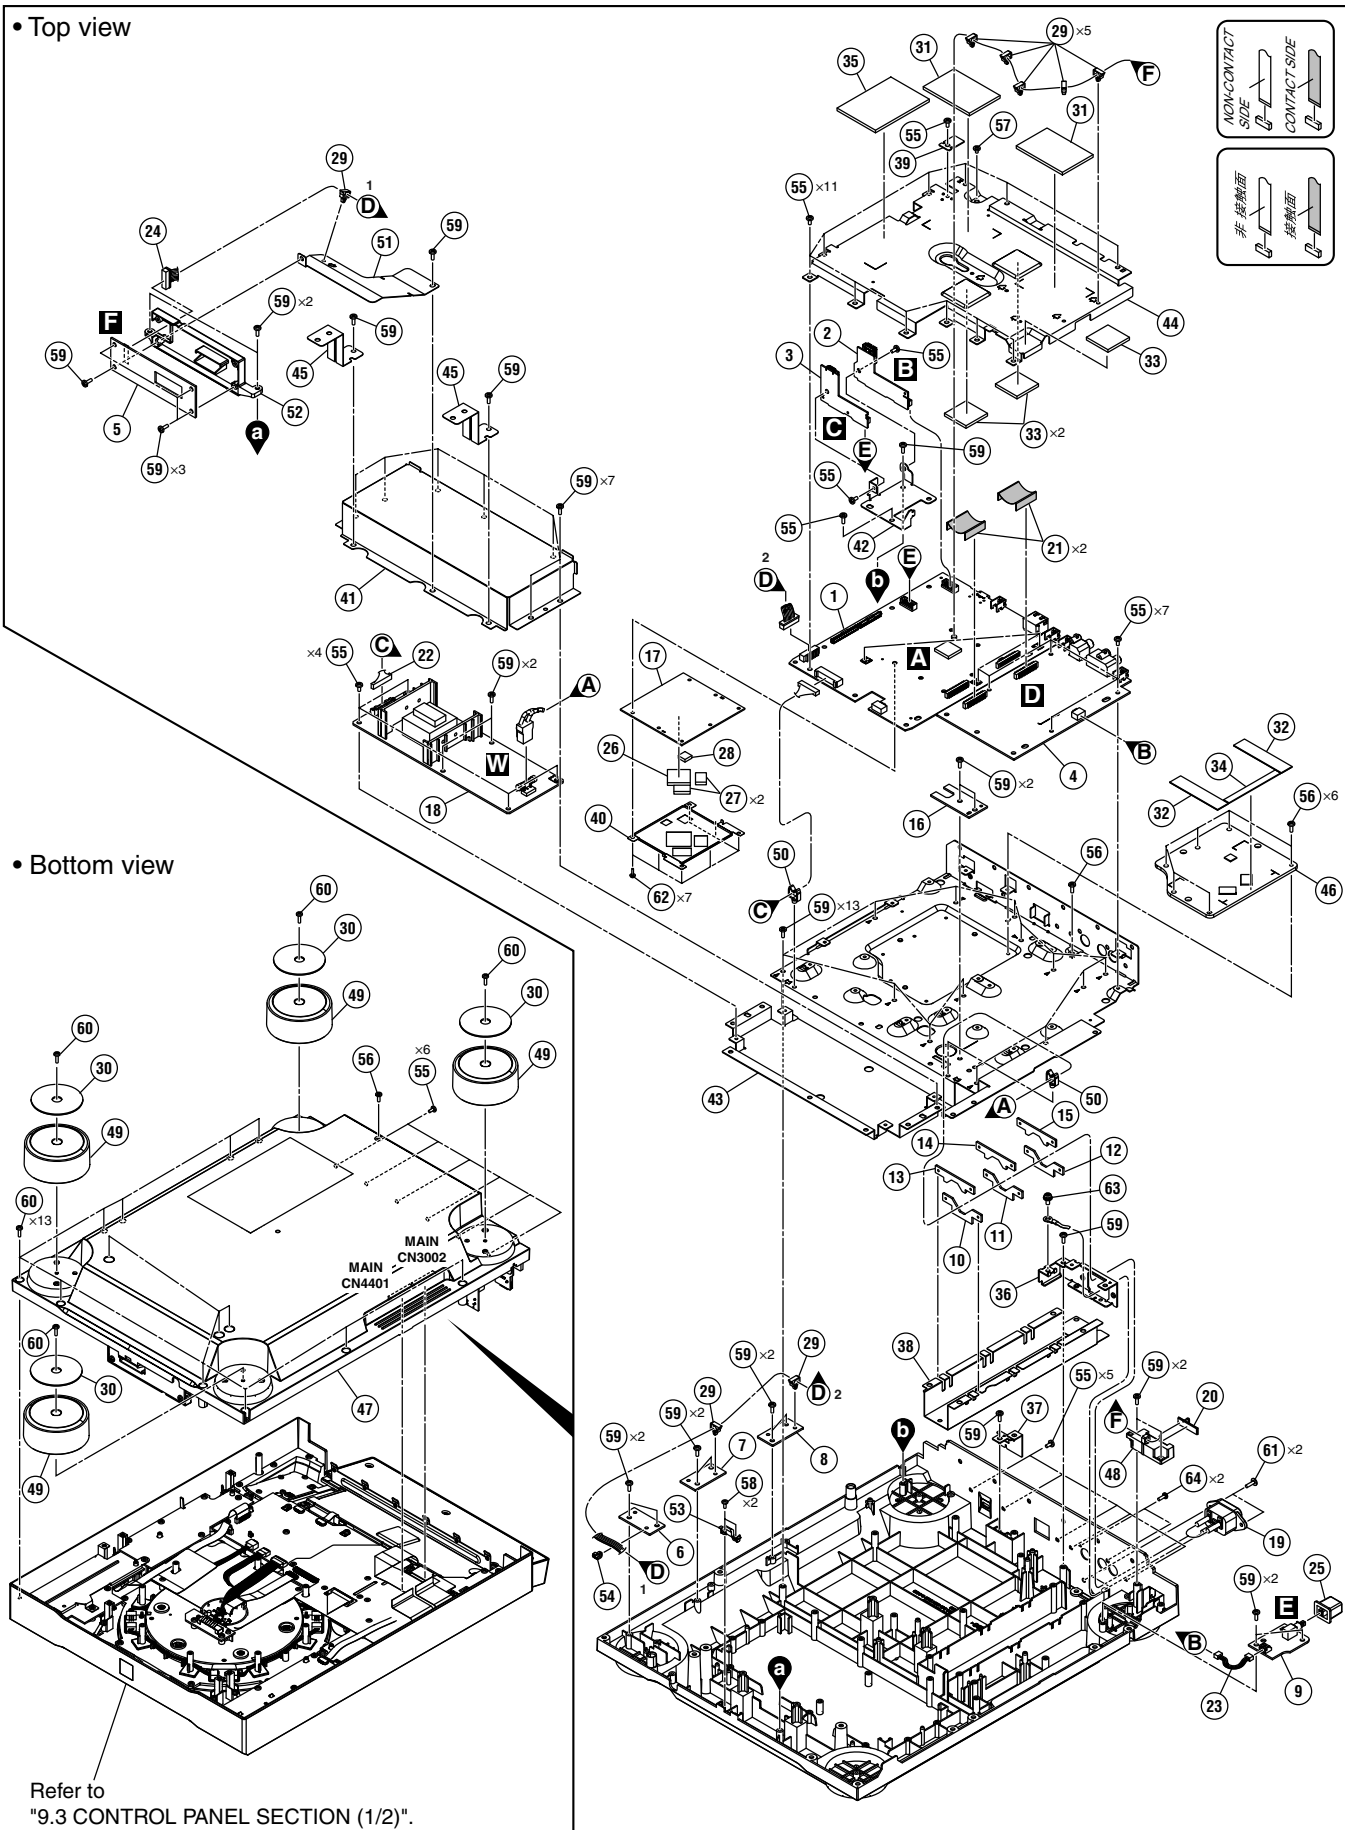

CHASSIS SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MAIN Assy	DWX5098		46	Heat Sink	DNH3652
	2	USBA Assy	DWX5101	⚠	47	Chassis	DNK7229
	3	USBC Assy	DWX5102		48	Holder	DNK7230
	4	AUDB Assy	DWX5099		49	Insulator	DNK7242
	5	NFCB Assy	DWX5111		50	Holder	VEC1355
B	6	OSK1	DWX5248		51	Stay	DNH3660
	7	OSK2	DWX5249		52	Holder	DNK7282
	8	OSK3	DWX5250		53	Lens	DNK7283
	9	PWSW Assy	DWX5119		54	Cable Tie	ZCA-SKB90BK
	10	SSK11 Assy	DWX5121		55	Screw	BBZ30P060FTB
C	11	SSK12 Assy	DWX5122		56	Screw	BBZ30P080FTB
	12	SSK13 Assy	DWX5123		57	Screw	BPZ20P040FTB
	13	SSK21 Assy	DWX5124		58	Screw	BPZ26P060FTC
	14	SSK22 Assy	DWX5125		59	Screw	BPZ30P080FTC
	15	SSK23 Assy	DWX5126		60	Screw	BPZ30P100FTB
D	16	SSK3 Assy	DWX5138		61	Screw	IBZ30P100FTB
	17	SoM Module	DWX4722		62	Screw	PMB20P080FNI
	⚠ 18	SW POWER SUPPLY	DWR1605		63	Screw	PMH40P080FTC
	⚠ 19	AC Inlet	DKP3991		64	Screw	PPZ30P080FTB
	20	Wi-Fi Antenna	DSD1006				
E	21	FFC	DDD2243				
	22	Crimp Connector	DDC1060				
	23	Parallel Jumper	DDC1047				
	24	Crimp Connector	DDC1069				
	25	Power Knob	DAC2306				
F	26	Heat Cond Sheet	DEB2092				
	27	Heat Cond Sheet	DEB2093				
	28	Heat Cond Sheet	DEB2094				
	29	Locking Mini Clamp	DEC2439				
	30	Cushion	DEC3838				
G	31	Cushion	DEC3884				
	32	EMI Absorb Sheet	DEC4091				
	33	Cushion	DEC4187				
	34	EMI Absorb Sheet	DEC4193				
	35	Cushion	DEC4202				
H	36	Bracket/ACI	DNH3020				
	37	Stay/KST	DNH3021				
	38	Shield Case	DNH3317				
	39	Stay	DNH3328				
	40	Shield Case	DNH3526				
I	41	Shield Case	DNH3632				
	42	Stay	DNH3642				
	43	Stay	DNH3643				
	44	Shield Case	DNH3644				
	45	Stay	DNH3645				



CDJ-3000X

CONTROL PANEL SECTION (1/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 PNLB Assy	DWX5104
	2 KSWB Assy	DWX5106
	3 SUB1 Assy	DWX5116
	4 SUB2 Assy	DWX5117
	5 SLDB Assy	DWX5118
	6 CONB Assy	DWX5120
	7 FFC	DDD2238
	8 FFC	DDD2239
	9 FFC	DDD2240
	10 FFC	DDD2241
B	11 FFC	DDD2242
	12 Ferrite Clamper	DTX1011
	13 Cushion	DEC3921
	14 Knob	DAA1405
	15 Knob	DAA1444
	16 Barrier	DEC3932
	17 Sheet	DEC4194
	18 Sheet	DEC4195
	19 Stay	DNH3412
	20 Shield Case	DNH3650
C	21 Knob/SLD	DNK5981
	22 Lens	DNK7235
	23 Flange Nut M9	DBN1008
	24 Screw	BBZ30P060FTB
	25 Screw	BPZ30P080FTC


D

E

F

9.4 CONTROL PANEL SECTION (2/2)

• Bottom view


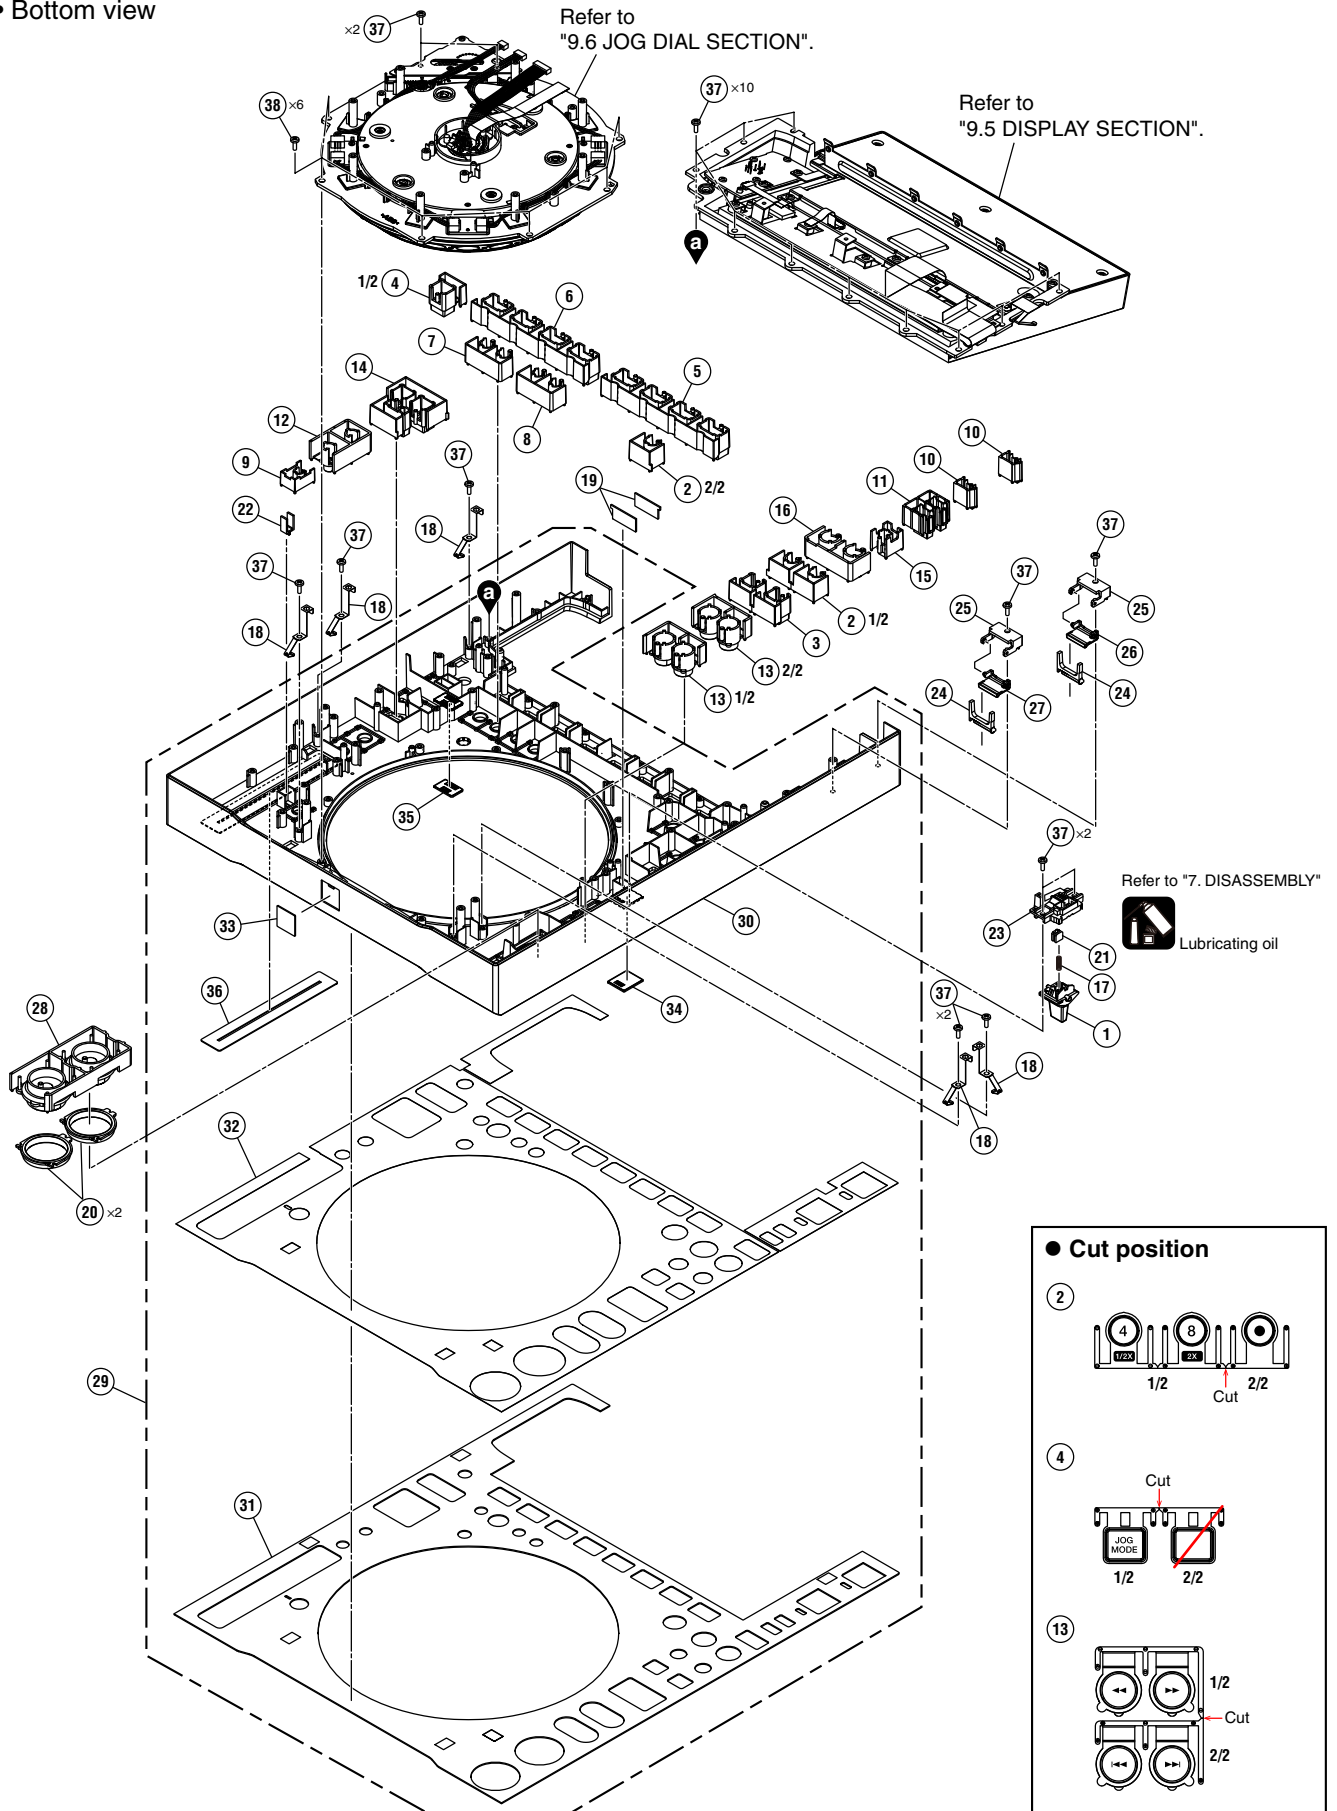


CONTROL PANEL SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.
A	1 Lever	DAC3097
	2 Button	DAC3463
	3 Button	DAC3464
	4 Button	DAC3465
	5 Button	DAC3467
	6 Button	DAC3468
	7 Button	DAC3474
	8 Button	DAC3475
	9 Button	DAC3476
	10 Button	DAC3780
B	11 Button	DAC3781
	12 Button	DAC3782
	13 Button	DAC3783
	14 Button	DAC3785
	15 Button	DAC3803
	16 Button	DAC3806
	17 Lever Spring	DBH1702
	18 Leaf Spring	DBK1413
	19 Brake	DEC3948
	20 Ring Rens (PLAY)	DNK5315
C	21 Lever Cap	DNK5344
	22 Lens	DNK5862
	23 Base	DNK6470
	24 Lens	DNK7236
	25 Holder	DNK7237
	26 Door	DNK7238
	27 Door	DNK7241
	28 Button Unit	DXB2232
	29 1..CDJ-3000X Panel Service Assy	DEA1196
	NSP 30 2..Control Panel	DNK7239
NSP	31 2..Panel	DAH3454
NSP	32 2..DS ADH Sheet	DEH1160
	33 2..Panel	DAH3476
	34 2..Panel	DAH3256
	35 2..Panel	DAH3257
	36 2..Sheet	DAH3456
	37 Screw	BPZ30P080FTC
	E 38 Screw	APZ30P080FTC

9.5 DISPLAY SECTION

• Bottom view

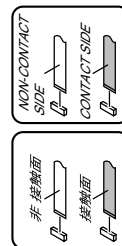
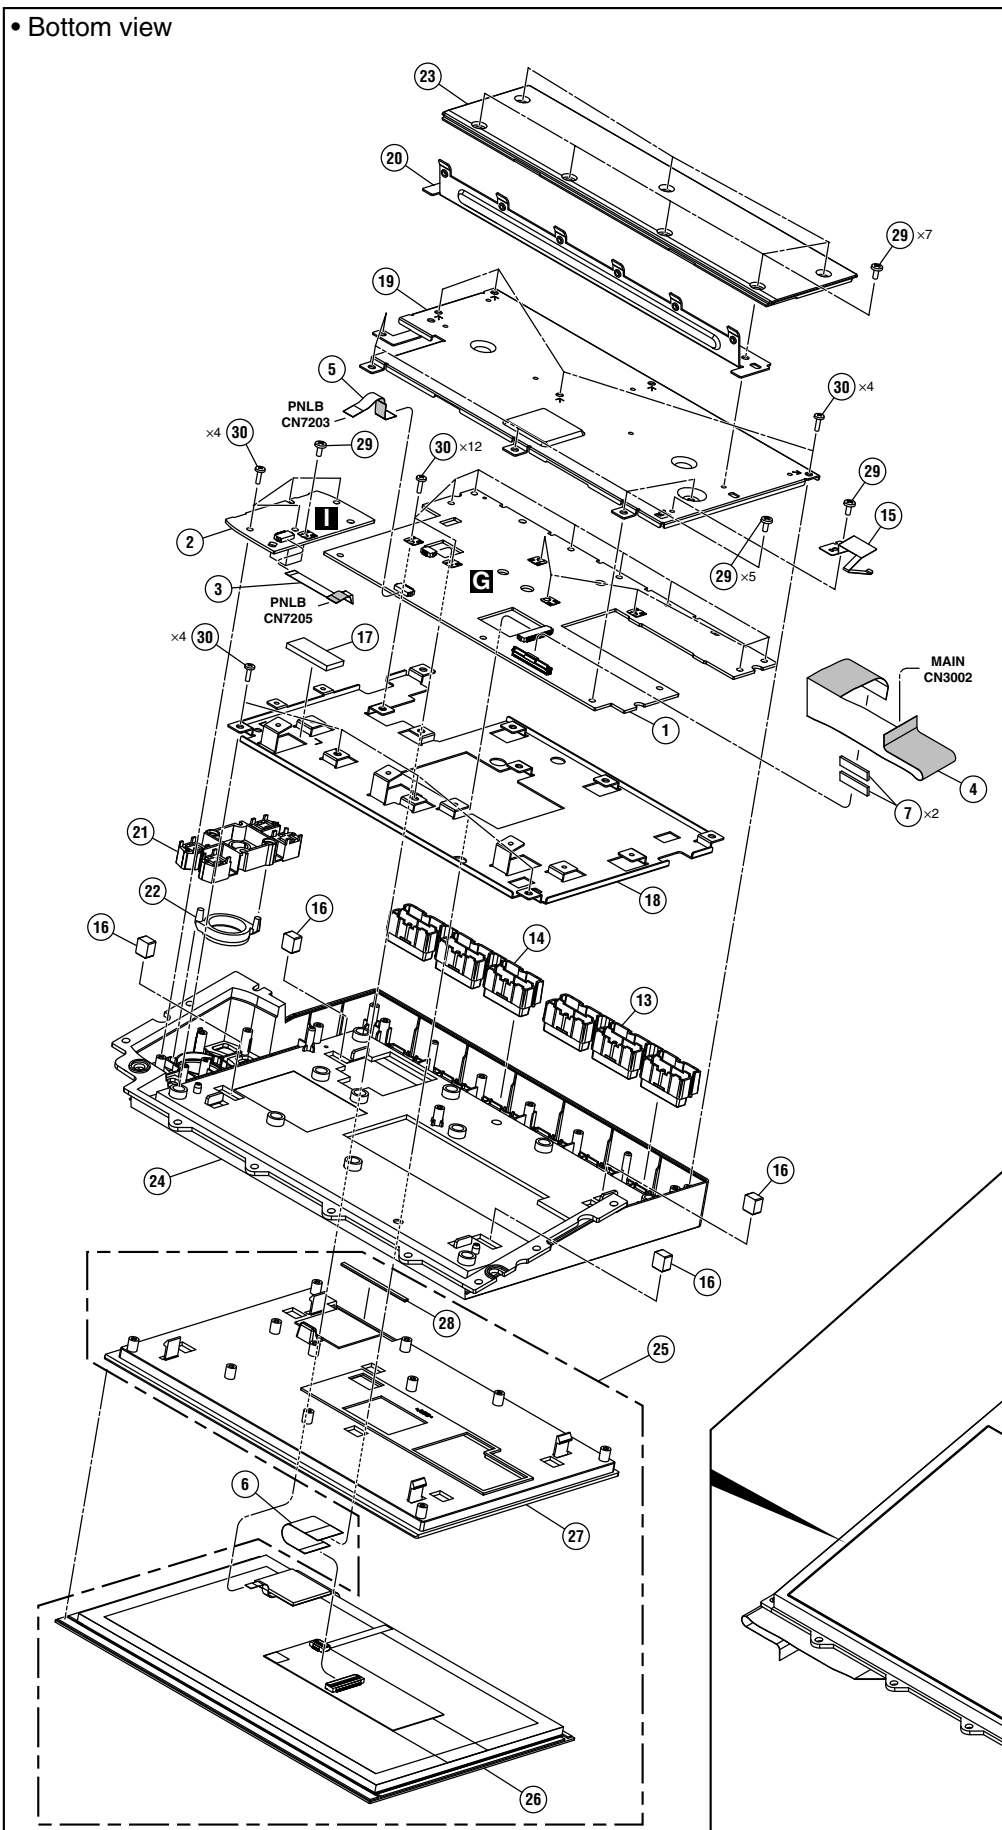


A
B
C
D
E
F





DISPLAY SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 MLCB Assy	DWX5100
	2 ENCB Assy	DWX5105
	3 FFC	DDD2236
	4 FFC	DDD1922
	5 FFC	DDD2237
	6 FFC	DDD2244
	7 Ferrite Clamper	DTX1011
	8 Dial Knob	DAA1246
	9 Button	DAC3749
	10 Button	DAC3750
B	11 Button	DAC3751
	12 Button	DAC3752
	13 Button	DAC3778
	14 Button	DAC3779
	15 Leaf Spring	DBK1414
	16 Gasket	DEC4159
	17 Cushion	DEC4199
	18 Stay	DNH3646
	19 Shield Case	DNH3647
	20 Angle	DNH3649
C	21 Holder	DNK7231
	22 Lens	DNK7232
	23 Cover	DNK7233
	24 Control Panel	DNK7234
	25 1..LCD Holder Assy	DEA1207
	26 2..LCD Module	DWX5361
	27 2..Holder	DNK7192
	28 2..Cushion	DEC4215
	29 Screw	BBZ30P060FTB
	30 Screw	BPZ26P080FTC

9.6 JOG DIAL SECTION

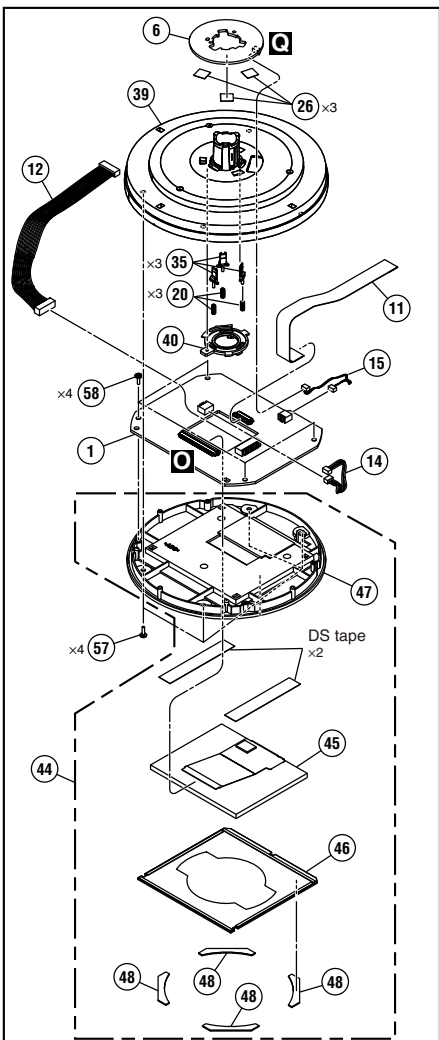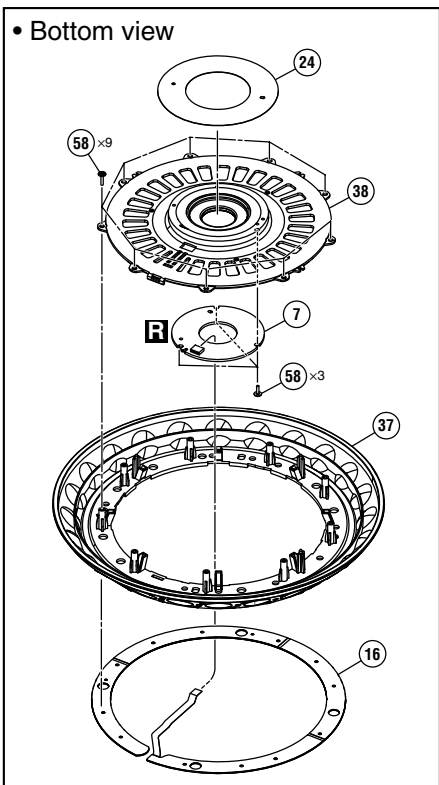

Refer to "7. DISASSEMBLY"

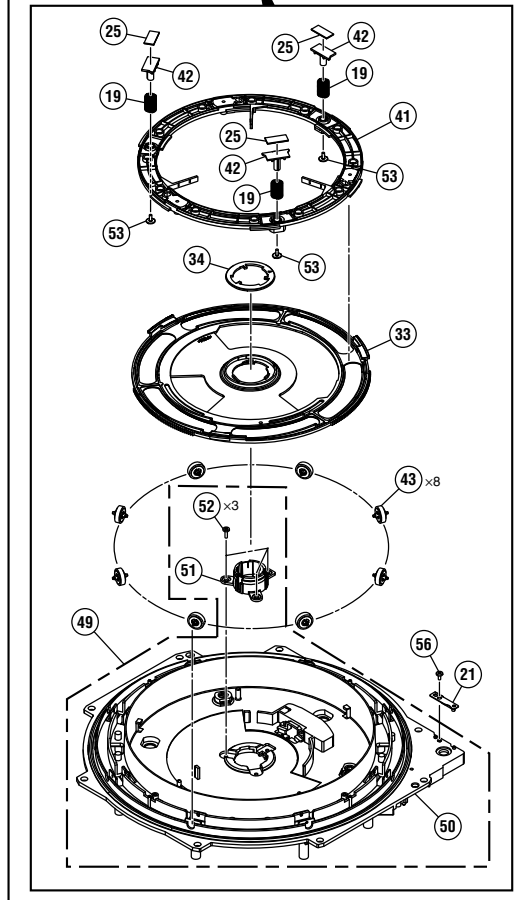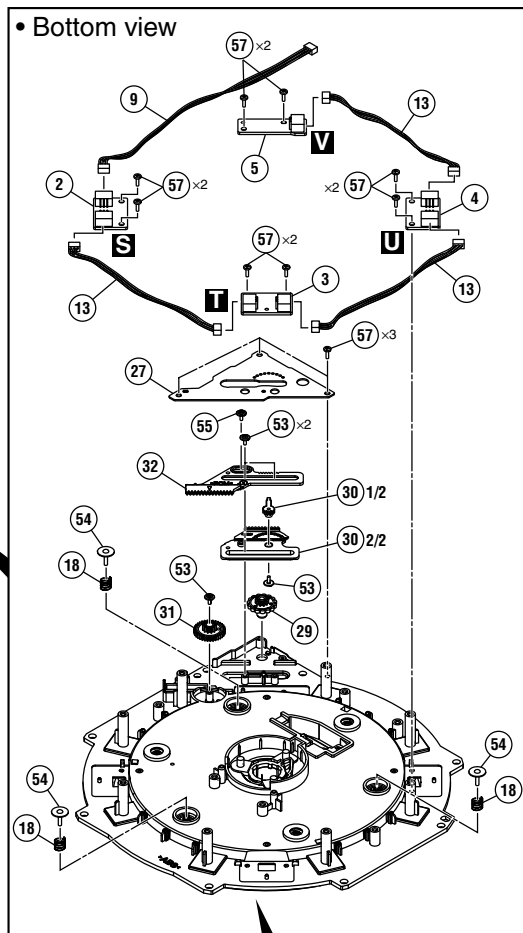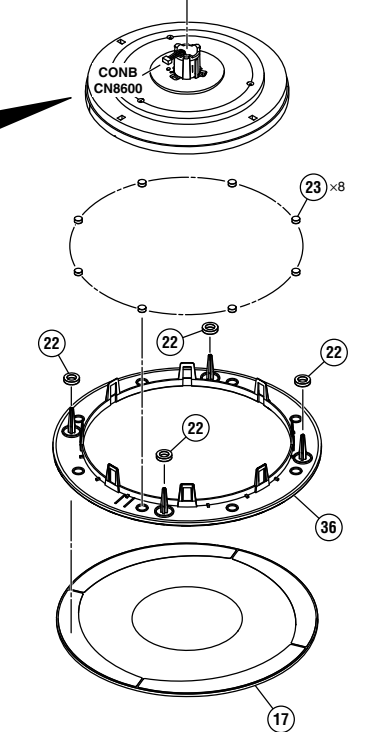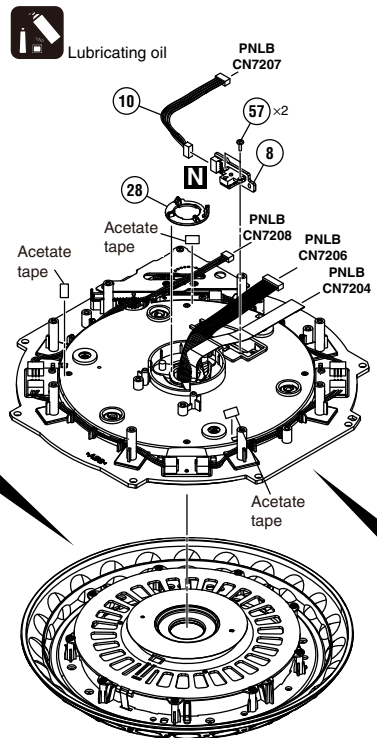

JOG DIAL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	JLCD Assy	DWX5103		41	Base	DNK7224
	2	JILM1 Assy	DWX5107		42	Base	DNK7257
	3	JILM2 Assy	DWX5108		43	Roller	DXB2178
	4	JILM3 Assy	DWX5109		44	1..JOG LCD Holder Assy	DEA1198
	5	JILM4 Assy	DWX5110		45	2..TFT LCD	DWX4708
B	6	COIL1 Assy	DWX5113		46	2..Cover	DEC3825
	7	COIL2 Assy	DWX5114	NSP	47	2..Holder	DNK7214
	8	JOGB Assy	DWX5115		48	2..Sheet	DEC3951
	9	Connector Assy	PF03PP-B17		49	1..Jog Holder Assy	DEA1199
	10	Crimp Connector	DDC1061	NSP	50	2..Base	DNK7205
C	11	FFC	DDD1913	NSP	51	2..Shaft	DNK7206
	12	Crimp Connector	DDC1032		52	2..Screw	BPZ20P060FTC
	13	Connector Assy	PF03PP-B12		53	Screw (FE)	DBA1265
	14	Crimp Connector	DDC1034		54	Float Fastener	DBA1286
	15	Crimp Connector	DDC1033		55	Screw	DBA1461
D	16	Sensor	DSX1139		56	Screw	BPZ20P040FTB
	17	Window	DAH3206		57	Screw	BPZ20P060FTC
	18	Spring	DBH1816		58	Screw	IPZ20P060FTC
	19	Spring	DBH1859				
	20	Spring	DBH1860				
E	21	Leaf Spring	DBK1394				
	22	Cushion	DEC3807				
	23	Cushion	DEC4161				
	24	Slit	DEC4174				
	25	Brake	DED1189				
F	26	DS Tape	DEH1111				
	27	Cover	DNH3367				
	28	Holder	DNK6780				
	29	Gear	DNK6786				
	30	Gear	DNK6787				
	31	Gear	DNK6788				
	32	Gear	DNK6789				
	33	Cam	DNK7207				
	34	Lifter	DNK7208				
	35	Brake	DNK7209				
	36	Plate	DNK7210				
	37	Jog Dial	DNK7211				
	38	Jog Dial	DNK7212				
	39	Holder	DNK7213				
	40	Cover	DNK7215				