

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)	NSP 8	rekordbox dj license key label	DXA2304
⚠ 2	AC Adapter	DWR1574	NSP 9	Leaflet	DRM1410
3	USB Cable	DDE1128	NSP 10	Warranty	See Contrast table (2)
4	Operating Instructions (Quick Start Guide)	See Contrast table (2)	NSP 11	Polyethylene Bag	AHG7117
			12	Mirror Mat (1200*1000)	DHL1169
5	Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Handle	DEC3783
6	Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Spacer	DEC3784
7	Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Partition	DHC1101
			16	Packing Pad	DHA1972
			17	Packing Pad	DHA1973
			18	Packing Pad	DHA1974
			19	Packing Pad	DHA1975
			20	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE



DDJ-1000/FWLPWXJ, SYXJ, UXJCB and XJCN are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>DDJ-1000 /FWLPWXJ</u>	<u>DDJ-1000 /SYXJ</u>	<u>DDJ-1000 /UXJCB</u>	<u>DDJ-1000 /XJCN</u>
⚠	1	Power Cord	ADG1154	ADG1154	XDG3052	ADG7079
	4	Operating Instructions (Quick Start Guide)(En, Es)	DRH1471	Not used	Not used	Not used
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru)	Not used	DRH1469	Not used	Not used
	6	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	Not used	DRH1468	Not used
	7	Operating Instructions (Quick Start Guide)(Zhc)	Not used	Not used	Not used	DRH1470
NSP	10	Warranty	Not used	DRY1270	Not used	Not used
	20	Packing Case	DHG3619	DHG3584	DHG3618	DHG3621

9.2 BOTTOM SECTION


• Bottom view

Refer to
"9.3 CHASSIS SECTION".

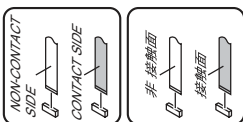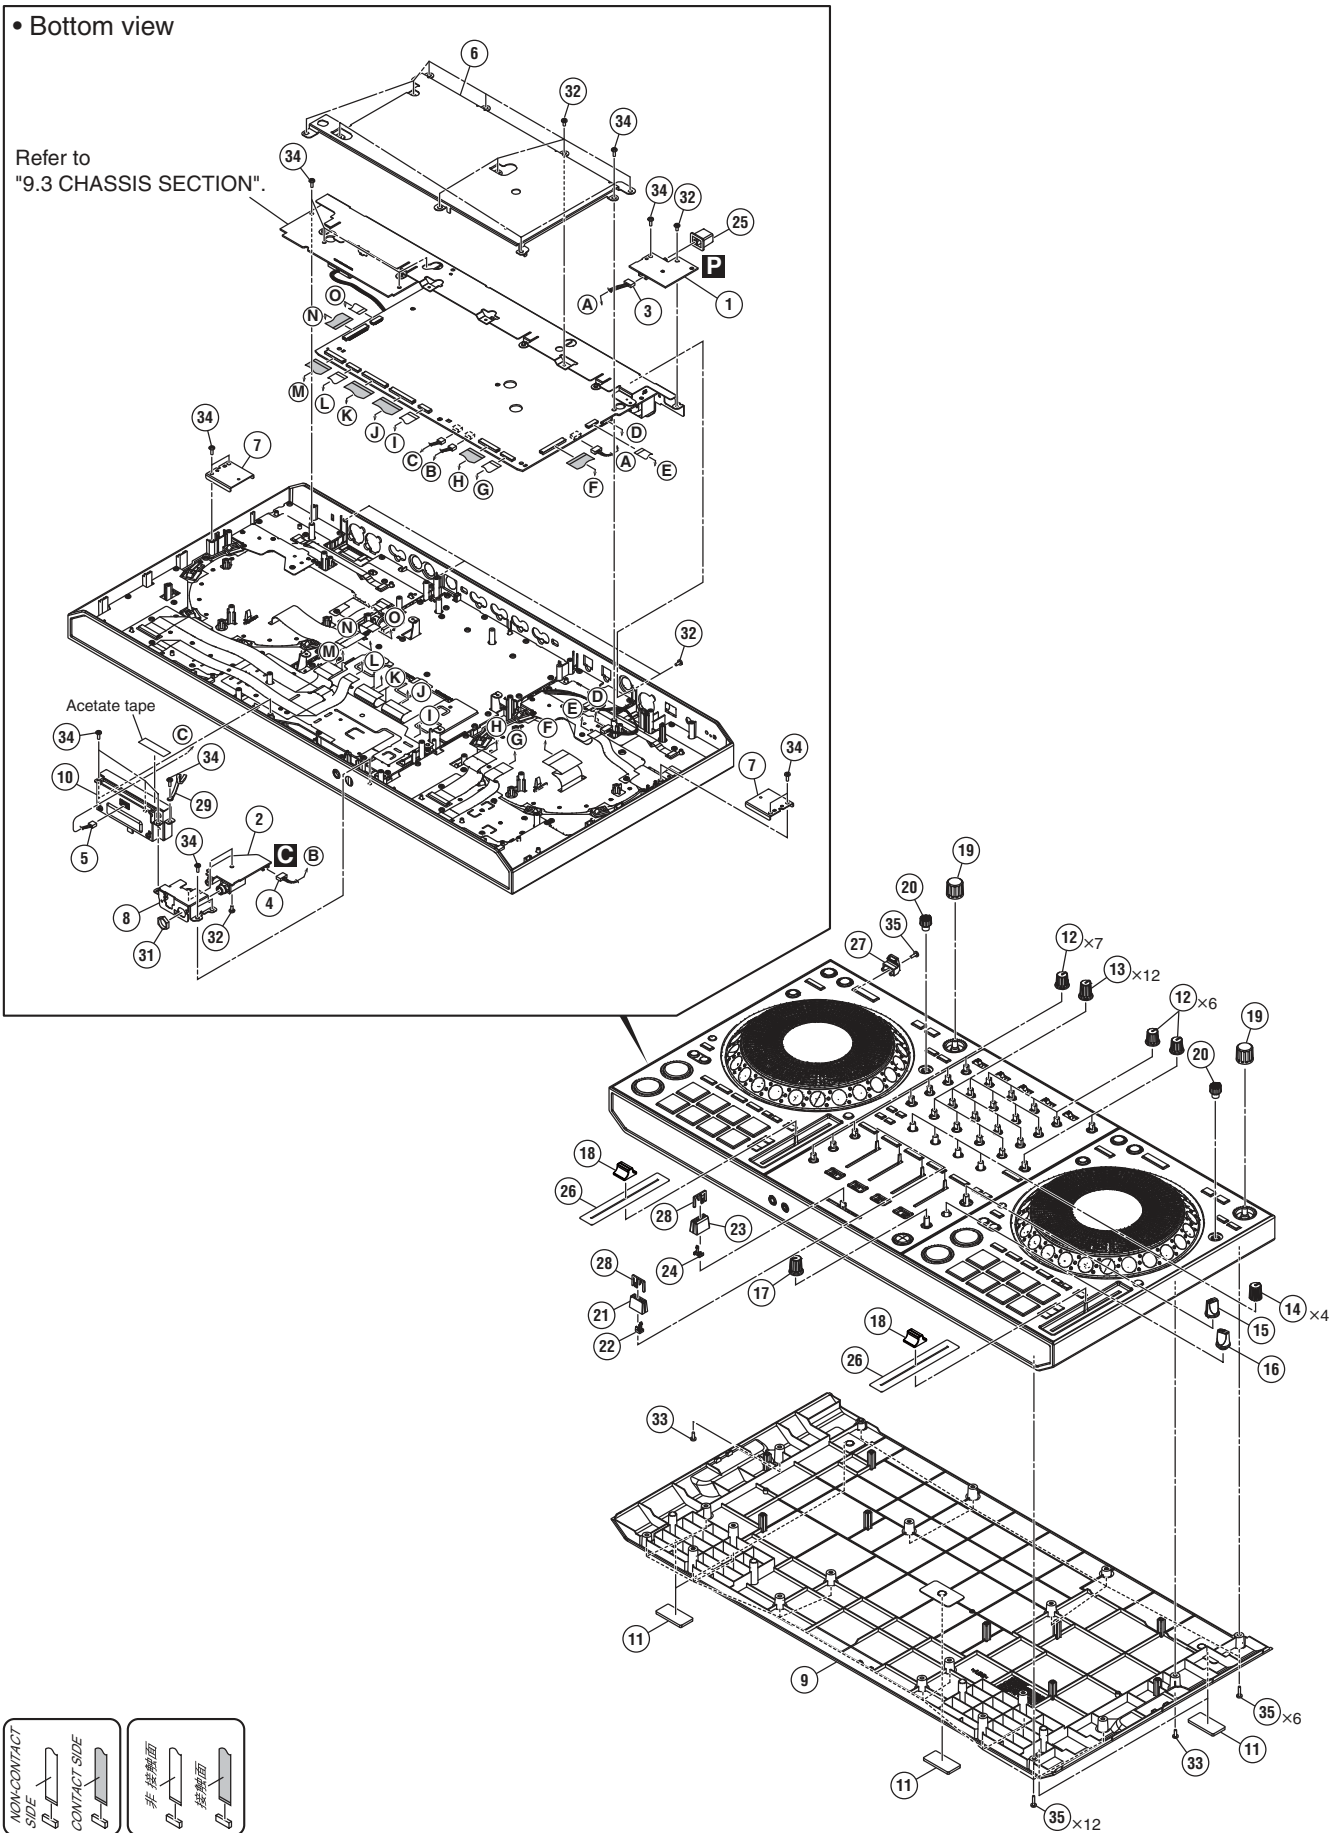

(1) BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 PSWB Assy	DWX4114
	2 HPJK Assy	DWX4116
	3 Connector Assy (05P)	PF05PP-D12
	4 Connector Assy	PF04PP-D10
	5 Connector Assy	PF03PP-B22
B	6 Shield Plate	DNH3342
	7 Stay	DNH3351
	8 Stay	DNH3348
	9 Chassis	DNK6747
	10 Cross Fader Service Assy	DEA1088
C	11 Sheet/LEG	DEC3534
	12 Knob	DAA1360
	13 Knob	DAA1361
	14 Knob	DAA1386
	15 Select Knob	DAA1205
D	16 FX SEL Knob	DAA1213
	17 Knob	DAA1368
	18 Knob/SLD	DNK5981
	19 Dial Knob	DAA1246
	20 Adjust Knob Black	DAC2528
E	21 Slider Knob 1	DAC2684
	22 Stopper/SLD	DNK6009
	23 Knob	DAC3238
	24 Stopper	DNK6440
	25 Power Knob	DAC2306
F	26 Slide Sheet 1C	DAH2404
	27 Cord Hook	DNK6755
	28 Slider Knob 2	DAC2685
	29 Cord Clamper (Steel)	RNH-184
	30 •••••	
	31 Nut M12	DBN1018
	32 Screw	BBZ30P060FTB
	33 Screw	BBZ30P080FTB
	34 Screw	BPZ30P080FNI
	35 Screw	BPZ30P120FTB

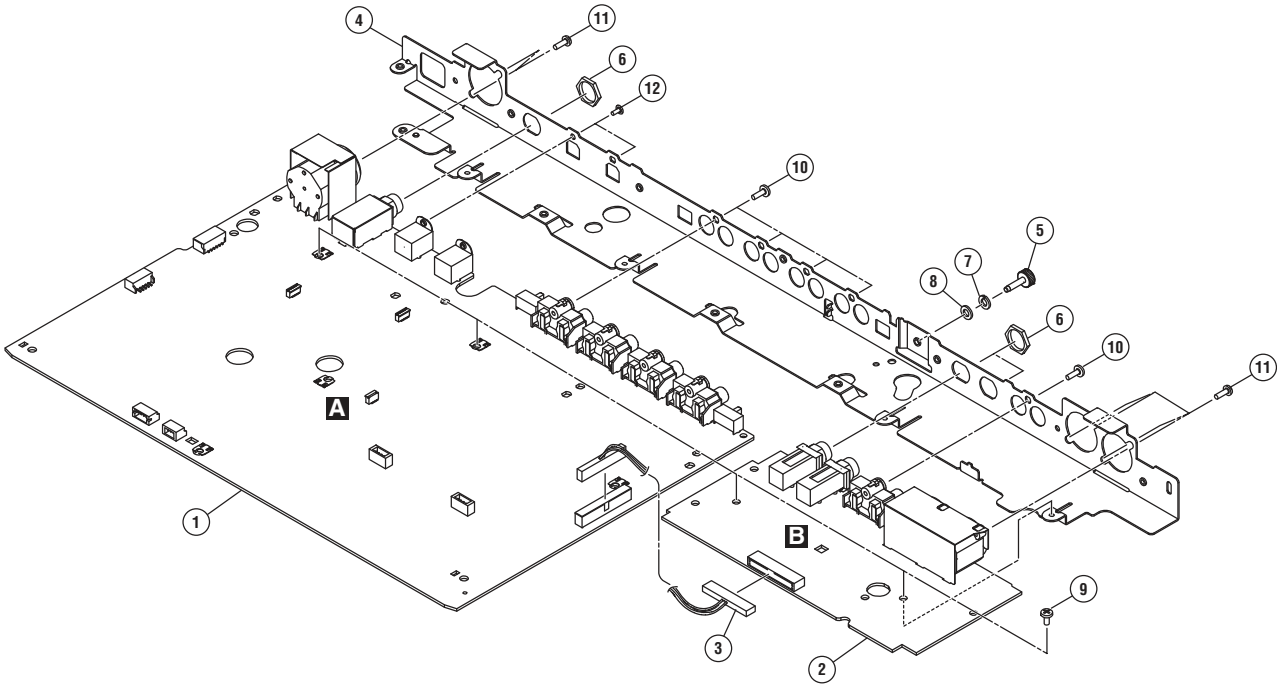


CHASSIS and CROSSFADER SECTION PARTS LIST

Mark No.	Description	Part No.
1	MAIN Assy	DWX4104
2	MOUT Assy	DWX4115
3	Crimp Connector	PF16PP-D15
4	Stay	DNH3341
5	Earth Terminal	DKE1015
6	Nut	NKX2FTC
7	Spring Lock Washer	WS40FNI
8	Washer	WA32F100Q050
9	Screw	BBZ30P060FTB
10	Screw	BPZ30P080FTB
11	Screw	PPZ30P080FTB
12	Screw (M3*5)	DBA1340


9.4 CONTROL PANEL SECTION (1/2)

A

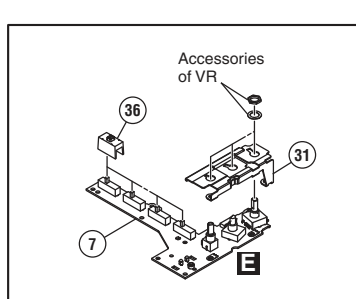


• Bottom view

B

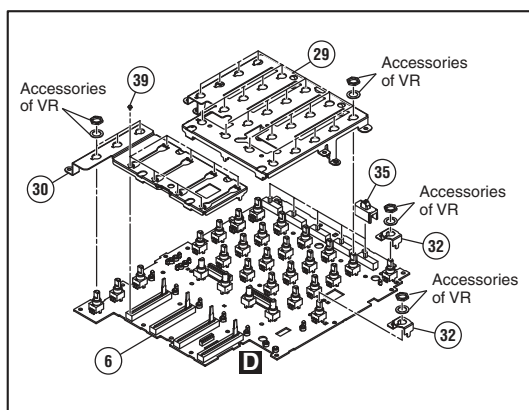


C

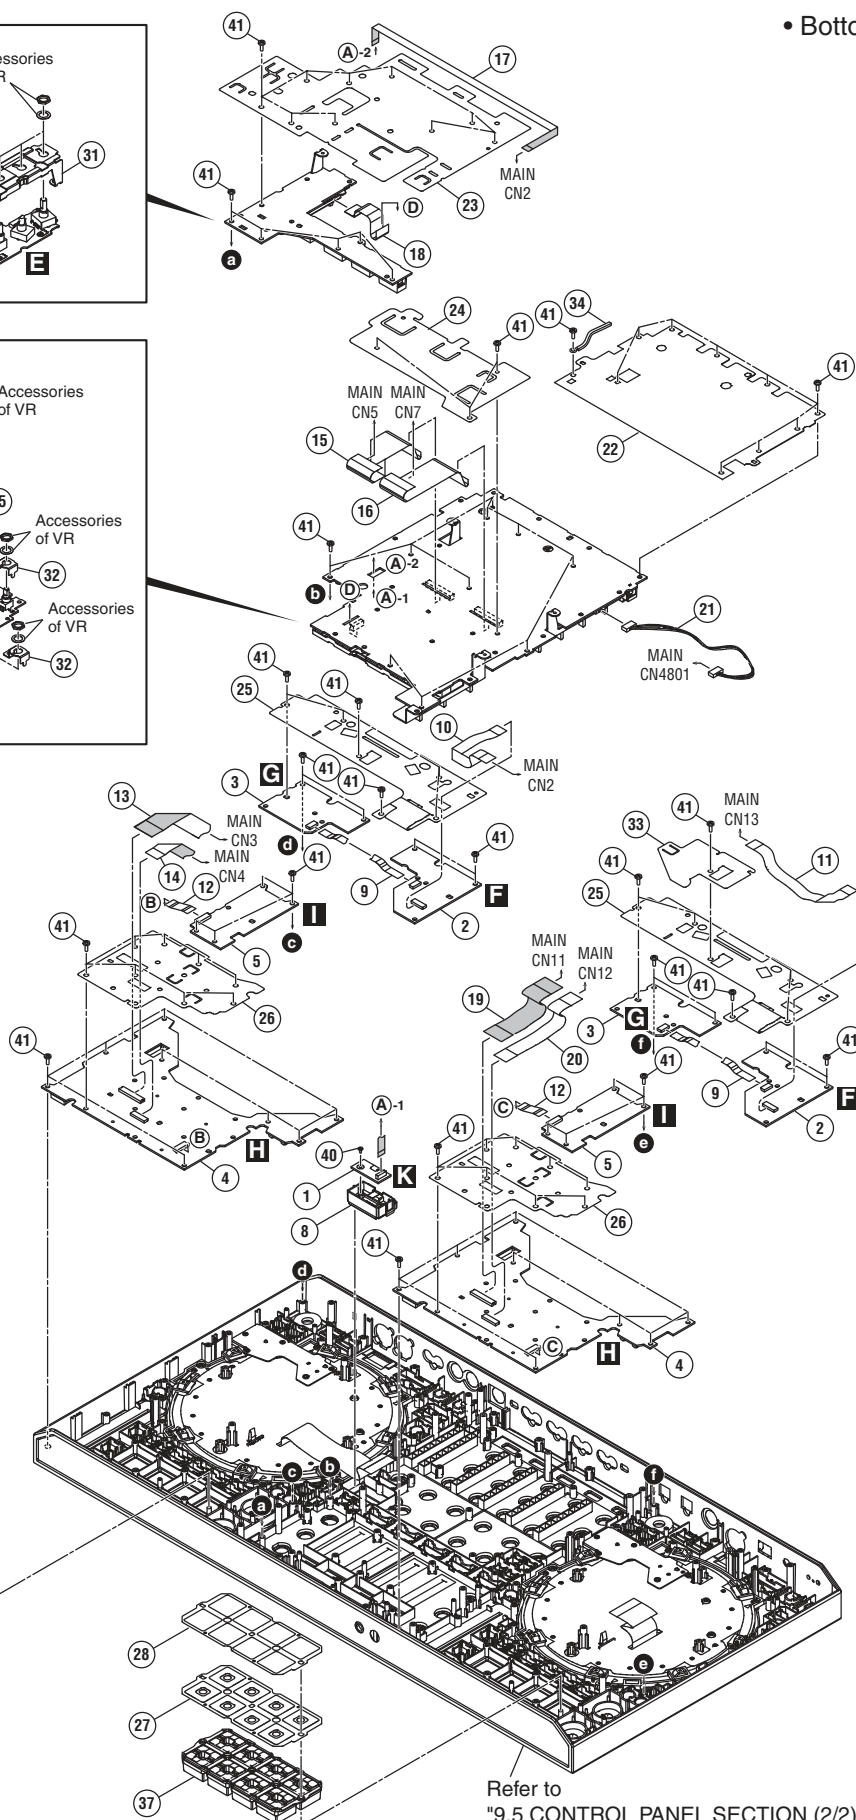

D

E

 F




CONTROL PANEL SECTION (1/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	OLED Assy	DWX4106	
2	LOOP Assy	DWX4108	A
3	BRWS Assy	DWX4109	
4	PADB Assy	DWX4110	
5	PLAY Assy	DWX4111	
6	MIXER Assy	DWX4112	■
7	BFXB Assy	DWX4117	
8	OLED Assy (Service)	DEA1084	
9	FFC	DDD1831	
10	FFC	DDD1832	
11	FFC	DDD1833	B
12	FFC	DDD1834	
13	FFC	DDD1835	
14	FFC	DDD1836	
15	FFC	DDD1839	
16	FFC	DDD1840	■
17	FFC	DDD1841	
18	FFC	DDD1842	
19	FFC	DDD1844	
20	FFC	DDD1845	C
21	Shielded Conn-Cable	DDA1082	
22	I-Shield Sheet	DEC3765	
23	Sheet	DEC3770	
24	Sheet	DEC3771	
25	Sheet	DEC3772	■
26	Sheet	DEC3773	
27	Sheet	DEC3774	
28	Spacer	DEC3775	
29	Stay	DNH3343	D
30	Stay	DNH3346	
31	Stay	DNH3347	
32	Stay	DNF2039	
33	Sheet	DEC3780	■
34	Cord Clamper (Steel)	RNH-184	
35	SW Cap	DAC2753	
36	Slide SW Cap (W)	DAC2401	
37	Button	DEB2059	
38			E
39	Screw	PMH20P040FTC	
40	Screw	BPZ20P040FTB	
41	Screw	BPZ30P080FNI	■



9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

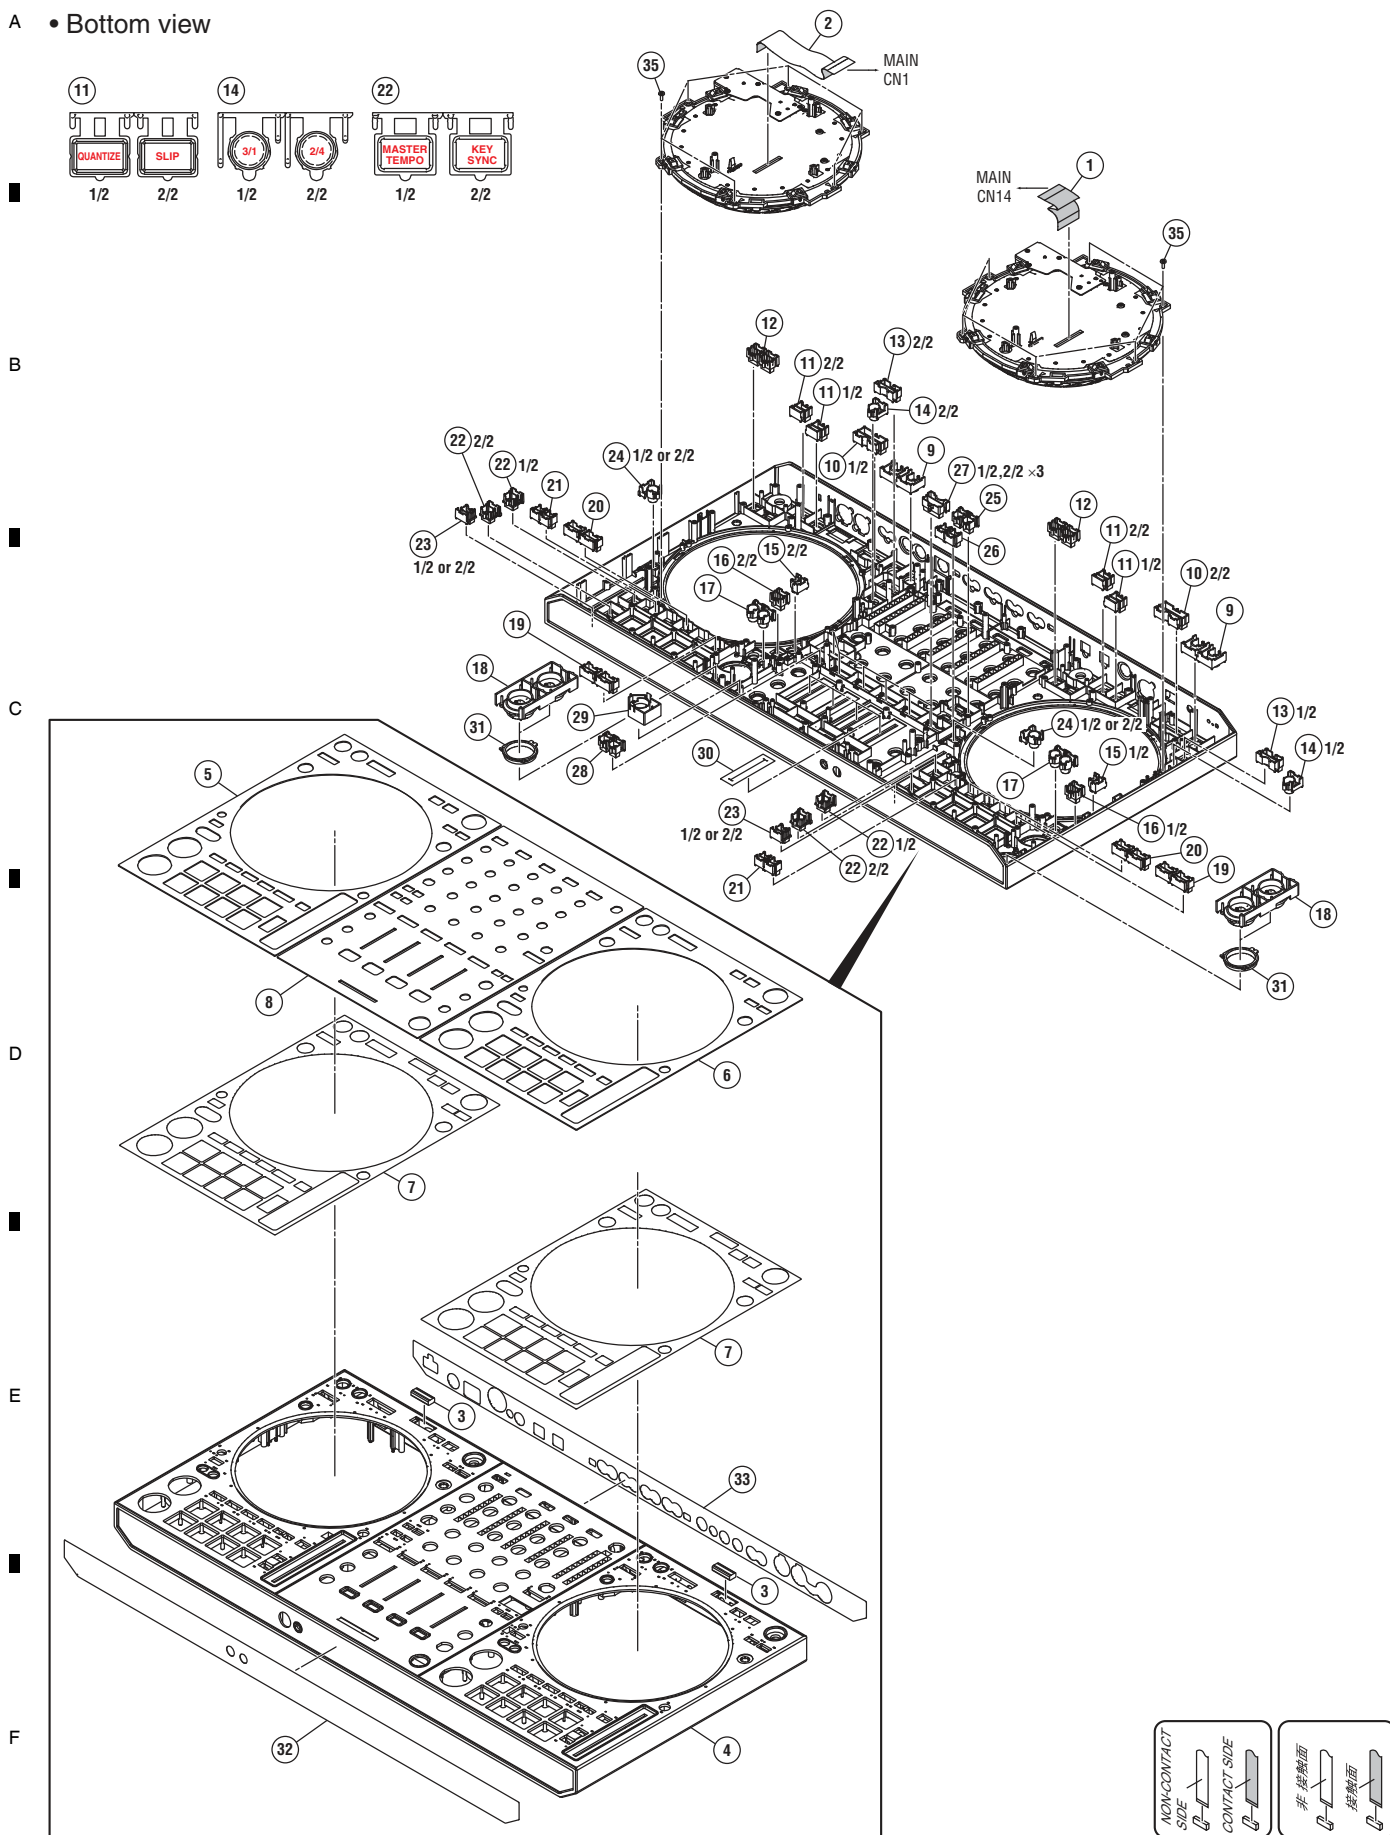

(1) CONTROL PANEL SECTION (2/2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	FFC	DDD1837	21	Button	DAC3366	
2	FFC	DDD1838	22	Button	DAC3367	A
3	EMC Gasket	DEC3766	23	Button	DAC3368	
⚠ 4	Control Panel	DNK6746	24	Button	DAC3369	
5	Plate	DAH3190	25	Button	DAC3370	
6	Plate	DAH3191	26	Button	DAC3371	■
7	DS Tape	DEH1095	27	Button	DAC3219	
8	Plate	DAH3186	28	Button	DAC3372	
9	Button/LOP	DAC3074	29	Button	DAC3141	
10	Button	DAC3356	30	Fader Packing	DEC3355	
11	Button	DAC3357	31	Ring Lens (PLAY)	DNK5315	B
12	Button	DAC3358	32	Sheet	DEC3763	
13	Button	DAC3359	33	Sheet	See Contrast table (2)	
14	Button	DAC3360	34	•••••		
15	Button	DAC3361	35	Screw	BPZ30P080FNI	
16	Button	DAC3362				■
17	Button	DAC3363				
18	Button	DXB2189				
19	Button	DAC3364				
20	Button	DAC3365				C

(2) CONTRAST TABLE

DDJ-1000/FWLPWXJ, SYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-1000 /FWLPWXJ	DDJ-1000 /SYXJ	DDJ-1000 /UXJCB	DDJ-1000 /XJCN
	33	Sheet	DEC3800	DEC3800	DEC3800	DEC3801

D

■

E

■

F

4



JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	LCDL Assy	DWX4105	
2	LCDR Assy	DWX4118	A
3	JOGL Assy	DWX4113	
4	JOGR Assy	DWX4119	
5	TFT LCD	DWX4141	
6	Sheet SW	DSX1078	■
7	FFC	DDD1843	
8	Holder	DNK6745	
9	Roller	DXB2178	
10	Stay Assy/JOG	DXB2133	
11	JOG Plate	DAH2679	B
12	JOG Dial A Assy	DXA2159	
13	JOG B	DNK4068	
14	Encoder Spring	DBH1710	
15	Plate	DEC3700	■
16	Gear/A	DNK6143	
17	Gear/B	DNK6144	
18	SW Spring	DBH1681	
19	SW Cushion HH48/2	DEC2538	
20	Cushion/RNG	DEC3466	C
21	SW Ring	DNK5233	
22	Coil Spring/LD	DBH1798	
23	Leaf Spring/ADJ	DBK1376	
24	Washer	DEC3137	
25	Smoother	DNK5237	■
26	Comp Plate	DNK5243	
27	Adjust Plate	DNK5300	
28	Cam Plate	DNK5301	
29	Dial Gear	DNK5302	
30	Link Gear A	DNK5303	D
31	Link Gear B	DNK5304	
32	Plate	DNK6748	
33	Gear/LD	DNK6145	■
34	Plate	DNH3345	
35	Window	DAH3189	
36	Holder	DNK6749	
37	Sheet	DEC3768	
38	Sheet	DEC3779	E
39	Barrier	DEC3798	
40	Barrier	DEC3799	
41			
42	Screw (FE)	DBA1265	■
43	Screw	BPZ20P100FTC	
44	Screw	BPZ30P080FNI	
45	Screw	IPZ20P060FTC	