


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

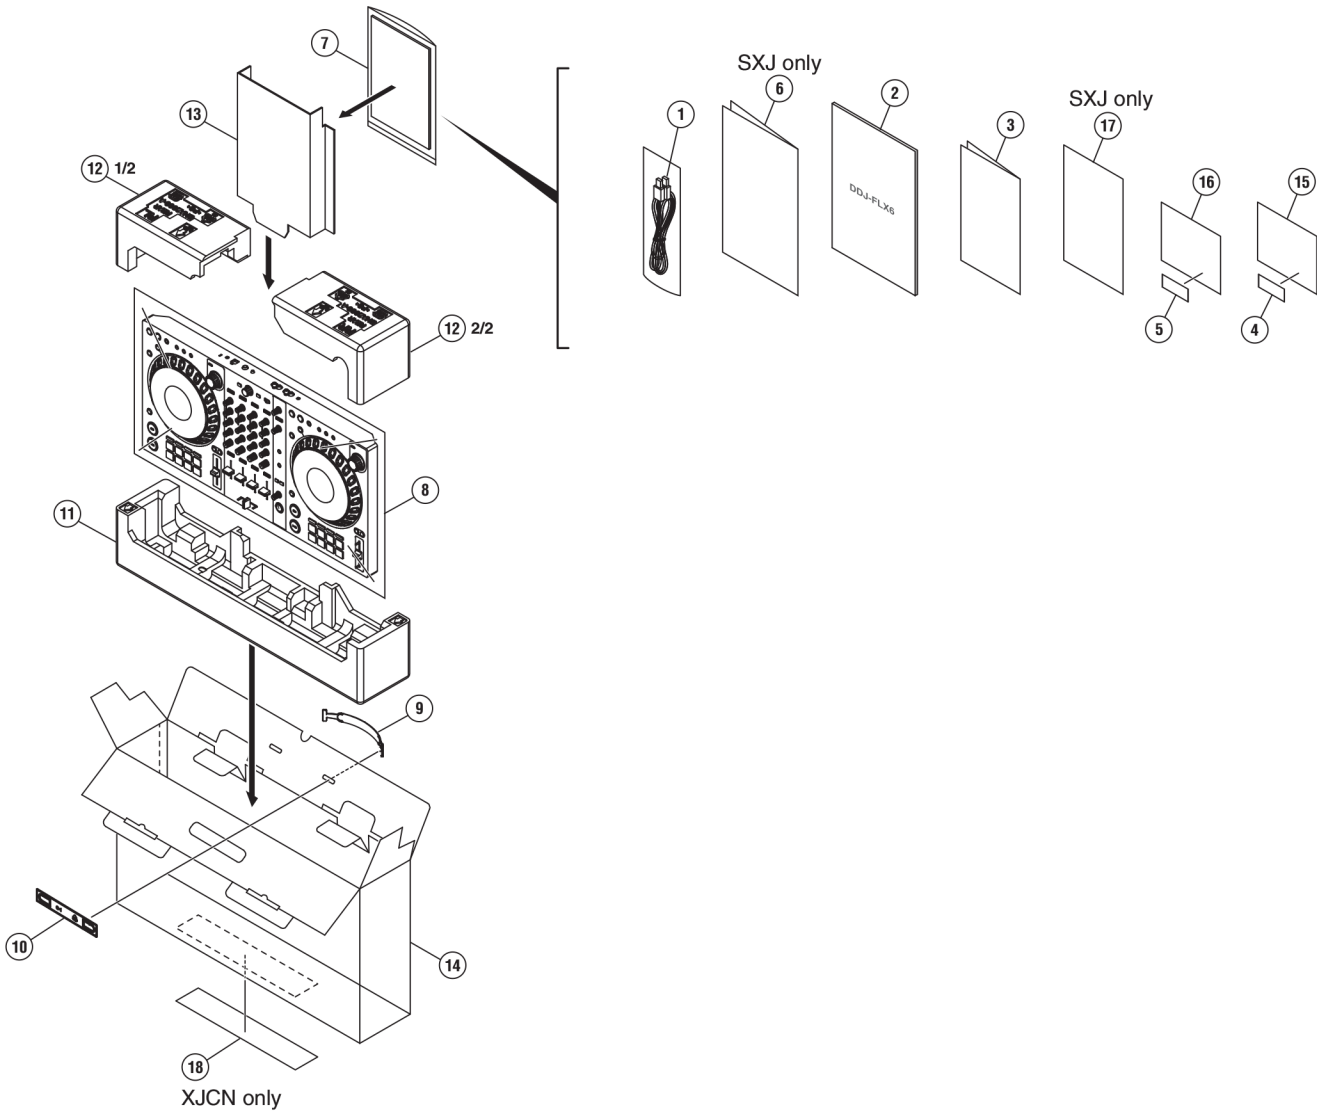

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
	1 USB Cable	DDE1150
	2 Quick Start Guide	See Contrast table (2)
	3 Precautions for use	See Contrast table (2)
NSP	4 Serato P'nT voucher	•••••
NSP	5 Serato FX voucher	•••••
NSP	6 Warranty card	See Contrast table (2)
NSP	7 Polyethylene Bag	AHG7117
	8 Packing Sheet	RHC1023
	9 Handle	DEC3783
	10 Spacer	DEC3784
	11 Packing Pad	DHA2008
	12 Packing Pad	DHA2009
	13 Partition	DHC1107
	14 Packing Case	DHG3797
NSP	15 Leaflet	DRM1434
NSP	16 Leaflet	DRM1442
NSP	17 Leaflet	See Contrast table (2)
	18 Label	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-FLX6/SXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-FLX6/SXJ	DDJ-FLX6/XJCN
	2	Quick Start Guide	DRH1607	DRH1608
	3	Precautions for use	DRH1609	DRH1610
NSP	6	Warranty card	DRY1274	Not used
NSP	17	Leaflet	DRH1622	Not used
	18	Label	Not used	DRW2986

9.2 EXTERIOR and CHASSIS SECTION

A


B

C



D

E

F

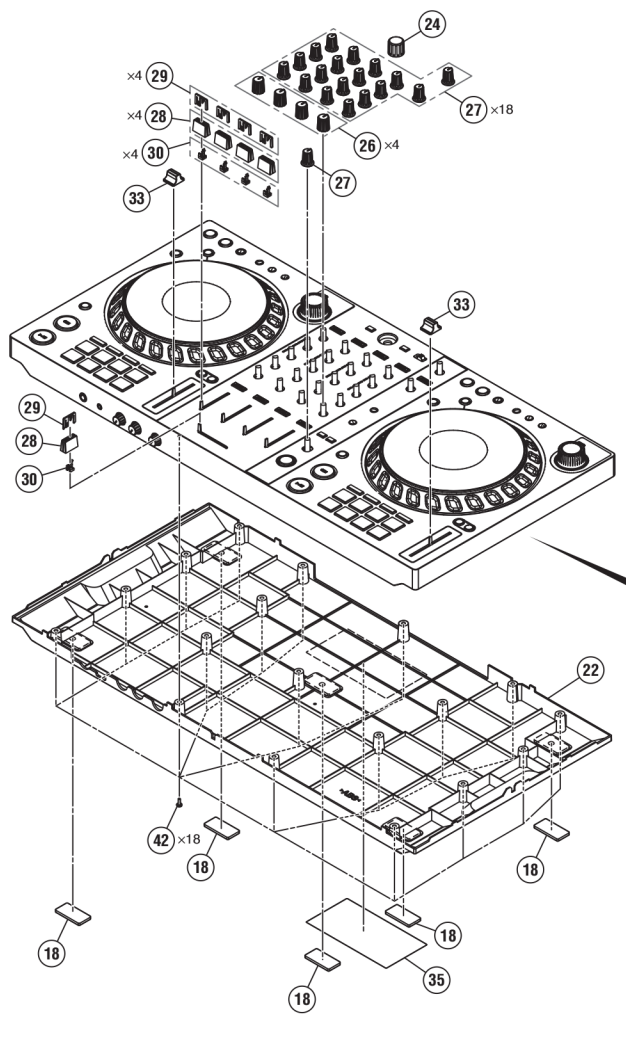

• Bottom view

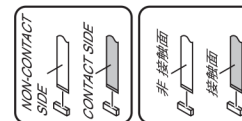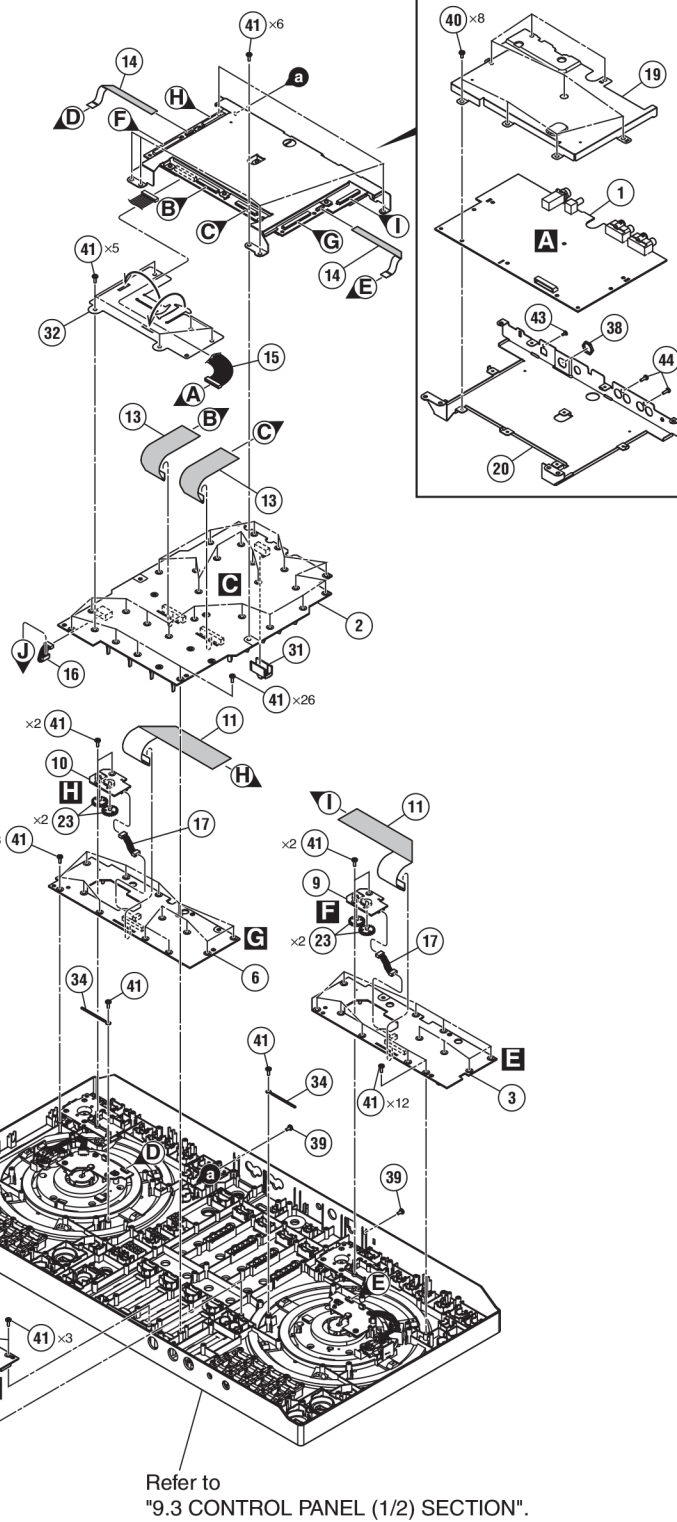

(1) EXTERIOR and CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWX4488	26	Knob	DAA1450
2	MIXER Assy	DWX4489	27	Knob	DAA1452
3	DCKL Assy	DWX4494	28	Knob	DAC3539
4	PADL Assy	DWX4495	29	Slider Knob 2	DAC2685
5	HPJK Assy	DWX4496	30	Stopper/SLD	DNK6009
6	DCKR Assy	DWX4497	31	SW Cap	DAC2753
7	PADR Assy	DWX4498	32	Sheet	DEC3961
8	CRFD Assy	DWX4499	33	Knob	DNK6769
9	TRN1 Assy	DWX4503	34	Cord Clamper	DEX1025
10	TRN2 Assy	DWX4504	NSP 35	Name Label	See Contrast table (2)
11	FFC	DDD1982	36	•••••	
12	FFC	DDD1983	37	Nut M12	DBN1018
13	FFC	DDD1984	38	Nut (M12)	NKX2FNI
14	FFC	DDD1985	39	Screw	BBZ30P060FTB
15	Parallel Jumper	PF11PP-B30A	40	Screw	BBZ30P060FTC
16	Parallel Jumper	PF05PP-B07A	41	Screw	BPZ30P080FNI
17	Connector Assy	PF04PP-B05	42	Screw	BPZ30P100FTB
18	Sheet/Leg	DEC3534	43	Screw (M3*5)	DBA1340
19	Shield Plate	DNH3459	44	Screw	PPZ30P080FTB
20	Stay	DNH3460			
21	Stay	DNH3461			
22	Chassis	DNK6954			
23	Gear	DNK6952			
24	Knob	DAA1281			
25	Knob	DAA1432			

(2) CONTRAST TABLE

DDJ-FLX6/SXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-FLX6/SXJ	DDJ-FLX6/XJCN
NSP	35	Name Label	DAL1372	DAL1373

4

F



CONTROL PANEL (1/2) SECTION PARTS LIST


Mark No.	Description	Part No.	
1	TCHL Assy	DWX4492	
2	TCHR Assy	DWX4493	A
3	JOGRT1 Assy	DWX4501	
4	JOGRT2 Assy	DWX4502	
5	Knob	DAA1451	
6	Button	DAC3553	
7	Coil Spring	DBH1833	
8	Coil Spring	DBH1834	
9	Light-D Sheet	DEC3974	
10	Base	DNK6947	
11	Shaft	DNK6948	B
12	Cap	DNK6949	
13	Lens	DNK6950	
14	Spacer	DNK6951	
15	Load Spring	DBH1676	
16	Plate	DEC3700	
17	Gear	DNK6942	
18	Adjuster	DNK6956	
19	Sheet	DEC3979	
20	Button/TMP	DAC2845	C
21	Button/BCK	DAC2874	
22	Button/CAL	DAC3020	
23	Button/LOP	DAC3074	
24	Button	DAC3381	
25	Button	DAC3428	
26	Button	DAC3433	
27	Button	DAC3554	
28	Button	DAC3555	
29	Button	DAC3556	D
30	Button	DAC3557	
31	Button	DAC3558	
32	Button	DAC3559	
33	Button	DAC3569	
34	Button	DEB2080	
35	Packing/TMP	DEC3392	
36	Sheet	DEC3795	
37	Lens	DNK6946	
38	Holder	VEC1355	E
39	•••••		
40	Washer	WA41D070D025	
41	Screw	BPZ30P080FNI	
42	Screw	BPZ20P060FTC	
43	Screw	BPZ26P080FTC	
44	Screw (FE)	DBA1265	F

9.4 CONTROL PANEL (2/2) SECTION

A Refer to "7. DISASSEMBLY"



Lubricating oil

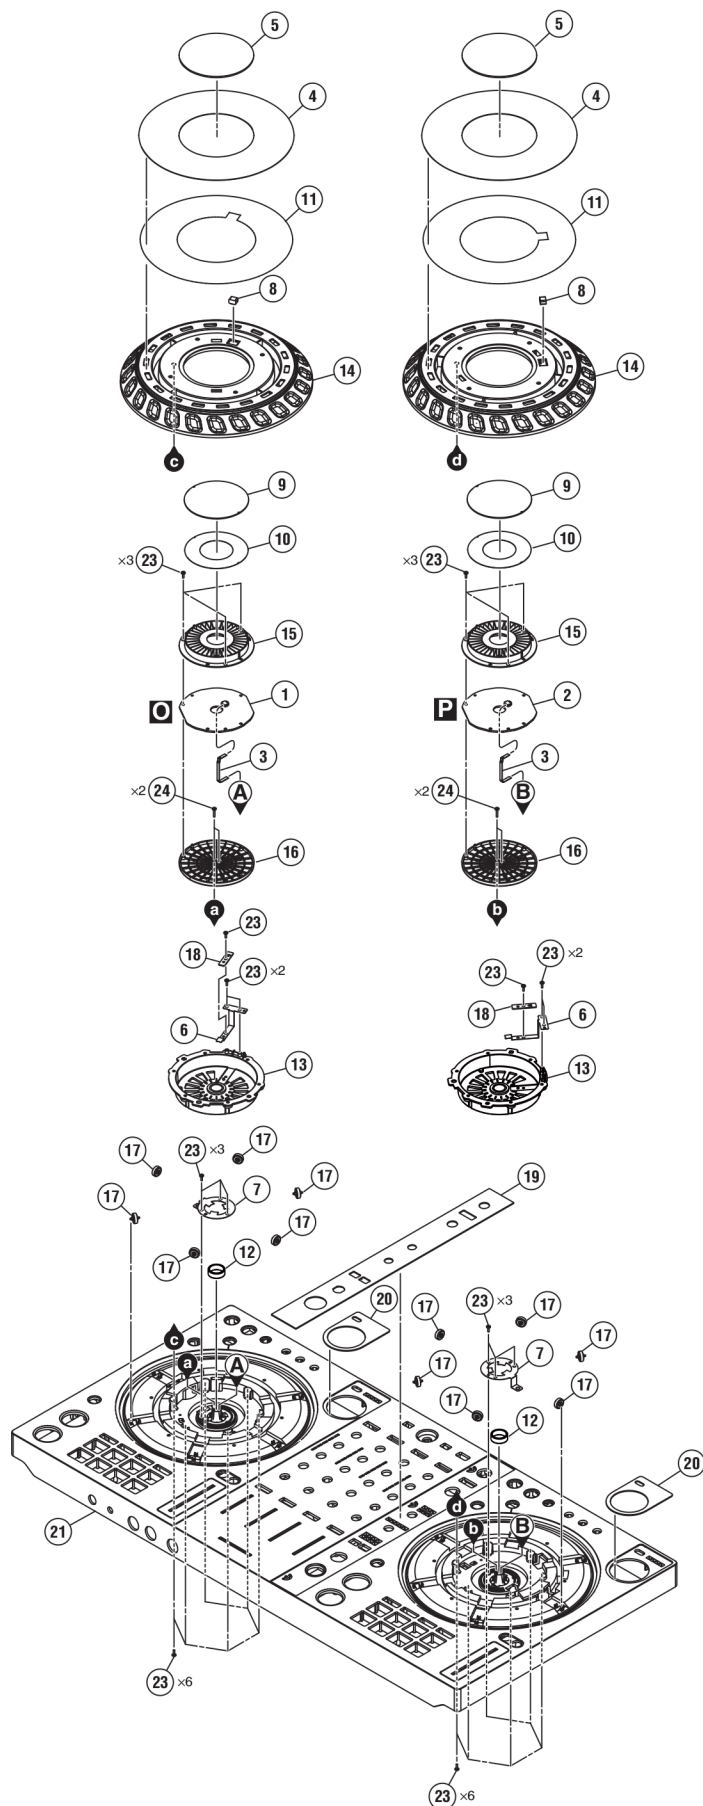

CONTROL PANEL (2/2) SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JLEDL Assy	DWX4490	A
2	JLEDR Assy	DWX4491	
3	FFC	DDD1986	
4	Plate	DAH3306	
5	Window	DAH3307	
6	Leaf Spring	DBK1399	
7	Plate	DBK1400	
8	Gasket/JOG	DEC3562	
9	Sheet	DEC3952	
10	Light-D Sheet	DEC3953	
11	DS Tape	DEH1112	B
12	Sleeve	DLA2278	
13	Jog Dial	DNK6939	
14	Jog Dial	DNK6940	
15	Reflector	DNK6941	
16	Holder	DNK6958	
17	Roller	DXB2178	
18	Plate	DNH3465	
19	Panel	DAH3315	
20	Plate	DAH3316	
21	Control Panel	DNK6953	C
22	•••••		
23	Screw	BPZ20P060FTC	
24	Screw	BPZ20P100FTC	

