

△

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

F



(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power cord	See Contrast table (2)	11	Packing Pad	DHA2032
⚠	2 AC adapter	DWR1599	12	Packing Case	DHG3865
	3 USB cable	DDE1158	13	Partition	DHC1114
	4 Quick Start Guide	See Contrast table (2)	14	Handle	DEC3783
	5 Precautions for Use	See Contrast table (2)	15	Spacer	DEC3784
NSP	6 Leaflet	DRM1434	NSP	16 Warranty	See Contrast table (2)
NSP	7 Serato Pitch 'n Time DJ voucher	•••••	NSP	17 Label	See Contrast table (2)
NSP	8 Polyethylene Bag	AHG7117	NSP	18 Label	See Contrast table (2)
	9 Mirror Mat (1200*1000)	DHL1169			
	10 Packing Pad	DHA2031			

(2) CONTRAST TABLE

DDJ-FLX10/LSYXJ, CUXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-FLX10/LSYXJ	DDJ-FLX10/CUXJ	DDJ-FLX10/XJCN
⚠	1	Power cord	ADG1154	XDG3052	ADG7079
	4	Quick Start Guide	DRH1725	DRH1725	DRH1726
	5	Precautions for Use	DRH1727	DRH1727	DRH1729
NSP	16	Warranty	DRY1274	Not used	Not used
NSP	17	Label	Not used	DRW3047	Not used
NSP	18	Label	Not used	Not used	DRW3045

9.2 EXTERIOR SECTION

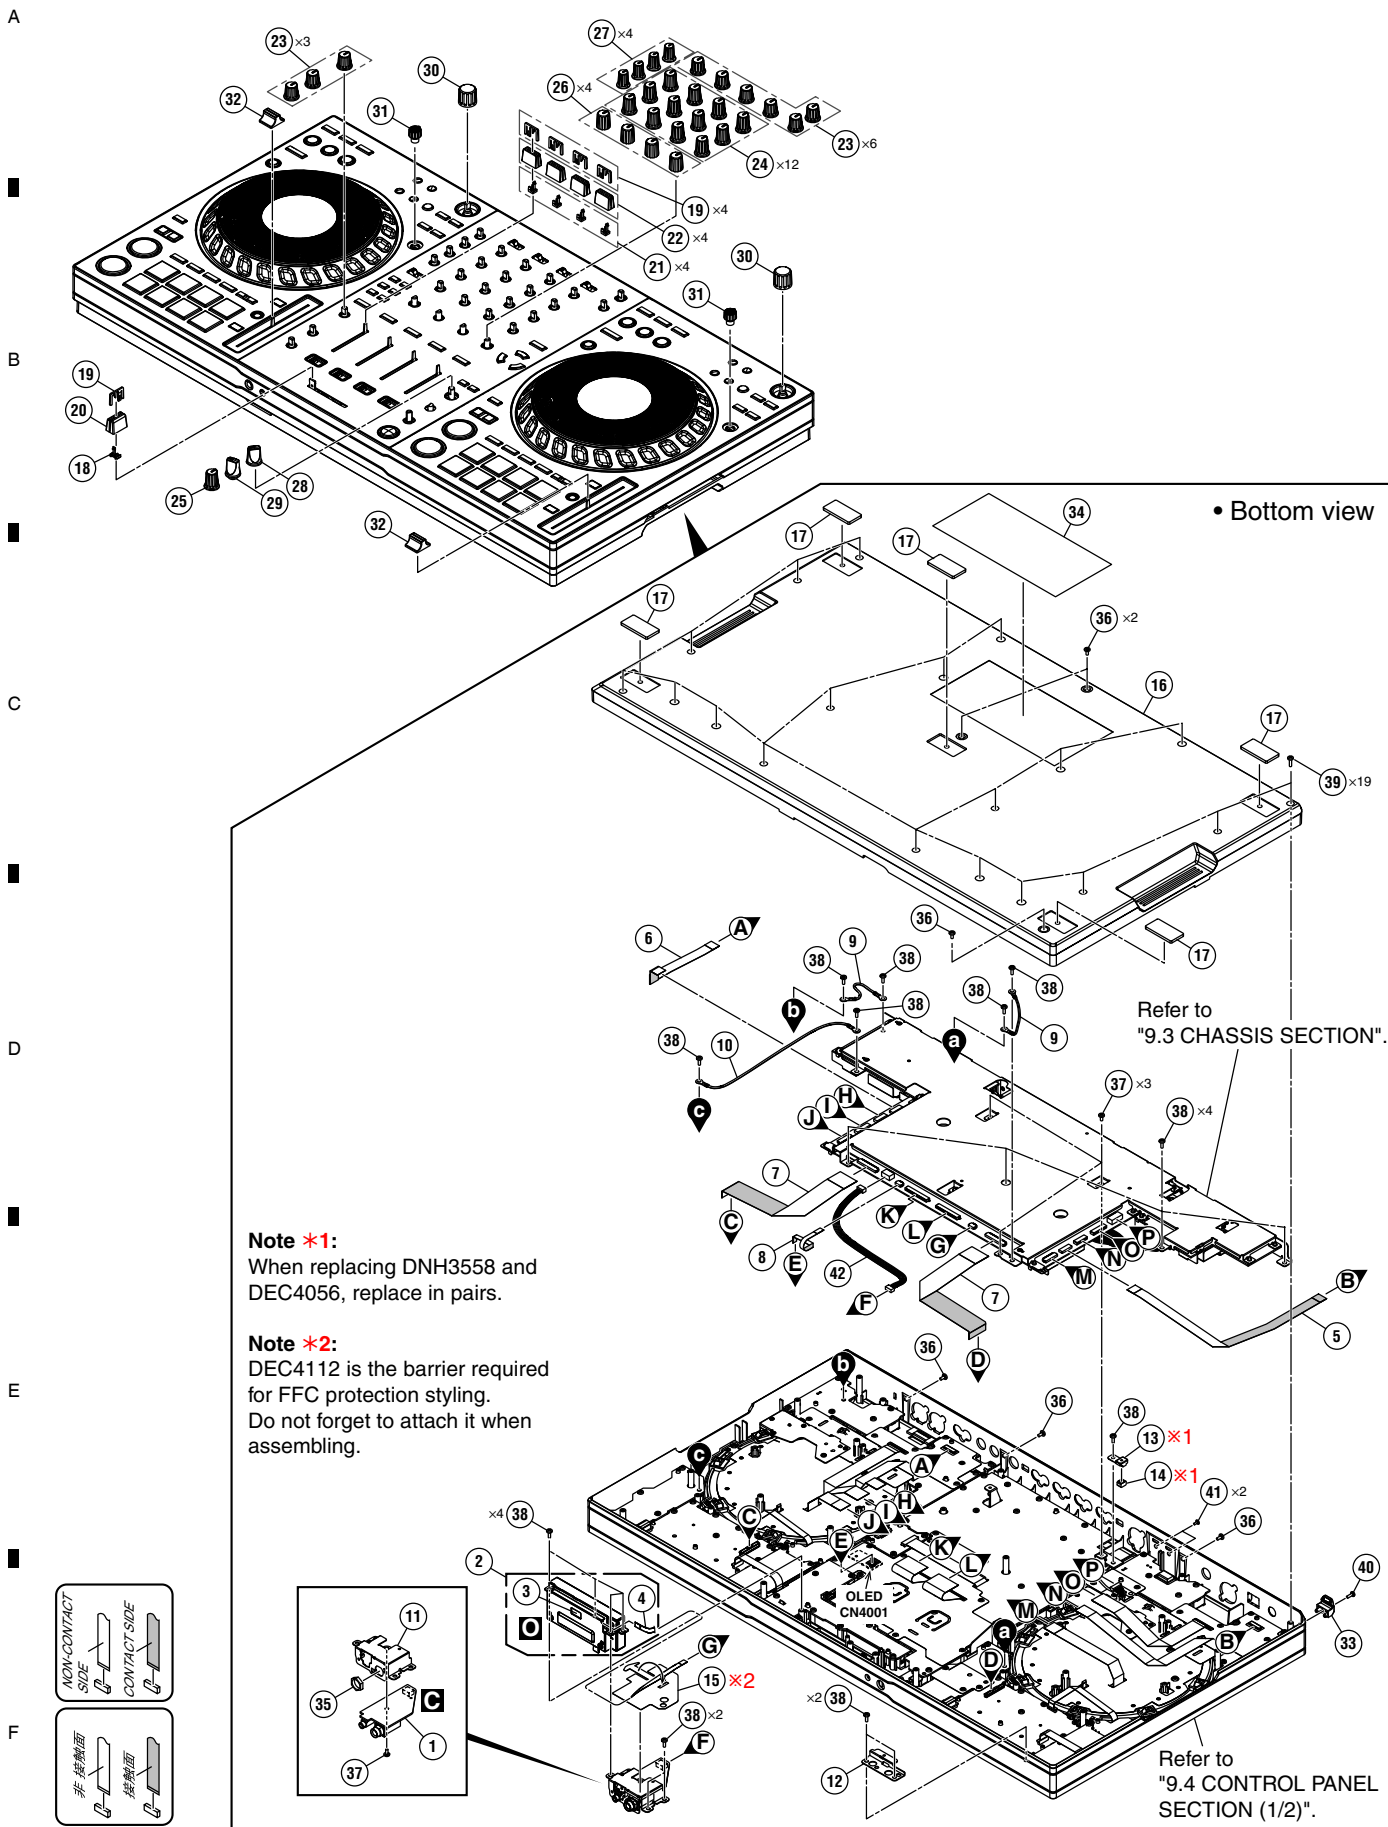

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	HPJK Assy	DWX4844	21	Stopper/SLD	DNK6009
2	1..Crossfader Service Assy	DEA1153	22	Knob	DAC3539
NSP 3	2..CRFB Assy	DWX4835	23	Knob	DAA1432
4	2..FFC	DDD2135	24	Knob	DAA1433
5	FFC	DDD2121	25	Knob	DAA1434
6	FFC	DDD2154	26	Knob	DAA1386
7	FFC	DDD2125	27	Knob	DAA1409
8	FFC	DDD2130	28	Select Knob	DAA1205
9	Earth Lead Unit	DE005VC0	29	FX Sel Knob	DAA1213
10	Earth Lead Wire	DDX1297	30	Dial Knob	DAA1246
11	Stay	DNH3550	31	Knob	DAA1406
12	Stay	DNH3552	32	Knob/SLD	DNK5981
13	Stay	DNH3558	33	Hook	DNK6755
14	Gasket	DEC4056	NSP 34	Name Label	See Contrast table (2)
15	Barrier	DEC4112	35	Nut M12	DBN1018
⚠ 16	Chassis	DNK7112	36	Screw	BBZ30P060FTB
17	Sheet/LEG	DEC3534	37	Screw	BBZ30P060FTC
18	Stopper	DNK6440	38	Screw	BPZ30P080FNI
19	Slider Knob 2	DAC2685	39	Screw	BPZ30P100FTB
20	Knob	DAC3238	40	Screw	PPZ30P080FTB
			41	Screw (M3*5)	DBA1340
			42	Parallel Jumper	PF04HH-B20A

(2) CONTRAST TABLE

DDJ-FLX10/LSYXJ, CUXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-FLX10/LSYXJ	DDJ-FLX10/CUXJ	DDJ-FLX10/XJCN
NSP	34	Name Label	DAL1393	DAL1393	DAL1394

A

 

B

C

D

E

F

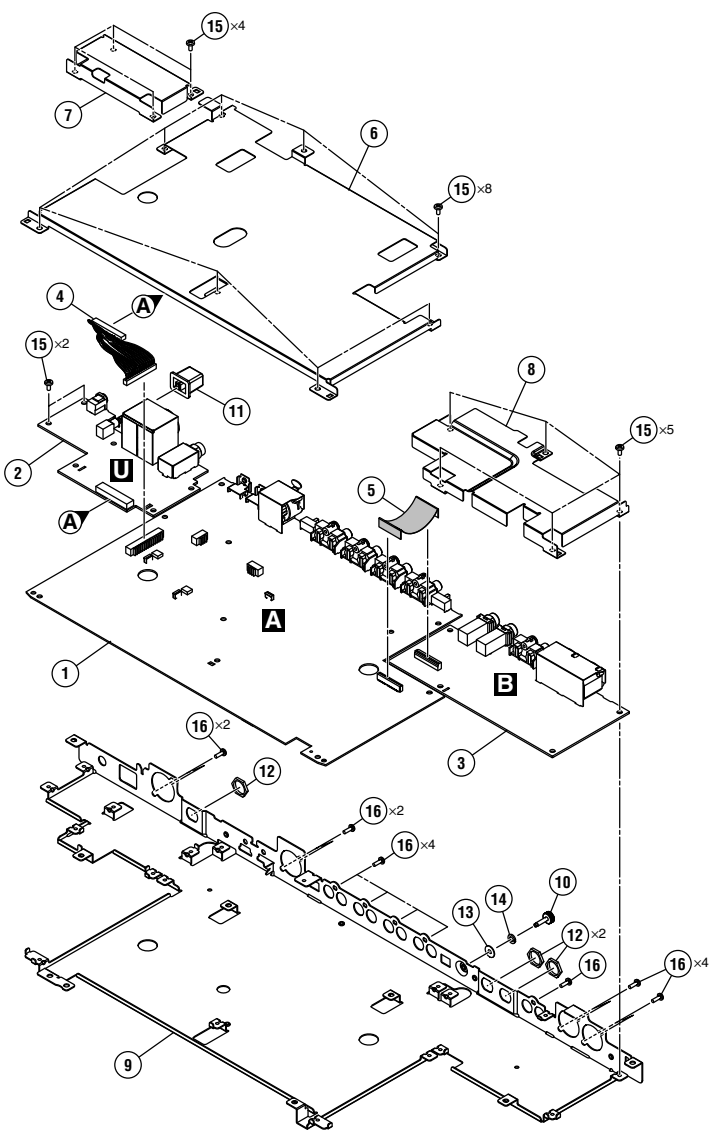


CHASSIS SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWX4824	11	Power Knob	DAC2306
2	PWSB Assy	DWX4842	12	Nut	NKX2FTC
3	MOUT Assy	DWX4843	13	Spring Lock Washer	WS40FNI
4	Parallel Jumper	PF16HH-D10A	14	Washer	WA32F100Q050
5	FFC	DDD1694	15	Screw	BBZ30P060FTC
6	Shield Plate	DNH3542	16	Screw	PPZ30P080FTB
7	Shield Plate	DNH3543			
8	Shield Plate	DNH3544			
9	Stay	DNH3551			
10	Earth Terminal	DKE1015			

9.4 CONTROL PANEL SECTION (1/2)

- Bottom view

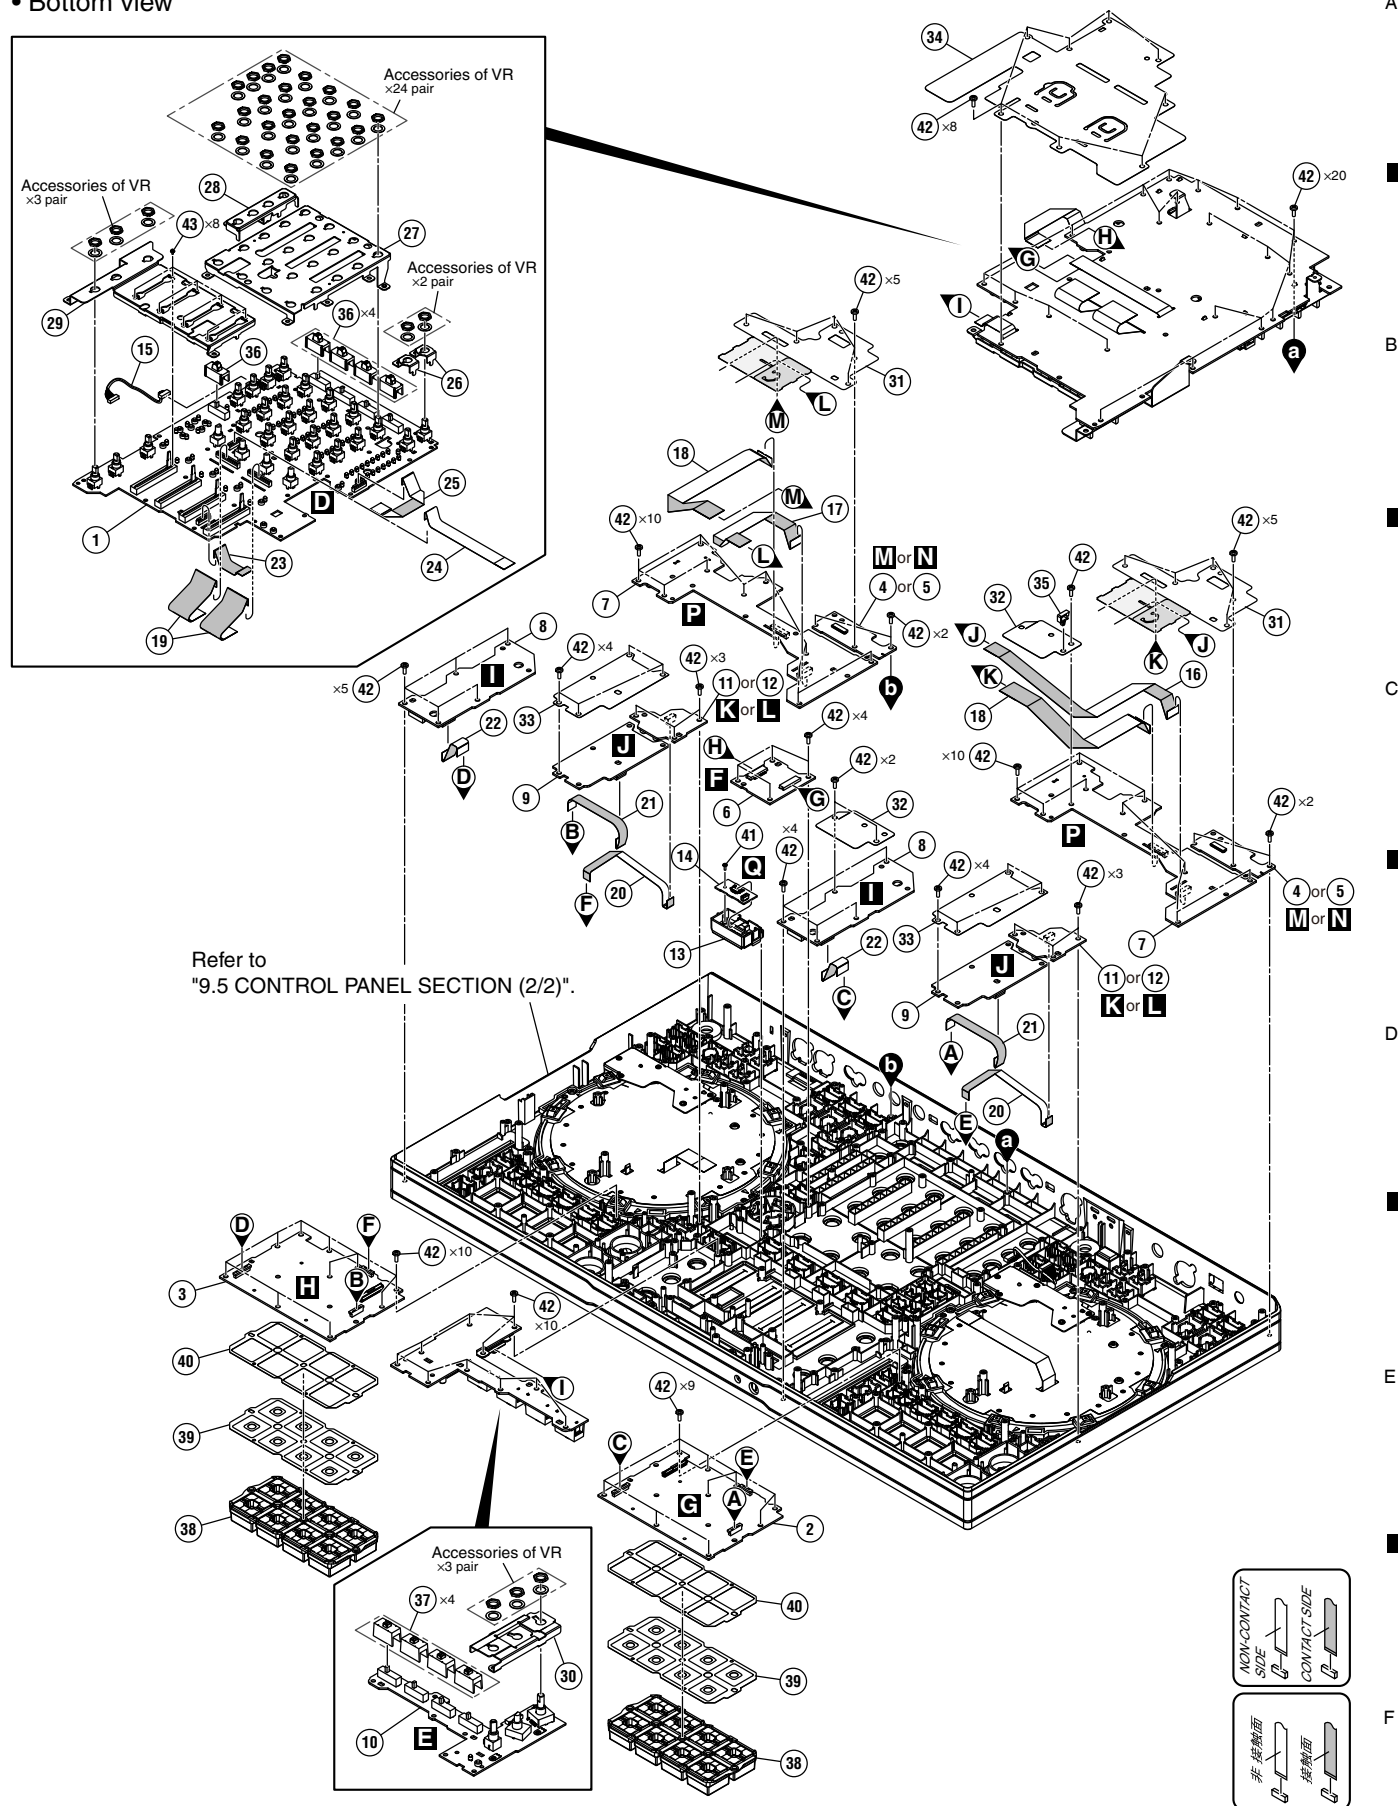


1 2 3 4

CONTROL PANEL SECTION (1/2) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MIXB Assy	DWX4829
	2	PAD1 Assy	DWX4830
	3	PAD2 Assy	DWX4831
	4	MUT1 Assy	DWX4832
	5	MUT2 Assy	DWX4833
	6	PART Assy	DWX4834
	7	BRWS Assy	DWX4836
	8	SLDB Assy	DWX4837
	9	PLAY Assy	DWX4838
	10	CHSW Assy	DWX4839
B	11	BJP1 Assy	DWX4840
	12	BJP2 Assy	DWX4841
	13	OLED Assy (Service)	DEA1084
	14	OLED Assy	DWX4825
	15	Shielded Conn-Cable	DDA1111
	16	FFC	DDD2126
	17	FFC	DDD2127
	18	FFC	DDD2128
	19	FFC	DDD1984
	20	FFC	DDD2131
C	21	FFC	DDD2132
	22	FFC	DDD2133
	23	FFC	DDD1842
	24	FFC	DDD2134
	25	FFC	DDD2153
	26	Stay	DNF2039
	27	Stay	DNH3546
	28	Stay	DNH3547
	29	Stay	DNH3548
	30	Stay	DNH3549
D	31	Barrier	DEC4071
	32	Barrier	DEC4072
	33	Barrier	DEC4073
	34	Barrier	DEC4074
	35	Locking Mini Clamp	DEC2439
	36	SW Cap	DAC2753
	37	Slide SW Cap (W)	DAC2401
	38	Button	DEB2075
	39	Sheet	DEC3774
	40	Spacer	DEC3775
E	41	Screw	BPZ20P040FTB
	42	Screw	BPZ30P080FNI
	43	Screw	PMH20P040FTC
F			

9.5 CONTROL PANEL SECTION (2/2)

• Bottom view

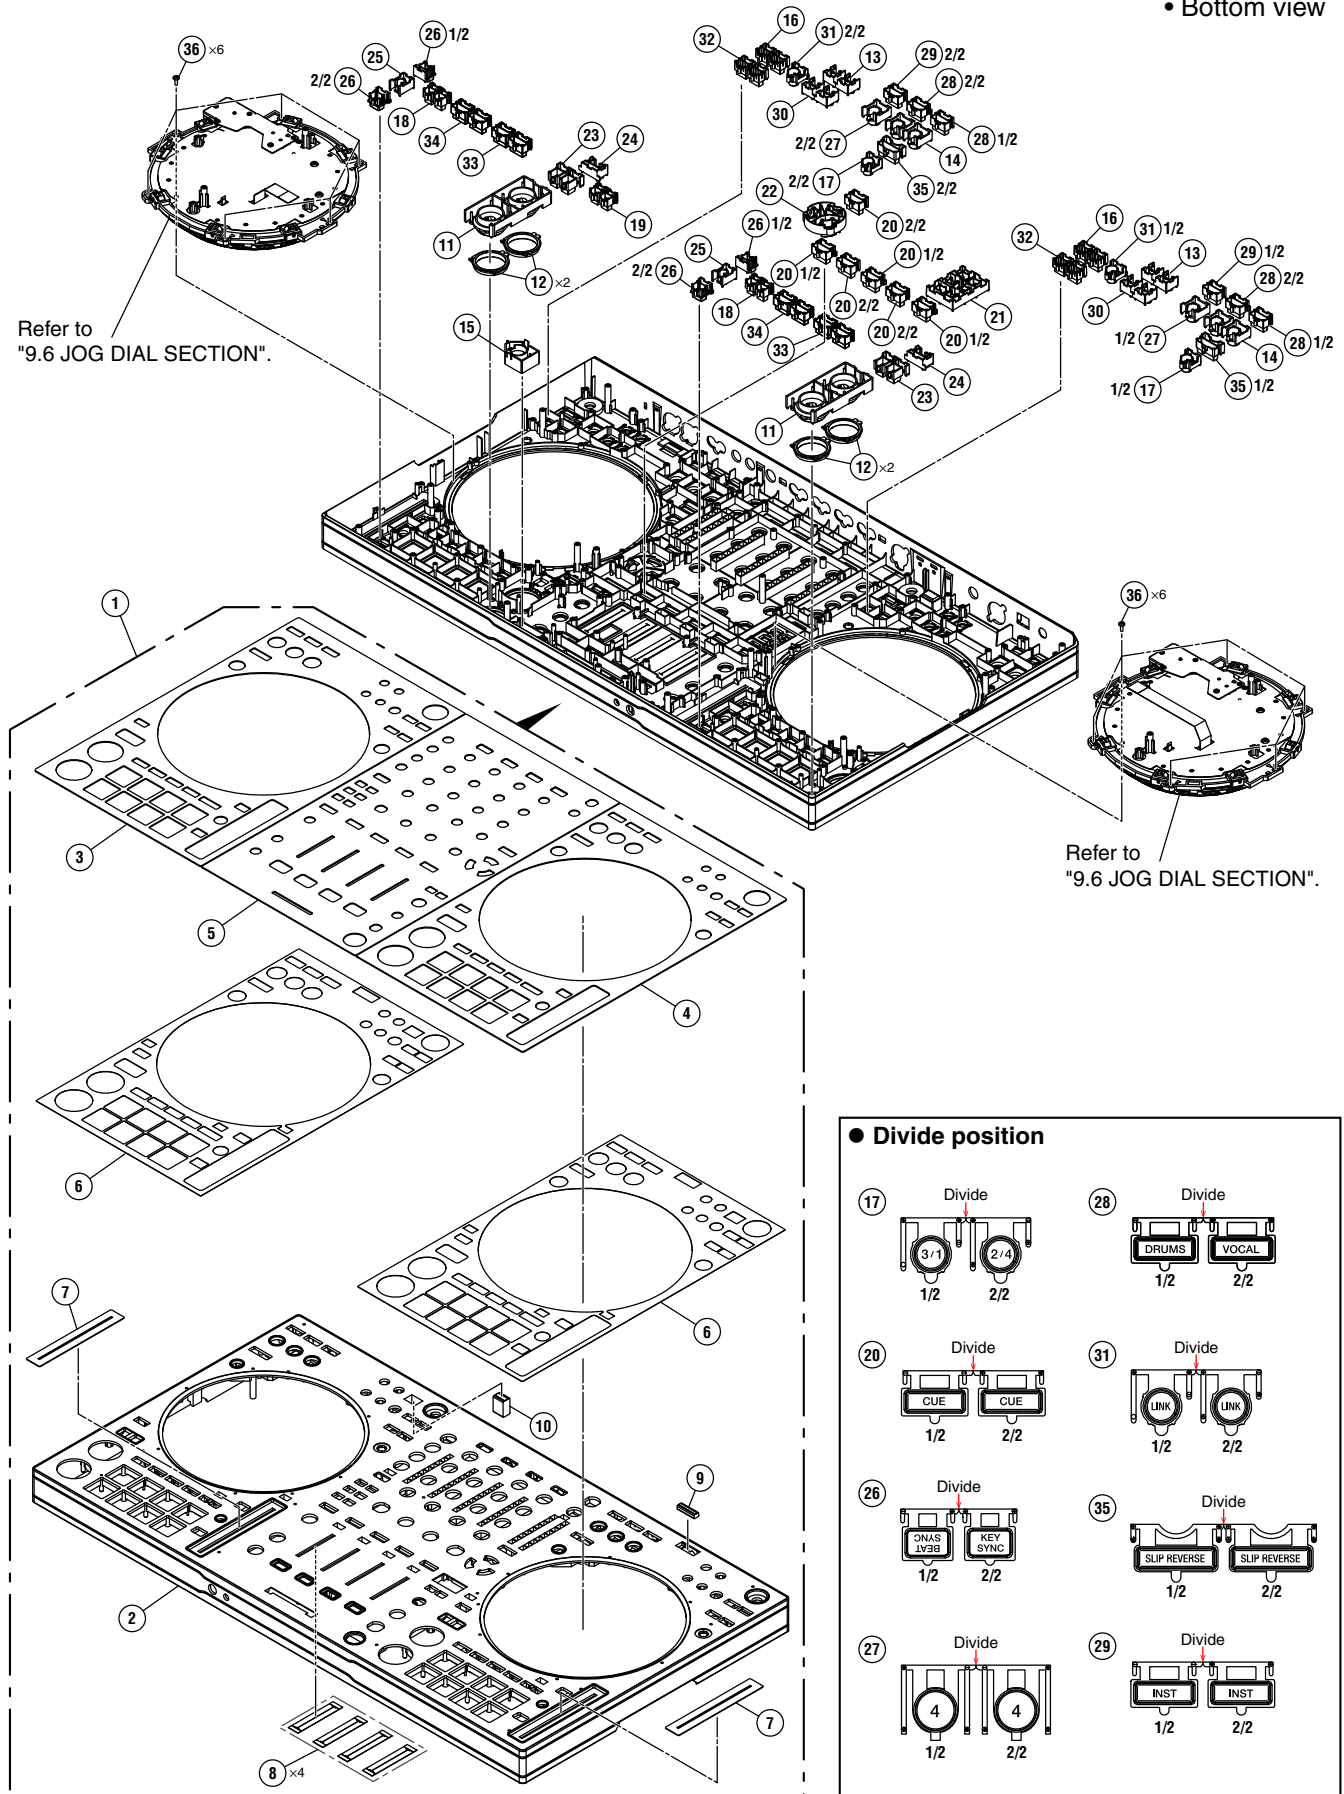

CONTROL PANEL SECTION (2/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
-----------------	--------------------	-----------------

A	⚠	1	1..DDJ-FLX10 Panel Service Assy	DEA1152
	⚠ NSP	2	2..Control Panel	DNK7111
	NSP	3	2..Plate	DAH3401
	NSP	4	2..Plate	DAH3402
	NSP	5	2..Plate	DAH3403
■	NSP	6	2..DS Tape	DEH1136
		7	2..Slide Sheet 1C	DAH2404
		8	2..Sheet	DEC3795
		9	2..Gasket	DEC4061
		10	2..Gasket	DEC4062
B		11	Button	DXB2189
		12	Ring Lens (PLAY)	DNK5315
		13	Button/CAL	DAC3020
		14	Button/LOP	DAC3074
		15	Button	DAC3141
■		16	Button	DAC3358
		17	Button	DAC3360
		18	Button	DAC3366
		19	Button	DAC3372
		20	Button	DAC3557
C		21	Button	DAC3671
		22	Button	DAC3672
		23	Button	DAC3673
		24	Button	DAC3674
		25	Button	DAC3675
■		26	Button	DAC3676
		27	Button	DAC3677
		28	Button	DAC3678
		29	Button	DAC3679
		30	Button	DAC3681
D		31	Button	DAC3682
		32	Button	DAC3683
		33	Button	DAC3686
		34	Button	DAC3687
		35	Button	DAC3688
■		36	Screw	BPZ30P080FNI

E

F



9.6 JOG DIAL SECTION

Refer to "7. DISASSEMBLY"



Lubricating oil

• Bottom view

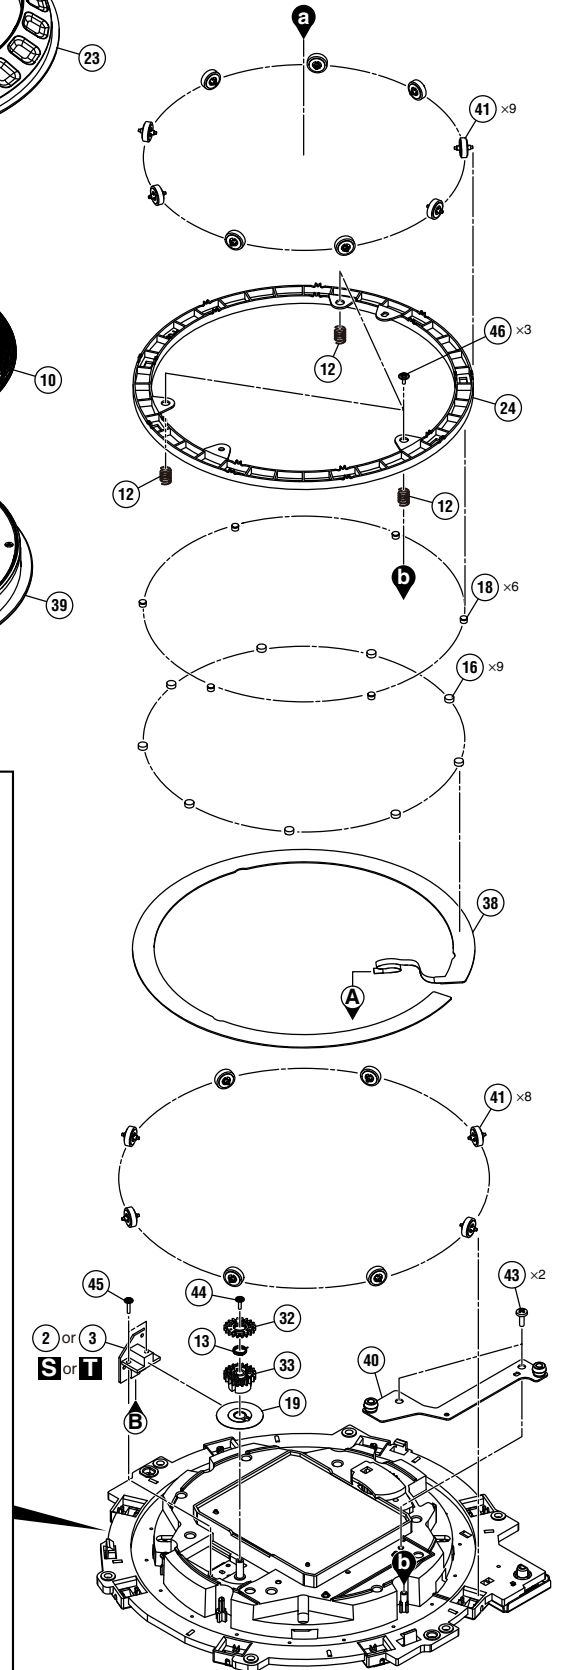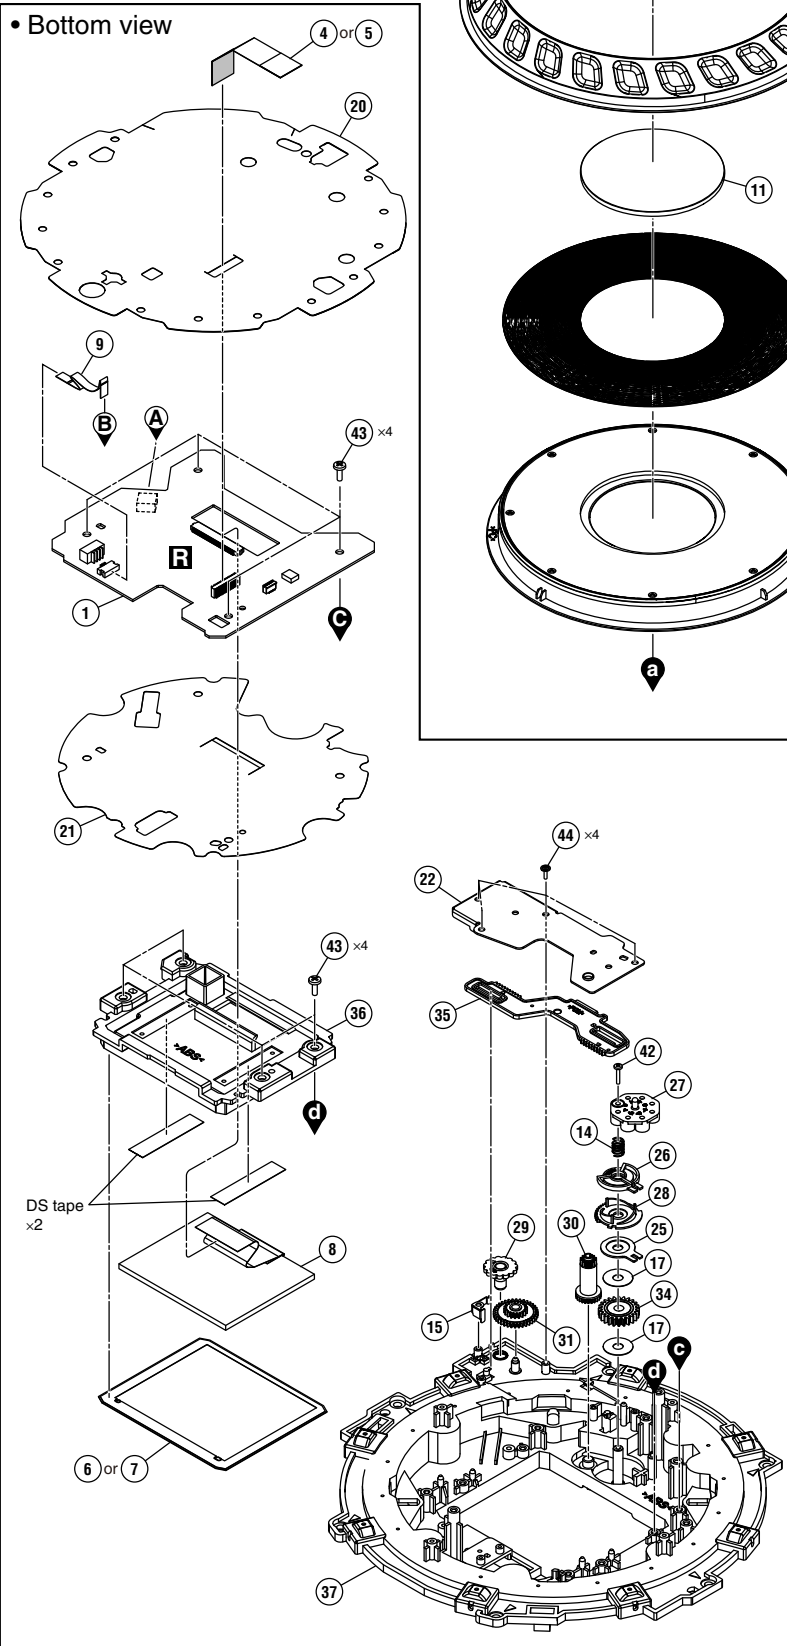

JOG DIAL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	LCDB Assy	DWX4828
	2	JOG1 Assy	DWX4826
	3	JOG2 Assy	DWX4827
	4	FFC (for Left Deck)	DDD2123
	5	FFC (for Right Deck)	DDD2124
	6	Sheet (for Left Deck)	DEC3989
	7	Sheet (for Right Deck)	DEC3990
	8	TFT LCD	DWX4567
	9	FFC	DDD1843
	10	Jog Plate	DAH2679
B	11	Window	DAH3189
	12	SW Spring	DBH1681
	13	Encoder Spring	DBH1710
	14	Coil Spring/LD	DBH1798
	15	Leaf Spring/ADJ	DBK1376
	16	SW Cushion HH48/2	DEC253
	17	Washer	DEC3137
	18	Cushion/RNG	DEC3466
	19	Plate	DEC3700
	20	Barrier	DEC4070
C	21	Barrier	DEC3845
	22	Plate	DNH3345
	23	Jog Dial	DNK7110
	24	SW Ring	DNK5233
	25	Smoother	DNK5237
	26	Comp Plate	DNK5243
	27	Adjust Plate	DNK5300
	28	Cam Plate	DNK5301
	29	Dial Gear	DNK5302
	30	Link Gear A	DNK5303
D	31	Link Gear B	DNK5304
	32	Gear/A	DNK6143
	33	Gear/B	DNK6144
	34	Gear/LD	DNK6145
	35	Plate	DNK6748
	36	Holder	DNK7109
	37	Holder	DNK6925
	38	Sheet SW	DSX1078
	39	Jog Dial A Assy	DXA2159
	40	Stay Assy/JOG	DXB2133
E	41	Roller	DXB2178
	42	Screw	BPZ20P100FTC
	43	Screw	BPZ30P080FNI
	44	Screw	IPZ20P060FTC
	45	Screw	IPZ20P080FTC
F	46	Screw (FE)	DBA1265