
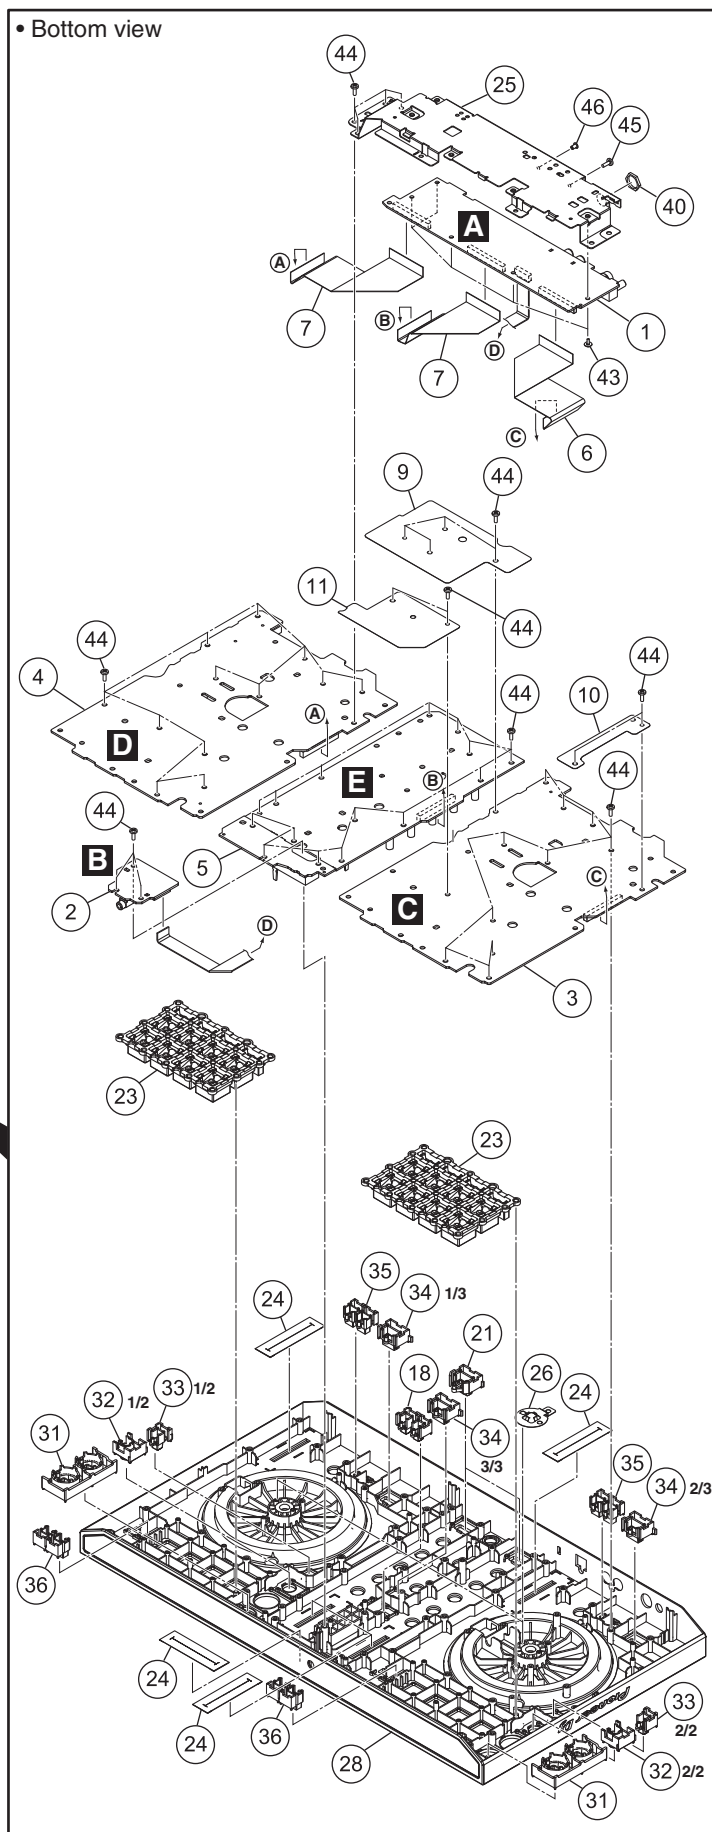
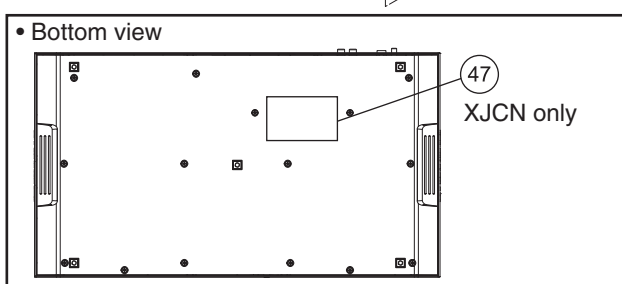
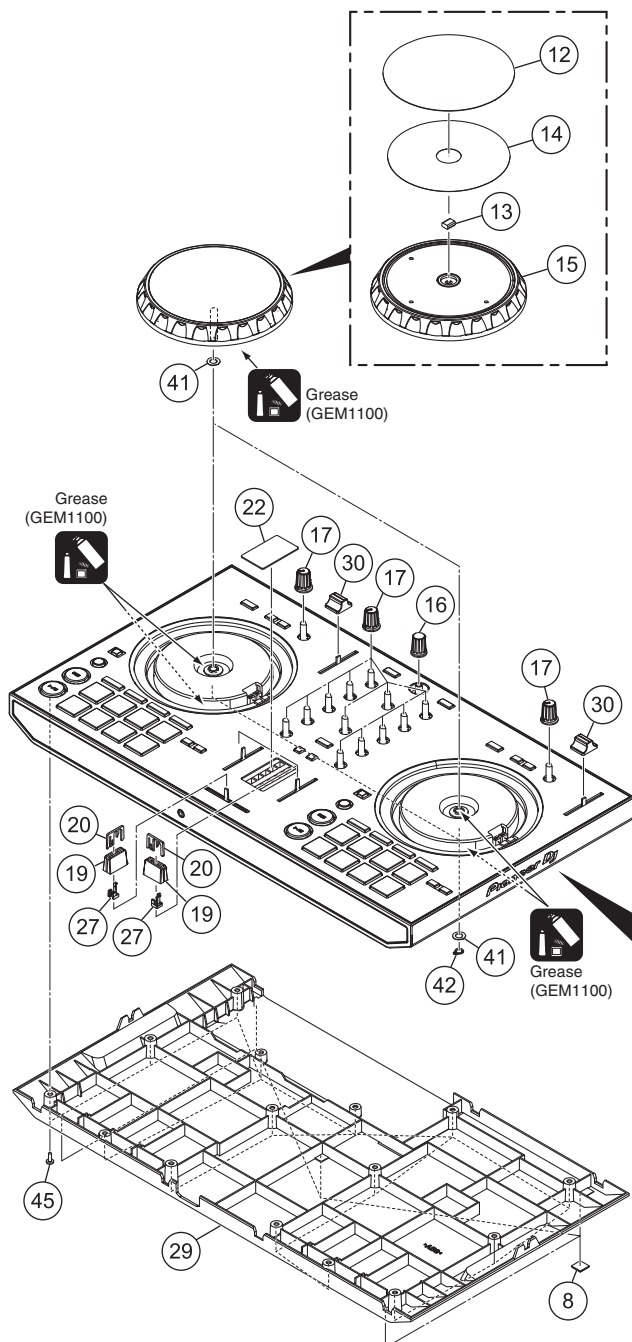


9.2 EXTERIOR SECTION

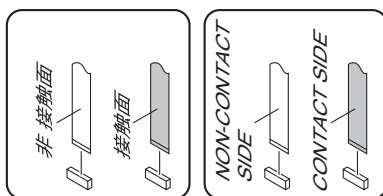

(1) EXTERIOR SECTION PARTS LIST

	<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
A		1	MAIN Assy	DWX3907			26	Plate/CND	DNH3137
		2	HPJK Assy	DWX3912			27	Stopper/SLD	DNK6009
		3	DCK1B Assy	DWX3908			28	Control Panel	DNK6637
		4	DCK2B Assy	DWX3910			29	Chassis	DNK6636
		5	MXR Assy*	DWX3911			30	Knob	DNK6530
■		6	FFC	DDD1771			31	Button	DAC3229
		7	FFC	DDD1772			32	Button	DAC3230
		8	Rubber Foot	VEB1349			33	Button S (Black)	DAC2663
		9	Sheet	DEC3690			34	Button	DAC3231
		10	Sheet	DEC3691			35	Button	DAC3210
B		11	Sheet	DEC3692			36	Button	DAC3232
		12	Plate	DAH3113			37	•••••	
		13	Gasket/JOG	DEC3539			38	•••••	
		14	DS Tape/JOG	DEH1042			39	•••••	
		15	Jog Dial	DNK6638			40	Nut (M12)	NKX2FNI
■		16	Dial Knob S (B)	DAA1273			41	Washer	WA62D095D050
		17	Knob/PLS	DAA1324			42	Washer	YC60FAC
		18	Button/FX	DAC2796			43	Screw	ASZ26P050FTC
		19	Slider Knob 1	DAC2684			44	Screw	BPZ30P080FNI
		20	Slider Knob 2	DAC2685			45	Screw	BPZ30P120FTB
C		21	Button	DAC3151			46	Screw (M3*5)	DBA1340
		22	Plate	DAH3036	NSP	47	Label		See Contrast table (2)
		23	Button	DEB2043					
		24	Fader Packing	DEC3355					
		25	Stay	DNH3275					
					*Cross fader PCB (jumper connection) of MXR Assy is not service parts. If necessary to order the MXR Assy.				

(2) CONTRAST TABLE

DDJ-RB/SXJ and XJCN are constructed the same except for the following:

D	Mark	No.	Symbol and Description	DDJ-RB/SXJ	DDJ-RB/XJCN
	NSP	47	Label	Not used	DRW2686

■

E

■

F