


9. EXPLODED VIEWS AND PARTS LIST

NOTES: • Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

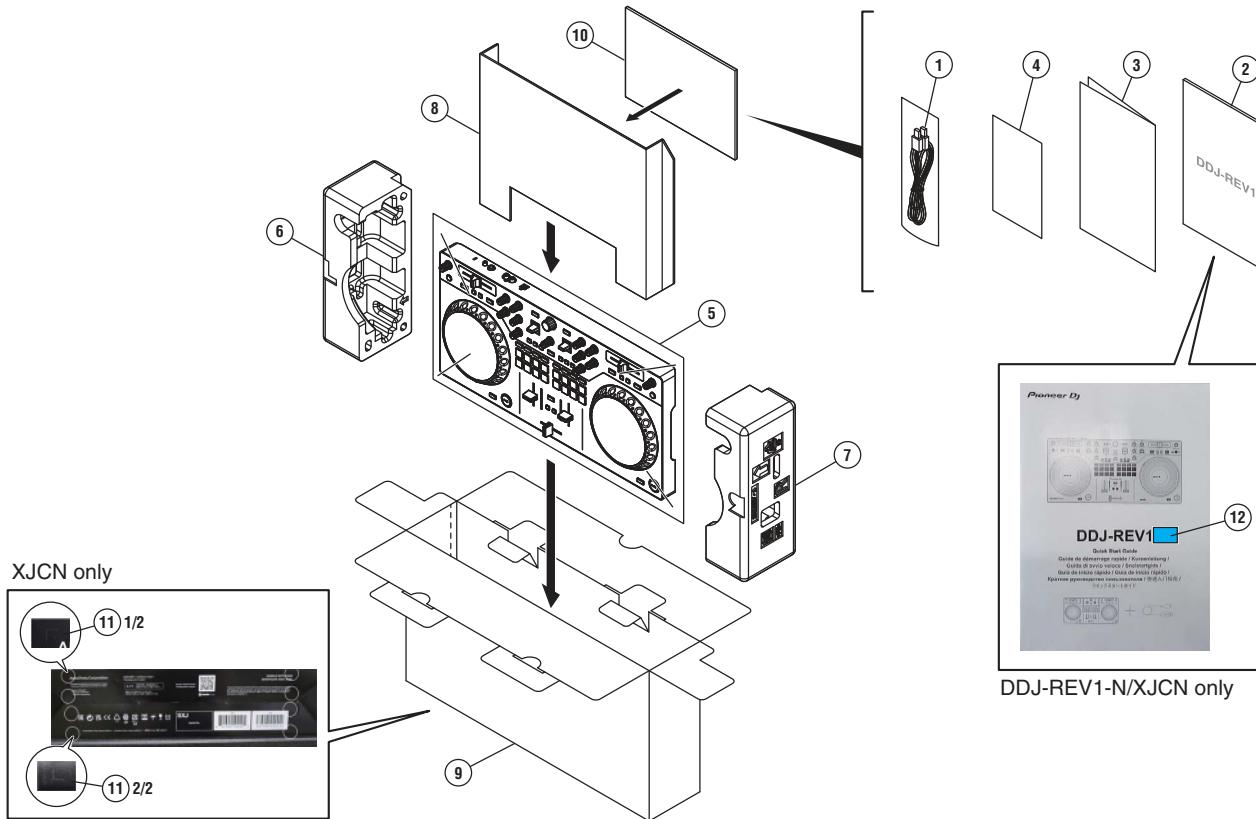

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	USB Cable	DDE1150	6	Packing Pad	DHA2016
2	Quick Start Guide	DRH1667	7	Packing Pad	DHA2017
3	Sub Manual	See Contrast table (2)	8	Partition	DHC1110
NSP	4 Warranty	DRY1274	9	Packing Case	See Contrast table (2)
5	Packing Sheet	AHG7053	NSP	10 Polyethylene Bag	AHG7117
				11 Label	See Contrast table (2)
			NSP	12 Label	See Contrast table (2)



(2) CONTRAST TABLE

DDJ-REV1/SXJ, XJCN, DDJ-REV1-N/PXJ and XJCN are constructed the same except for the following:


<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>DDJ-REV1/SXJ</u>	<u>DDJ-REV1/XJCN</u>	<u>DDJ-REV1-N/PXJ</u>	<u>DDJ-REV1-N/XJCN</u>
	3	Sub Manual	DRH1668	DRH1669	DRH1686	DRH1669
	9	Packing Case	DHG3833	DHG3833	DHG3839	DHG3839
	11	Label	Not used	DRW3022	Not used	DRW3023
NSP	12	Label	Not used	Not used	Not used	DRW2829

9.2 BOTTOM SECTION


A • Bottom view

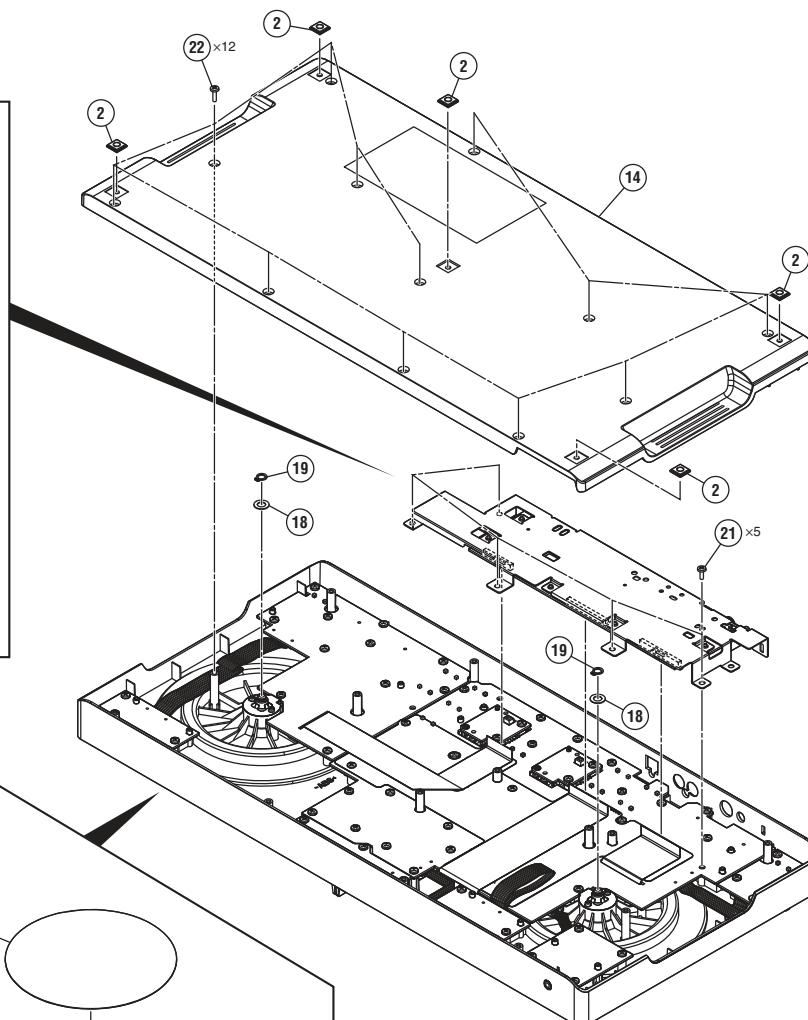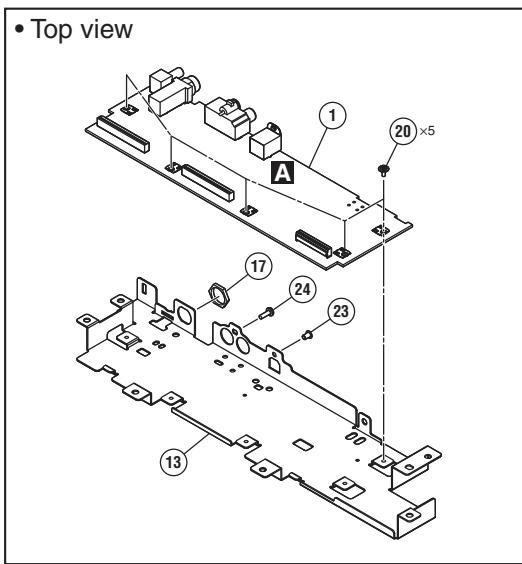

C • Top view

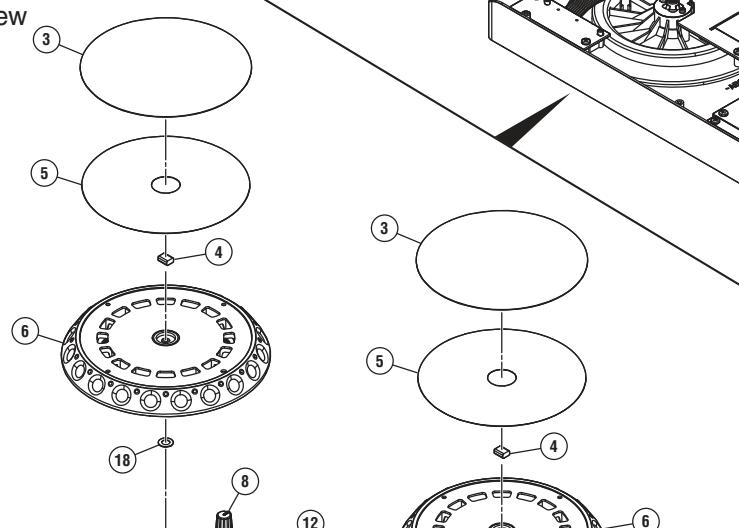


D

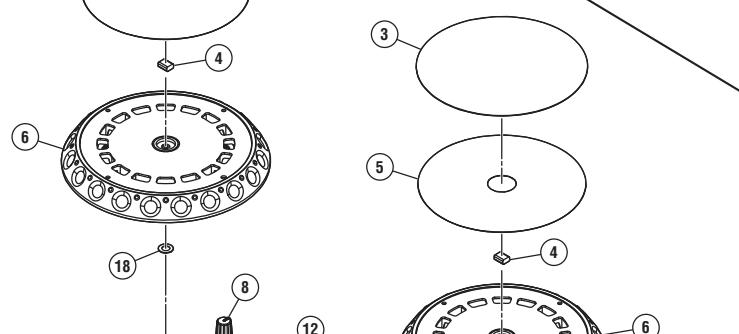

E Refer to "7. DISASSEMBLY"



Lubricating oil
(GEM1100)
Jog dial Section

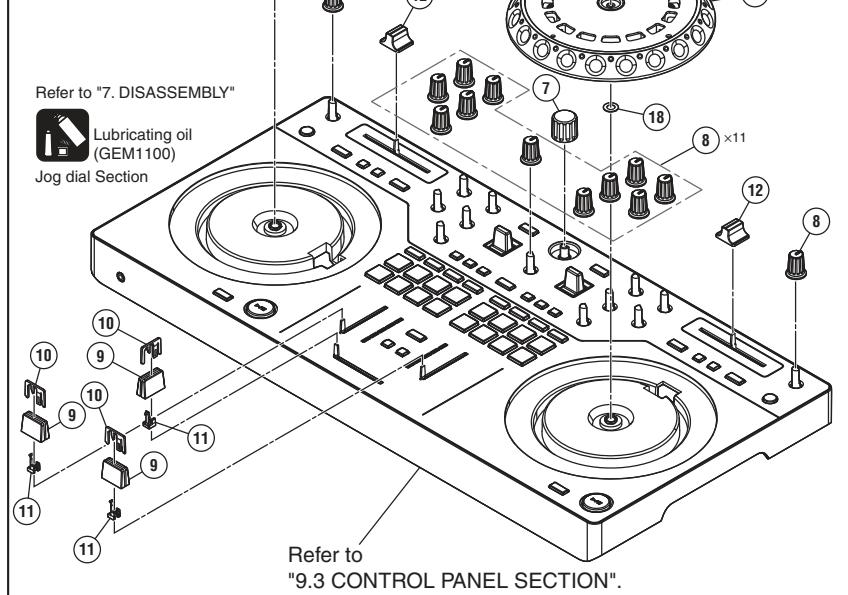

F

Refer to
"9.3 CONTROL PANEL SECTION".

(1) BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	MAIN Assy	DWX4675	
2	Rubber Foot	VEB1349	A
3	Plate	See Contrast table (2)	
4	Gasket/JOG	DEC3539	
5	DS Tape	DEH1123	
6	Jog Dial	DNK7044	
7	Knob	DAA1281	
8	Knob/PLS	DAA1324	
9	Knob	DAC3539	
10	Slider Knob 2	DAC2685	
11	Stopper/SLD	DNK6009	
12	Knob	DNK6769	
13	Stay	DNH3497	
14	Chassis	DNK7042	
15	•••••		
16	•••••		
17	Nut (M12)	NKX2FNI	
18	Washer	WA62D095D050	
19	Washer	YC60FAC	
20	Screw	ASZ26P050FTC	C
21	Screw	BPZ30P080FNI	
22	Screw	BPZ30P100FTB	
23	Screw (M3*5)	DBA1340	
24	Screw	PPZ30P080FTB	


(2) CONTRAST TABLE

DDJ-REV1 and DDJ-REV1-N are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-REV1	DDJ-REV1-N
	3	Plate	DAH3381	DAH3389

9.3 CONTROL PANEL SECTION

A • Bottom view

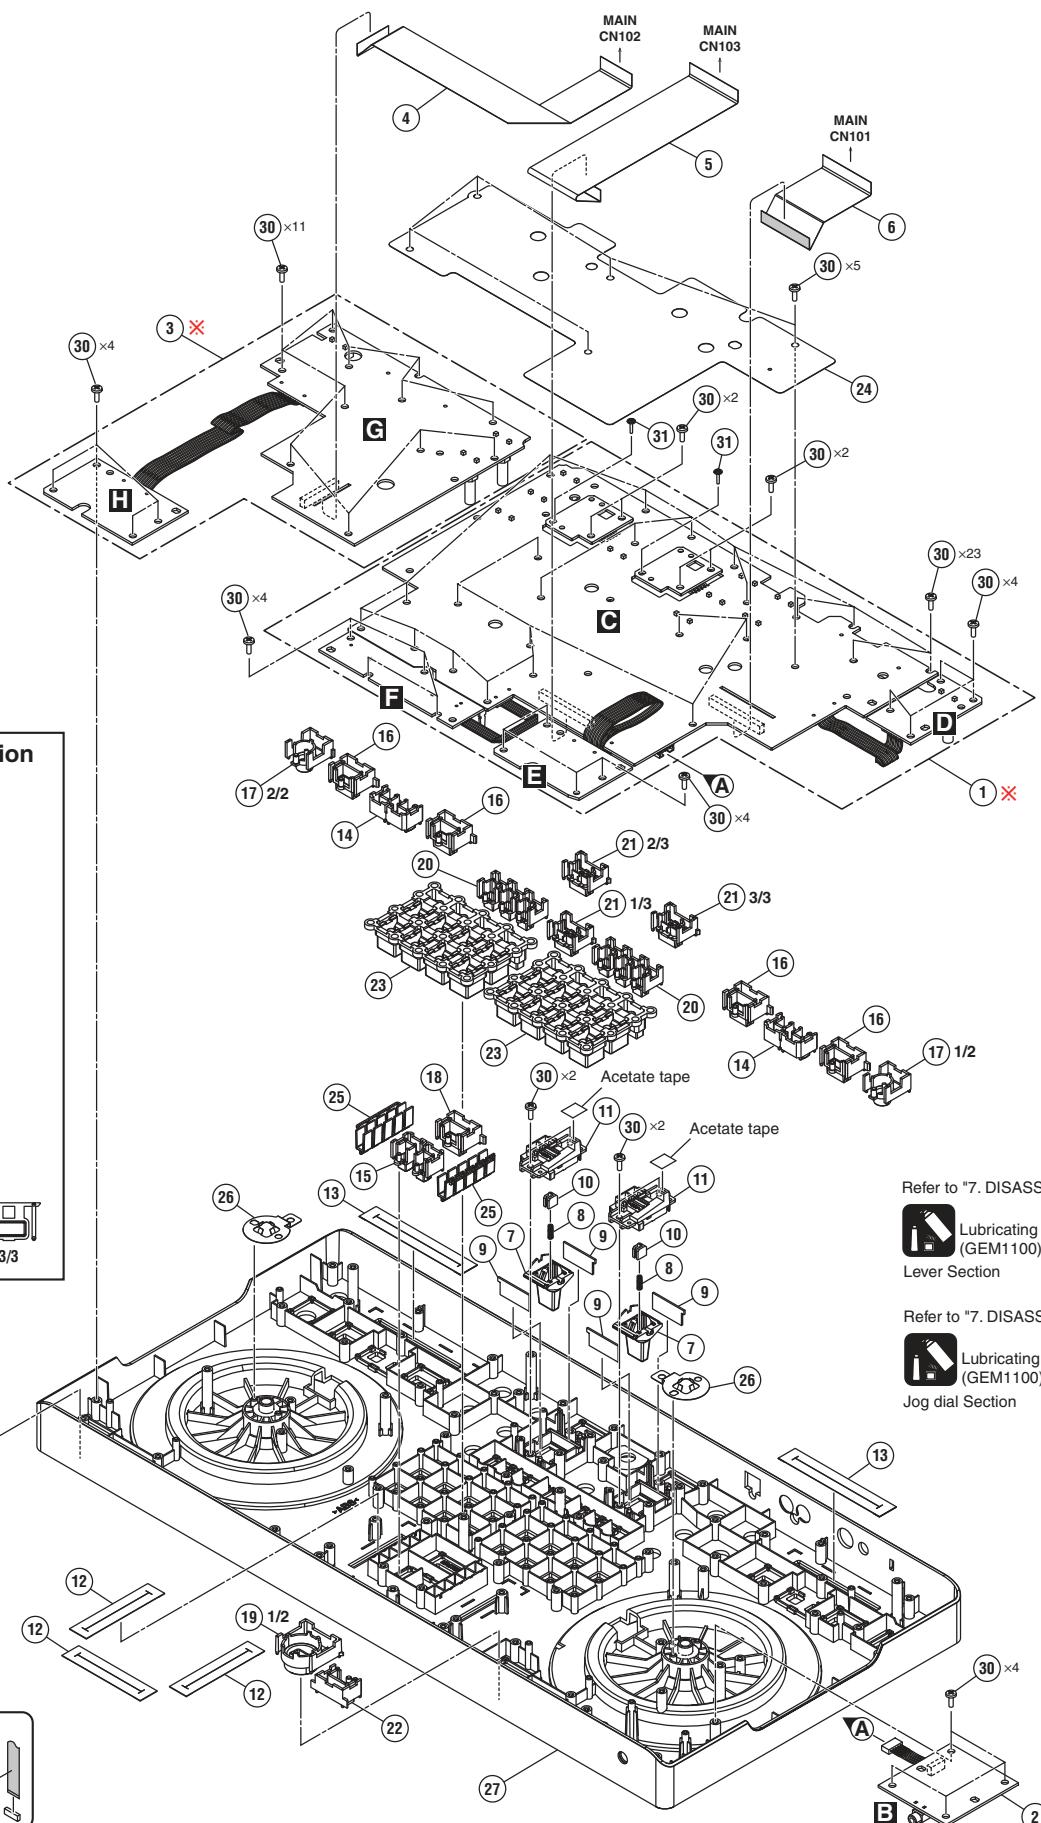

(1) CONTROL PANEL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	MIXR Assy *	DWX4681	
2	HPJK Assy	DWX4682	A
3	PNL2 Assy *	DWX4685	
4	FFC	DDD2082	
5	FFC	DDD2083	
6	FFC	DDD2084	
7	Lever	See Contrast table (2)	
8	Lever Spring	DBH1702	
9	Brake	DEC3948	
10	Lever Cap	DNK5344	
11	Base	DNK6470	B
12	Sheet	DEC3795	
13	Packing/TMP	DEC3392	
14	Button S (Black)	DAC2663	
15	Button/FX	DAC2796	
16	Button	DAC3152	
17	Button	DAC3098	
18	Button	DAC3442	
19	Button	DAC3620	
20	Button	DAC3621	C
21	Button	DAC3622	
22	Button	DAC3624	
23	Button	DEB2089	
24	Barrier	DEC4037	
25	Lens	DNK6946	
26	Plate/CND	DNH3137	
27	Control Panel	See Contrast table (2)	
28	•••••		
29	•••••		
30	Screw	BPZ30P080FNI	D
31	Screw	IPZ20P080FTC	

* The service parts of the MIXR Assy and the PNL2 Assy are supplied with multiple boards connected by jumper leads. The MIXR Assy consists of MIXR, HPVR, PLYL, and CRFD boards connected by jumper leads. The PNL2 Assy consists of PNL2 and PLYR boards connected by jumper leads.
These six boards are not supplied by itself as the service parts.

(2) CONTRAST TABLE

DDJ-REV1 and DDJ-REV1-N are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-REV1	DDJ-REV1-N
	7 27	Lever Control Panel	DAC3627 DNK7043	DAC3629 DNK7064