


1234

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

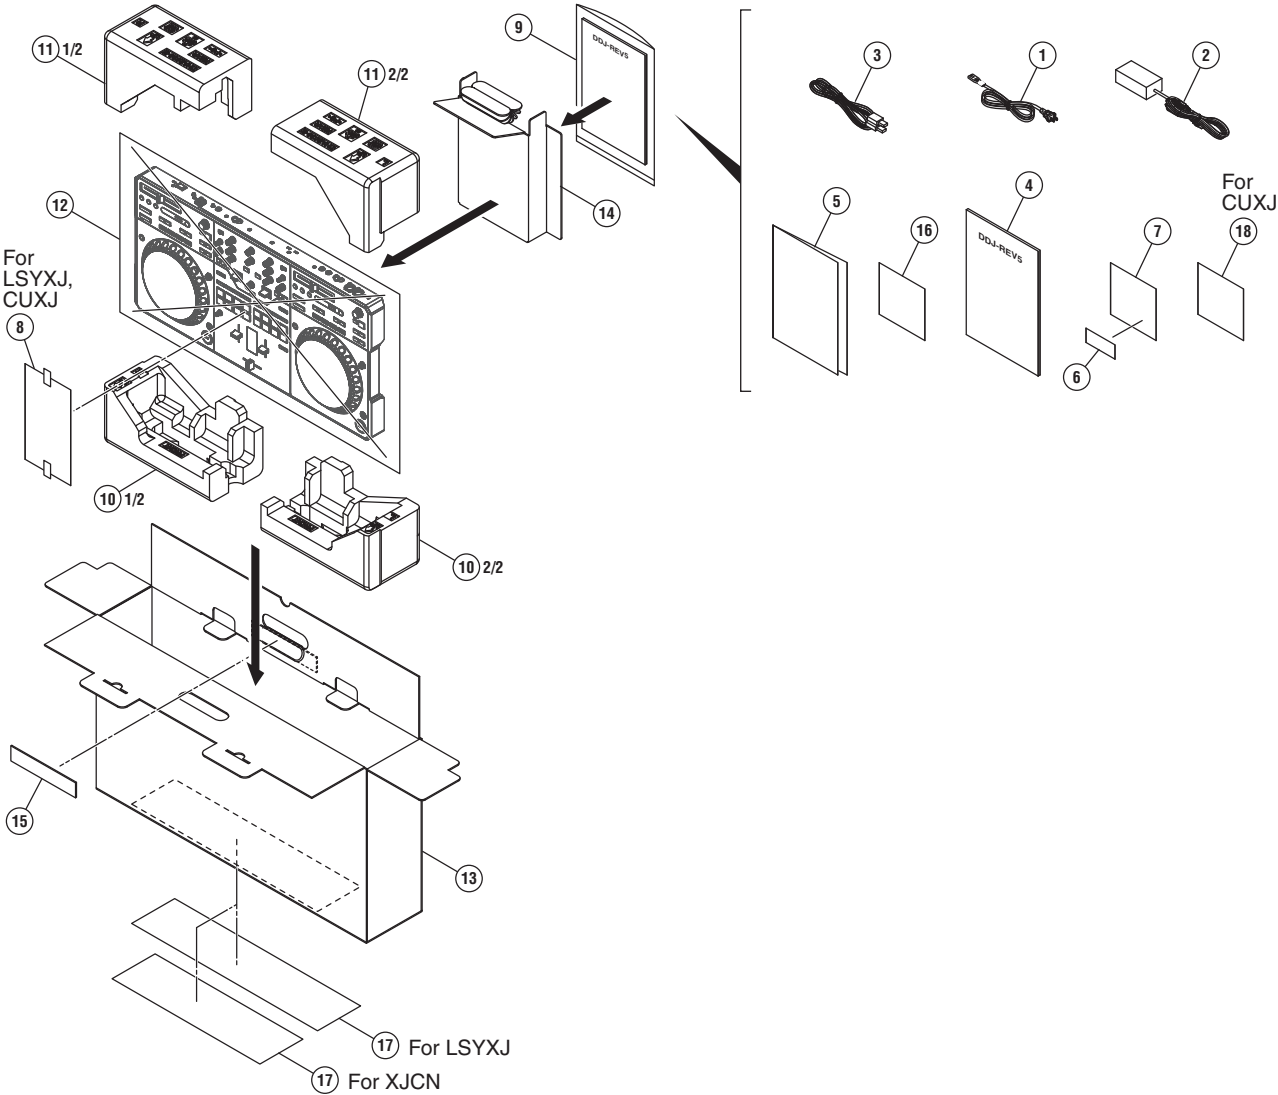

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power cord	See Contrast table (2)	NSP 9	Poly Bag	DHL1207
⚠	2 AC adapter	DWR1603 or DWR1612 or DWR1613	10	Packing Pad	DHA2038
	3 USB cable	DDE1158	11	Packing Pad	DHA2039
	4 Quick Start Guide	See Contrast table (2)	12	Mirror Mat (1200*1000)	DHL1169
	5 Precautions for Use	See Contrast table (2)	13	Packing Case	DHG3898
NSP 6	Serato DJ Pro Pitch 'n Time DJ voucher	•••••	14	Packing Board	DHC1117
NSP 7	Leaflet	DRM1434	15	Plate	DHC1122
NSP 8	Leaflet	See Contrast table (2)	NSP 16	Warranty	See Contrast table (2)
			17	Label	See Contrast table (2)
			NSP 18	Leaflet	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-REV5/LSYXJ, CUXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-REV5/LSYXJ	DDJ-REV5/CUXJ	DDJ-REV5/XJCN
⚠	1	Power cord	ADG1154	XDG3052	ADG7079
	4	Quick Start Guide	DRH1756	DRH1756	DRH1757
	5	Precautions for Use	DRH1758	DRH1758	DRH1760
NSP	8	Leaflet	DRH1781	DRH1781	Not used
NSP	16	Warranty	DRY1274	Not used	Not used
	17	Label	DRW3081	Not used	DRW3083
NSP	18	Leaflet	Not used	DRH1782	Not used

9.2 EXTERIOR SECTION

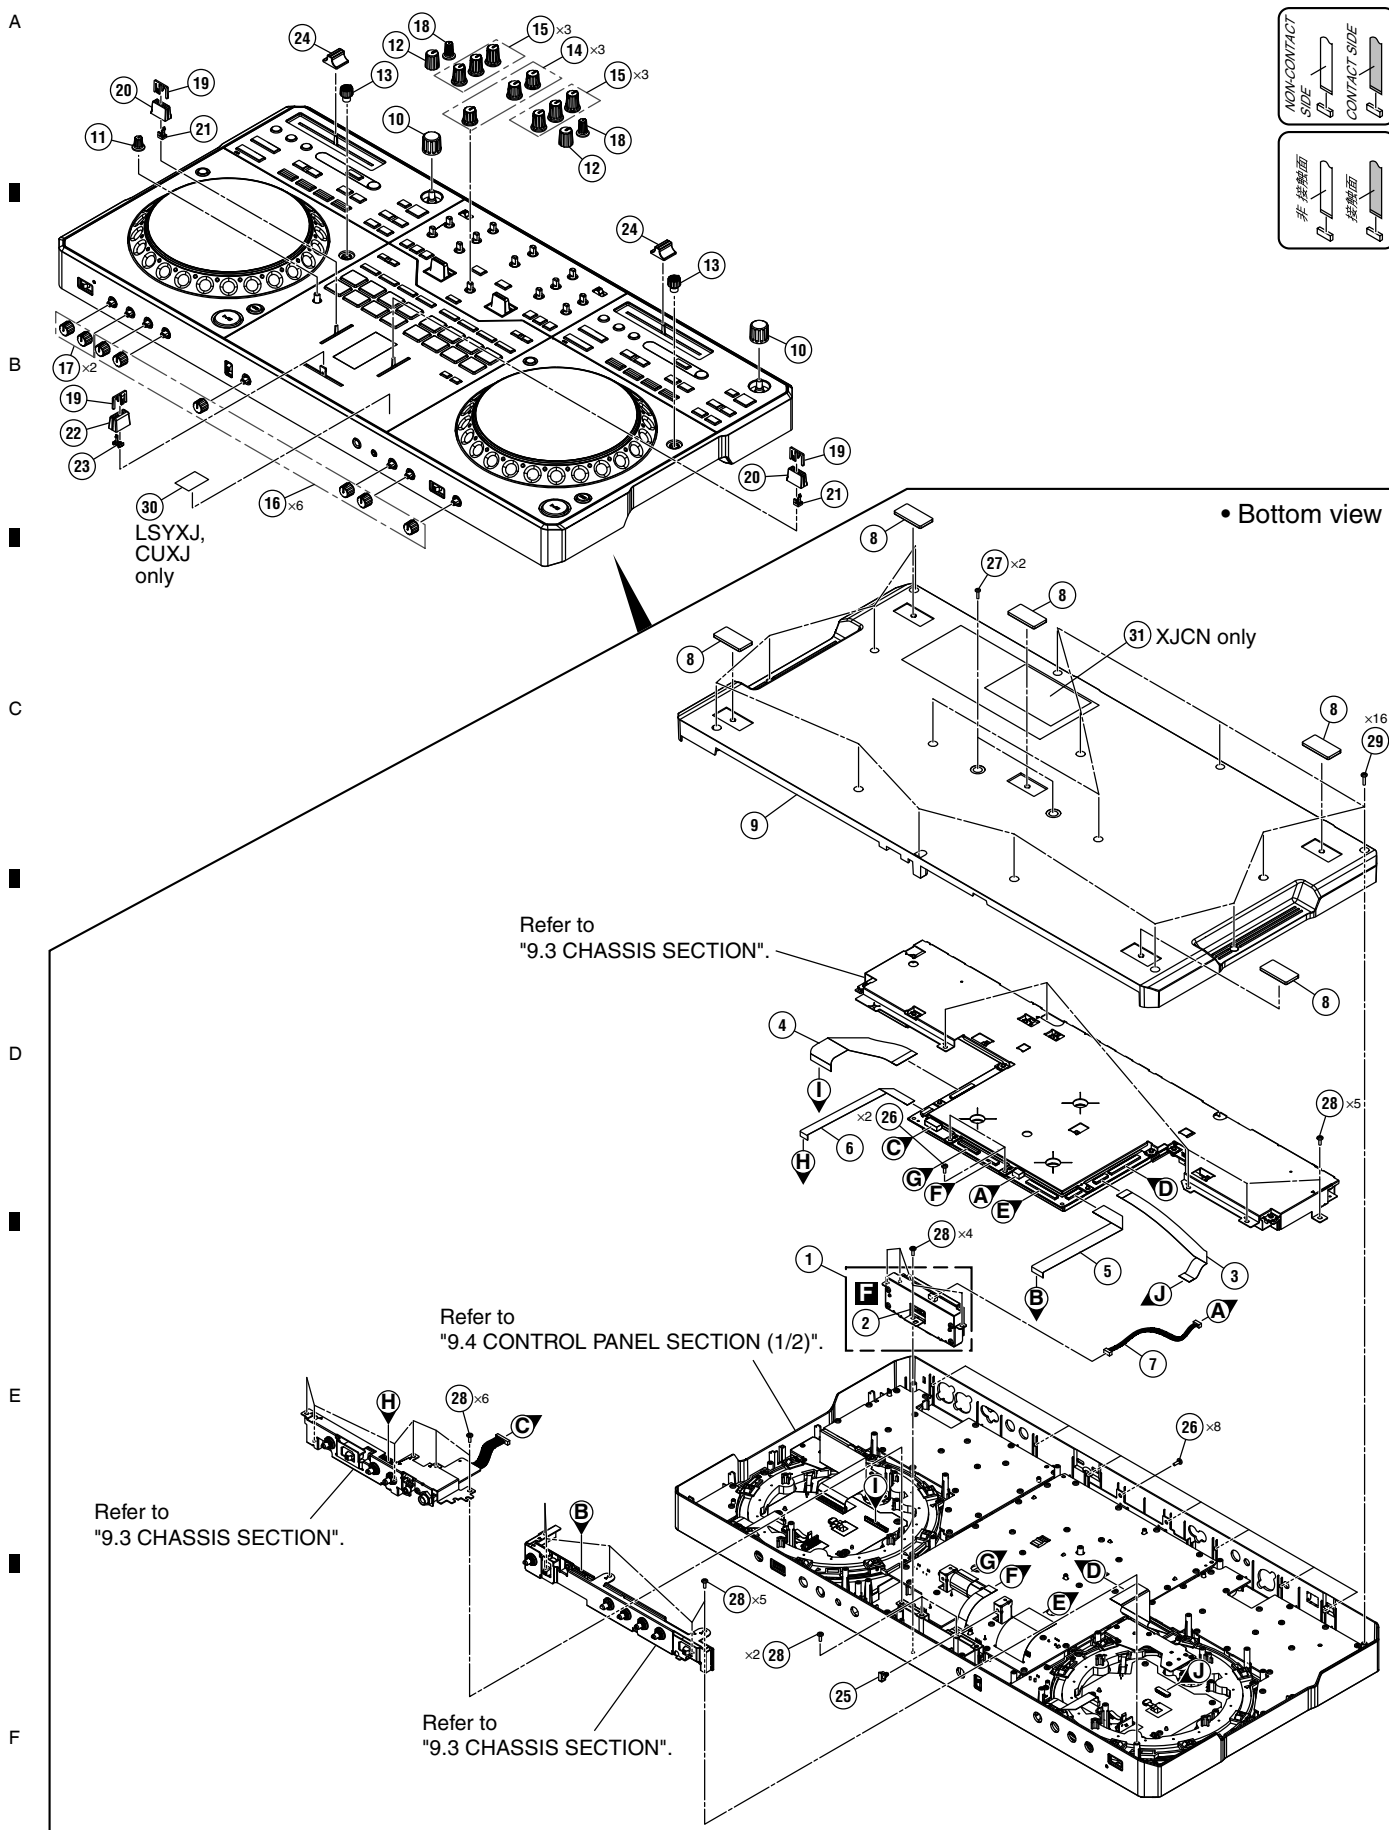




(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
NSP	1 1..Cross Fader Service Assy	DEA1156	17	Knob	DAA1468	A
	2 2..CRFD Assy	DWX4892	18	Knob	DAA1477	
	3 FFC	DDD2157	19	Slider Knob 2	DAC2685	
	4 FFC	DDD2158	20	Knob	DAC3540	
	5 FFC	DDD2161				
	6 FFC	DDD2162	21	Stopper/SLD	DNK6009	■
	7 Connector Assy	PF03PP-B12	22	Knob	DAC3437	
	8 Sheet/Leg	DEC3534	23	Stopper	DNK6440	
⚠	9 Chassis	DNK7148	24	Knob	DNK6629	
	10 Dial Knob	DAA1246	25	Locking Mini Clamp	DEC2439	
	11 Rotary Knob S (Black)	DAA1262	26	Screw	BBZ30P080FTB	B
	12 Knob	DAA1366	27	Screw	BPZ26P100FTB	
	13 Knob	DAA1406	28	Screw	BPZ30P080FTC	
	14 Knob	DAA1432	29	Screw	BPZ30P120FTB	
	15 Knob	DAA1433	NSP 30	Label	See Contrast table (2)	
			NSP 31	Label	See Contrast table (2)	■
	16 Knob	DAA1467				

(2) CONTRAST TABLE

DDJ-REV5/LSYXJ, CUXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-REV5/LSYXJ	DDJ-REV5/CUXJ	DDJ-REV5/XJCN
NSP	30	Label	DRW3080	DRW3080	Not used
NSP	31	Label	Not used	Not used	DRW3060

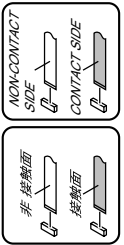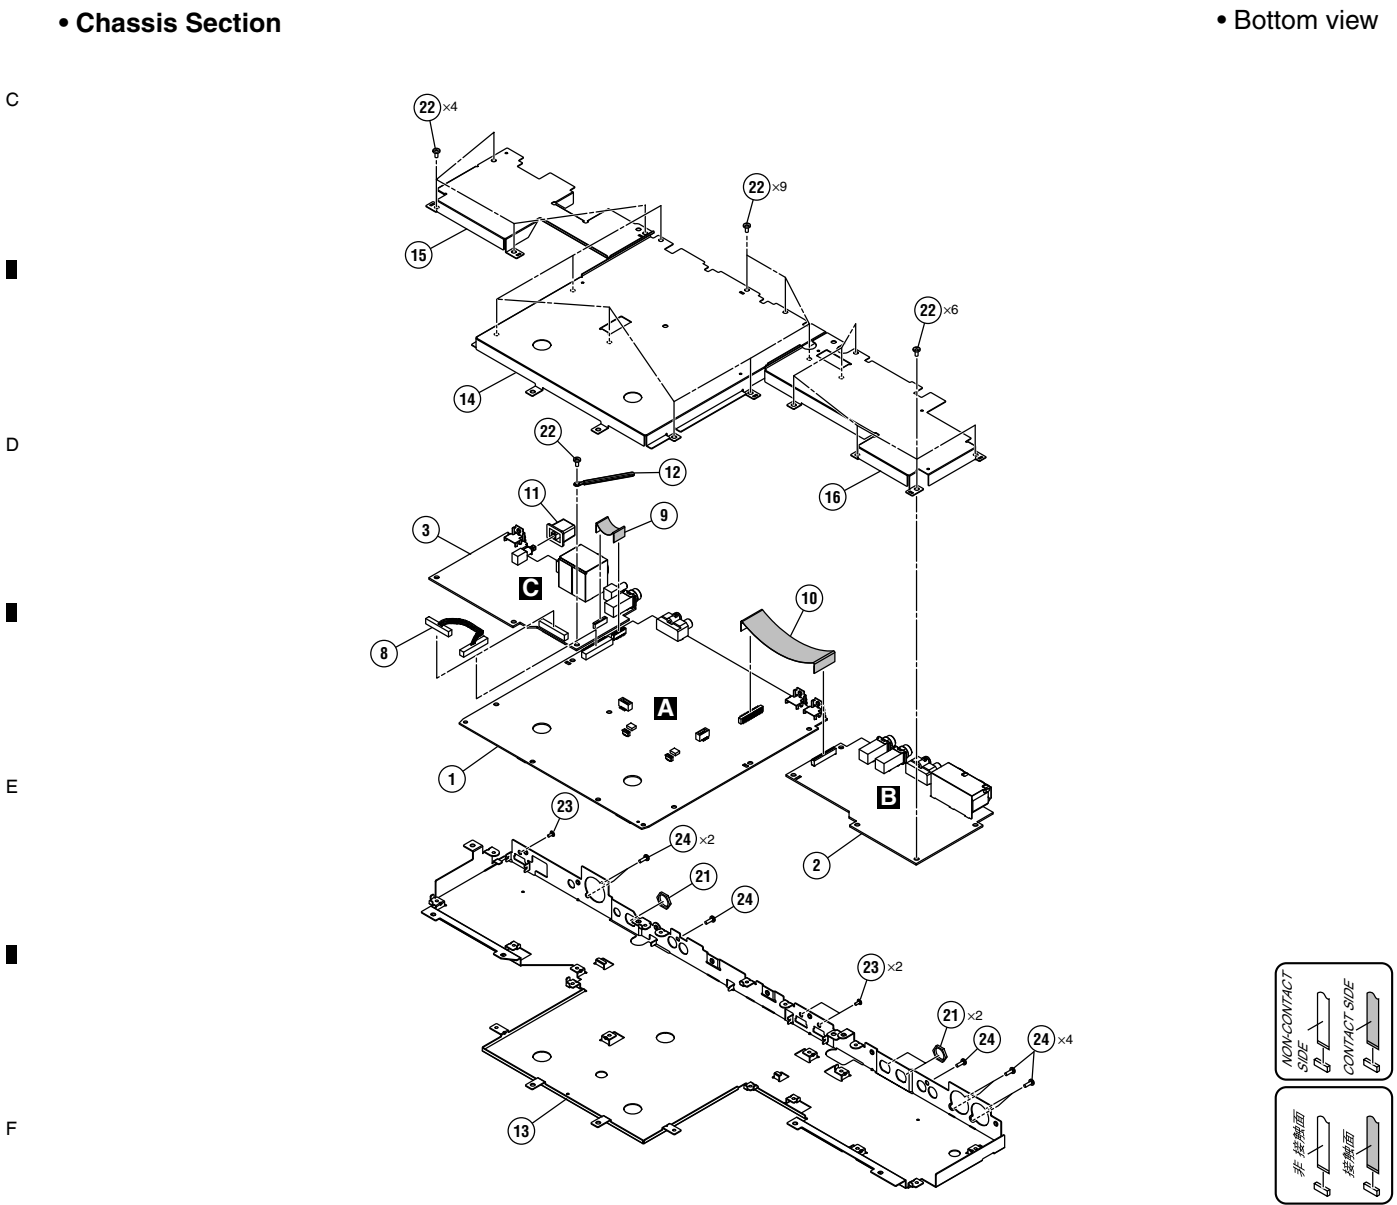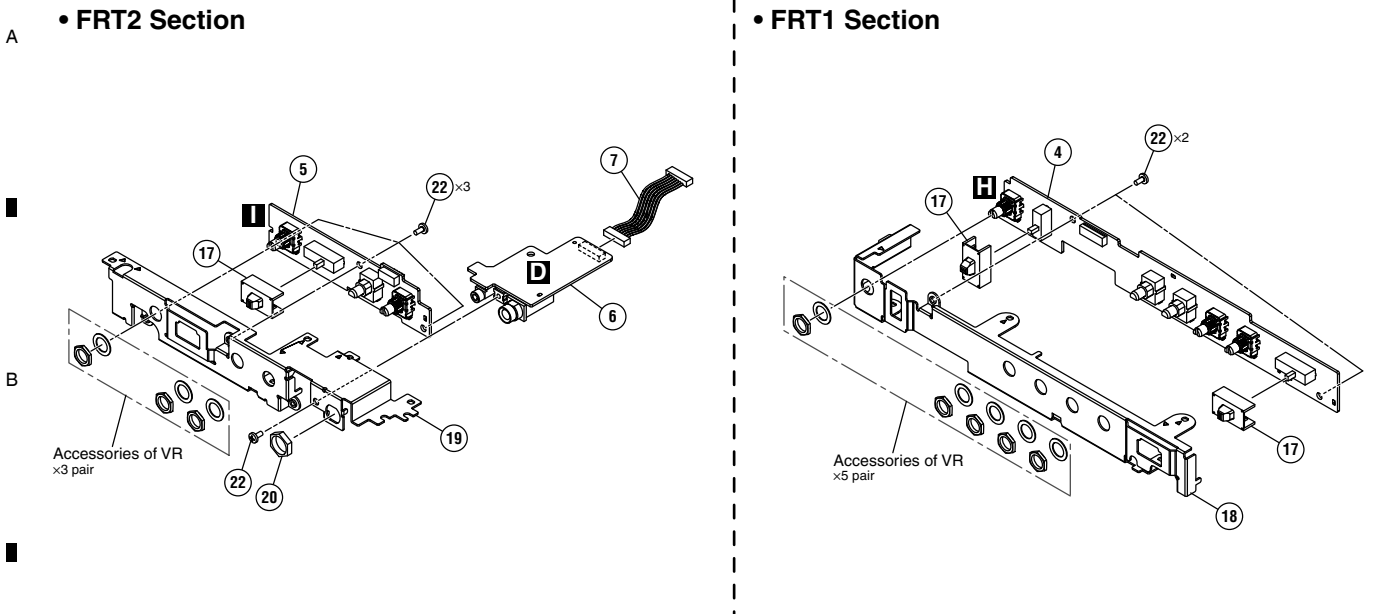

CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MAIN Assy	DWX4871
2	AOUT Assy	DWX4880
3	DCMC Assy	DWX4881
4	FRT1 Assy	DWX4882
5	FRT2 Assy	DWX4883
6	HPJK Assy	DWX4890
7	Parallel Jumper	PF07HH-B05A
8	Parallel Jumper	PF15HH-D07A
9	FFC	DDD2036
10	FFC	DDD2166
11	Power Knob	DAC2306
12	Cord Clamper	DEX1025
13	Stay	DNH3604
14	Shield Plate	DNH3609
15	Shield Plate	DNH3610
16	Shield Plate	DNH3611
17	Cap/Mic	DAC2773
18	Stay	DNH3607
19	Stay	DNH3608
20	Nut	DBN1028
21	Nut	NKX2FTC
22	Screw	BBZ30P060FTC
23	Screw (M3*5)	DBA1340
24	Screw	PPZ30P080FTB

A

B


C

D

E

F

A • Bottom view

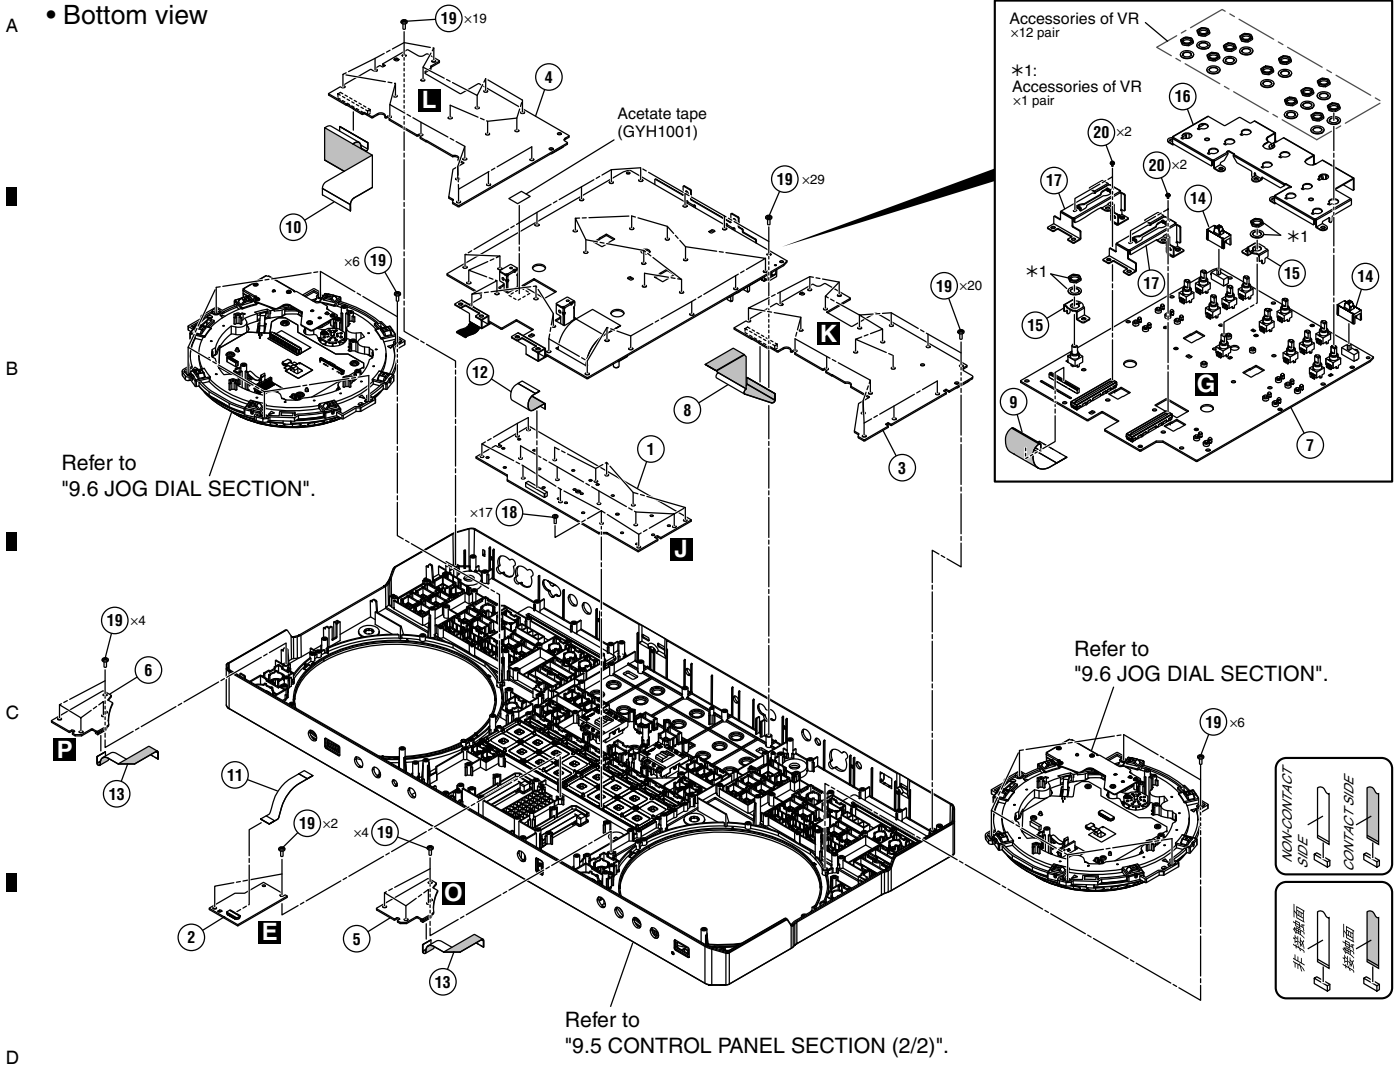


CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	PADB Assy	DWX4872	16	Stay	DNH3605
2	LVLM Assy	DWX4873	17	Stay	DNH3606
3	DCK1 Assy	DWX4886	18	Screw	BPZ26P080FTC
4	DCK2 Assy	DWX4887	19	Screw	BPZ30P080FTC
5	PLY1 Assy	DWX4888	20	Screw	PMH20P040FTC
6	PLY2 Assy	DWX4889			
7	MIXB Assy	DWX4891			
8	FFC	DDD2155			
9	FFC	DDD2156			
10	FFC	DDD2159			
11	FFC	DDD2160			
12	FFC	DDD2165			
13	FFC	DDD2163			
14	SW Cap	DAC2753			
15	Stay	DNF2039			

5 6 7 8 9.5 CONTROL PANEL SECTION (2/2)

• Bottom view

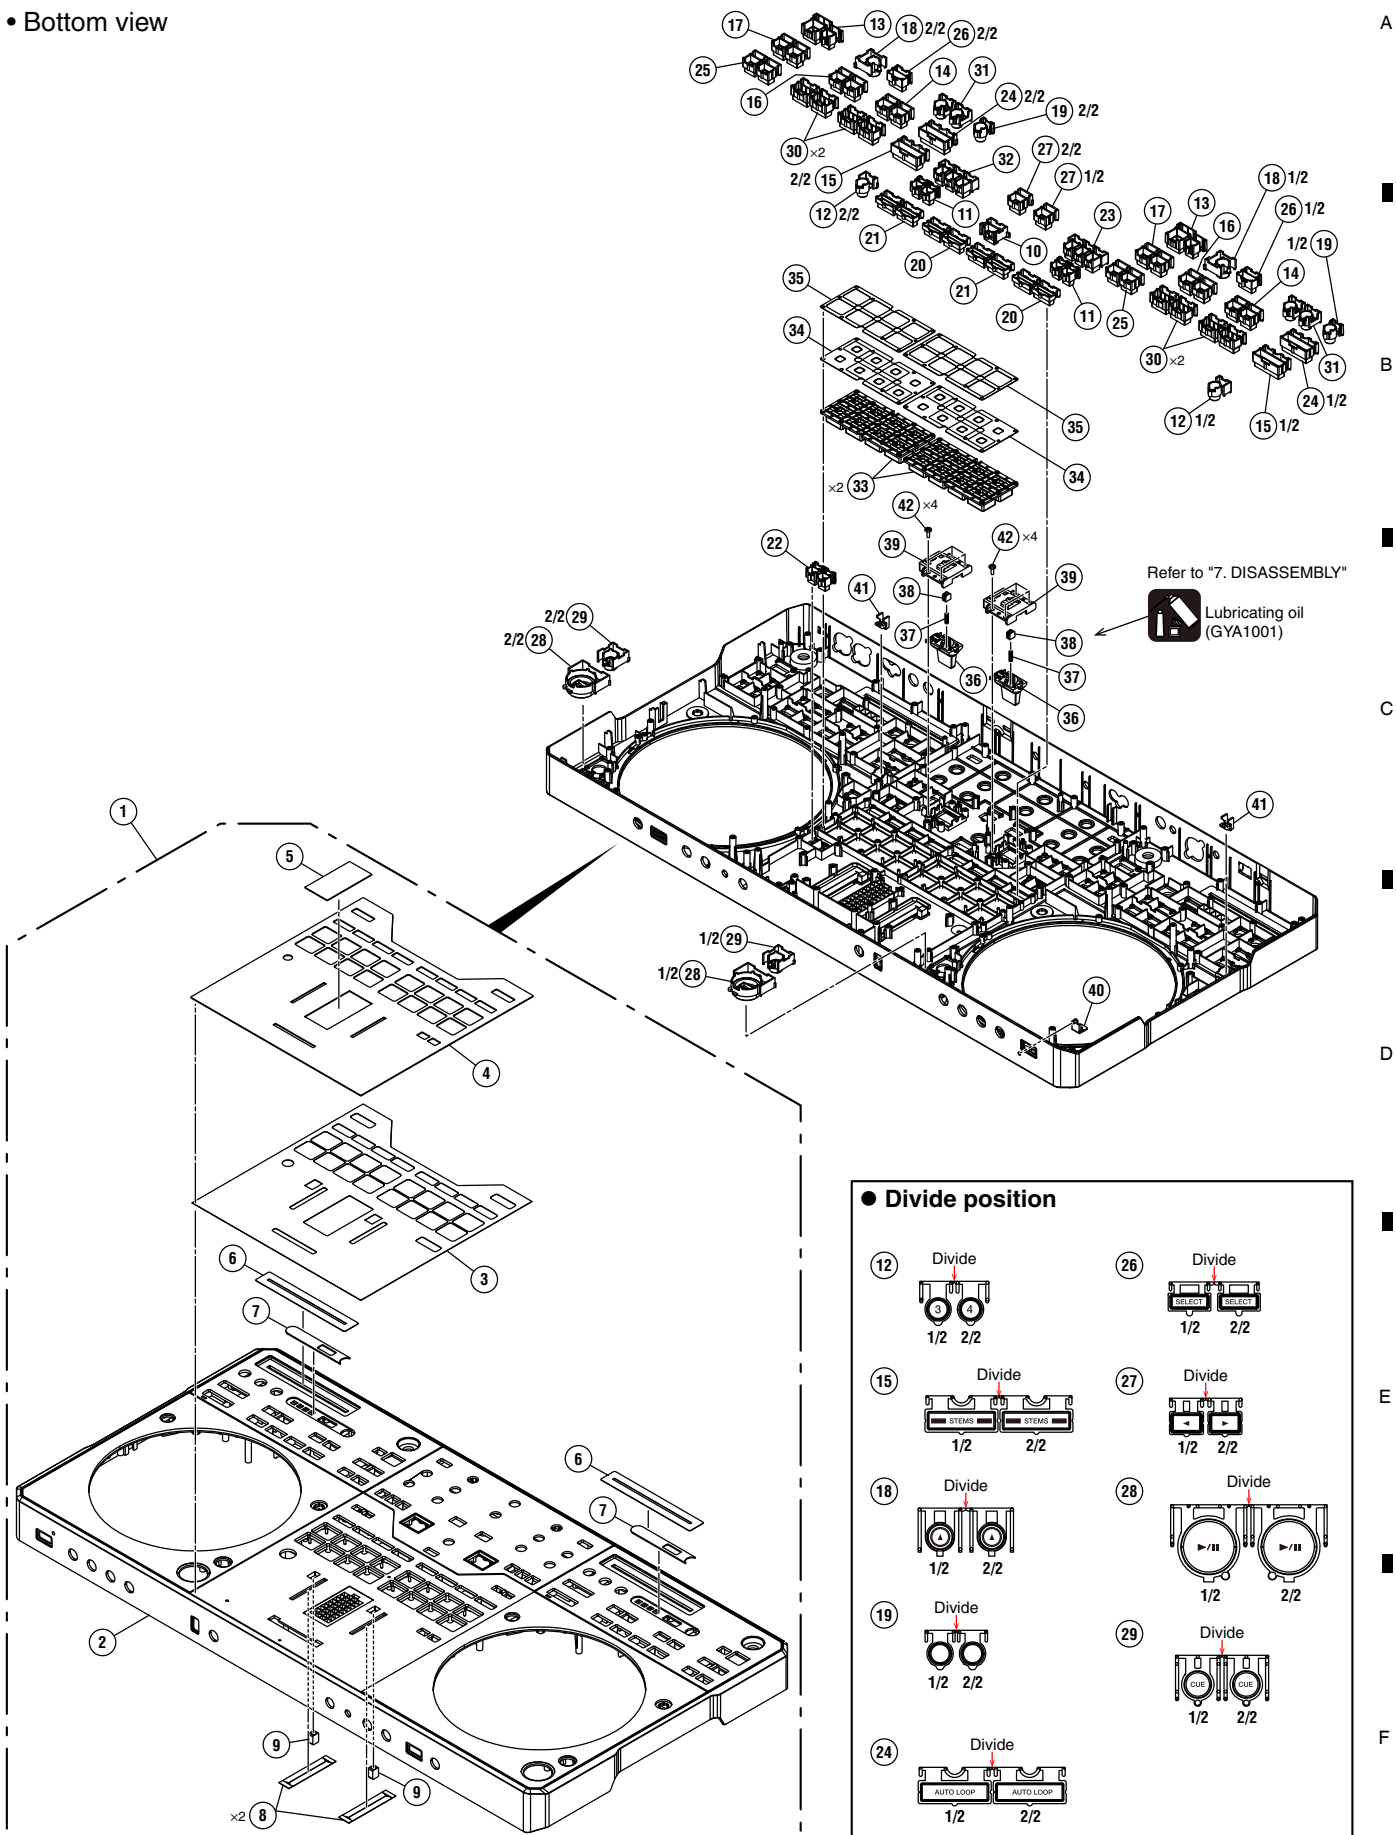

CONTROL PANEL SECTION (2/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 1..DDJ-REV5 Panel Service Assy	DEA1155
	2 2..Control Panel	DNK7147
	3 2..DS Tape	DEH1141
	4 2..Panel	DAH3435
	5 2..Plate	DAH3300
	6 2..Sheet	DAH3423
	7 2..Window	DAH3419
	8 2..Sheet	DEC3795
	9 2..Gasket	DEC4129
	10 Button	DAC3206
B	11 Button	DAC3366
	12 Button	DAC3569
	13 Button	DAC3607
	14 Button	DAC3733
	15 Button	DAC3702
	16 Button	DAC3735
	17 Button	DAC3736
	18 Button	DAC3695
	19 Button	DAC3605
	20 Button	DAC3697
C	21 Button	DAC3698
	22 Button	DAC3699
	23 Button	DAC3701
	24 Button	DAC3734
	25 Button	DAC3703
	26 Button	DAC3704
	27 Button	DAC3706
	28 Button	DAC3707
	29 Button	DAC3708
	30 Button	DAC3709
D	31 Button	DAC3710
	32 Button	DAC3711
	33 Pad	DEB2098
	34 Sheet	DEC4103
	35 Spacer	DEC4105
	36 Lever	DAC3700
	37 Lever Spring	DBH1702
	38 Lever Cap	DNK5344
	39 Base	DNK7153
	40 Lens	DNK7029
E	41 Lens	DNK7149
	42 Screw	BPZ30P080FTC


F

9.6 JOG DIAL SECTION

Refer to "7. DISASSEMBLY"



- Bottom view

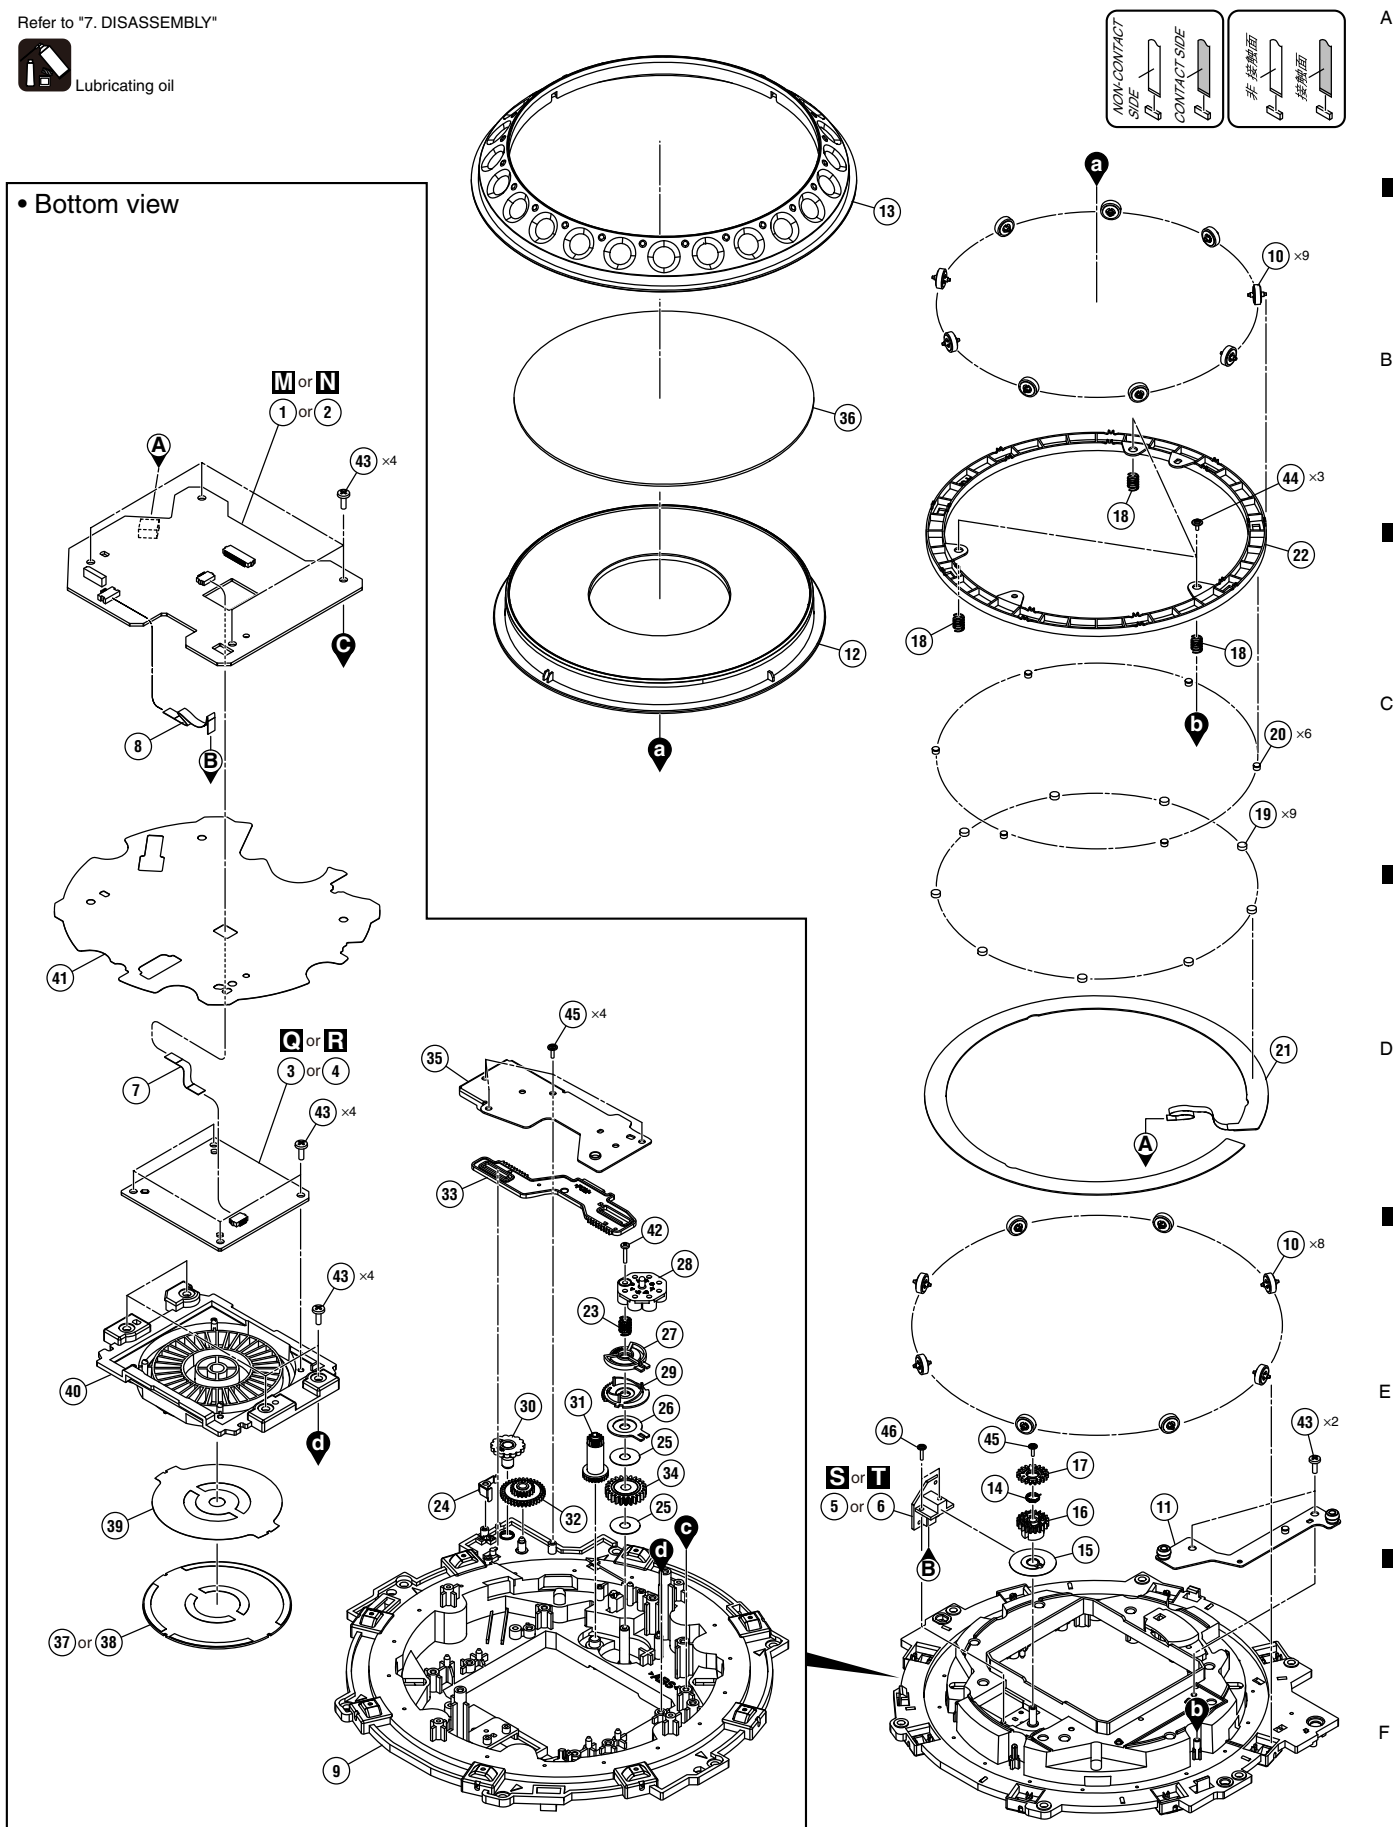

JOG DIAL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	JGB1 Assy	DWX4874
	2	JGB2 Assy	DWX4875
	3	JLED1 Assy	DWX4876
	4	JLED2 Assy	DWX4877
	5	JOG1 Assy	DWX4884
	6	JOG2 Assy	DWX4885
	7	FFC	DDD2164
	8	FFC	DDD1843
	9	Holder	DNK6925
	10	Roller	DXB2178
B	11	Stay Assy/Jog	DXB2133
	12	Jog Dial	DNK7150
	13	Jog Dial	DNK7151
	14	Encoder Spring	DBH1710
	15	Plate	DEC3700
	16	Gear/A	DNK6143
	17	Gear/B	DNK6144
	18	SW Spring	DBH1681
	19	SW Cushion Hh48/2	DEC2538
	20	Cushion	DEC4140
C	21	Sheet SW	DSX1078
	22	SW Ring	DNK5233
	23	Coil Spring/LD	DBH1798
	24	Leaf Spring/ADJ	DBK1376
	25	Washer	DEC3137
	26	Smoother	DNK5237
	27	Comp Plate	DNK5243
	28	Adjust Plate	DNK5300
	29	Cam Plate	DNK5301
	30	Dial Gear	DNK5302
D	31	Link Gear A	DNK5303
	32	Link Gear B	DNK5304
	33	Plate	DNK6748
	34	Gear/LD	DNK6145
	35	Plate	DNH3345
	36	Window	DAH3420
	37	Sheet (For Left Deck)	DEC4100
	38	Sheet (For Right Deck)	DEC4101
	39	Sheet	DEC4102
	40	Holder	DNK7152
E	41	Barrier	DEC4108
	42	Screw	BPZ20P100FTC
	43	Screw	BPZ30P080FTC
	44	Screw (FE)	DBA1265
	45	Screw	IPZ20P060FTC
F	46	Screw	IPZ20P080FTC