

△

A

- B**



(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
	1 USB Cable	DDE1150	NSP 10	Polyethylene Bag (0.06*230*340)	AHG7117	
⚠	2 Power Cord	See Contrast table (2)	11	Packing Board	DHC1109	A
⚠	3 AC Adapter	DWR1591	12	Packing Board	DHC1111	
	4 Quick Start Guide	See Contrast table (2)	13	Packing Pad	DHA2018	
	5 Precautions for Use	See Contrast table (2)	14	Packing Pad	DHA2019	
NSP	6 Serato DJ Pro Expansion Pack voucher	•••••	15	Mirror Mat (1200*1000)	DHL1169	
NSP	7 Leaflet	DRM1434	16	Packing Case	DHG3828	
NSP	8 Warranty	See Contrast table (2)	17	Carton	See Contrast table (2)	
	9 Marking sticker	DRW3027	18	Label	See Contrast table (2)	
			19	Label	See Contrast table (2)	
			20	Label	See Contrast table (2)	B

(2) CONTRAST TABLE

DDJ-REV7/LSYXJ, CUXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-REV7/LSYXJ	DDJ-REV7/CUXJ	DDJ-REV7/XJCN	
⚠	2	Power Cord	ADG1154	XDG3052	ADG7079	
	4	Quick Start Guide	DRH1659	DRH1659	DRH1664	C
	5	Precautions for Use	DRH1660	DRH1660	DRH1666	
NSP	8	Warranty	DRY1274	Not used	Not used	
	17	Carton	DHG3836	DHG3829	DHG3838	
	18	Label	DRW3017	Not used	DRW3019	
	19	Label	Not used	Not used	DRW3020	
	20	Label	Not used	Not used	DRW3021	

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	RLY1 Assy	DWX4576	16	Knob	DAA1463	
2	RLY2 Assy	DWX4577	17	Knob	DAA1464	A
3	JOGCC Assy	DWX4600	18	Knob	DAA1467	
4	FFC	DDD2039	19	Knob	DAA1468	
5	FFC	DDD2040	20	Knob	DAA1469	
6	FFC	DDD2041	21	Knob	DAC3088	■
7	Parallel Jumper	PF10PP-S22A	22	Knob	DAC3233	
⚠ 8	Chassis	DNK7013	23	Slider Knob 2	DAC2685	
9	Sheet/Leg	DEC3534	24	Stopper	DNK6440	
10	Plate	DAH3300	25	Knob	DNK6682	
11	Dial Knob	DAA1246	26	Hook	DNK6755	B
12	Knob/CL	DAA1320	27	Screw	BBZ30P060FTB	
13	Knob	DAA1346	28	Screw	BBZ30P080FTB	
14	Knob	DAA1434	29	Screw	BBZ30P080FTC	
15	Knob	DAA1435	30	Screw	BPZ30P100FTB	■
			31	Screw	BPZ30P080FNI	
			32	Screw	BPZ30P080FTB	
			NSP 33	Name Label	See Contrast table (2)	

(2) CONTRAST TABLE

DDJ-REV7/LSYXJ, CUXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-REV7/LSYXJ	DDJ-REV7/CUXJ	DDJ-REV7/XJCN
NSP	33	Name Label	Not used	Not used	DRW3016

A

 

B

C

D

E

F

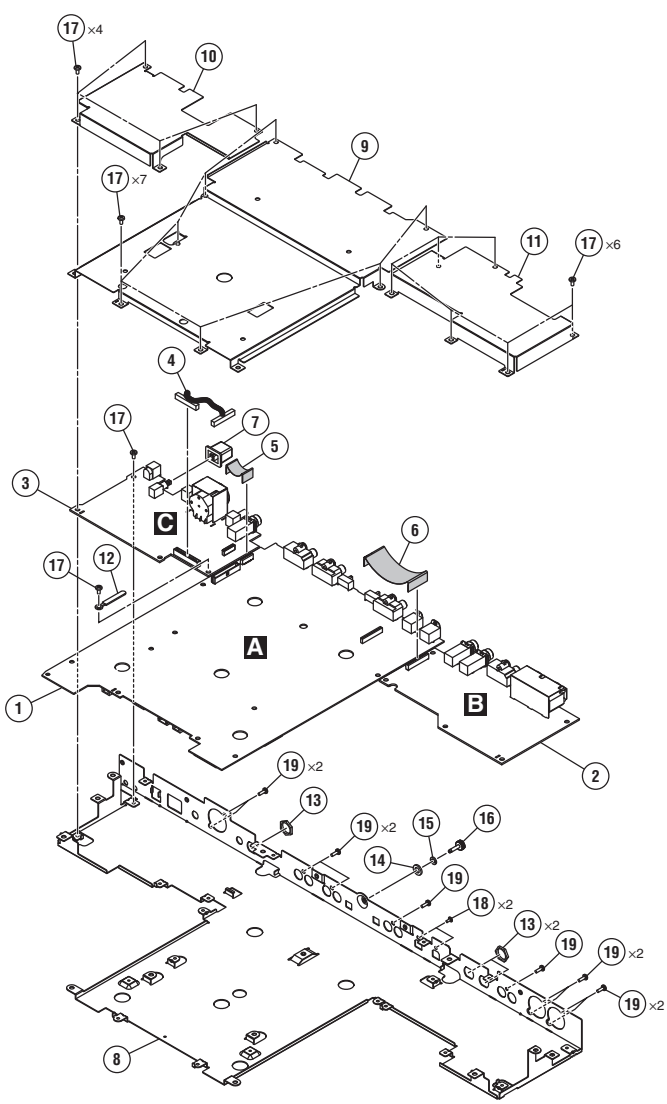

REAR PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWX4571	11	Shield Plate	DNH3485
2	AOUT Assy	DWX4594	12	Cord Clamper	DEX1025
3	DCMC Assy	DWX4591	13	Nut	NKX2FTC
4	Parallel Jumper	PF15PP-S07A	14	Washer	WA32F100Q050
5	FFC	DDD2036	15	Spring Lock Washer	WS40FNI
6	FFC	DDD2037	16	Earth Terminal	DKE1015
7	Power Knob	DAC2306	17	Screw	BBZ30P060FTC
8	Stay	DNH3479	18	Screw (M3*5)	DBA1340
9	Shield Plate	DNH3483	19	Screw	PPZ30P080FTB
10	Shield Plate	DNH3484			


9.4 CONTROL PANEL SECTION (1/3)

- Bottom view

- Top view

Refer to
"9.7 CROSSFADER and
CHANNEL FADER SECTION".

Refer to
"9.7 CROSSFADER and
CHANNEL FADER SECTION".

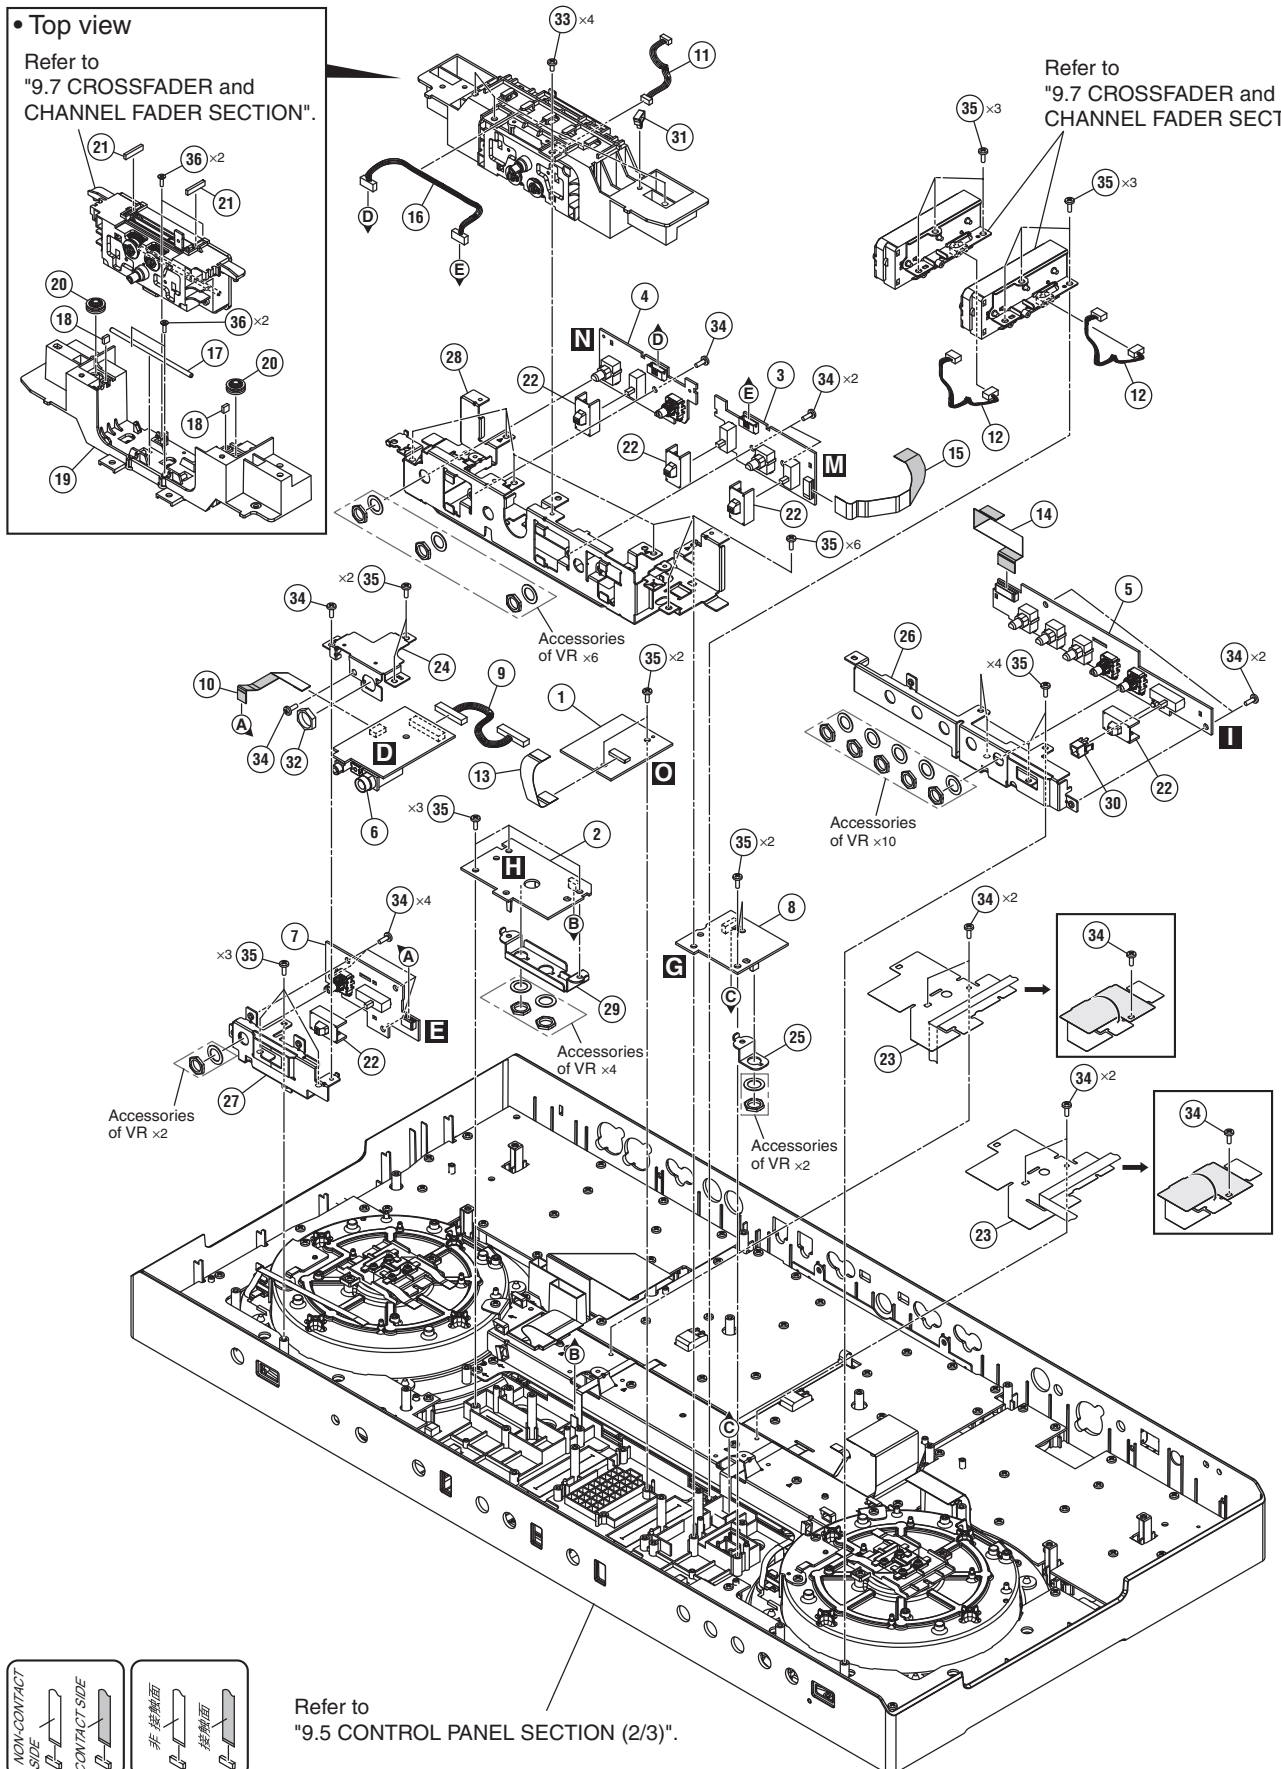

1 2 3 4

CONTROL PANEL SECTION (1/3) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	LVLN Assy	DWX4596
	2	HPMX Assy	DWX4584
	3	FDC1 Assy	DWX4592
	4	FDC2 Assy	DWX4597
	5	MICS Assy	DWX4593
	6	HPJK Assy	DWX4585
	7	AUXB Assy	DWX4586
	8	SMPL Assy	DWX4589
	9	Parallel Jumper	PF13PP-B12A
	10	FFC	DDD2038
B	11	Connector Assy	PF04PP-B07
	12	Connector Assy	PF03PP-B12
	13	FFC	DDD2055
	14	FFC	DDD2057
	15	FFC	DDD2058
	16	Parallel Jumper	PF06PP-B15A
	17	Guide Bar	VLL1514
	18	Cushion	DEC3640
	19	Holder	DNK7027
	20	Damper/Sl	DEB2008
C	21	Cushion	DEC3605
	22	Cap/MIC	DAC2773
	23	Sheet	DEC4010
	24	Stay/HP	DNH3182
	25	Stay	DNH3214
	26	Stay	DNH3481
	27	Stay	DNH3482
	28	Stay	DNH3489
	29	Stay	DNH3490
	30	Cover	DNK7030
D	31	Locking Mini Clamp	DEC2439
	32	Nut M12	DBN1018
	33	Screw	BBZ30P060FTC
	34	Screw	BBZ30P080FTC
	35	Screw	BPZ30P080FNI
	36	Screw	CPZ26P080FTC

E

F


1 2 3 4

CONTROL PANEL SECTION (2/3) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 OLED Assy	DWX4595
	2 PADB Assy	DWX4572
	3 DCK1R Assy	DWX4582
	4 DCK1F Assy	DWX4583
	5 DCK2R Assy	DWX4587
	6 DCK2F Assy	DWX4588
	7 MIXB Assy	DWX4590
	8 OLED Assy (Service)	DEA1079
	9 FFC	DDD2045
	10 FFC	DDD2046
B	11 FFC	DDD2047
	12 FFC	DDD2048
	13 FFC	DDD2049
	14 FFC	DDD2050
	15 FFC	DDD2051
	16 FFC	DDD2052
	17 FFC	DDD2053
	18 FFC	DDD2054
	19 FFC	DDD2056
	20 Cap	DAC3136
C	21 Pad	DEB2085
	22 Sheet	DEC3994
	23 Lever	DAC3081
	24 Lever Spring	DBH1702
	25 Lever Cap	DNK5344
	26 Holder	DNK6435
	27 Sheet	DEC4009
	28 Stay	DNH3214
	29 Stay	DNH3480
	30 Frame	DNH3488
D	31 Stay	DNH3491
	32 Support	DNK7024
	33 Locking Mini Clamp	DEC2439
	34 Spacer	DEC4048
	35 Spacer	DEC4049
	36 Screw	BBZ30P080FTC
	37 Screw	BPZ26P080FTC
	38 Screw	BPZ30P080FNI
E		
F		

9.6 CONTROL PANEL SECTION (3/3)

• Bottom view

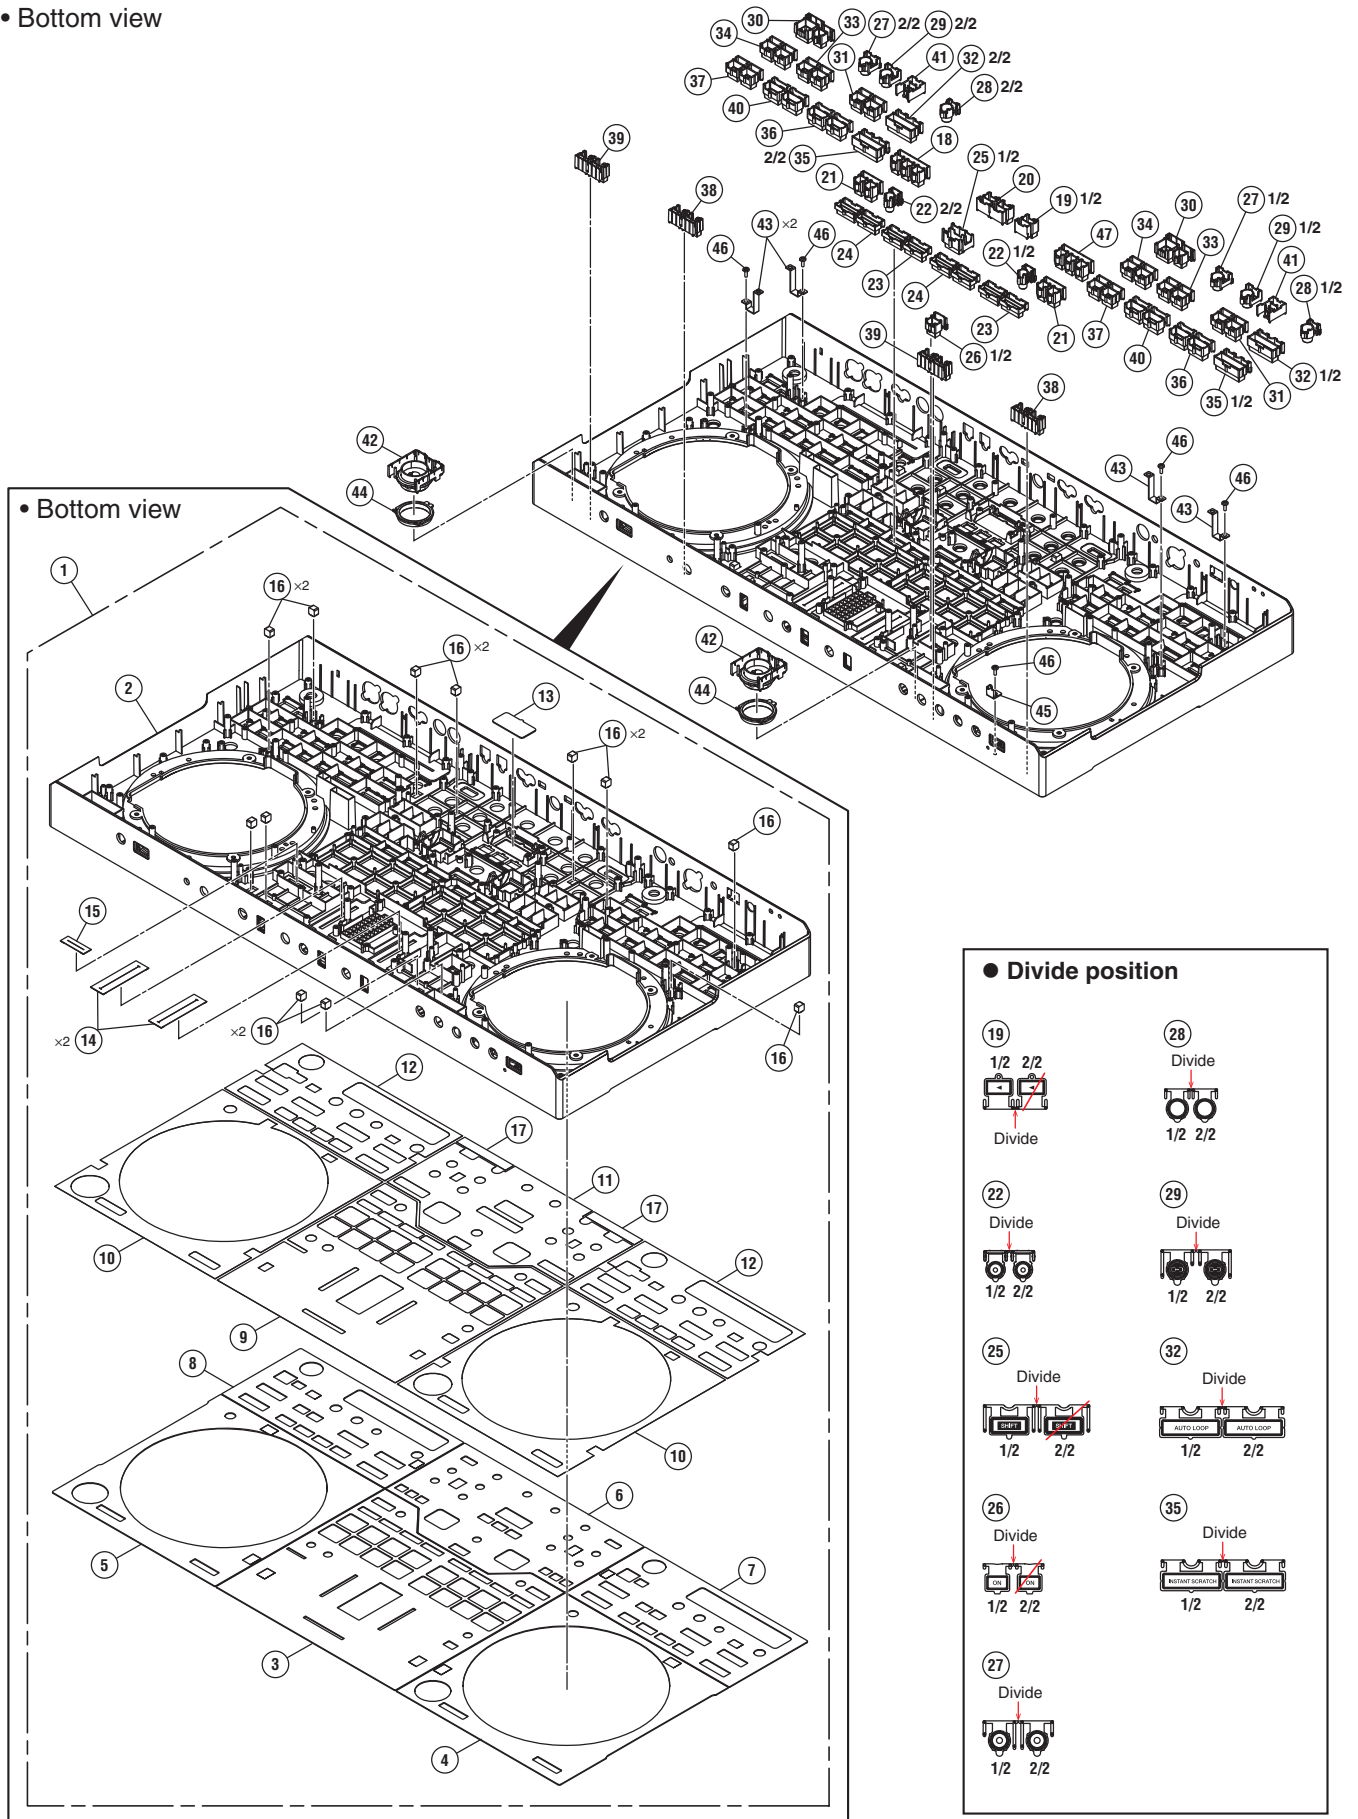


CONTROL PANEL SECTION (3/3) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
	1	1..DDJ-REV7 Panel Service Assy	DEA1135
A	 2	2..Control Panel	DNK7028
NSP	3	2..Plate	DAH3362
NSP	4	2..Plate	DAH3363
NSP	5	2..Plate	DAH3364
	6	2..Plate	DAH3365
	7	2..Plate	DAH3366
	8	2..Plate	DAH3367
	9	2..DS Tape	DEH1116
	10	2..DS Tape	DEH1117
B	NSP 11	2..DS Tape	DEH1119
	NSP 12	2..DS Tape	DEH1120
	13	2..Window	DAH3034
	14	2..Fader Packing	DEC3355
	15	2..Fader Packing (B)	DEC2572
	16	2..Gasket	DEC3719
	NSP 17	2..DS Tape	DEH1129
	18	Button	DAC3595
	19	Button	DAC3596
C	20	Button	DAC3597
	21	Button	DAC3598
	22	Button	DAC3599
	23	Button	DAC3600
	24	Button	DAC3601
	25	Button	DAC3602
	26	Button	DAC3603
	27	Button	DAC3604
	28	Button	DAC3605
D	29	Button	DAC3606
	30	Button	DAC3607
	31	Button	DAC3608
	32	Button	DAC3609
	33	Button	DAC3610
	34	Button	DAC3611
	35	Button	DAC3612
	36	Button	DAC3613
	37	Button	DAC3614
E	38	Button	DAC3616
	39	Button	DAC3617
	40	Button	DAC3618
	41	Button/REL	DAC3030
	42	Button Unit	DXB2217
	43	Stay	DNH3413
	44	Ring Lens (PLAY)	DNK5315
	45	Lens	DNK7029
F	46	Screw	BPZ30P080FNI
	47	Button	DAC3594

9.7 CROSSFADER and CHANNEL FADER SECTION


• Crossfader Section

Refer to
"7. DISASSEMBLY"

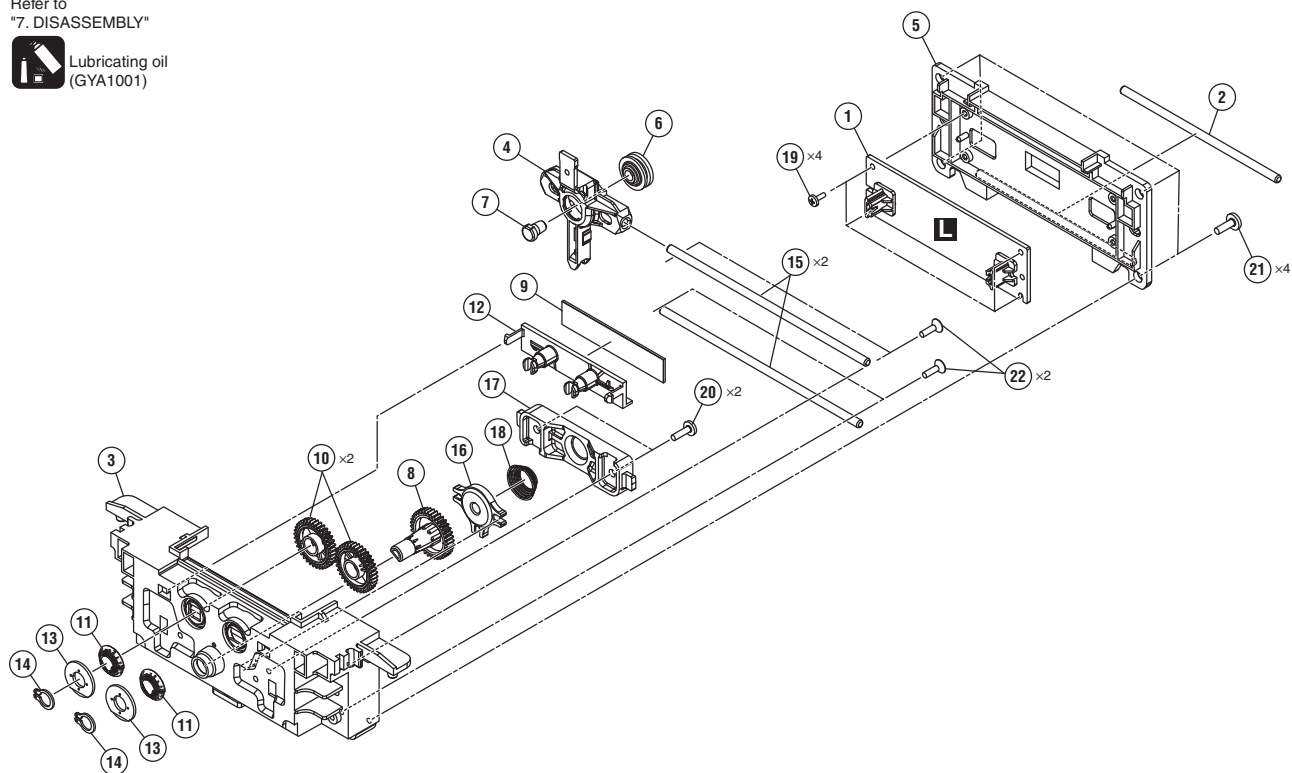

• Channel fader Section

Refer to
"7. DISASSEMBLY"

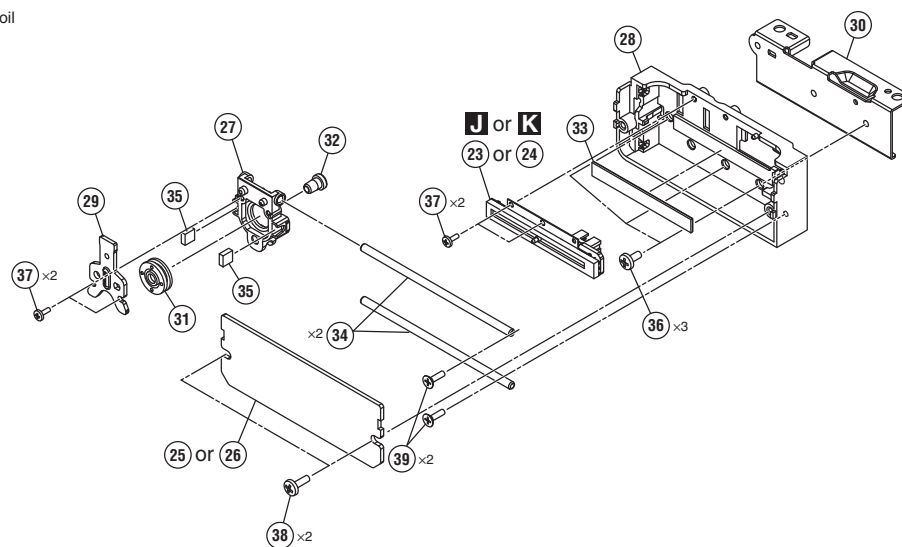


CROSSFADER and CHANNEL FADER SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	NSP 1	CRFD Assy	DWX4575
	2	Guide Bar	VLL1514
	3	Holder	DNK7026
	4	Slider	DEA1095
	5	Holder	DNK6432
B	6	Damper	DEB2032
	7	Brake	DNK6427
	8	Gear	DNK7031
	9	Felt	DEC3950
	10	Gear	DNK6430
C	11	Spring	DBH1809
	12	Brake	DNK7032
	13	Bush (MA)	DNK5086
	14	Washer	YC60FAC
	15	Shaft	DLA2240
D	16	Brake	DNK6445
	17	Plate	DNK6446
	18	Spring/TRQ	DBH1792
	19	Screw	BPZ20P050FTC
	20	Screw	BPZ26P080FTC
E	21	Screw	BPZ30P080FNI
	22	Screw	CPZ26P080FTC
	23	CHF1 Assy	DWX4573
	24	CHF2 Assy	DWX4574
	25	CHF1C Assy	DWX4686
F	26	CHF2C Assy	DWX4687
	27	Slider	DNK6426
	28	Holder	DNK7025
	29	Lever	DNH3211
	30	Stay	DNF2089
	31	Damper	DEB2032
	32	Brake	DNK6427
	33	Felt	DEC3603
	34	Guide Bar	VLL1514
	35	Cushion	DEC3640
	36	Screw	BBZ30P060FTC
	37	Screw	BPZ20P050FTC
	38	Screw	BPZ30P080FNI
	39	Screw	CPZ26P080FTC

5


9.8 JOG DIAL SECTION

• Bottom view

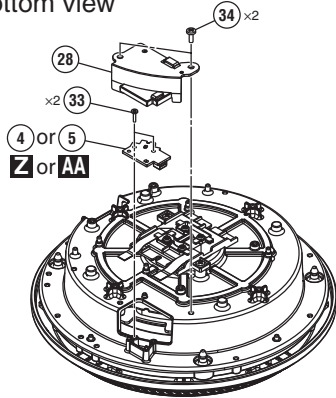


• Top view


• Top view

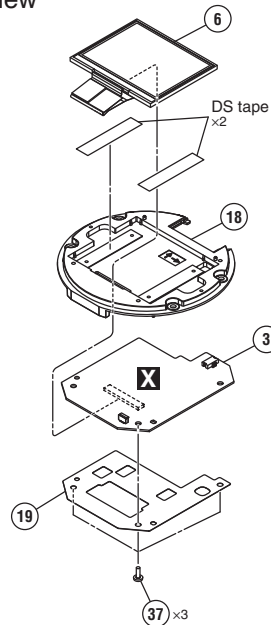

• Top view

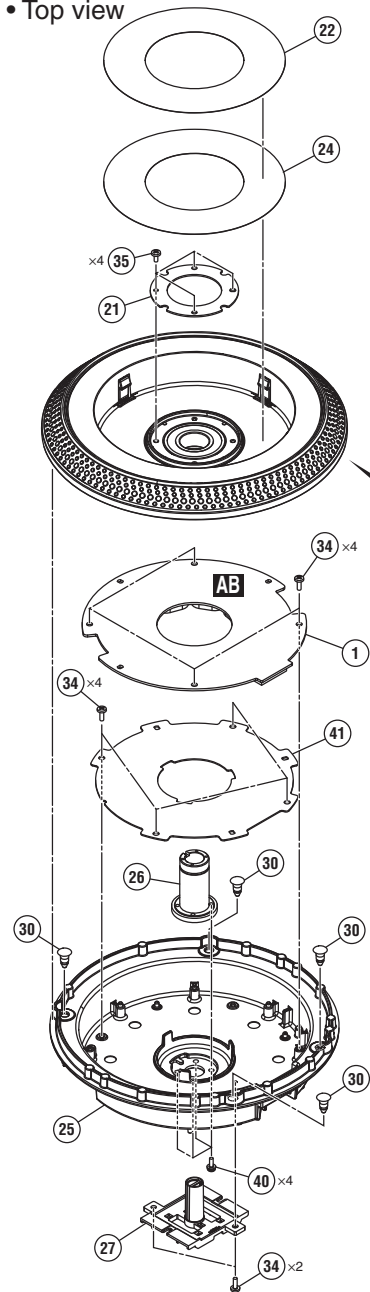


• Bottom view

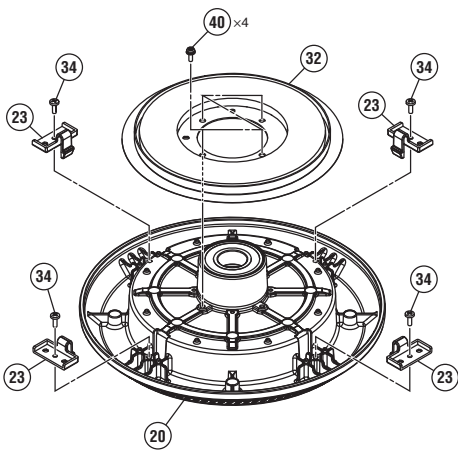

Refer to
"7. DISASSEMBLY"




Lubricating oil
(GEM1113)

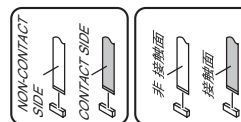

Refer to
"7. DISASSEMBLY"



Lubricating oil
(GEM1113)

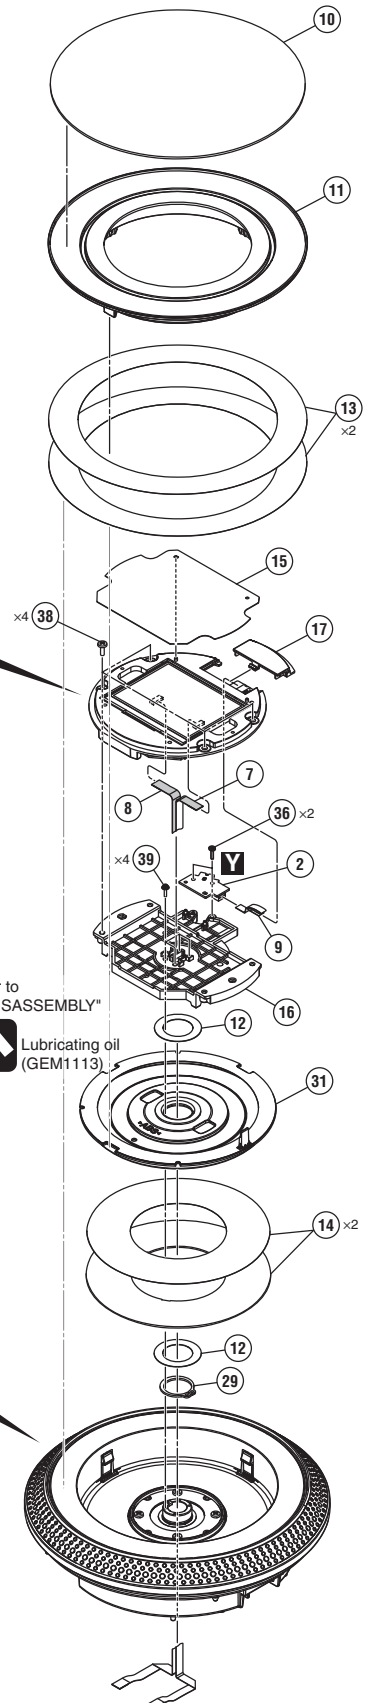

JOG DIAL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MOTOR Assy	DWX4580
	2	ENCV Assy	DWX4578
	3	JLCD Assy	DWX4579
	4	ENCP1 Assy	DWX4581
	5	ENCP2 Assy	DWX4599
	6	TFT LCD	DWX4567
	7	FFC	DDD2042
	8	FFC	DDD2043
	9	FFC	DDD2044
	10	Window	DAH3368
B	11	Base	DNK7015
	12	Washer	DEC4002
	13	Sheet	DEC4003
	14	Sheet	DEC4005
	15	Sheet	DEC4007
	16	Base	DNK7017
	17	Cover	DNK7019
	18	Holder	DNK7021
	19	Sheet	DEC4008
	20	Platter	DNS1233
C	21	Plate	DNH3486
	22	Base	DNK7018
	23	Hook	DNK7022
	24	DS Tape	DEH1122
	25	Base	DNS1231
	26	Shaft	DLA2283
	27	Boss	DNK7023
	28	Cover	DNK7020
	29	C Ring	DBG1004
	30	PCB Holder	PNW1706
D	31	DDJ-REV7 Slit 1 Service Assy	DEA1136
	32	DDJ-REV7 Slit 2 Service Assy	DEA1137
	33	Screw	BBZ20P080FTB
	34	Screw	BBZ30P080FTC
	35	Screw	BMZ30P060FTB
	36	Screw	BPZ20P080FTC
	37	Screw	BPZ30P080FNI
	38	Screw	BPZ30P080FTB
	39	Screw	PMB20P080FNI
	40	Screw	PMH30P080FTB
E	41	Yoke	DNH3487
F			