


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

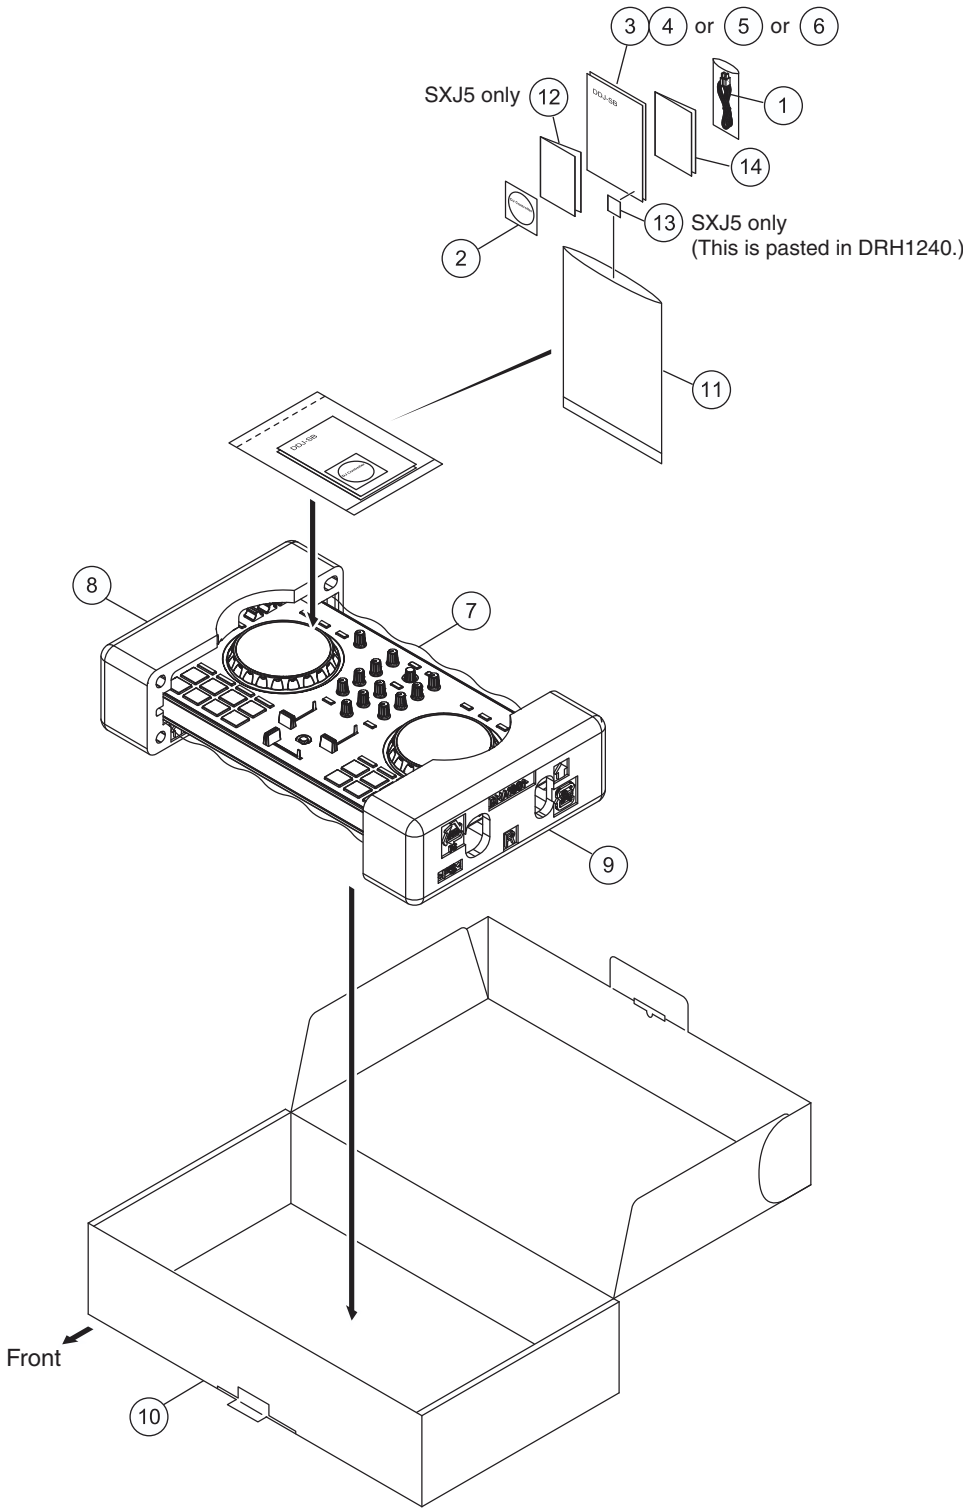

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	USB Cable	DDE1128	8	Pad/L	DHA1900	
2	CD-ROM (Installation Disc)	DXX2742	9	Pad/R	DHA1901	A
3	Read Before Use (Important) /Quick Start Guide	See Contrast table (2)	10	Packing Case	See Contrast table (2)	
4	Read Before Use (Important) /Quick Start Guide	See Contrast table (2)	NSP 11	Polyethylene Bag	AHG7117	
			NSP 12	Warranty	See Contrast table (2)	
5	Read Before Use (Important) /Quick Start Guide	See Contrast table (2)	13	Label/IM1	See Contrast table (2)	
6	Read Before Use (Important) /Quick Start Guide	See Contrast table (2)	NSP 14	Label/K	See Contrast table (2)	
7	Packing Sheet	AHG7053				B

(2) CONTRAST TABLE

DDJ-SB/SXJ5, KXJ5 and XJCN5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>DDJ-SB /SXJ5</u>	<u>DDJ-SB /KXJ5</u>	<u>DDJ-SB /XJCN5</u>	
	3	Read Before Use (Important)/Quick Start Guide (En, Fr, De, It, NI)	DRH1239	Not used	Not used	
	4	Read Before Use (Important)/Quick Start Guide (Es, Po, Ru, Ja)	DRH1240	Not used	Not used	
	5	Read Before Use (Important)/Quick Start Guide (Ko)	Not used	DRH1242	Not used	C
	6	Read Before Use (Important)/Quick Start Guide (Zhcn)	Not used	Not used	DRH1241	
	10	Packing Case	DHG3289	DHG3300	DHG3299	
NSP	12	Warranty	ARY7158	Not used	Not used	
	13	Label/IM1	DRW2534	Not used	Not used	
NSP	14	Label/K	Not used	DRW2600	Not used	

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	
1	IFPW Assy	DWX3569	
2	PNL1 Assy	DWX3570	A
3	PNL2 Assy	DWX3571	
4	CRFD Assy	DWX3573	
5	HOLD Assy	DWX3575	
6	FFC	ADD7796	■
7	FFC/19P	DDD1671	
8	Leg/RBR	AEB1511	
9	Plate/JOG	DAH2981	
10	Gasket/JOG	DEC3539	
11	DS Tape/JOG	DEH1042	B
12	Jog Dial	DNK6277	
13	Dial Knob S (B)	DAA1273	
14	Knob/PLS	DAA1324	
15	Slider Knob 1	DAC2684	■
16	Slider Knob 2	DAC2685	
17	Button/BLK	DAC2950	
18	Button/MIX	DAC2951	
19	Button/OPL	DAC2952	
20	Button/PAD	DEB2009	C
21	Fader Packing	DEC3355	
22	Sheet/PNL	DEC3543	
23			
24	Stay/PCB	DNH3135	
25	Stay/FRT	DNH3136	■
26	Plate/CND	DNH3137	
27	Plate/CHF	DNH3146	
28	Stopper/SLD	DNK6009	
29	Knob/SLD	DNK6283	D
30	Control Panel	DNK6280	
31	Chassis	DNK6282	
32			
33			■
34	Nut (M12)	NKX2FNI	
35	Washer	WA62D095D050	
36	Washer	YC60FAC	
37	Screw	BBZ30P060FTC	
38	Screw	BPZ30P080FNI	E
39	Screw	BPZ30P100FTB	
40	Screw (M3*5)	DBA1340	
41	Screw	PMH20P040FTC	■

F