

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	
1	IFPW Assy	DWX3569	
2	PNL1 Assy	DWX3740	A
3	PNL2 Assy	DWX3741	
4	CRFD Assy	DWX3742	
5	HOLD1 Assy	DWX3743	
6	HOLD2-1 Assy	DWX3787	■
7	HOLD2-2 Assy	DWX3788	
8	FFC	ADD7796	
9	FFC/19P	DDD1671	
10	Rubber Foot	VEB1349	
11	Plate	DAH3038	B
12	Gasket/JOG	DEC3539	
13	DS Tape/JOG	DEH1042	
14	Jog Dial	DNK6346	
15	Dial Knob S (B)	DAA1273	■
16	Knob/PLS	DAA1324	
17	Knob	DAA1351	
18	Button S (Opal)	DAC2662	
19	Slider Knob 1	DAC2684	
20	Slider Knob 2	DAC2685	C
21	Button/MIX	DAC2951	
22	Button/OPL	DAC2952	
23	Button	DAC3098	
24	Button	DAC3151	
25	Button	DAC3152	■
26	Plate	DAH3036	
27	Button	DEB2016	
28	Fader Packing	DEC3355	
29	Sheet/PNL	DEC3543	D
30	Stay	DNH3240	
31	Plate/CND	DNH3137	
32	Plate/CHF	DNH3146	
33	Stay	DNH3218	■
34	Stopper/SLD	DNK6009	
35	Control Panel	DNK6454	
36	Chassis	DNK6471	
37	Knob	DNK6530	
38			E
39			
40	Nut (M12)	NKX2FNI	
41	Washer	WA62D095D050	
42	Washer	YC60FAC	■
43	Screw	BBZ30P060FTC	
44	Screw	BPZ30P080FNI	
45	Screw	BPZ30P100FTB	
46	Screw (M3*5)	DBA1340	
47	Screw	PMH20P040FTC	F