


9. EXPLODED VIEWS AND PARTS LIST

NOTES: • Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 • The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 • Screws adjacent to  mark on product are used for disassembly.
 • For the applying amount of lubricants or glue, follow the instructions in this manual.
 (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

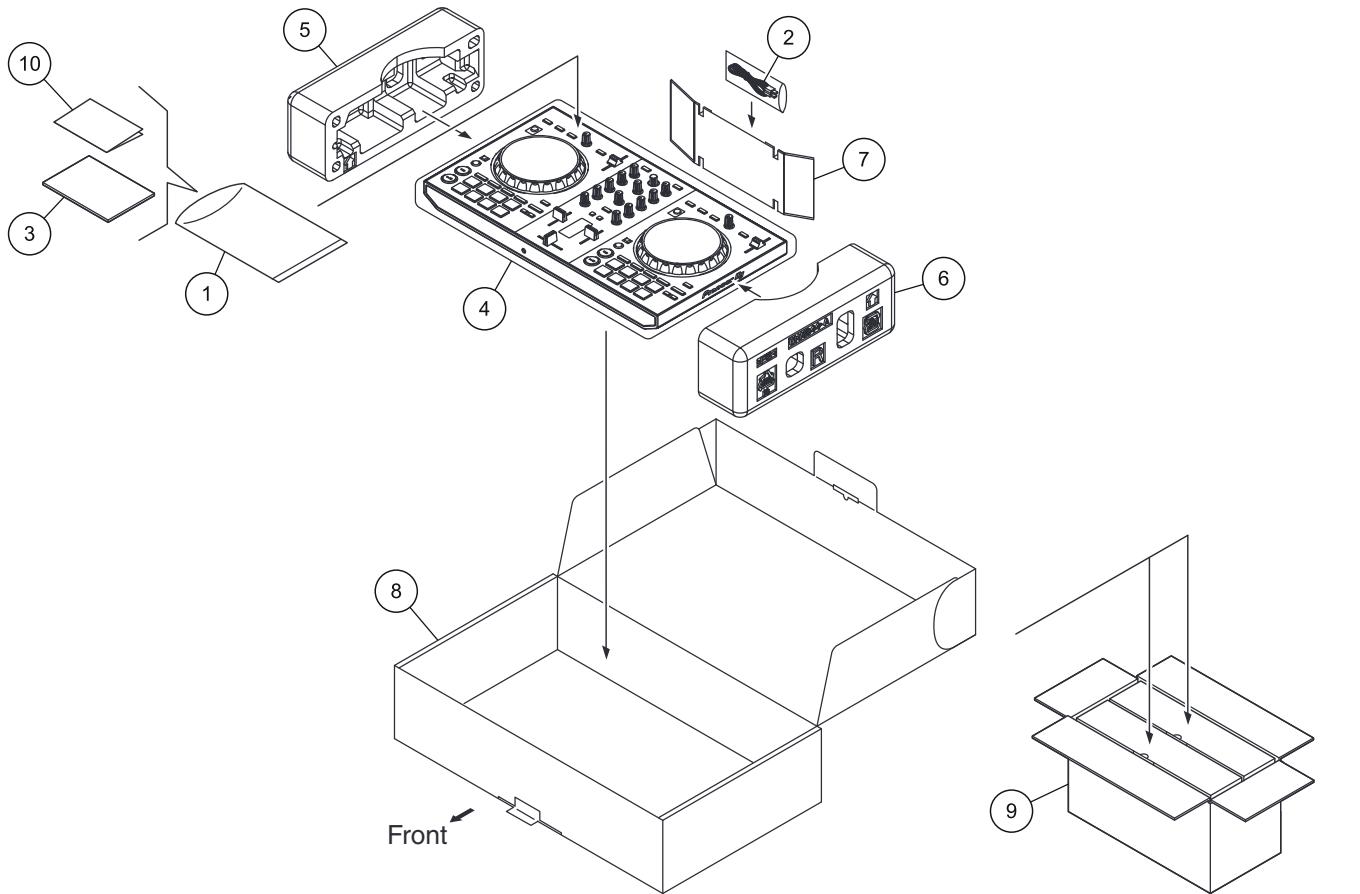

(1) PACKING SECTION PARTS LIST




<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP	1 Polyethylene Bag	AHG7117	6	Packing Pad	DHA1944
	2 USB Cable	DDE1150	7	Partition/ACC	DHC1085
	3 Operating Instructions (Quick Start Guide)	See Contrast table (2)	8	Packing Case	See Contrast table (2)
	4 Packing Sheet	AHG7053	9	Master Carton	See Contrast table (2)
	5 Packing Pad	DHA1943	NSP	10 Warranty	See Contrast table (2)

(2) CONTRAST TABLE

SXJ and XJCN are constructed the same except for the following:


<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>SXJ</u>	<u>XJCN</u>
	3	Operating Instructions (Quick Start Guide)	DRH1498	DRH1499
	8	Packing Case	DHG3622	DHG3623
	9	Master Carton	DHG3625	DHG3626
NSP	10	Warranty	DRY1270	Not used

9.2 EXTERIOR SECTION

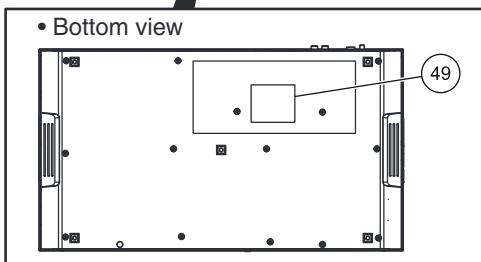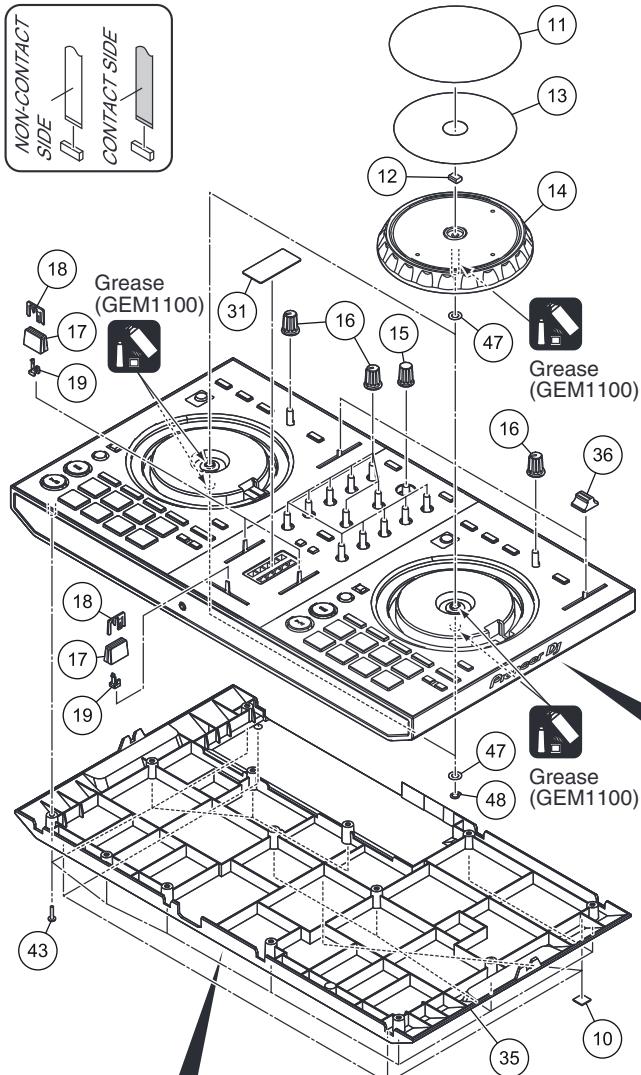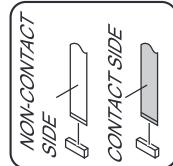

Note

- E • For details of Grease application, refer to **“7. DISASSEMBLY [4-1] Procedure for applying grease during reassembly of the Jog Dial”**.
- E • For details of Acetate Tape paste, refer to **“1.3 SERVICE NOTICE ■ Paste Asetate Tape on the back face of PCB”**.
- E • For splitting buttons, refer to **“7. DISASSEMBLY [2] Notes on Replacing Buttons”**.
- E • If product rattles, refer to **“1.3 SERVICE NOTICE ■ How to modify when rattling of product is occurred”**.
- E • For details of No. 50 Spacer paste, refer to **“7. DISASSEMBLY [4-5] About correspondence for Performance Pad and Mode Button click feeling improvement”**.

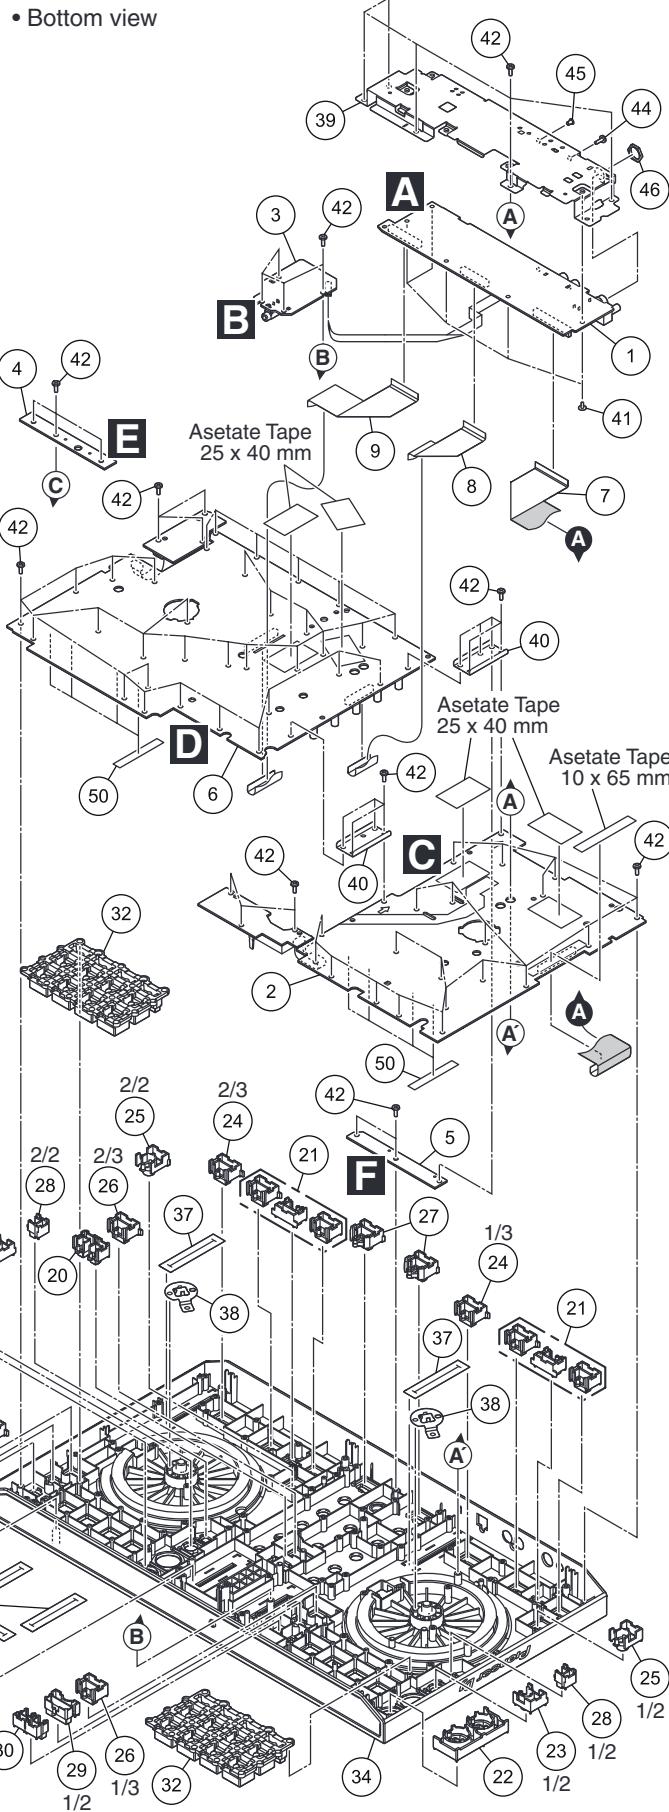

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	MAIN ASSY	DWX4132	26	Button	DAC3375
2	DCK1 ASSY	DWX4133	27	Button	DAC3151
3	HPJK ASSY	DWX4135	28	Button	DAC3376
4	HLD1 ASSY	DWX4136	29	Button	DAC3350
5	HLD2 ASSY	DWX4137	30	Button	DAC3221
6	PNL2 ASSY	DWX4134	31	Panel	DAH3204
7	FFC	DDD1771	32	Button	DEB2064
8	FFC	DDD1851	33	••••	
9	FFC	DDD1852	34	Control Panel	DNK6759
10	Rubber Foot	VEB1349	35	Chassis	DNK6760
11	Plate	DAH3205	36	Knob	DNK6530
12	Gasket/JOG	DEC3539	37	Sheet	DEC3795
13	DS Tape/JOG	DEH1042	38	Plate/CND	DNH3137
14	Jog Dial	DNK6768	39	Stay	DNH3352
15	Dial Knob S(B)	DAA1273	40	Plate	DNH3353
16	Knob/PLS	DAA1324	41	Screw	ASZ26P050FTC
17	Slider Knob 1	DAC2684	42	Screw	BPZ30P100FTC
18	Slider Knob 2	DAC2685	43	Screw	BPZ30P120FTB
19	Stopper/SLD	DNK6009	44	Screw	BPZ30P080FTB
20	Button/FX	DAC2796	45	Screw (M3 x 5)	DBA1340
21	Button	DAC3373	46	Nut (M12)	NKX2FNI
22	Button	DAC3379	47	Washer	WA62D095D050
23	Button	DAC3230	48	Washer	YC60FAC
24	Button/OPL	DAC2952	NSP	49 Name Label	See Contrast table (2)
25	Button	DAC3098		50 Spacer	DEC3808

* Cross fader part and deck 2 side tempo slider part are connected with parallel jumper wires, but the service parts are not supplied as board ASSY.

Please correspond by parts replacement.
If you can not respond by replacing parts, order DCK 1 ASSY, PNL 2 ASSY.

D

(2) CONTRAST TABLE

SXJ and XJCN are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>SXJ</u>	<u>XJCN</u>
NSP	49	Name Label	Not used	DRW2765

E

F