

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.


● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ▼ mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

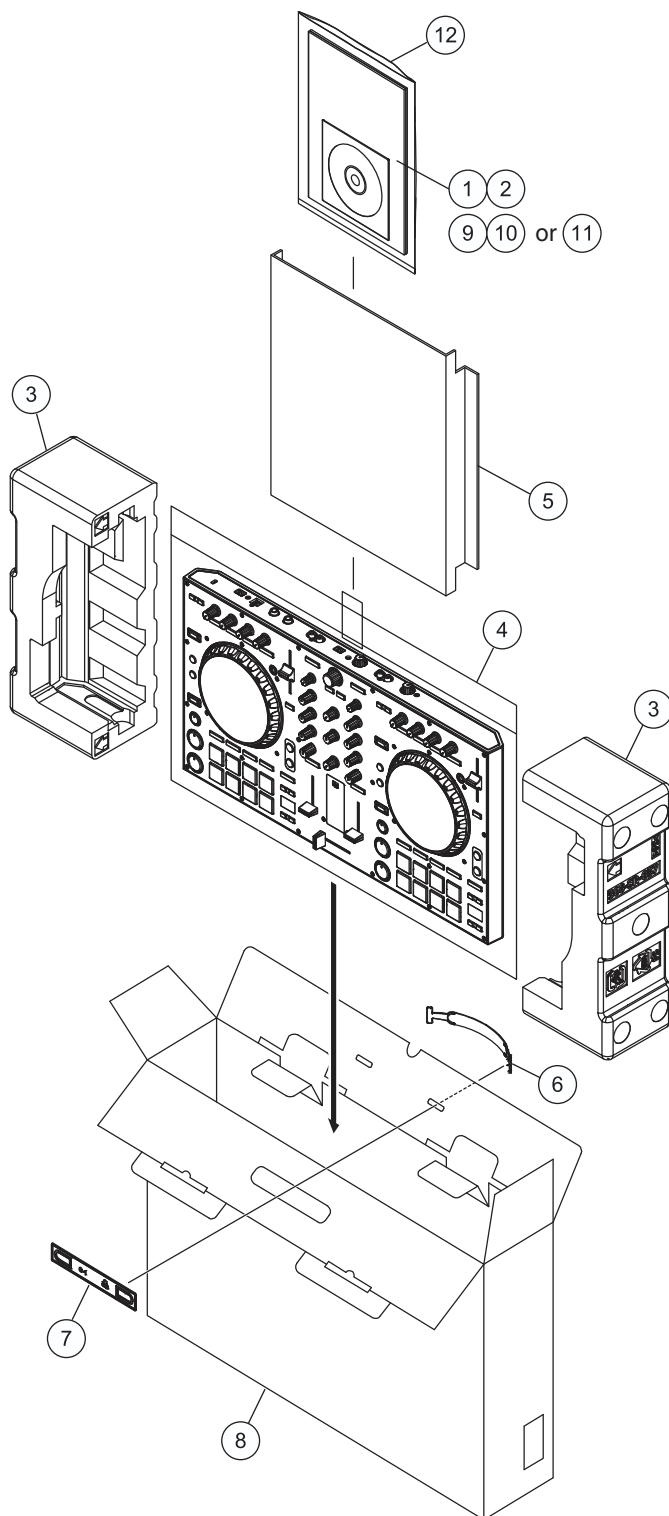

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	USB Cable (L = 1500 mm)	408-SUB-132
2	CD-ROM (Installation Disc)	••••• (To Be Determined)
3	Polyfoam	506-SR-657
4	Soft Bag	509-SR-328
5	Paster Board	507-SR-3440
6	Handle	100-SX-3017
7	Handle Base	100-SX-3018
8	Gift Box	See Contrast table (2)
9	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
10	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
11	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
12	PE Bag	505-DJM250-014

(2) CONTRAST TABLE

DDJ-SR/CKSUVYXE5 and XECN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SR /CKSUVYXE5	DDJ-SR /XECN5
	8	Gift Box	507-SRA-3449A	507-SRB-3449
	9	Read Before Use (Important)/Quick Start Guide (En, Fr, De, It, NI)	502-DDJSRA-3325A	Not used
	10	Read Before Use (Important)/Quick Start Guide (Es, Pt, Ru, Ko, Ja)	502-DDJSRA-3326A	Not used
	11	Read Before Use (Important)/Quick Start Guide (Zhcn)	Not used	502-DDJSRB-3327

△



(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 MIC PCB Assy	704-SR-A601	46	On/On Button	100-ON-3055
	2 HEADPHONE PCB Assy	704-SR-A600	47	Hot Cue/Roll Button	100-ROLL-3055
	3 MIXER PCB Assy	704-SR-A597	48	Slice/Sampler Button	100-SLICER-3055
	4 CROSS FADER PCB Assy	704-DJM250-A032	49	On/Tap Button	100-TAP-3055
	5 PANEL-L PCB Assy	704-SR-A599	50	On Button	100-ON-3056
	6 PANEL-R PCB Assy	704-SR-A598	51	Tap Hold Button	100-TAP-3056
	7 Wheel Assy	701-SR-5350	52	JW Ring	100-SR-3060
	8 I/O PCB Assy	704-SR-A596	53	Locking Cable Clip	300-HM510B-224
	9 Output Board	300-SR-2089	54	Fixed Cover	300-33-1918
	10 Screw	602-HP1010K-181	55	Front Panel	300-SR-2086
B	11 Screw	602-MK7-131	56	Mixer Fixed Plate	300-SR-2088
	12 Screw	602-QMX2BPM-322N	57	K Lock Plate	300-SR-2091
	13 1..Pad & FSR Plate Assy kit	GXX1374	58	CF Fixed Plate	300-SR-2102
	14 2..Pad & FSR Plate Assy	704-SR-A629	59	MIC Ground Plate	300-SR-2104
	15 2..Washer	606-SR-270	60	Phone Ground Plate	300-SR-2105
	16 30P 1.0 FFC Cable	406-SR-1259	61	CF Ground Plate	300-SR-2106
	17 5P 1.0 FFC Cable	406-SR-1260	62	FFC Isolation Slice	501-SR-2589
	18 1P Ground Wire (L=70 mm)	406-SR-1267	63	MIC Isolation Slice	501-SR-2590
	19 1P Lead Wire	406-S1-1231	64	Spring	603-C304-335
	20 Push Button	100-22-2824	65	Velocity Soft Knob	604-SR-618
C	21 Little Round Button	100-S1-2991	66	Sponge	612-4MIX-416
	22 2 Key Button	100-S1-2992S	67	Foot Mat	612-S1-445
	23 Deck 1 Button	100-S1-2990	68	Sponge (8*6*18 mm)	612-S1-451
	24 Deck 2 Button	100-S1A-2990	69	Square Pad	612-SR-478
	25 Deck 3 Button	100-S1B-2990	70	1..Play Button Assy	701-DDJSR-5397
	26 Deck 4 Button	100-S1C-2990	NSP 71	2..Play Sync Button	100-SR-3057
	27 Jog Tuning Knob	100-DDJLE-2944	NSP 72	2..Lens	100-SR-3058
	28 CF Button	100-S1-3003	NSP 73	2..Little Lens	100-SR-3063
	29 Button	100-S1-3004	74	Numeral Lens	501-SR-2574
	30 Speed Push Button	100-S1-3005	75	LM Lens	501-SR-2575
D	31 FX Rotate Knob	100-S1-3006	76	VR Cushion	612-HDJ7000-056A
	32 Gain Rotate Knob	100-S1-3008	77	VR Cushion	612-IM-296
	33 Gain Rotate Knob	100-SR-3008	78	Chassis Assy	701-DDJSR-5398
	34 Filter Rotate Knob	100-S1-3009	79	Quant Lens	501-SR-2573
	35 Browser Rotate Knob	100-S1-3010	80	34P 1.0 FFC Cable	406-SR-1258
	36 Base	See Contrast table (2)	81	Nut	601-A100-004
	37 Shift Button	100-SHIFT-3053	82	E Ring	606-C304-209
	38 Rectangular Button	100-SR-3053	83	Washer (20*11*0.25T)	606-C304-210
	39 Vinyl Button	100-VINYL-3053	84	Screw	602-B300-041
	40 1/2 Button	100-12-3054	85	Screw	602-SL24F-099
E	41 Rectangular Button	100-DJSR-3054	86	Screw	602-HP1010K-182
	42 +/- Button	100-SR-3054	87	Screw	602-QMX2BPM-322
	43 Auto Button	100-AUTO-3055	88	Screw	602-QMX2BPM-322N
	44 Cue Button	100-CUE-3055	89	Screw	602-SA12-414
	45 Load Button	100-LOAD-3055	90	Screw	602-DJ5500-452
			91	Screw	602-A700-494
			92	Screw	602-PTP3012-571
			93	Screw	602-ST306-728B
			94	Screw	602-SW3008-737B
F					