

△

A

- B



(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
⚠	1 Power Cord	See Contrast table (2)	NSP 9	Polyethylene Bag	AHG7117	
⚠	2 AC Adapter	See Contrast table (2)	10	Handle	DEC3709	A
	3 USB Cable	DDE1128	11	Spacer	DEC3710	
NSP	4 Warranty	See Contrast table (2)	12	Packing Pad	DHA1955	
	5 Operating Instructions (Quick Start Guide)	See Contrast table (2)	13	Packing Pad	DHA1956	
	6 Operating Instructions (Quick Start Guide)	See Contrast table (2)	14	Packing Case	See Contrast table (2)	
	7 Operating Instructions (Quick Start Guide)	See Contrast table (2)	15	Partition	DHC1095	
	8 Operating Instructions (Quick Start Guide)	See Contrast table (2)	16	Packing Sheet	RHC1023	
			NSP 17	Leaflet	See Contrast table (2)	
			NSP 18	Serato DJ EXPANSION PACK VOUCHER	DEA1067	B
			NSP 19	Leaflet	DRM1421	
			NSP 20	Voucher Code Label Assy	DXA2343	

(2) CONTRAST TABLE

DDJ-SR2/SYXJ, UXJCB, XJCN and FWLPWXJ are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>DDJ-SR2 /SYXJ</u>	<u>DDJ-SR2 /UXJCB</u>	<u>DDJ-SR2 /XJCN</u>	<u>DDJ-SR2 /FWLPWXJ</u>	
⚠	1	Power Cord	ADG1154	XDG3052	ADG7079	ADG1154	
⚠	2	AC Adapter	DWR1571	DWR1571	DWR1551	DWR1551	
NSP	4	Warranty	DRY1270	Not used	Not used	Not used	
	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Ne, Es, Pt, Ru)	DRH1462	Not used	Not used	Not used	
	6	Operating Instructions (Quick Start Guide)(En)	Not used	DRH1463	Not used	Not used	
	7	Operating Instructions (Quick Start Guide)(Zhc)	Not used	Not used	DRH1465	Not used	
	8	Operating Instructions (Quick Start Guide)(En, Es)	Not used	Not used	Not used	DRH1466	
	14	Packing Case	DHG3594	DHG3596	DHG3598	DHG3595	D
NSP	17	Leaflet	DRH1431	DRH1431	DRH1432	DRH1431	

9.2 EXTERIOR SECTION (1/2)

A




B

C


D

E


F

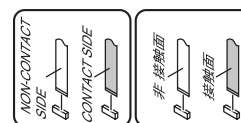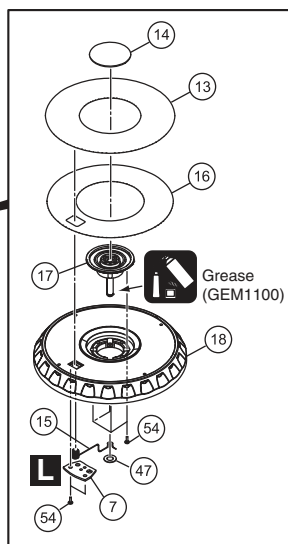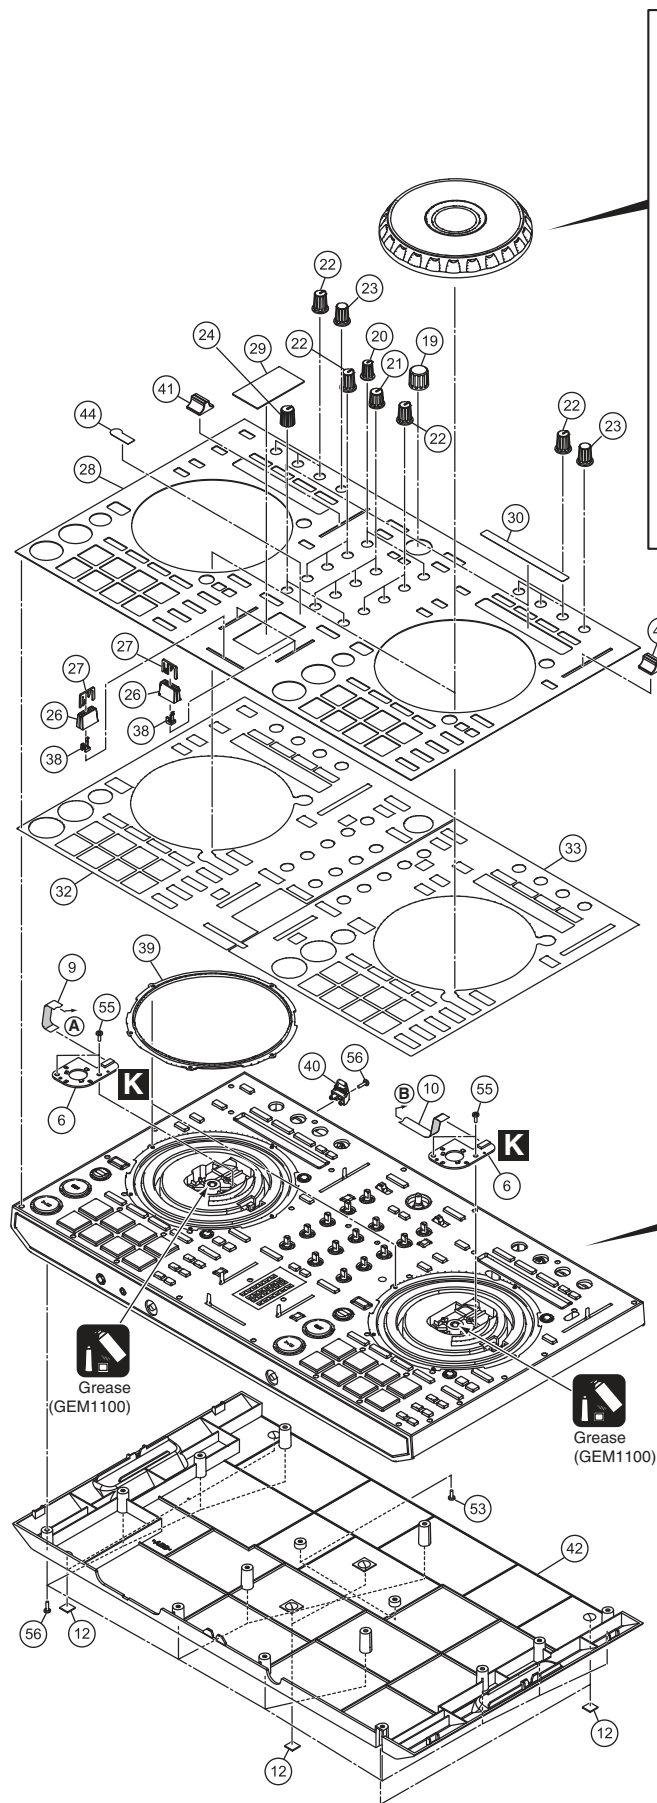

• Bottom view

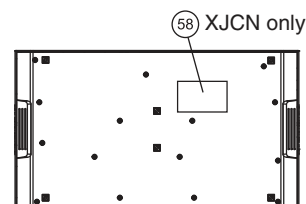

• Bottom view

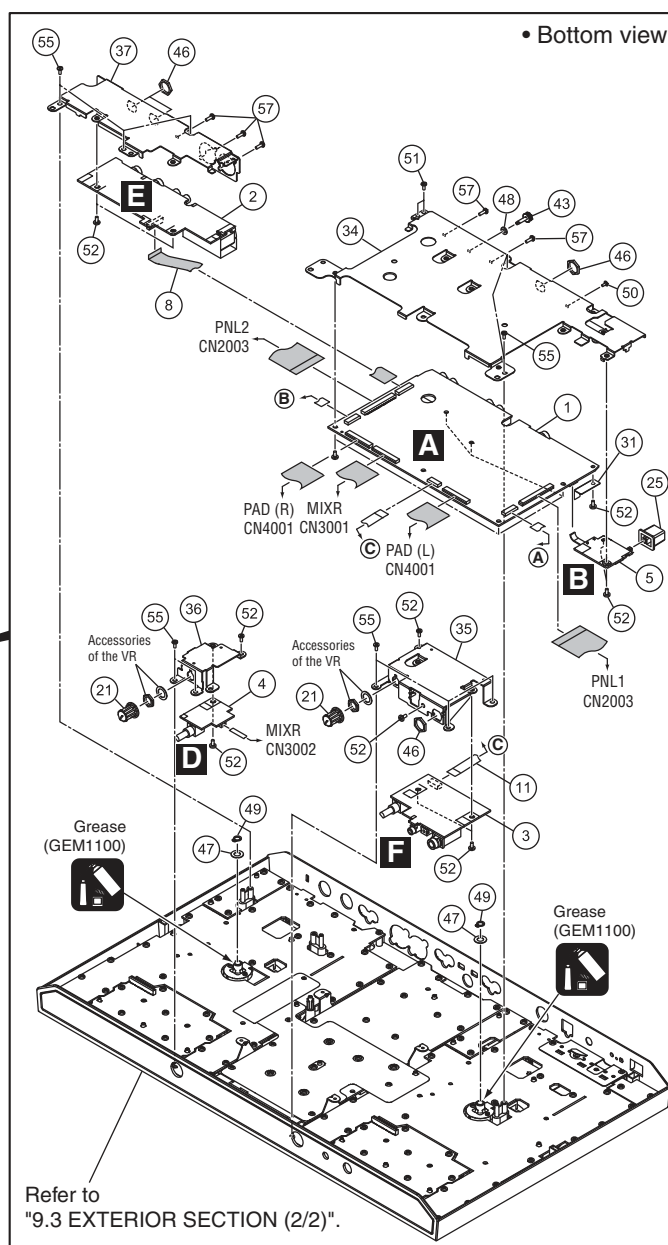

EXTERIOR SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MAIN Assy	DWX4120	 31	Barrier	DEC3707	
2	MBJK Assy	DWX4128	NSP 32	DS Tape	DEH1085	A
3	HPJK Assy	DWX4129	NSP 33	DS Tape	DEH1088	
4	MCVR Assy	DWX4126	34	Stay	DNH3266	
5	PWSW Assy	DWX4127	35	Stay	DNH3267	
6	JOG Assy	DWX3903	36	Stay	DNH3268	
7	HOLD Assy	DWX4124	37	Stay	DNH3274	
8	FFC	DDD1778	38	Stopper/SLD	DNK6009	
9	FFC	DDD1779	NSP 39	Ring	DNK6619	
10	FFC	DDD1780	40	Hook/CRD	DNK6084	
11	FFC	DDD1781	41	Knob	DNK6629	B
12	Rubber Foot	VEB1349	42	Chassis	DNK6739	
13	Plate	DAH3178	43	Earth Terminal	DKE1015	
14	Window	DAH3179	44	Label	DRW2734	
15	Spring	DBH1812	45	•••••		
16	DS Tape/JOG	DEH1058	46	Nut (M12)	NKX2FNI	
17	JOG Dial	DNK6616	47	Washer	WA62D120D050	
18	JOG Dial	DNK6737	48	Spring Lock Washer	WS40FNI	
19	Dial Knob	DAA1246	49	Washer	YC60FAC	
20	Knob	DAA1359	50	Screw (M3*5)	DBA1340	C
21	Knob	DAA1360	51	Screw	BBZ26P060FTB	
22	Knob	DAA1361	52	Screw	BBZ30P060FTC	
23	Knob	DAA1362	53	Screw	BBZ30P080FTB	
24	Knob	DAA1366	54	Screw	BPZ20P060FTC	
25	Power Knob	DAC2306	55	Screw	BPZ30P080FNI	
26	Slider Knob 1	DAC2684	56	Screw	BPZ30P100FTB	
27	Slider Knob 2	DAC2685	57	Screw	PPZ30P080FTB	
NSP 28	Plate	DAH3177	NSP 58	Label	See Contrast table (2)	D
29	Panel	DAH3103				
30	Sheet	DEC3674				

Note:
 Plate (No.28: DAH3177) is bonded to the double-sided tape in the Control panel (No.47: DNK6738), it is difficult to replacement.
 When replacing the Plate (No.28: DAH3177), please order the following service parts Assy.

Mark	No.	Part Name	Part No.	Remarks	
NSP	28	DDJ-SR2 Panel Service Assy	DEA1080	Refer to "9.2 EXTERIOR SECTION (1/2)"	E
		Component part			
	29	Plate	DAH3177		
	30	Panel	DAH3103		
	32	Sheet	DEC3674		
NSP	33	DS Tape	DEH1085		
NSP	33	DS Tape	DEH1088		
NSP	39	Ring	DNK6619		
	44	Label	DRW2734		
NSP	36	Fader Packing	DEC3355	Refer to "9.3 EXTERIOR SECTION (2/2)"	
	37	Packing/TMP	DEC3392		
	47	Control Panel	DNK6738		



(2) CONTRAST TABLE

DDJ-SR2/SYXJ, UXJCB, XJCN and FWLPWXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SR2/SYXJ	DDJ-SR2/UXJCB	DDJ-SR2/XJCN	DDJ-SR2/FWLPWXJ
NSP	58	Label	Not used	Not used	DRW2743	Not used

9.3 EXTERIOR SECTION (2/2)

A • Bottom view

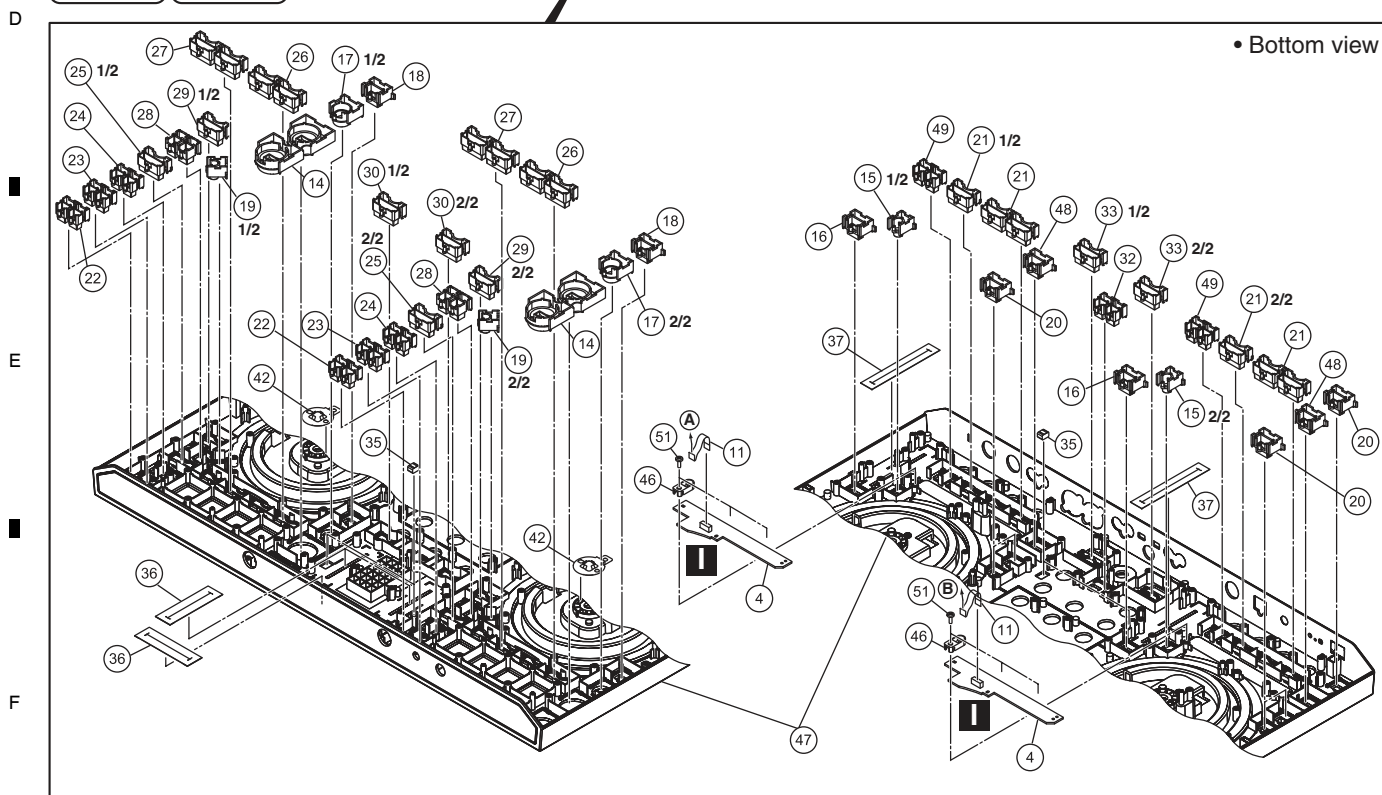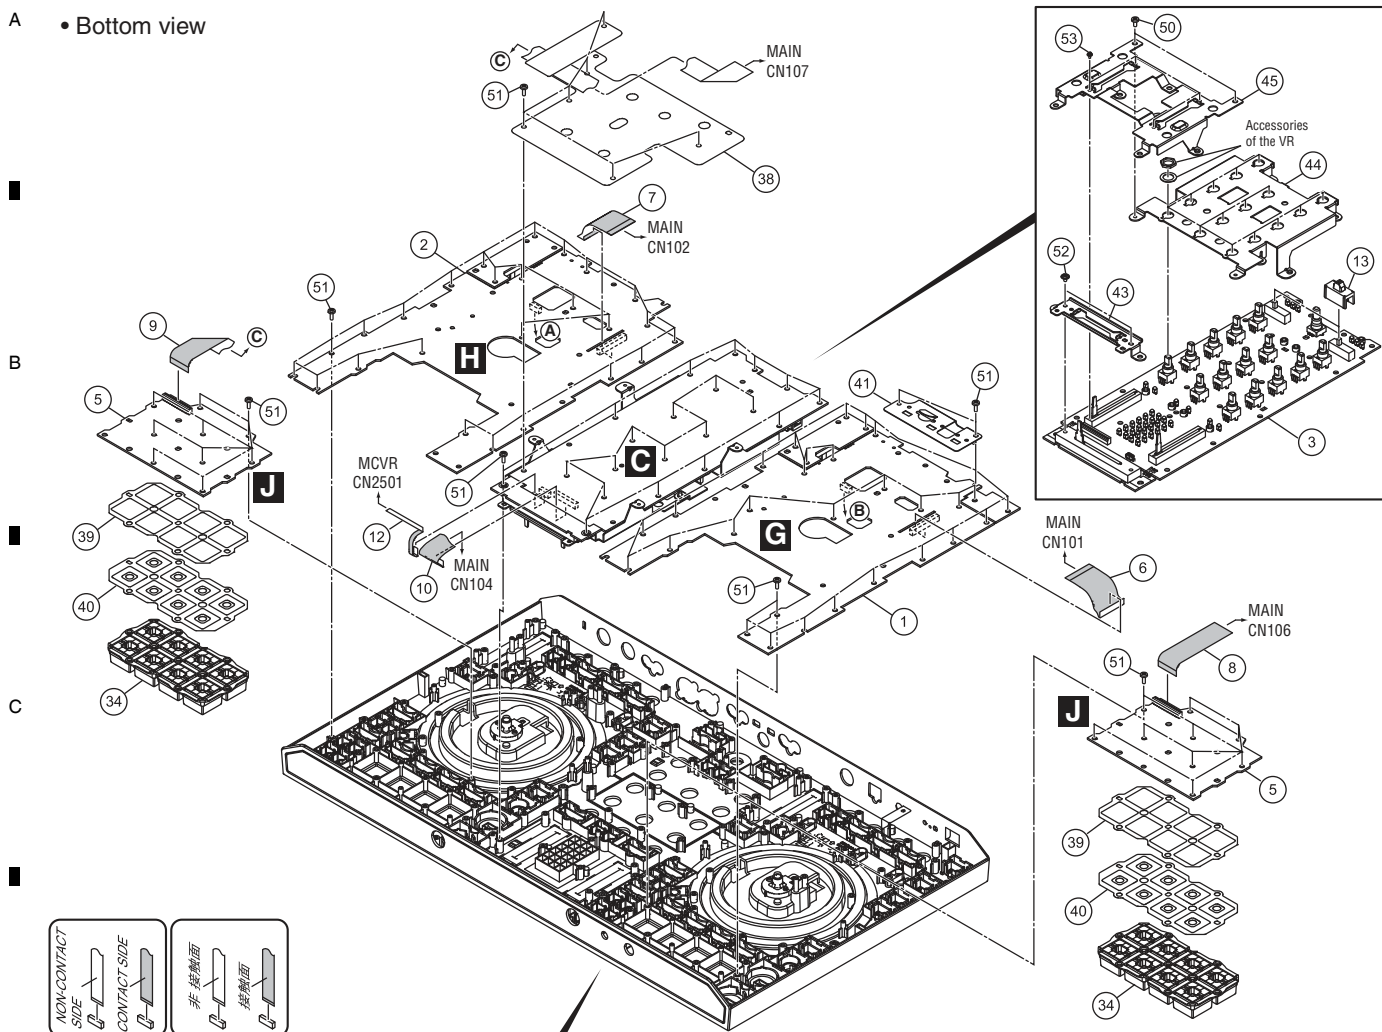

EXTERIOR SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	PNL1 Assy	DWX4121	46	CDC Stopper	DNK5863	
2	PNL2 Assy	DWX4122	NSP 47	Control Panel	DNK6738	A
3	MIXR Assy	DWX4123	48	Button	DAC3347	
4	CDC Assy	DWX3894	49	Button	DAC3351	
5	PAD Assy	DWX3902	50	Screw	BBZ30P060FTC	
6	FFC	DDD1773	51	Screw	BPZ30P080FNI	■
7	FFC	DDD1774	52	Screw	IMZ30P040FTC	
8	FFC	DDD1775	53	Screw	PMH20P040FTC	
9	FFC	DDD1776				
10	FFC	DDD1777				
11	FFC	DDD1782				B
12	FFC	DDD1783				
13	SW Cap	DAC2753				
14	Button	DAC3236				
15	Button/MT	DAC2875				■
16	Button	DAC3152				
17	Button	DAC3205				
18	Button	DAC3206				
19	Button	DAC3207				
20	Button	DAC3208				C
21	Button	DAC3209				
22	Button	DAC3210				
23	Button	DAC3212				
24	Button	DAC3213				
25	Button	DAC3350				■
26	Button	DAC3348				
27	Button	DAC3216				
28	Button	DAC3352				
29	Button	DAC3349				D
30	Button	DAC3219				
31						
32	Button	DAC3221				
33	Button	DAC3222				■
34	Button	DEB2035				
35	Gasket	DEC3719				
36	Fader Packing	DEC3355				
37	Packing/TMP	DEC3392				
38	Sheet	DEC3671				E
39	Sheet	DEC3672				
40	Sheet	DEC3673				
⚠ 41	Barrier	DEC3706				
42	Plate/CND	DNH3137				■
43	Stay	DNH3340				
44	Stay	DNH3265				
45	Stay	DNH3273				
						F