


- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

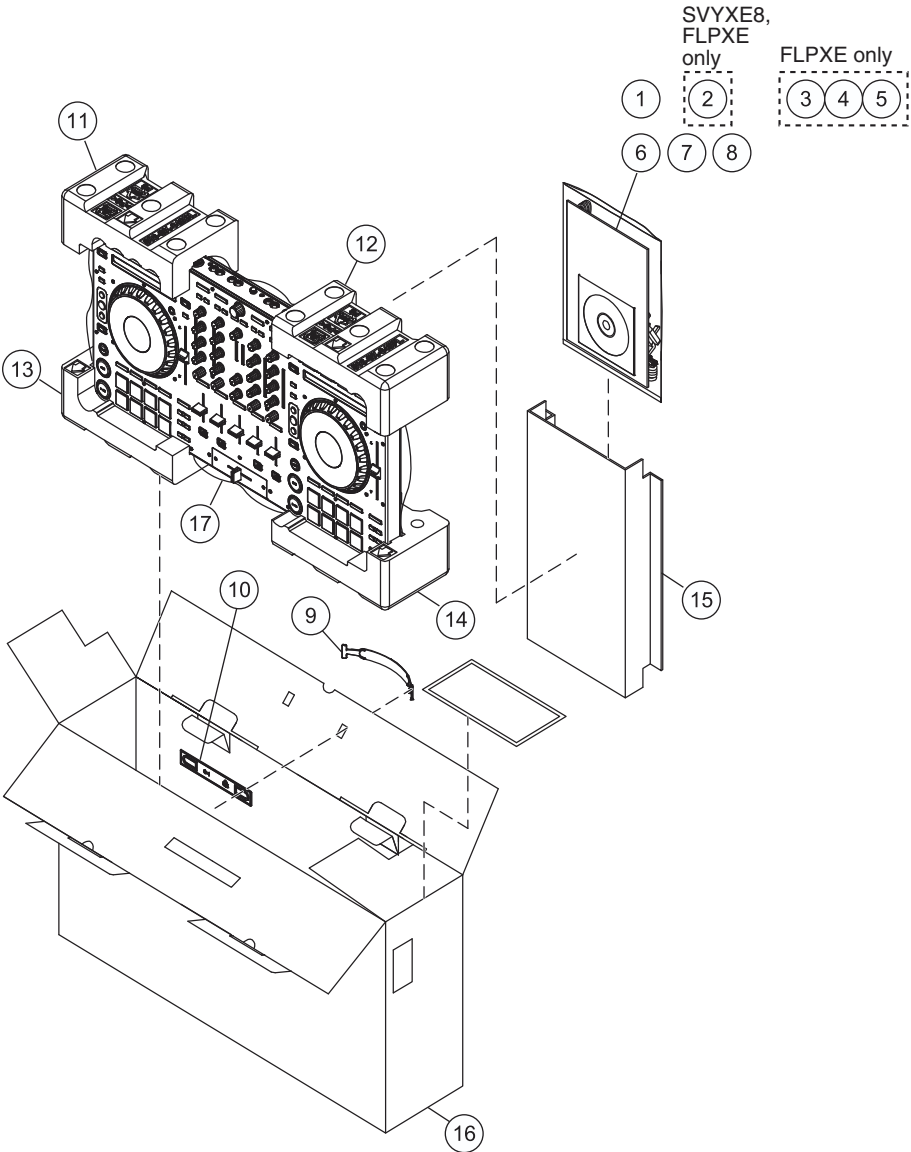

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
⚠ 1	AC Adapter	See Contrast table (2)
⚠ 2	Power Plug	See Contrast table (2)
⚠ 3	Power Plug	See Contrast table (2)
⚠ 4	Power Plug	See Contrast table (2)
⚠ 5	Power Plug	See Contrast table (2)
6	USB Cable	408-100UG-087-HA
7	CD-ROM (Installation Disc)	429-S1-142-HA
8	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
9	Handle	100-DDJLE-3012-HA
10	Handle Base	100-DDJLE-3013-HA
11	Polyfoam BL	506-SX-648BL-HA
12	Polyfoam BR	506-SX-648BR-HA
13	Polyfoam FL	506-SX-648FL-HA
14	Polyfoam FR	506-SX-648FR-HA
15	Paster board	507-S1-3372-HA
16	Gift Box	See Contrast table (2)
17	Soft Bag	509-DDJSX-320-HA


(2) CONTRAST TABLE

DDJ-SX/UXECB, SVYXE8, FLPXE, AXE5 and KXE5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SX /UXECB	DDJ-SX /SVYXE8	DDJ-SX /FLPXE	DDJ-SX /AXE5	DDJ-SX /KXE5
⚠	1	AC Adapter	411-S1-878-HA	411-S1-879-HA	411-S1-880-HA	411-S1-881-HA	411-S1-882-HA
⚠	2	Power Plug	Not used	420-DJM250-362-HA	420-DJM250-364-HA	Not used	Not used
⚠	3	Power Plug	Not used	Not used	420-DJM250-363-HA	Not used	Not used
⚠	4	Power Plug	Not used	Not used	420-DJM250-362-HA	Not used	Not used
⚠	5	Power Plug	Not used	Not used	420-DJM250-361-HA	Not used	Not used
	8	Read Before Use (Important)/ Quick Start Guide (En)	502-DDSXA-3277-HA	Not used	Not used	Not used	Not used
	8	Read Before Use (Important)/ Quick Start Guide (En, Fr, De, It, Es, Po, Py)	Not used	502-DDSXB-3278-HA	Not used	Not used	Not used
	8	Read Before Use (Important)/ Quick Start Guide (En)	Not used	Not used	502-DDSXF-3282-HA	Not used	Not used
	8	Read Before Use (Important)/ Quick Start Guide (Zhcn)	Not used	Not used	Not used	502-DDSXD-3280-HA	Not used
	8	Read Before Use (Important)/ Quick Start Guide (Ko)	Not used	Not used	Not used	Not used	502-DDSXE-3281-HA
	16	Gift Box	507-S1-3370A-HA	507-SXB-3370A-HA	507-SXF-3370A-HA	507-SXD-3370-HA	507-SXE-3370-HA

△



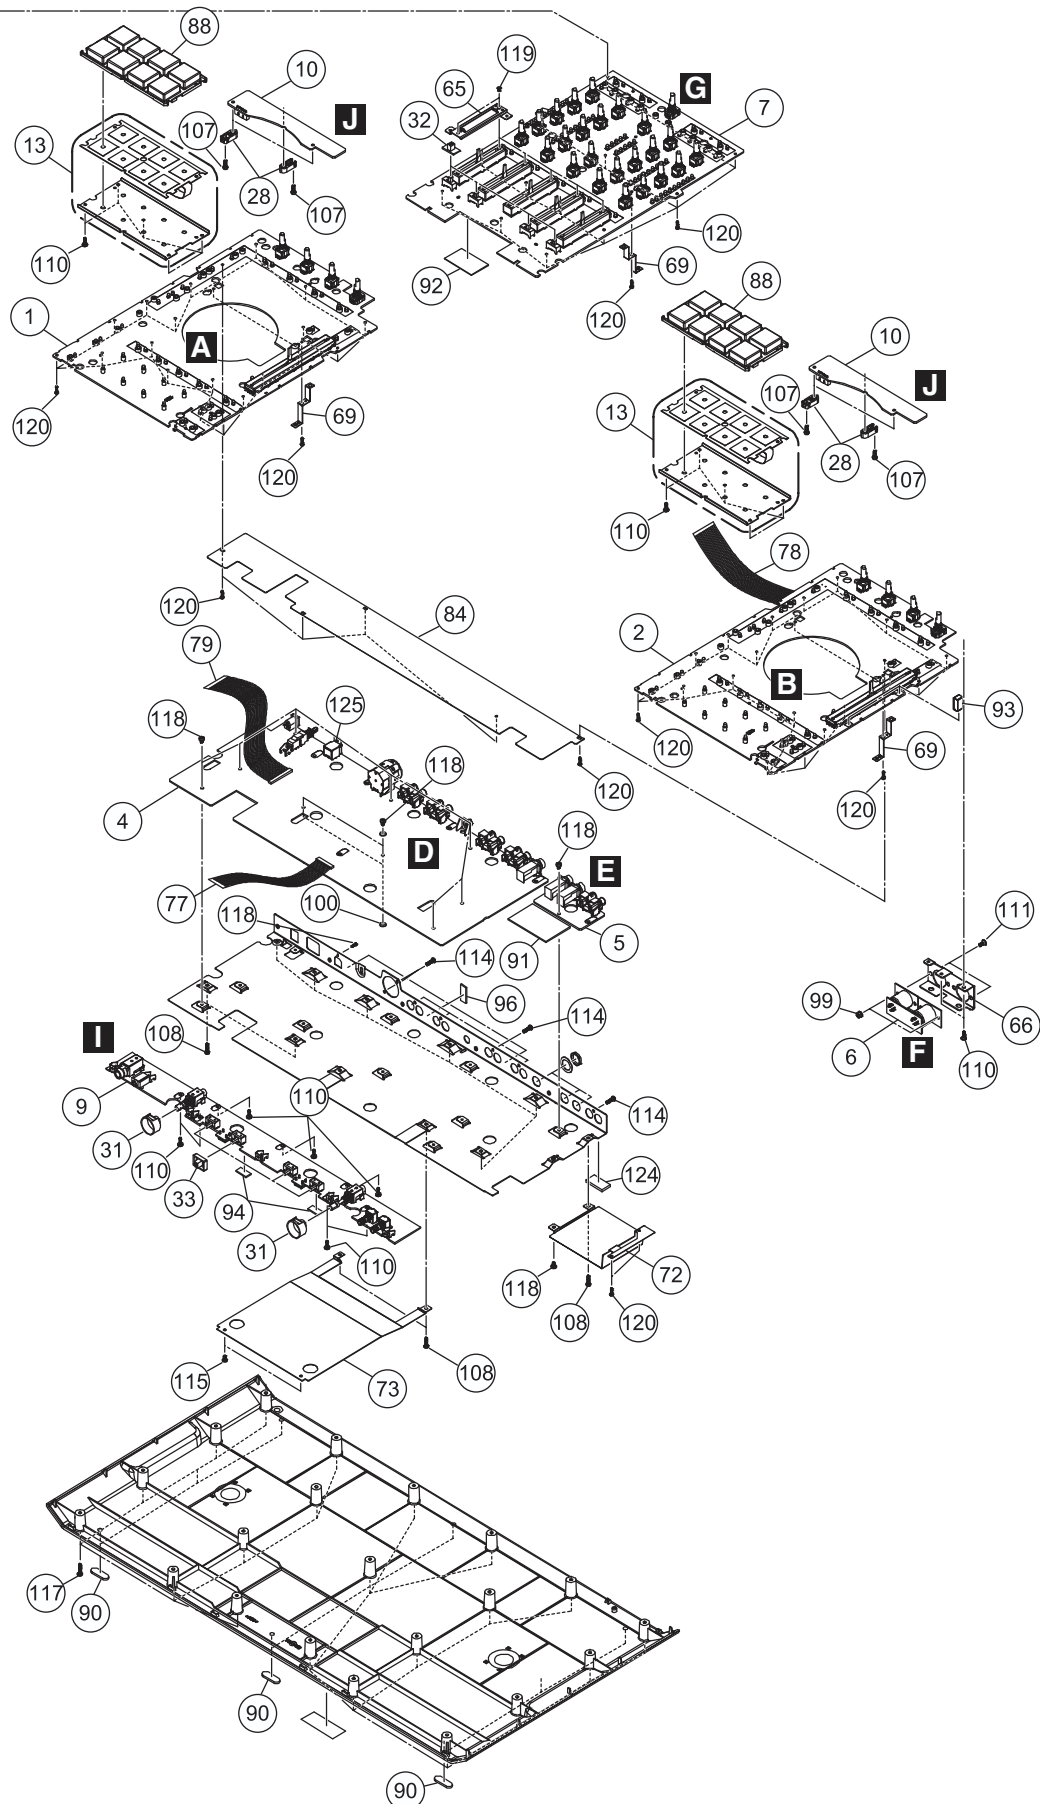

EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	CONTROL PCB Assy A	704-DDJS1-A421-HA	46	CUE Button	100-S1B-2993-HA
	2	CONTROL PCB Assy B	704-DDJS1-A454-HA	47	2X Button	100-S1B-2994-HA
	3	TRANSFER PCB Assy	704-DDJS1-A429-HA	48	VINYL Button	100-S1C-2989-HA
	4	DSP PCB Assy	704-DDJS1-A418-HA	49	DECK 4 Button	100-S1C-2990-HA
	5	OUTPUT PCB Assy	704-DDJS1-A425-HA	50	MASTER CUE Button	100-S1C-2993-HA
	6	BAL. PCB Assy	704-DDJS1-A423-HA	51	Button	100-S1C-2994-HA
	7	MIX PCB Assy	704-DDJS1-A417-HA	52	LOAD Button	100-S1D-2993-HA
	8	CH FADER PCB Assy	704-DJM250-A032-HA	53	AUTO LOOP Button	100-S1E-2993-HA
	9	FRONT PCB Assy	704-DDJS1-A424-HA	54	S.S Button	100-S1F-2993-HA
	10	TOUCH PCB Assy	704-DDJS1-A426-HA	55	H.R Button	100-S1G-2993-HA
B	11	LED PCB Assy	704-DDJS1-A422-HA	56	Push Button	100-22-2824-HA
	12	SENSOR PCB Assy	704-PDJ33-A007-HA	57	Ground Terminal	200-S1-665-HA
	13	PAD & FSR Assy	704-S1-A458-HA	58	Sensor Fixed Plate	300-HDJ9800-981-HA
	14	LED & COVER Assy	704-DDJS1-A455-HA	59	Winding Fixture	300-HM510B-224-HA
	15	Power Knob	100-HDJ2000-1641-HA	60	Ground Plate	300-MX200-1743-HA
	16	Rectangular Button	100-SX-2989S-HA	61	Encoder Plate	300-PROS2-848-HA
	17	Windows Lens	100-S1-2985-HA	62	Encoder Fixed Plate	300-PROS2-851-HA
	18	SHIFT Button	100-S1-2989-HA	63	Front Panel	300-S1-2043-HA
	19	DECK 1 Button	100-S1-2990-HA	64	CF Fixed Plate	300-S1-2045-HA
	20	LITTLE ROUND Button	100-S1-2991-HA	65	CH Fader Fixed Plate	300-S1-2046-HA
C	21	2 Key Button	100-S1-2992S-HA	66	XLR Fixed Plate	300-S1-2048-HA
	22	ON Button	100-S1-2993-HA	67	JW LED Base	300-S1-2049-HA
	23	1,2 Button	100-S1-2994-HA	68	••••	
	24	PLAY SYNC Button	100-S1-2995-HA	69	Ground Plate	300-S1-2051-HA
	25	DUAL DECK Button	100-S1-2996-HA	70	Ground Plate	300-S1-2057-HA
	26	LM Lens	100-S1-2997-HA	71	Ground Plate	300-S1-2058-HA
	27	Tempo Lens	100-S1-2998-HA	72	Cover	300-S1-2059-HA
	28	Fixed Plate	100-S1-2999-HA	73	Isolation Plate	300-S1-2060-HA
	29	Strain Relief Bush	100-S1-3000-HA	74	Fixed Cover	300-33-1918-HA
	30	JW Ring	100-S1-3001-HA	75	1P Lead Wire	406-S1-1231-HA
	31	VR Cover	100-S1-3002-HA	76	••••	
	32	CF Button	100-S1-3003-HA	77	30P 1.0 FFC Cable	406-S1-1233-HA
	33	Button	100-S1-3004-HA	78	37P 1.0 FFC Cable	406-S1-1234-HA
	34	SPEED PUSH Button	100-S1-3005-HA	79	37P 1.0 FFC Cable	406-S1-1235-HA
	35	FX Rotate Knob	100-S1-3006-HA	80	Dust-Proof Slice	501-HDJ9800-1648-HA
	36	Beat Rotate Knob	100-S1-3007-HA	81	Deck Panel	501-S1-2521-HA
	37	Gain Rotate Knob	100-S1-3008-HA	82	Front Panel	501-S1-2522-HA
	38	Filter Rotate Knob	100-S1-3009-HA	83	Search Panel	501-S1-2524-HA
	39	Browser Rotate Knob	100-S1-3010-HA	84	Isolation Slice	501-S1-2542-HA
	40	CENSOR Button	100-S1A-2989-HA	85	••••	
E	41	DECK 2 Button	100-S1A-2990-HA	86	Clip (1mm)	603-S1-394-HA
	42	TAP Button	100-S1A-2993-HA	87	Clip	603-S1-395-HA
	43	IN/OUT Button	100-S1A-2994-HA	88	Velocity Soft Knob	604-S1-608-HA
	44	CENSOR Button (-)	100-S1B-2989-HA	89	Sponge	612-DJFA-373-HA
	45	DECK 3 Button	100-S1B-2990-HA	90	Foot Mat	612-S1-445-HA

F

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
91	Cushion	612-S1-449-HA	
92	Cushion	612-S1-450-HA	
93	Sponge (8*6*18mm)	612-S1-451-HA	A
94	Cushion	612-S1-459-HA	
95	Shade Cover	505-S1-243-HA	
96	Sponge	612-F300-358-HA	
97	Nut (M3*P0.5,CD,PB,HH)	601-A100-004-HA	■
98	Nut (M5,7.9*3.8MM)	601-MM1000-029-HA	
99	Nut BLK+Gear Washer	601-R2150-033-HA	
100	Washer	606-KMD280-081-HA	
101	Washer	606-DDJLE-260-HA	
102	Washer (10*3.2*1T)	606-S1-007-HA	B
103	Washer	606-S1-261-HA	
104	E Type Washer	606-S1-262-HA	
105	Screw (TTB,2*5,MC)	602-A700-494-HA	
106	Screw	602-BTB3012-446B-HA	■
107	Screw (SAE1018PTP3*8)	602-B600-057-HA	
108	Screw	602-B600-072-HA	
109	Screw (CTF,M3*10)	602-CTF3010-698B-HA	
110	Screw	602-DJ5500-452-HA	
111	Screw (M3*8)	602-HMD510B-198-HA	C
112	Screw (M2*P0.4*L6)	602-HP1010K-181-HA	
113	Screw	602-HP1010K-182-HA	
114	Screw	602-MK7-131-HA	
115	Screw	602-MP3-324-HA	■
116	Screw	602-PROS2-363-HA	
117	Screw (TTP,3*L12)	602-PTP3012-571-HA	
118	Screw	602-QMX2BPM-322-HA	
119	Screw	602-SA12-414-HA	
120	Screw (2.6*8 TTP)	602-SL24F-099-HA	D
121			
122	Screw (3*8MM TTB)	602-2002-077-HA	
123	Screw (3*10M/M)	602-3113-122-HA	
124	Sponge	612-S1-461-HA	■
125	USB Fixed Plate	300-S1-2069-HA	
126	Twin Adhesive	501-S1-2526-HA	
127	Wheel Assy	704-S1-1383-HA	

E

■

F