


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
● Screws adjacent to ▼ mark on product are used for disassembly.
● For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

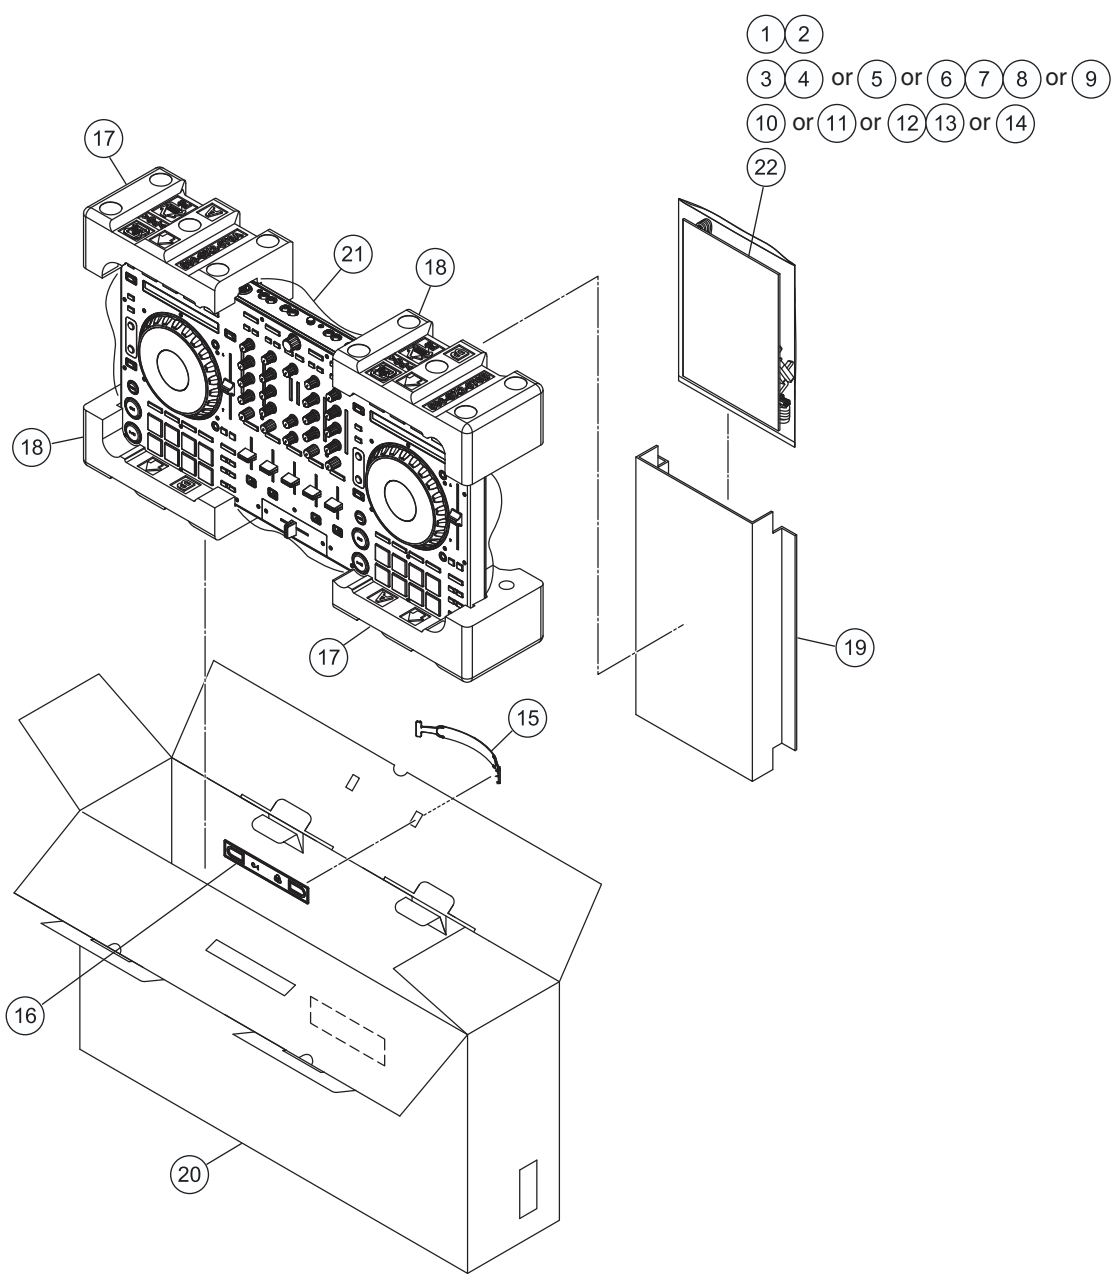


(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
	1 USB Cable (L = 1500 mm)	408-SUB-132	16	Handle Base	100-SX-3018
⚠	2 AC Adapter	411-S1MK2-930	17	Polyfoam A	506-SX2-676A
⚠	3 Power Plug	See Contrast table (2)	18	Polyfoam B	506-SX2-676B
⚠	4 Power Plug	See Contrast table (2)	19	Pasterboard	507-S1-3372-HA
⚠	5 Power Plug	See Contrast table (2)	20	Gift Box	See Contrast table (2)
⚠	6 Power Plug	See Contrast table (2)	21	Soft Bag	509-DDJSX-320-HA
⚠	7 Power Plug	See Contrast table (2)	22	PE Bag (240*340mm, 0.05T)	505-DJM250-014-HA
⚠	8 Power Plug	See Contrast table (2)			
⚠	9 Power Plug	See Contrast table (2)			
	10 Quick Start Guide	See Contrast table (2)			
	11 Quick Start Guide	See Contrast table (2)			
	12 Quick Start Guide	See Contrast table (2)			
	13 Quick Start Guide	See Contrast table (2)			
	14 Quick Start Guide	See Contrast table (2)			
	15 Handle	100-SX-3017			

(2) CONTRAST TABLE

DDJ-SX2/SVYXE8, UXECB, FJKLPXE5 and AXE5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>DDJ-SX2 /SVYXE8</u>	<u>DDJ-SX2 /UXECB</u>	<u>DDJ-SX2 /FJKLPXE5</u>	<u>DDJ-SX2 /AXE5</u>
⚠	3	Power Plug	420-DJM250-362-HA	Not used	420-DJM250-362	Not used
⚠	4	Power Plug	420-DJM250-407	Not used	420-DJM250-407	Not used
⚠	5	Power Plug	Not used	420-DJM250-361	Not used	Not used
⚠	6	Power Plug	Not used	Not used	420-DJM250-363-HA	Not used
⚠	7	Power Plug	Not used	Not used	420-DJM250-364-HA	Not used
⚠	8	Power Plug	Not used	Not used	420-DJM250-409	Not used
⚠	9	Power Plug	Not used	Not used	Not used	420-DJM250-408
	10	Quick Start Guide (En, Fr, De, It, NI, Es, Pt, Ru)	502-DJSXM2B-3417A	Not used	Not used	Not used
	11	Quick Start Guide (En)	Not used	502-DJSXM2A-3416	Not used	Not used
	12	Quick Start Guide (En, Es, Ja)	Not used	Not used	502-DJSXM2F-3419	Not used
	13	Quick Start Guide (Ko)	Not used	Not used	502-DJSXM2F-3429	Not used
	14	Quick Start Guide (Zhcn)	Not used	Not used	Not used	502-DJSXM2D-3418
	20	Gift Box	507-SX2B-3370A	507-SX2A-3370	507-SX2F-3370A	507-SX2D-3370

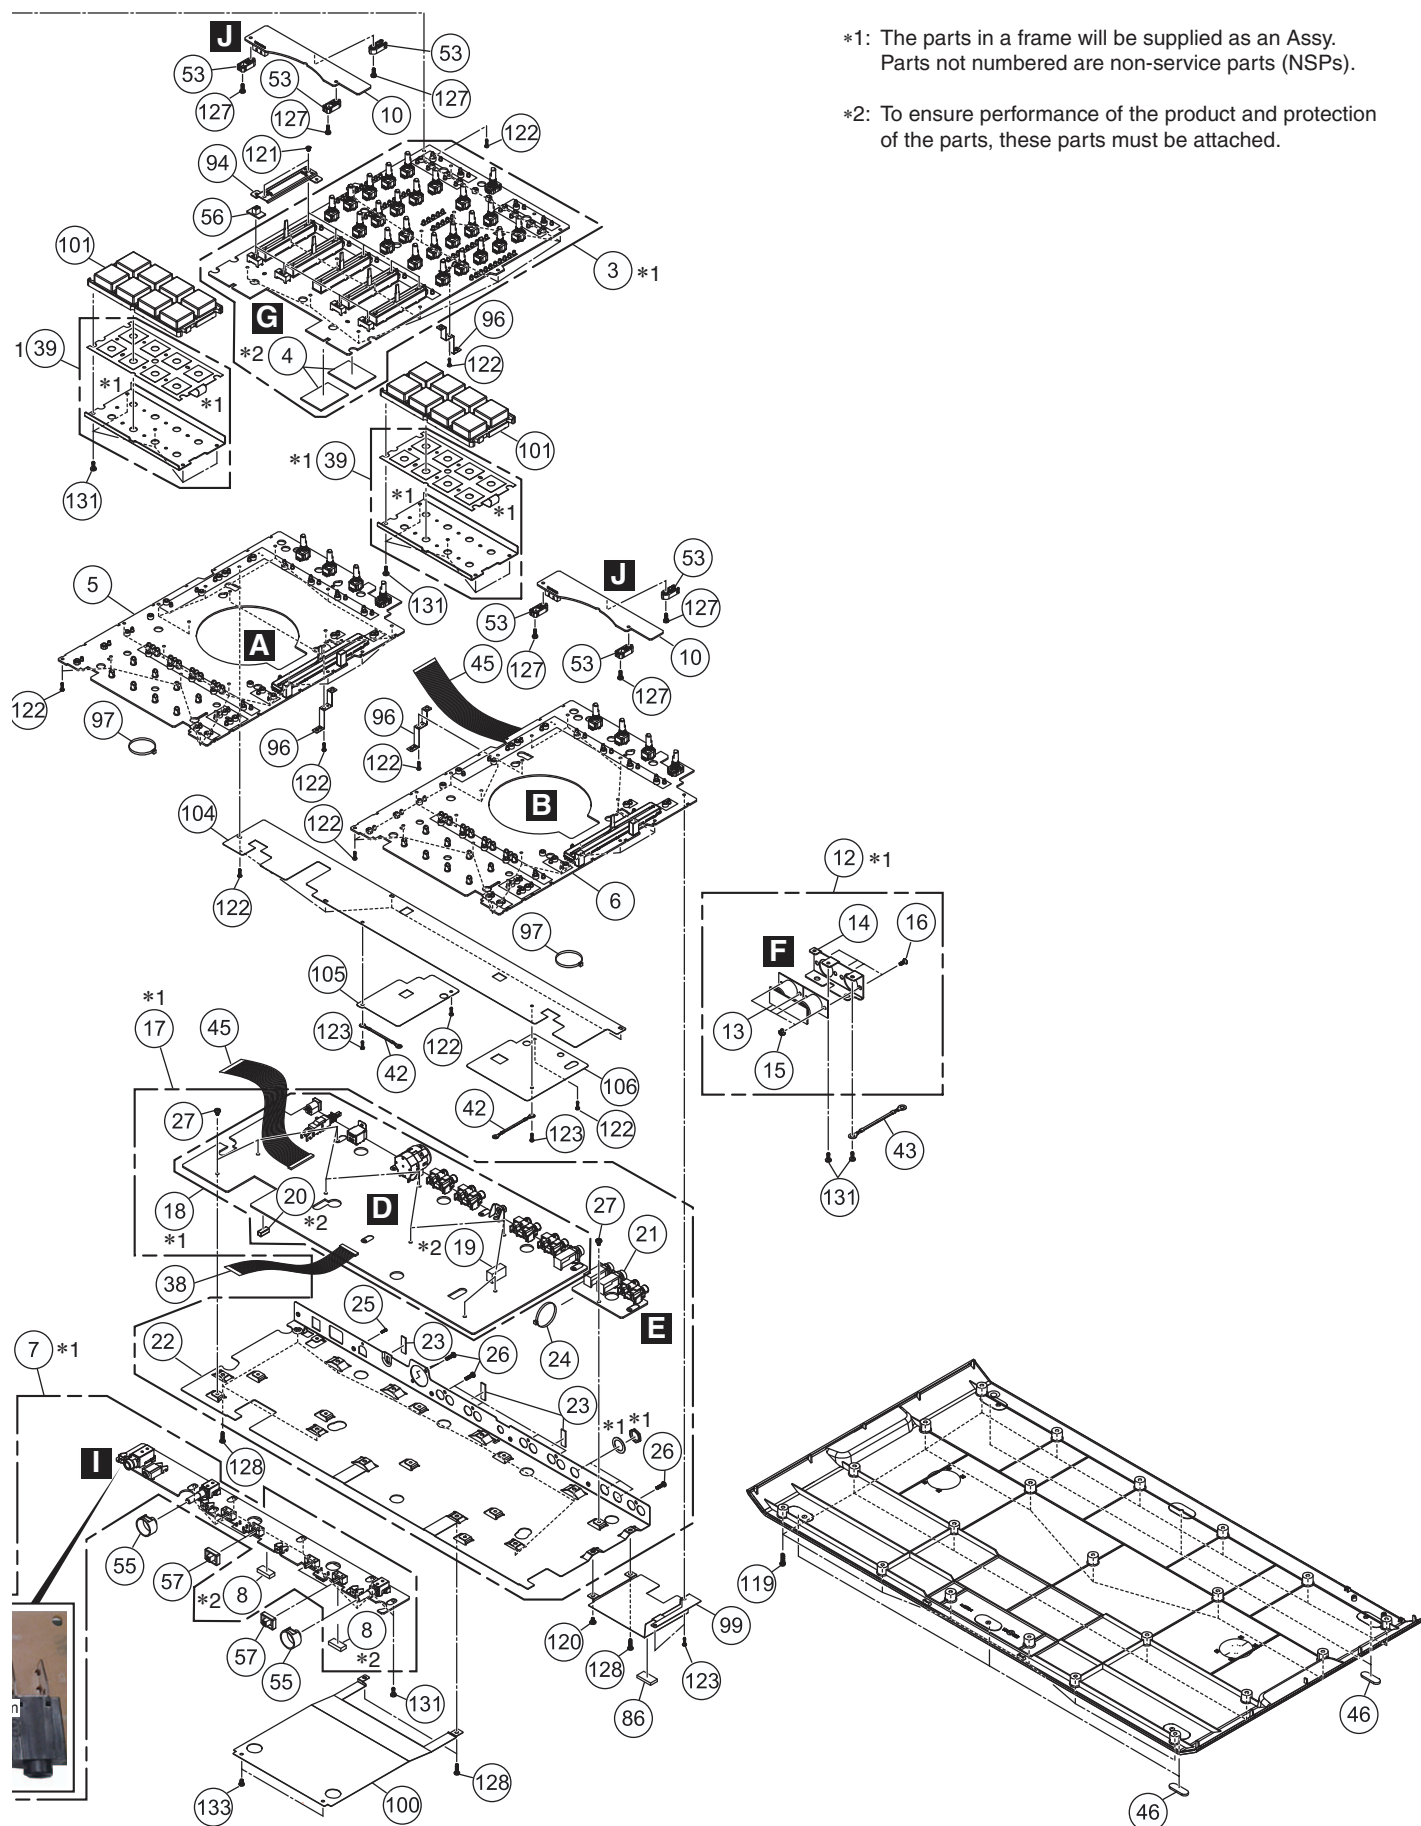

(1) EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	CR FADER PCB Assy	704-EN1000-9788	41	Top Panel Assy	703-SXMK2-1434
	2	SENSOR PCB Assy	704-PDJ33-A007-HA	42	1P Lead Wire (L = 55 mm)	406-S1MK2-1301
	3	1..MIX PCB Assy	704-S1MK2-B091	43	1P Ground Wire (L = 40 mm)	406-8001-833
	4 ^{*2}	2..Spacer (40*30*1.5)	612-SX2-450	44	Deck 1 Button	100-S1-2990-HA
	5	CONTROL PCB Assy A	704-S1MK2-A953	45	37P 1.0 FFC Cable (L = 190 mm)	406-S1MK2-1294
B	6	CONTROL PCB Assy B	704-S1MK2-A954	46	Foot Mat	612-S1-445-HA
	7	1..FRONT PCB Assy	704-S1MK2-B092	47	Little Round Button	100-S1-2991-HA
	8 ^{*2}	2..Spacer	612-SX2-459	48	2 Key Button	100-S1-2992S-HA
	9 ^{*2}	2..Spacer	501-MAIE-2451	49	ON Button	100-S1-2993-HA
	10	TOUCH PCB Assy	704-S1MK2-A957	50	1, 2 Button	100-S1-2994-HA
C	11	TRANSFER PCB Assy	704-S1MK2-A960	51	PLAY SYNC Button	100-S1-2995-HA
	12	1..BAL PCB & FIXED P. Assy	704-S1MK2-A986	52	TEMPO Lens	100-S1-2998-HA
	13	2..BAL. PCB Assy	704-S1MK2-A956	53	Fixed Plate	100-S1-2999-HA
	14	2..XLR Fixed Plate	300-S1-2048-HA	54	Strain Relief Bush	100-S1-3000-HA
	15	2..Nut M3 BLK + Gear Washer	601-R2150-033-HA	55	VR Cover	100-S1-3002-HA
D	16	2..Screw	602-HMD510B-198-HA	56	CF Button	100-S1-3003-HA
	17	1..I/O & FIX PLATE Assy	704-S1MK2-A985	57	Button	100-S1-3004-HA
	18	2..DSP PCB Assy	704-S1MK2-B090	58	Speed Push Button	100-S1-3005-HA
	19 ^{*2}	3..Cushion	612-SX2-362	59	FX Rotate Knob	100-S1-3006-HA
	20 ^{*2}	3..Sponge	612-DJFA-373-HA	60	BEAT Rotate Knob	100-S1-3007-HA
E	21	2..OUTPUT PCB Assy	704-S1MK2-A958	61	GAIN Rotate Knob	100-S1-3008-HA
	22	2..Output Board	300-S1-2044A	62	FILTER Rotate Knob	100-S1-3009-HA
	23	2..Sponge	612-F300-358-HA	63	BROWSER Rotate Knob	100-S1-3010-HA
	24	2..Cable Tie	504-S100-004	64	Deck 2 Button	100-S1A-2990-HA
	25	2..Screw	602-HP1010K-181-HA	65	TAP Button	100-S1A-2993-HA
F	26	2..Screw	602-MK7-131-HA	66	IN/OUT Button	100-S1A-2994-HA
	27	2..Screw	602-SA12-378	67	CENSOR Button (-)	100-S1B-2989-HA
	28	1..LED & COVER Assy	704-S1MK2-A961	68	Deck 3 Button	100-S1B-2990-HA
	29	2..LED PCB Assy	704-S1MK2-A959	69	CUE Button	100-S1B-2993-HA
	30	1..WHEEL Assy	703-S1-1383-HA	70	2X Button	100-S1B-2994-HA
G	31	2..Encoder Plate	300-PROS2-848-HA	71	Deck 4 Button	100-S1C-2990-HA
	32	2..Encoder Fixed Plate	300-PROS2-851-HA	72	MASTER CUE Button	100-S1C-2993-HA
	33	2..1P Lead Wire (L = 50mm)	406-S1-1232	73	Button	100-S1C-2994-HA
	34	2..Screw	602-PROS2-363-HA	74	LOAD Button	100-S1D-2993-HA
	35	1..Clip & Lead Wire Assy	704-S1-A586	75	AUTO LOOP Button	100-S1E-2993-HA
H	36	2..1P Lead Wire	406-S1-1231-HA	76	Rectangular Button	100-SX-2989S-HA
	37	2..Clip	603-S1-394-HA	77	Key Lock Button	100-SX2-2989
	38	30P 1.0 FFC Cable (L = 120 mm)	406-S1MK2-1295	78	HOT CUE/ROLL Button	100-SX2-3156
	39	PAD & FSR Assy	704-S1MK2-A962	79	1, 2 Button	100-SX2-3159
	40	Chassis Assy (for Service)	See Contrast table (2)	80	CENSOR Button	100-SX2A-2989

*2: To ensure performance of the product and protection of the parts, these parts must be attached.

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
81	HOT CUE/ROLL Button	100-SX2A-3156	106	MIC 2 Isolation Slice	501-SX2-2646	A
82	JW Ring	100-SXMK2-3152	107	CF Panel & Cushion Assy	703-SX2-1396	
83	LM Lens	100-SXMK2-3154	108	Power Knob	100-HDJ2000-1641-HA	
84	MASTER Lens	100-SXMK2-3155	109	•••••		
85	Push Button 1	100-SXMK2-3157	110	•••••		
86	Sponge	612-S1-461-HA	111	Washer	606-S1-007-HA	
87	Round Knob	100-SXMK2-3160	112	Washer	606-S1-261-HA	
88	Ground Terminal	200-S1-665-HA	113	Washer	606-DDJLE-260-HA	
89	Fixed Cover	300-33-1918-HA	114	E Type Washer	606-S1-262-HA	
90	Sensor Fixed Plate	300-HDJ9800-981-HA	115	Nut (M3*P0.5)	601-A100-004-HA	B
91	Winding Fixture	300-HM510B-224-HA	116	Nut (M5,7.9*3.8mm, C1010)	601-MM1000-029-HA	
92	Dust-Proof Slice	501-HDJ9800-1648-HA	117	•••••		
93	CF Fixed Plate	300-S1-2045-HA	118	•••••		
94	CH Fader Fixed Plate	300-S1-2046-HA	119	Screw	602-PTP3012-571-HA	
95	JW LED Base	300-S1-2049A-HA	120	Screw	602-QMX2BPM-322-HA	
96	Ground Plate	300-S1-2051-HA	121	Screw	602-SA12-414-HA	
97	Cable Tie	504-S100-004-HA	122	Screw	602-SL24F-099-HA	
98	Shift Button	100-S1-2989-HA	123	Screw	602-CDN88-563	
99	Cover	300-S1-2059-HA	124	Screw	602-2002-077-HA	
100	Isolation Plate	300-S1-2060-HA	125	Screw	602-3113-122-HA	C
101	Velocity Soft Knob	604-SXMK2-651	126	Screw	602-A700-494-HA	
102	Sponge	612-DJFA-373-HA	127	Screw	602-B600-057-HA	
103	Windows Lens	100-S1-2985-HA	128	Screw	602-B600-072-HA	
104	Isolation Slice	501-S1-2542A	129	Screw	602-BTB3012-446B-HA	
105	MIC 1 Isolation Slice	501-SX2-2645	130	Screw	602-CTF3010-698B-HA	
			131	Screw	602-DJ5500-452-HA	
			132	Screw	602-HP1010K-182-HA	
			133	Screw	602-MP3-324-HA	
			134	Screw	602-PROS2-363-HA	D

(2) CONTRAST TABLE

DDJ-SX2/SVYXE8, UXECB, FJKLPXE5 and AXE5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SX2 /SVYXE8	DDJ-SX2 /UXECB	DDJ-SX2 /FJKLPXE5	DDJ-SX2 /AXE5
	40	Chassis Assy (for Service)	705-SXMK2-1592	705-SXMK2-1592	705-SXMK2-1592	705-SXMK2D-1593