

■

5

■

6

■

7

■


8

■

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

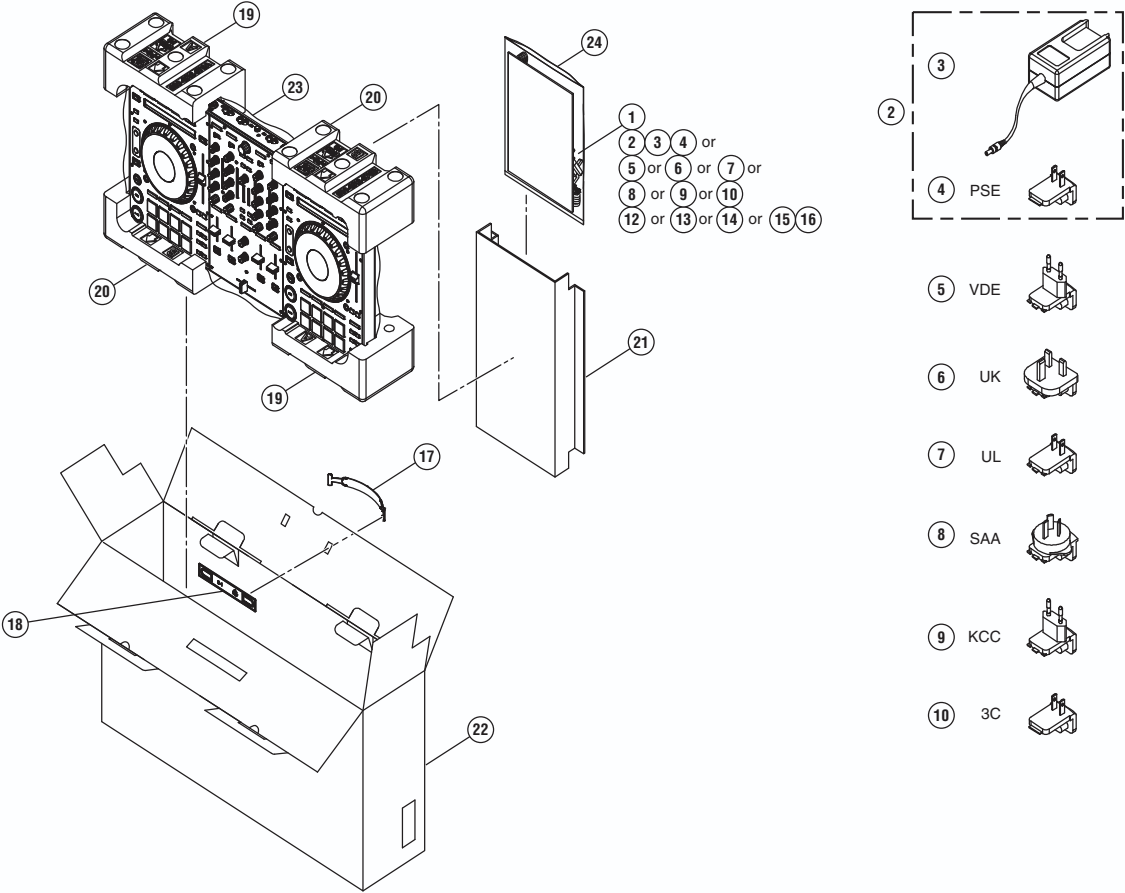

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	USB Cable (L = 1500 mm)	408-SUB-132	14	Operating Instructions (Quick Start Guide)	See Contrast table (2)
2	1..Adapter + Plug Assy	See Contrast table (2)	15	Operating Instructions (Quick Start Guide)	See Contrast table (2)
3	2..AC Adapter	411-SXMK3-957B	NSP 16	Serato DJ Pro EXPANSION PACK VOUCHER	•••••
4	2..Power Plug PSE	See Contrast table (2)			
5	Power Plug VDE	See Contrast table (2)			
6	Power Plug UK	See Contrast table (2)	17	Handle	100-SX-3017
7	Power Plug UL	See Contrast table (2)	18	Handle Base	100-SX-3018
8	Power Plug SAA	See Contrast table (2)	19	Polyfoam A (EPS)	506-SX2-676AA
9	Power Plug KCC	See Contrast table (2)	20	Polyfoam B (EPS)	506-SX2-676BA
10	Power 3C	See Contrast table (2)	21	Pasterboard	507-S1-3372
11	•••••		22	Gift Box	See Contrast table (2)
12	Operating Instructions (Quick Start Guide)	See Contrast table (2)	23	Soft Bag	509-DDJSX-320
13	Operating Instructions (Quick Start Guide)	See Contrast table (2)	24	PE Bag (240*340 mm, 0.05T)	505-DJM250-014

(2) CONTRAST TABLE

DDJ-SX3/FJLPXEG, SVYXEG, UXEGCB and XEGCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SX3/FJLPXEG	DDJ-SX3/SVYXEG	DDJ-SX3/UXEGCB	DDJ-SX3/XEGCN
	2	Adapter + Plug Assy	704-SX3-B906	Not used	Not used	Not used
	4	Power Plug PSE	420-DJM250-409A	Not used	Not used	Not used
	5	Power Plug VDE	420-SXMK3-455	420-SXMK3-455	Not used	Not used
	6	Power Plug UK	420-DJM250-362-HA	420-DJM250-362-HA	Not used	Not used
	7	Power Plug UL	Not used	Not used	420-DJM250-361-HA	Not used
	8	Power Plug SAA	420-DJM250-363-HA	Not used	Not used	Not used
	9	Power Plug KCC	420-SXMK3-456	Not used	Not used	Not used
	10	Power 3C	Not used	Not used	Not used	420-DJM250-408
	12	Operating Instructions (Quick Start Guide) (En, Es, Ja)	502-DDJSX3D-3767	Not used	Not used	Not used
	13	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru)	Not used	502-DDJSX3B-3765	Not used	Not used
	14	Operating Instructions (Quick Start Guide) (En)	Not used	Not used	502-DDJSX3A-3763	Not used
	15	Operating Instructions (Quick Start Guide) (Zhcn)	Not used	Not used	Not used	502-DDJSX3C-3766
	22	Gift Box	507-SX3D-3370	507-SX3B-3370	507-SX3A-3370	507-SX3C-3370

(1) BOTTOM SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	1..IO PCB Assy & Sponge & EVA Packing Assy	705-DDJSX3-1759	41	Insulation Plate	300-SX3-2399
	NSP 2	2..IO PCB Assy	•••••	42	1P Ground Wire	406-8001-833
	3	2..Cushion	612-SX2-362	43	1P Ground Wire	406-MH2-825
	4	2..Sponge	612-DJFA-373	44	30P 1.0 FFC Cable	406-S1MK2-1295
	5	TRANSFER PCB Assy	704-SX3-B873	45	30P 1.0 FFC Cable (L = 250 mm)	406-SX3-1405
B	6	1..Front PCB Assy & Sponge & EVA Packing Assy	705-DDJSX3-1760	46	Foot Mat	612-S1-445
	NSP 7	2..FRONT PCB Assy	•••••	47	Sponge	612-S1-461
	8	2..Sponge	612-USOLOFX-369	48	Sensor Fixed Plate	300-HDJ9800-981
	9	2..Spacer	612-SX2-459	49	Locking Cable Clip	300-HM510B-224
	10	1..BAL. PCB & Fixed Plate Assy	704-SX3-B940	50	JW LED Base	300-S1-2049A
C	11	2..BAL. PCB Assy	704-SX3-B869	51	Dust-Proof Slice	501-HDJ9800-1648
	12	2..XLR Fixed Plate	300-S1-2048	52	Power Knob	100-HDJ2000-1641
	13	2..Nut M3 Washer	601-R2150-033	53	IO Metal Plate	300-SX3-2402
	14	2..Screw (M3*8)	602-HMD510B-198	54	Strain Relief Bush	100-S1-3000
	15	1..LED & Cover Assy	704-SX3-B938	55	Top Panel L Assy (For Service)	703-DDJSX3-1517
D	16	2..LED PCB Assy	704-SX3-B866	56	Top Panel R Assy (For Service)	703-DDJSX3-1518
	17	1..WHEEL Assy	703-S1-1383-HA	57	Mixer Panel Assy (For Service)	703-DDJSX3-1519
	18	2..Encoder Plate	300-PROS2-848-HA	58	Gasket	612-DJFA-373
	19	2..Encoder Fixed Plate	300-PROS2-851-HA	59	•••••	
	20	2..Screw	602-PROS2-363-HA	60	E Type Washer	606-S1-262
E	21	2..Clip	603-S1-395-HA	61	Washer	606-DDJLE-260
	22	2..Twin Adhesive	501-S1-2526-HA	62	Washer	606-S1-261
	23	1..Clip Wire Assy	704-S1-A586	63	Washer (10*3.2*1T)	606-S1-007
	24	2..Clip (1 mm)	603-S1-394-HA	64	Nut (M5, 7.9*3.8 mm)	601-MM1000-029
	25	OUTPUT PCB Assy	704-SX3-B868	65	Screw	602-B600-072
F	26	SENSOR PCB Assy	704-PDJ33-A007	66	Screw	602-CTP3050-774B
	27	VR Cover	100-S1-3002	67	Screw	602-HP1010K-181
	28	Button	100-S1-3004	68	Screw	602-MK7-131
	29	Speed Push Button	100-S1-3005	69	Screw	602-PROS2-363
	30	FX Rotate Knob	100-S1-3006	70	Screw	602-QMX2BPM-322
G	31	Rotate Knob	100-S1-3007	71	Screw	602-SL24F-099
	32	Gain Rotate Knob	100-S1-3008	72	Screw (TTP, 3*L12)	602-PTP3012-571
	33	Filter Rotate Knob	100-S1-3009	73	Screw (3*5L)	602-MP3-324
	34	Browser Rotate Knob	100-S1-3010	74	Screw (TTP, 3*8, ZB)	602-DJ5500-452
	35	Windows Lens	100-SX3-2985	75	Screw (3*10 M/M)	602-3113-122
H	36	Bottom Case	See Contrast table (2)	76	Screw 2.6*10	602-CDN88-563
	37	Button Frame	100-SX3-3411	77	Screw (3*L12, Black)	602-BTB3012-446B
	38	Push Button1	100-SXMK2-3157	78	Screw (BTF, 2.6, L = 8)	602-HP1010K-182
	39	Ground Terminal	200-S1-665			
	40	Cover	300-S1-2059			

(2) CONTRAST TABLE

DDJ-SX3/FJLPXEG, SVYXEG, UXEGCB and XEGCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SX3/FJLPXEG	DDJ-SX3/SVYXEG	DDJ-SX3/UXEGCB	DDJ-SX3/XEGCN
	36	Bottom Case	100-SX3-3408	100-SX3-3408	100-SX3-3408	100-SX3C-3408

(1) CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 TOUCH PCB Assy	704-SX3-B874	31	Play Sync Button	100-SX3-2995
	2 CR FADER PCB Assy	704-EN1000-9788	32	Round Knob	100-SX3-3160B
	3 1..Panel PCB (L) Assy	705-DDJSX3-1761	33	CH LM Lens	100-SX3-3409
NSP	& Sponge Packing Assy		34	CH1, CH2 Button	100-SX3A-2994
	4 2..CONTROL PCB Assy A	•••••	35	JW Ring	100-SXMK2-3152
	5 2..Sponge (10 X 8 X 5 mm)	612-7K-573			
NSP	6 1..Panel PCB (R) Assy	705-DDJSX3-1762	36	Master Lens	100-SXMK2-3155
	& Sponge Packing Assy		37	Round Knob	100-SXMK2-3160A
	7 2..CONTROL PCB Assy B	•••••	38	Ground Plate	300-S1-2051
B	8 2..Sponge (10 X 8 X 5 mm)	612-7K-573	39	Isolation Slice	501-S1-2542A
	9 2..Sponge (8*6*18 mm)	612-S1-451	40	Cable Tie	504-S100-004
	10 1..MIXER PCB Assy	705-DDJSX3-1758	41	Shift Button	100-S1-2989
NSP	& Sponge Packing Assy		42	2 Key Button	100-S1-2992S
	11 2..MIX PCB Assy	•••••	43	Fixed Plate	100-S1-2999
	12 2..Spacer (60 X 30 X 1.5, EVA)	612-S1-449	44	CF Button	100-S1-3003
C	13 2..Sponge (8*6*18 mm)	612-S1-451	45	Cue Button	100-S1B-2993
	14 2..Sponge (23 X 10 X 10 mm)	612-7K-572	46	Load Button	100-S1D-2993
	15 PAD & FSR Assy	704-S1MK2-A962	47	Master Cue Button	100-SX3-2993
C	16 Little Round Button	100-S1-2991	48	A, B Button	100-SX3-2994
	17 ON Button	100-S1-2993	49	Input Selector	100-SX3-3410
	18 Deck 2 Button	100-S1A-2990	50	CFX Button	100-SX3A-3257
C	19 In/Out Button	100-S1A-2994	51	Filter Button	100-SX3A-3259
	20 Censor Button (-)	100-S1B-2989	52	Noise Button	100-SX3B-3258
	21 Deck 3 Button	100-S1B-2990	53	CH Fader Fixed Plate	300-S1-2046
C	22 2X Button	100-S1B-2994	54	CF Fixed Plate	300-SX3-2397
	23 Deck 4 Button	100-S1C-2990	55	Velocity Soft Knob	604-SX3-712
	24 Button	100-S1C-2994	56	Chassis Packing Assy (For Service)	See Contrast table (2)
D	25 Auto Loop Button	100-S1E-2993	57	Deck 1 Button	100-S1-2990
	26 Hot Cue/Roll Button	100-SX2-3156	58	•••••	
	27 1, 2 Button	100-SX2-3159	59	Screw	602-SA12-414
D	28 Censor Button	100-SX2A-2989	60	Screw	602-SL24F-099
	29 Hot Cue/Roll Button	100-SX2A-3156	61	Screw (TTP, 3*8, ZB)	602-DJ5500-452
	30 Button Key	100-SX3-2989	62	Screw (M3*8)	602-HMD510B-198
			63	Screw (3*8 mm TTB)	602-2002-077

(2) CONTRAST TABLE

DDJ-SX3/FJLPXEG, SVYXEG, UXEGCB and XEGCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-SX3/FJLPXEG	DDJ-SX3/SVYXEG	DDJ-SX3/UXEGCB	DDJ-SX3/XEGCN
	56	Chassis Packing Assy (For Service)	705-DDJSX3-1753	705-DDJSX3-1753	705-DDJSX3-1753	705-SX3C-1754