


## 9.2 EXTERIOR SECTION

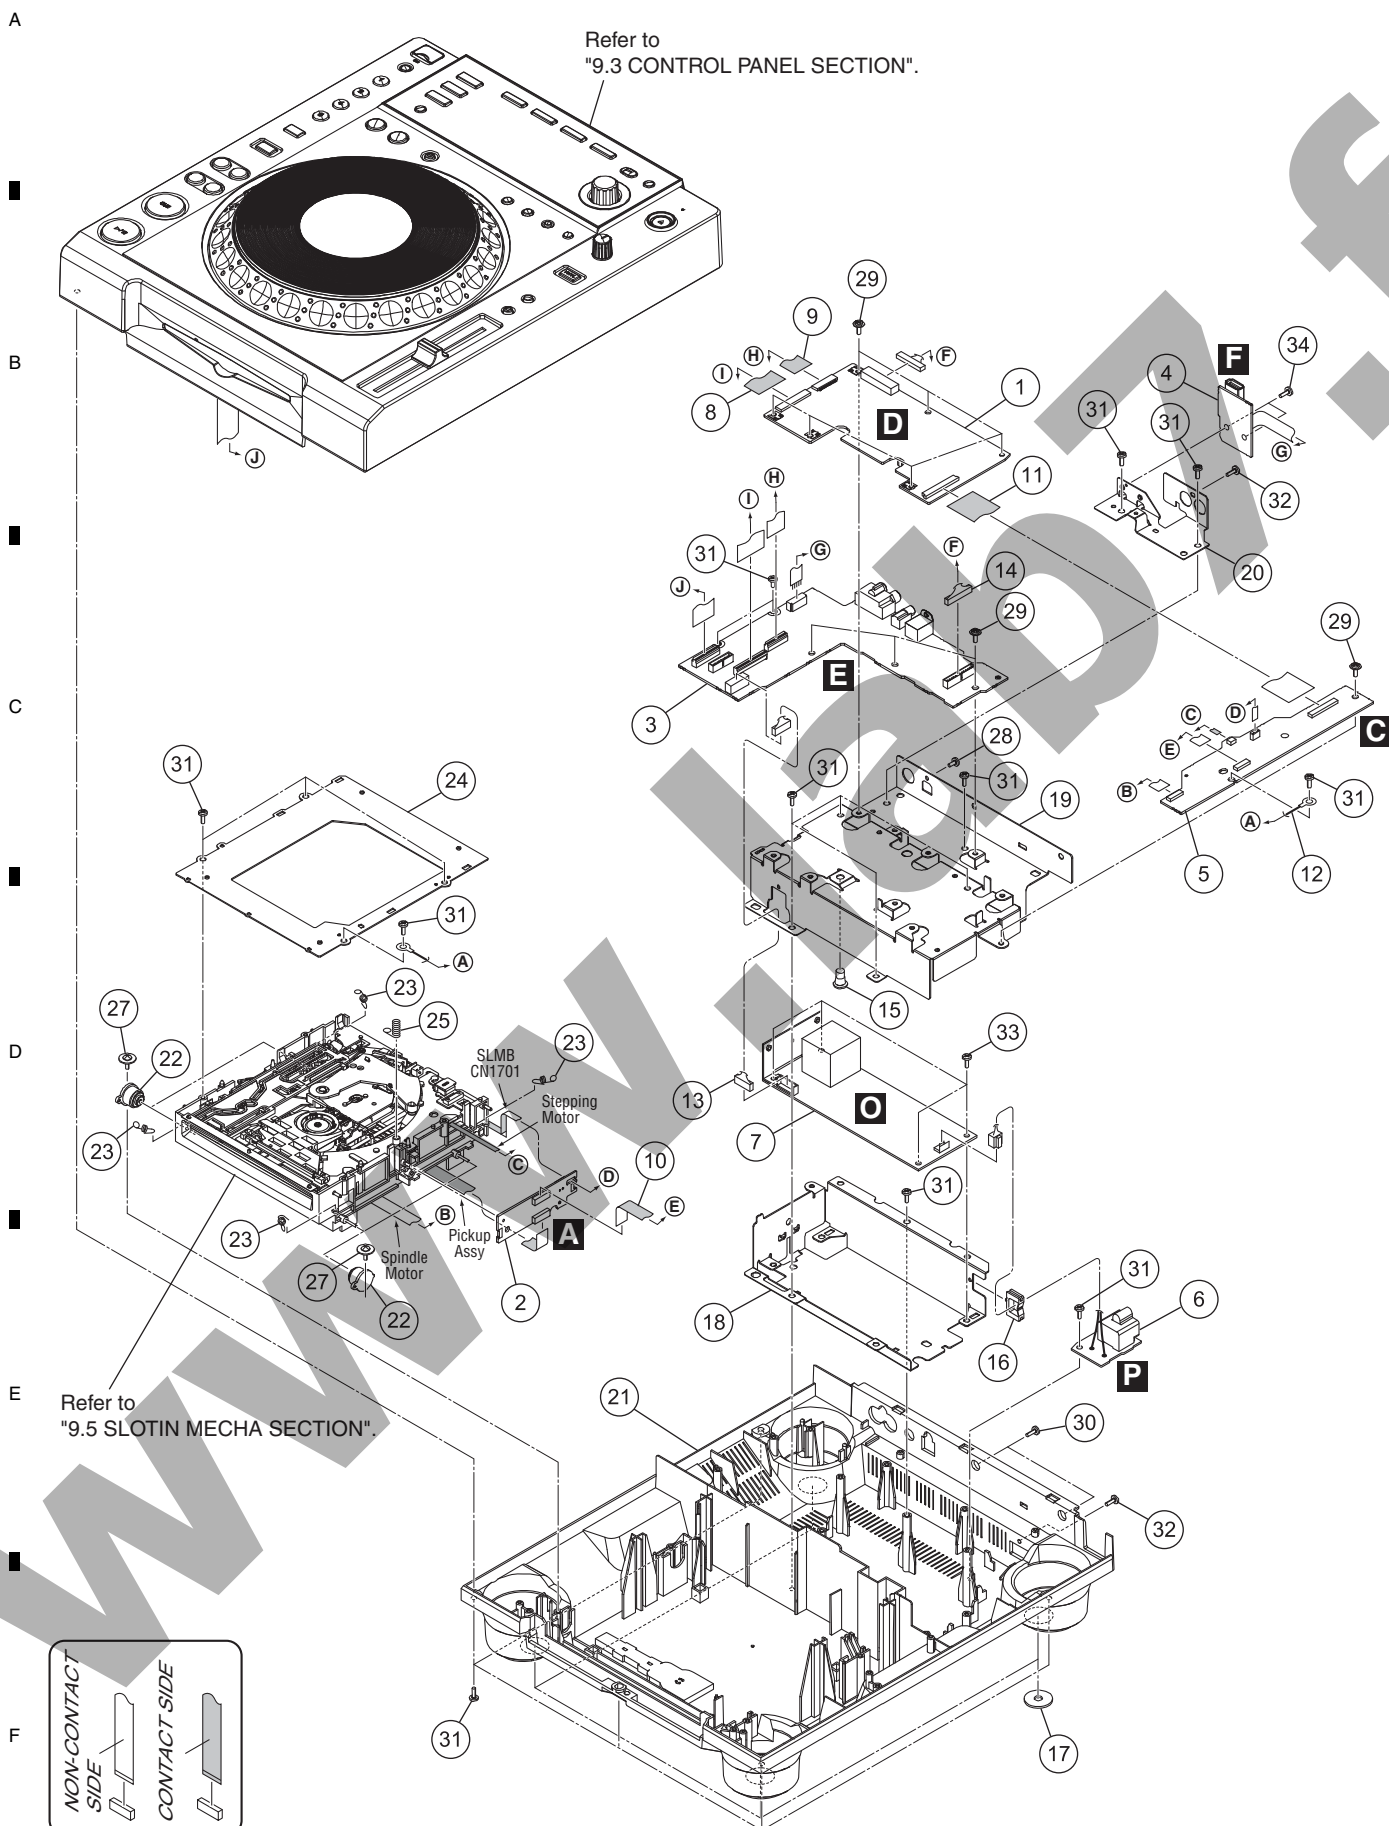

## (1) EXTERIOR SECTION SECTION PARTS LIST

| Mark No. | Description          | Part No.               | Mark No. | Description     | Part No.               |
|----------|----------------------|------------------------|----------|-----------------|------------------------|
|          | 1 MAIN Assy          | DWX3174                | ⚠ 21     | Chassis         | See Contrast table (2) |
|          | 2 CNCT Assy          | DWX3151                | 22       | Damper          | CNV6011                |
|          | 3 CMPX Assy          | DWX3153                | 23       | Float Spring G5 | DBH1494                |
|          | 4 USBA Assy          | DWX3156                | 24       | Mecha Plate     | DNH2642                |
|          | 5 JINT Assy          | DWX3157                | 25       | Earth Spring    | DBH1398                |
|          | 6 ACIN Assy          | See Contrast table (2) | 26       | •••••           |                        |
| ⚠        | 7 POWER SUPPLY Assy  | DWR1463                | 27       | DM Screw (FTC)  | DBA1260                |
|          | 8 27P FFC            | DDD1523                | 28       | Screw (M3 x 5)  | DBA1340                |
|          | 9 17P FFC            | DDD1524                | 29       | Screw           | ABZ30P060FTC           |
|          | 10 24P FFC           | DDD1535                | 30       | Screw           | BBZ30P060FTB           |
|          |                      |                        | 31       | Screw           | BPZ30P080FNI           |
|          | 11 50P FFC           | DDD1536                |          |                 |                        |
| NSP      | 12 Cord With Plug    | DE010VE0               | 32       | Screw           | BPZ30P080FTB           |
|          | 13 Connector Assy 6P | DKP3869                | 33       | Screw           | BPZ30P100FTC           |
|          | 14 Connector Assy    | PF13PP-S07             | 34       | Screw           | BSZ30P060FTC           |
|          | 15 Card Spacer       | AEC7133                |          |                 |                        |
|          | 16 Edge Saddle       | AEC7582                |          |                 |                        |
|          | 17 Cushion           | DEC3177                |          |                 |                        |
|          | 18 Power Supply Stay | DNH2936                |          |                 |                        |
|          | 19 Main PCB Stay     | DNH2937                |          |                 |                        |
| NSP      | 20 USB Stay          | DNH2938                |          |                 |                        |

## (2) CONTRAST TABLE

CDJ-850/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

| Mark | No.     | Symbol and Description | CDJ-850 /SYXJ8     | CDJ-850 /CUXJ      | CDJ-850 /FLXJ      | CDJ-850 /KXJ5      | CDJ-850 /AXJ5      |
|------|---------|------------------------|--------------------|--------------------|--------------------|--------------------|--------------------|
| ⚠    | 6<br>21 | ACIN Assy<br>Chassis   | DWX3158<br>DNK5785 | DWX3173<br>DNK5819 | DWX3158<br>DNK5820 | DWX3158<br>DNK5823 | DWX3158<br>DNK5822 |

△



## CONTROL PANEL SECTION PARTS LIST

| <u>Mark No.</u> | <u>Description</u>   | <u>Part No.</u> |
|-----------------|----------------------|-----------------|
| NSP 1           | KSW1 Assy            | DWS1422         |
| NSP 2           | SLD1 Assy            | DWS1423         |
| 3               | PSWB Assy            | DWS1424         |
| 4               | KSW2 Assy            | DWS1426         |
| 5               | SLD2 Assy            | DWS1427         |
| 6               | DFLB Assy            | DWX3152 *       |
| 7               | 21P FFC              | DDD1522         |
| 8               | USB Cover            | DNK4999         |
| 9               | Rotary Knob C        | DAA1194         |
| 10              | Dial Knob            | DAA1259         |
| 11              | Loop Knob            | DAC2066         |
| 12              | Play Knob            | DAC2286         |
| 13              | Reloop Knob          | DAC2291         |
| 14              | Slide Knob           | DAC2292         |
| 15              | Power Knob           | DAC2306         |
| 16              | Reverse Knob         | DAC2364         |
| 17              | Set Button (CALL)    | DAC2497         |
| 18              | Vinyl Knob           | DAC2542         |
| 19              | Auto Beat Roop Knob  | DAC2543         |
| 20              | Del/Memo Knob        | DAC2545         |
| 21              | Beat Select Button   | DAC2546         |
| 22              | Eject Button         | DAC2548         |
| 23              | Tempo Button         | DAC2549         |
| 24              | USB Stop Button      | DAC2550         |
| 25              | Back Button          | DAC2613         |
| 26              | Device Select Button | DAC2614         |
| 27              | Mode Select Button   | DAC2615         |
| 28              | Search Button Silver | DAC2627         |
| 29              | Slide Sheet 1C       | DAH2404         |
| NSP 30          | Silicon Rubber D5 L  | DEB1456         |
| 31              | Earth Bracket        | DNH2941         |
| 32              | Heatsink             | DNH2958         |
| 33              | USB Lens             | DNK5353         |
| 34              | EUP Lens             | DNK5408         |
| 35              | Encoder Ring         | DNK5489         |
| ⚠ 36            | Control Panel        | DNK5786         |
| 37              | Display Window       | DNK5793         |
| 38              | •••••                |                 |
| 39              | •••••                |                 |
| 40              | Screw                | BPZ30P080FNI    |

\* The service part of DFLB Assy (DWX3152) is supplied with KSW1 Assy (DWS1422) and SLD1 Assy (DWS1423).  
(There assemblies are connected with the jumper wires.)

## 9.4 JOG DIAL SECTION

A


B

C

D

E

F

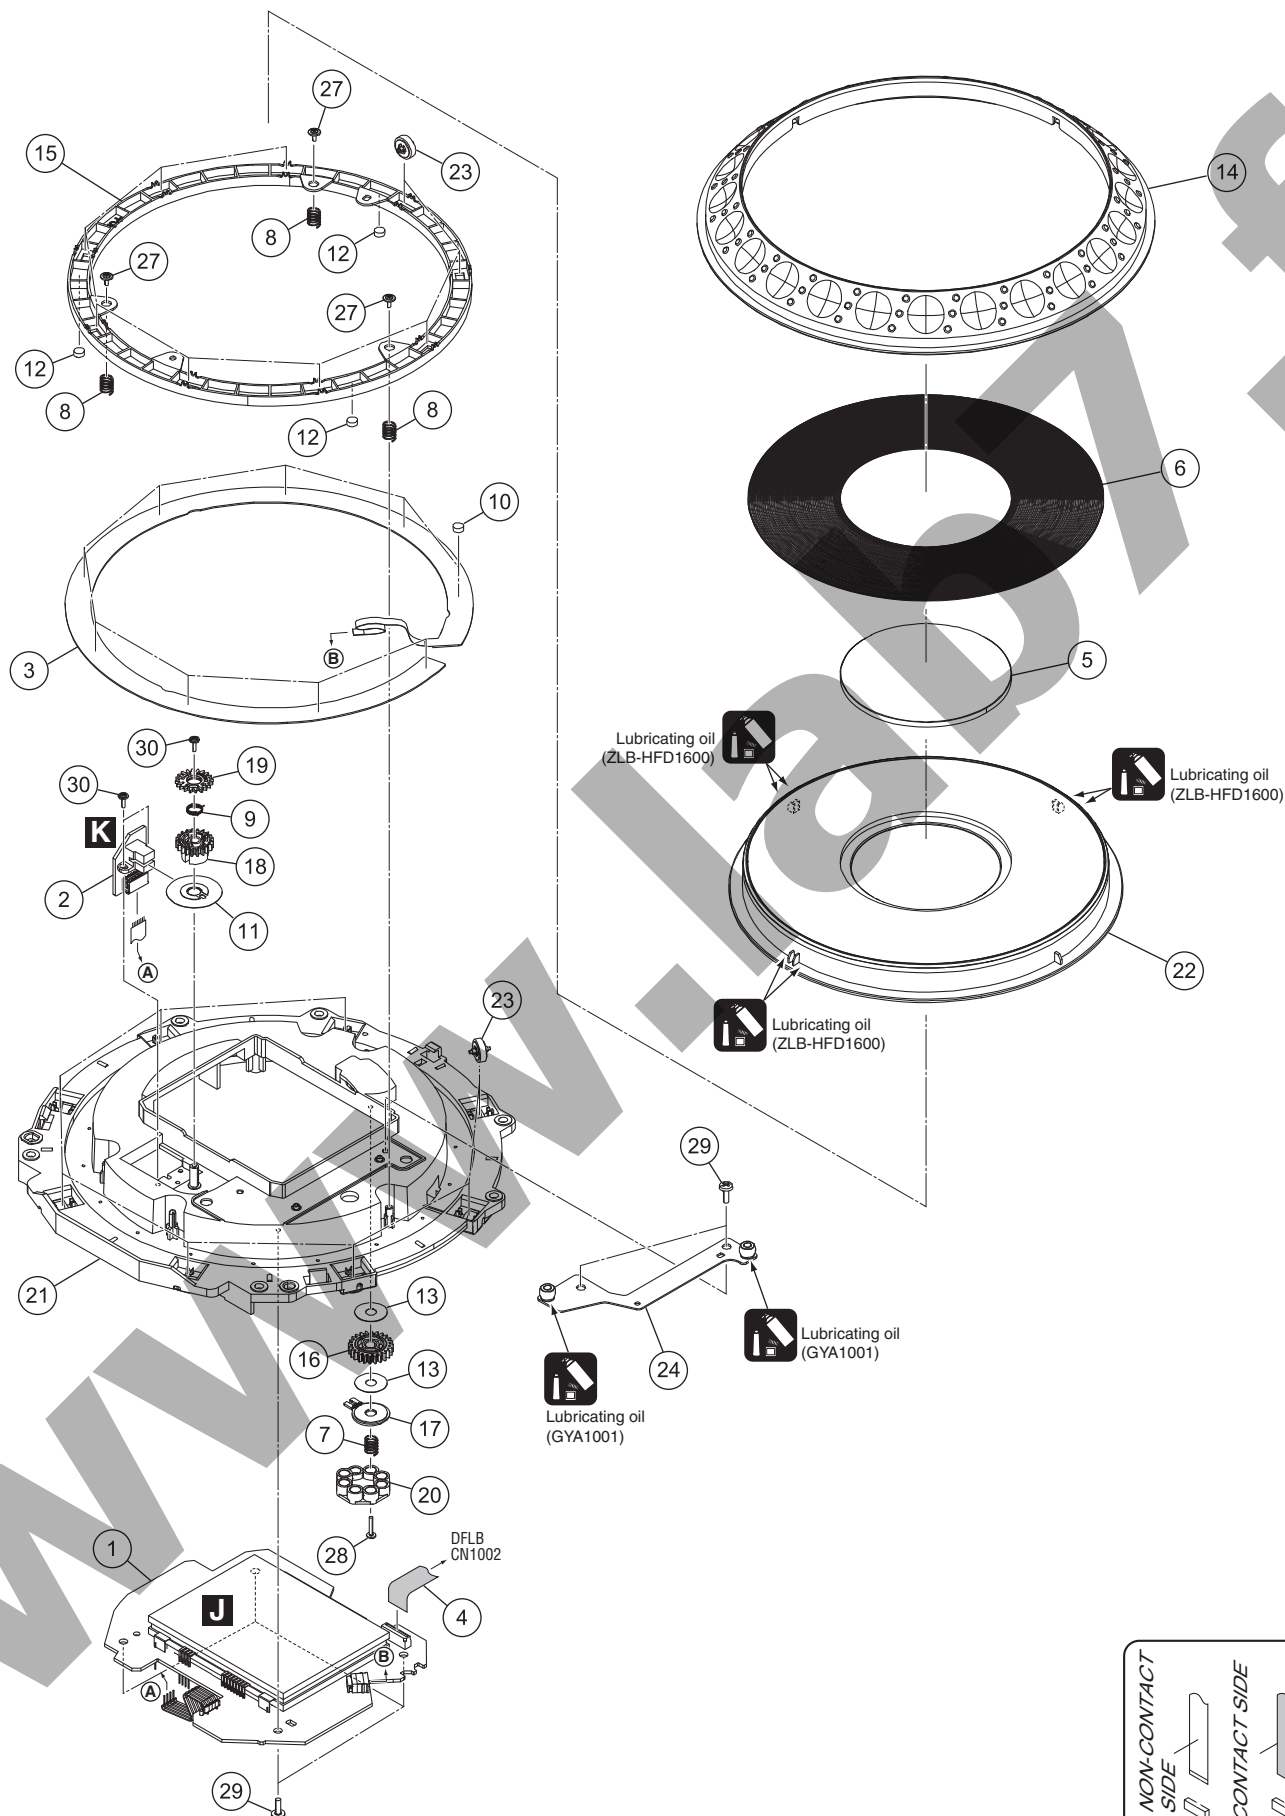

JOG DIAL SECTION PARTS LIST

| Mark No. | Description          | Part No.     |
|----------|----------------------|--------------|
| 1        | JFLB Assy            | DWX3154      |
| 2        | JOGB Assy            | DWX3155      |
| 3        | Sheet SW             | DSX1078      |
| 4        | 13P FFC              | DDD1521      |
| 5        | JOG Panel            | DAH2609      |
| 6        | JOG Plate            | DAH2839      |
| 7        | Load Spring          | DBH1680      |
| 8        | SW Spring            | DBH1681      |
| 9        | Encoder Spring       | DBH1710      |
| 10       | SW Cushion HH48/2    | DEC2538      |
| 11       | Encoder Plate        | DEC2889      |
| 12       | Ring Cushion L24/2.0 | DEC2958      |
| 13       | Washer               | DEC3137      |
| 14       | JOG B                | DNK4068      |
| 15       | SW Ring              | DNK5233      |
| 16       | Load Gear            | DNK5236      |
| 17       | Smoother             | DNK5237      |
| 18       | Gear A               | DNK5241      |
| 19       | Gear B               | DNK5242      |
| 20       | Adjust Plate         | DNK5300      |
| 21       | JOG Holder M         | DNK5356      |
| 22       | JOG Dial A           | DNK5357      |
| 23       | Roller A Assy        | DXB2010      |
| 24       | JOG Stay Assy        | DXB2015      |
| 25       | .....                |              |
| 26       | .....                |              |
| 27       | Screw (FE)           | DBA1265      |
| 28       | Screw                | BPZ20P100FTC |
| 29       | Screw                | BPZ30P080FNI |
| 30       | Screw                | IPZ20P060FTC |

A

B

C

D

E

F

# 9.5 SLOTIN MECHA SECTION

A


B

C

D

E

F

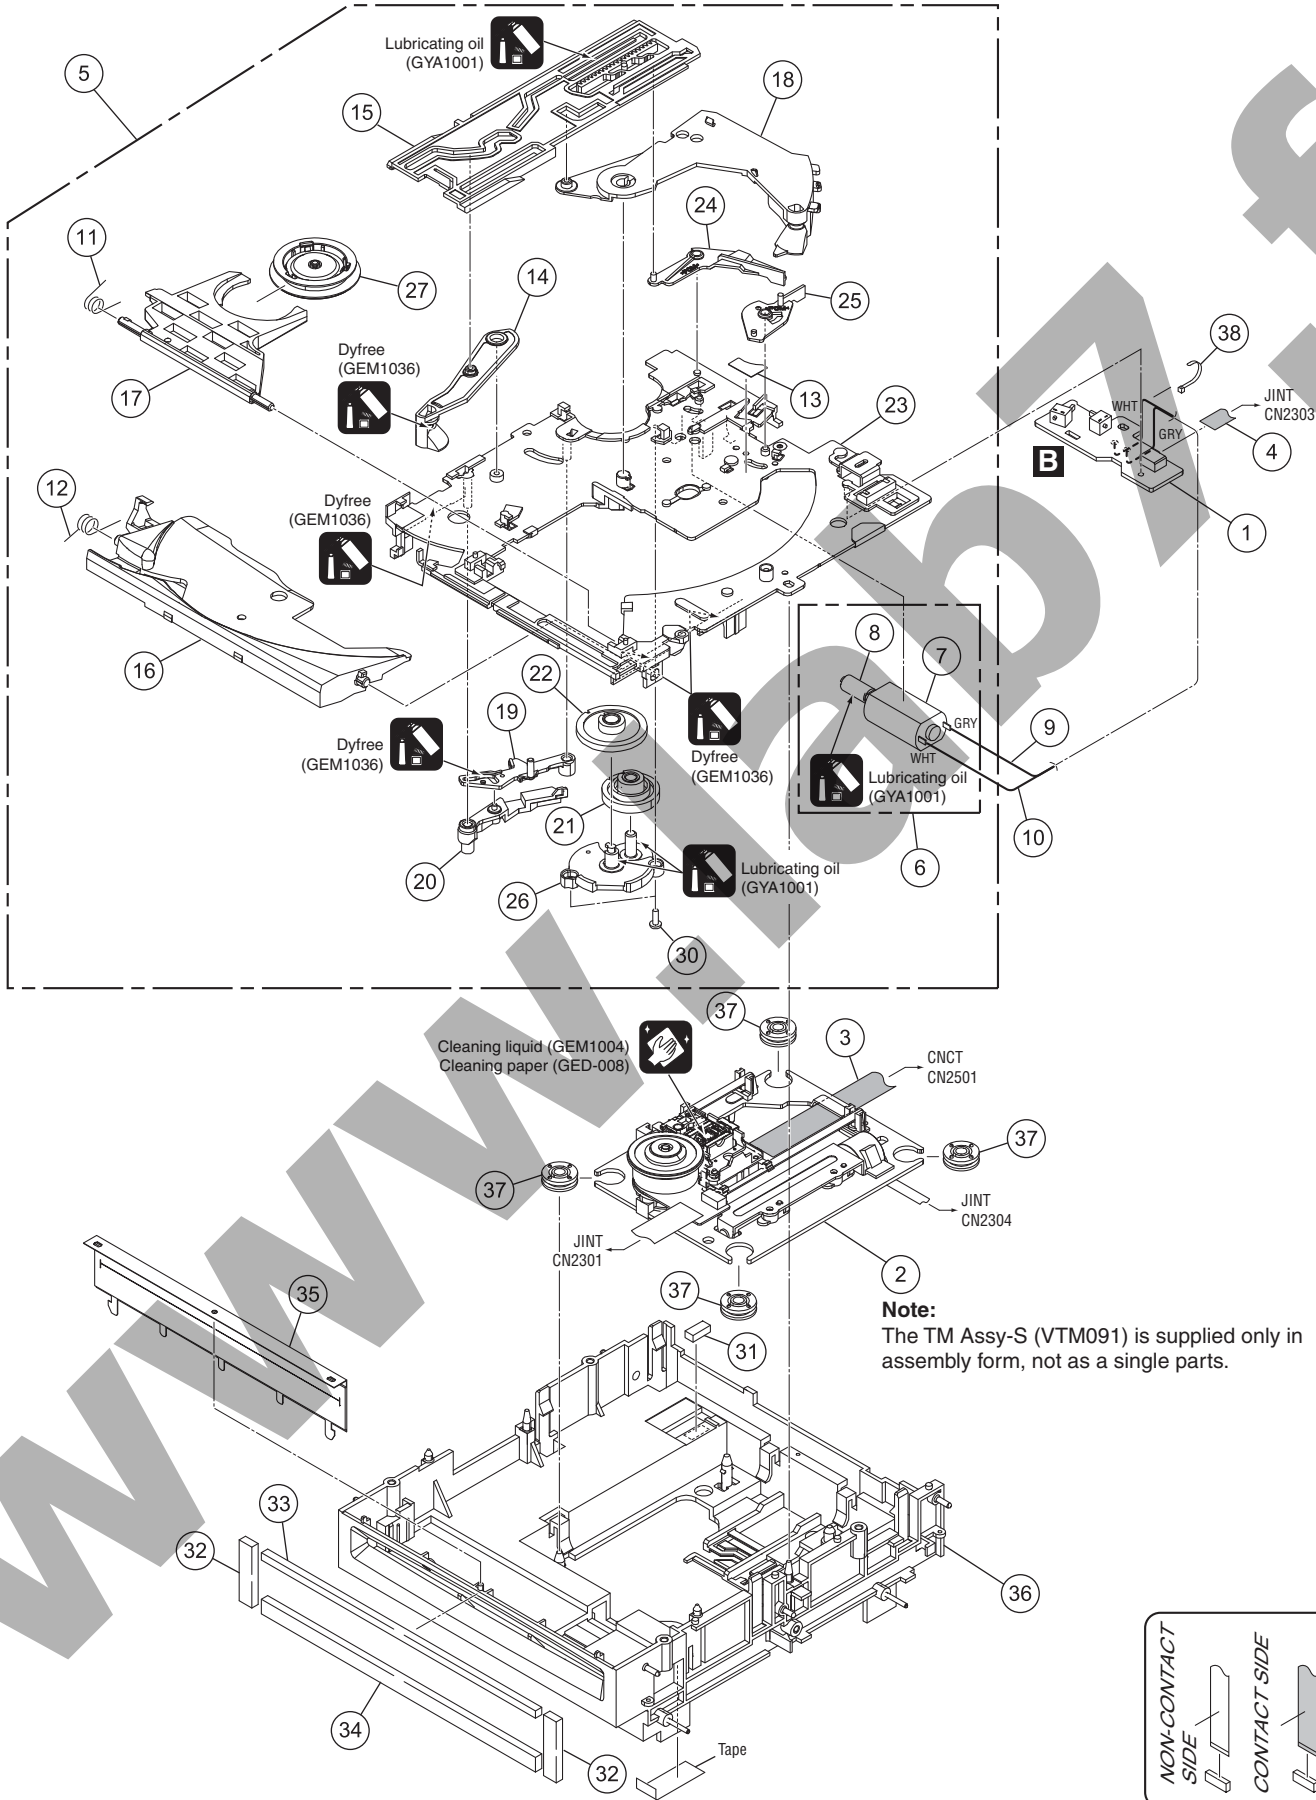

# SLOTIN MECHA SECTION PARTS LIST

| Mark No. | Description            | Part No.          |   |
|----------|------------------------|-------------------|---|
|          | 1 SLMB Assy            | DWS1425           |   |
|          | 2 TM Assy-S (VTM091)   | DXX2616           | A |
|          | 3 24P FFC              | DDD1491           |   |
|          | 4 5P FFC               | DDD1527           |   |
| NSP      | 5 SLOTIN MECHA Assy    | DXA2206           |   |
|          | 6 Loading Motor Assy-S | DXX2615           |   |
| NSP      | 7 DC Motor             | DXM1384           |   |
| NSP      | 8 Worm Gear            | DNK3910           |   |
|          | 9 Lead Wire            | ZWNN1007G28-8-06A |   |
|          | 10 Lead Wire           | ZWNN1007G28-9-06A |   |
|          | 11 Clamp Spring        | DBH1374           | B |
|          | 12 Guide Spring        | DBH1375           |   |
|          | 13 SW. Lever Spacer SV | DEC2831           |   |
|          | 14 Loading Lever       | DNK3406           |   |
|          | 15 Main Cam            | DNK3407           |   |
|          | 16 Disc Guide          | DNK3478           |   |
|          | 17 Clamp Arm           | DNK3576           |   |
|          | 18 Eject Lever         | DNK3684           |   |
|          | 19 Lever AP            | DNK3835           |   |
|          | 20 Lever BP            | DNK3836           | C |
|          | 21 Loading Gear        | DNK3911           |   |
|          | 22 Drive Gear          | DNK3912           |   |
|          | 23 Loading Base SV     | DNK4369           |   |
|          | 24 SW Lever SV1        | DNK4370           |   |
|          | 25 SW Lever SV2        | DNK4371           |   |
|          | 26 Gear Holder SV      | DNK4372           |   |
|          | 27 Clamper Assy-S      | DXX2661           |   |
|          | 28 ●●●●●               |                   |   |
|          | 29 ●●●●●               |                   | D |
|          | 30 Screw               | BPZ20P060FTC      |   |
|          | 31 Spacer POR (T3)     | DEB1566           |   |
|          | 32 Vessel Cushion (C)  | DEC2854           |   |
|          | 33 Vessel Cushion T    | DEC3349           |   |
|          | 34 Vessel Cushion U    | DEC3350           |   |
|          | 35 Front Sheet         | DED1132           |   |
|          | 36 Float Base 05 Assy  | DXB2068           |   |
|          | 37 Floating Rubber     | VEB1351           |   |
|          | 38 Binder              | ZCA-SKB90BK       | E |



# 1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The  mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to  mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

● Nos. indicate the pages and Nos. in the service manual for the base model.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560Ω → 56 x 10<sup>1</sup> → 561 ..... RD1/4PU561J

47kΩ → 47 x 10<sup>3</sup> → 473 ..... RD1/4PU473J

0.5Ω → R50 ..... RN2HR50K

1Ω → 1R0 ..... RS1P1R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ → 562 x 10<sup>1</sup> → 5621 ..... RN1/4PC5621F

## CONTRAST TABLE

CDJ-850/SYXJ8, CDJ-850-K/SYXJ8, CDJ-850-K/UXJCB, CDJ-850-K/FLXJ, CDJ-850-K/KXJ5 and CDJ-850-K/AXJ5 are constructed the same except for the following:

| Mark | No.                                                                                | Symbol and Description                  | CDJ-850<br>/SYXJ8  | CDJ-850-K<br>/SYXJ8 | CDJ-850-K<br>/UXJCB | CDJ-850-K<br>/FLXJ | CDJ-850-K<br>/KXJ5 | CDJ-850-K<br>/AXJ5 | Remarks |
|------|------------------------------------------------------------------------------------|-----------------------------------------|--------------------|---------------------|---------------------|--------------------|--------------------|--------------------|---------|
| C    | NSP                                                                                | <b>PCB ASSEMBLIES</b>                   |                    |                     |                     |                    |                    |                    |         |
|      | P59-6                                                                              | 1.SUB1 ASSY<br>2.ACIN ASSY              | DWM2399<br>DWX3158 | DWM2399<br>DWX3158  | DWM2405<br>DWX3173  | DWM2399<br>DWX3158 | DWM2399<br>DWX3158 | DWM2399<br>DWX3158 |         |
|      |    | <b>PACKING SECTION</b>                  |                    |                     |                     |                    |                    |                    |         |
|      | P57-1                                                                              | Power Cord                              | ADG1154            | ADG1154             | ADG7022             | ADG1154            | ADG7113            | ADG7079            |         |
|      | P57-2                                                                              | Power Cord                              | Not used           | Not used            | Not used            | ADG7097            | Not used           | Not used           |         |
|      | P57-7                                                                              | Operating Instructions<br>(En/Fr/De)    | DRB1527            | DRB1527             | Not used            | Not used           | Not used           | Not used           |         |
|      | P57-8                                                                              | Operating Instructions<br>(It/Nl/Es/Ru) | DRB1535            | DRB1535             | Not used            | Not used           | Not used           | Not used           |         |
|      | P57-9                                                                              | Operating Instructions (En/Fr)          | Not used           | Not used            | DRB1526             | Not used           | Not used           | Not used           |         |
|      | P57-10                                                                             | Operating Instructions<br>(En/Es/Zhtw)  | Not used           | Not used            | Not used            | DRB1528            | Not used           | Not used           |         |
|      | P57-11                                                                             | Operating Instructions (Ko)             | Not used           | Not used            | Not used            | Not used           | DRB1530            | Not used           |         |
| D    | P57-12                                                                             | Operating Instructions<br>(Zhcn/En)     | Not used           | Not used            | Not used            | Not used           | Not used           | DRB1623            |         |
|      | NSP                                                                                | P57-15                                  | Warranty Card      | ARY7107             | ARY7107             | Not used           | Not used           | Not used           |         |
|      | P57-16                                                                             | Caution Card SB                         | Not used           | Not used            | Not used            | ARM7064            | Not used           | Not used           |         |
|      | P57-17                                                                             | Vinyl Bag                               | Not used           | Not used            | Not used            | Z21-013            | Not used           | Not used           |         |
|      | P57-18                                                                             | Recycle Label (M)                       | Not used           | Not used            | Not used            | Not used           | DRW2307            | Not used           |         |
|      | NSP                                                                                | P57-19                                  | CCC S & E Label    | Not used            | Not used            | Not used           | Not used           | DRW2310            |         |
|      | P57-24                                                                             | Packing Case                            | DHG3075            | DHG3130             | DHG3127             | DHG3128            | DHG3129            | DHG3126            |         |
|      |  | <b>EXTERIOR SECION</b>                  |                    |                     |                     |                    |                    |                    |         |
|      | P59-21                                                                             | Chassis                                 | DNK5785            | DNK6099             | DNK6094             | DNK6095            | DNK6098            | DNK6097            |         |
|      |  | <b>CONTROL PANEL SECTION</b>            |                    |                     |                     |                    |                    |                    |         |
| E    | P61-28                                                                             | Search Button                           | DAC2627            | DAC2495             | DAC2495             | DAC2495            | DAC2495            | DAC2495            |         |
|      | P61-36                                                                             | Control Panel                           | DNK5786            | DNK6093             | DNK6093             | DNK6093            | DNK6093            | DNK6093            |         |