

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

XDJ-1000/SYXJ8 and XDJ-1000MK2/LSYXJ, UXJCB and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-1000/ SYXJ8	XDJ-1000MK2/ LSYXJ	XDJ-1000MK2/ UXJCB	XDJ-1000MK2/ AXJ	Remaks
NSP NSP NSP NSP	5	Operating Instructions (Quick Start Guide) (En, Fr, De, It, NI, Es, Pt, Ru)	DRH1278	DRH1373	Not used	Not used	
	6	Operating Instructions (Quick Start Guide) (En)	Not used	Not used	DRH1372	Not used	
	8	Operating Instructions (Quick Start Guide) (Zhcn)	Not used	Not used	Not used	DRH1375	
	9	Leaflet	DRH1275	DRH1275	DRH1275	DRH1274	
	10	Warranty	ARY7158	DRY1270	Not used	Not used	
	14	Packing Case	DHG3378	DHG3484	DHG3485	DHG3488	
	15	Packing Sheet	RHC1023	RHX1006	RHX1006	RHX1006	
	17	CCC S Label	Not used	Not used	Not used	DRW2310	
	18	Name Label	Not used	Not used	Not used	DAL1347	



Refer to
"9.3 CONTROL PANEL SECTION".

- * シャープエッジ対策
- * Attach the tape shape edge guard

ACETATE CLOTH TAPE 貼り付け方法
ACETATE CLOTH TAPE Paste method

* When replacing the shield case, be sure to attach the acetate tape. Reuse the old original tape, if it is possible. When it is unable to reuse it, use the tape registered in the jig list, and attach it like the figure (upper right). Although the width of the old original tape is 10 mm, the jig tape is 25 mm.

ACETATE
CLOTH TAPE (8 cm)*

12 mm


1

•

1

P

P


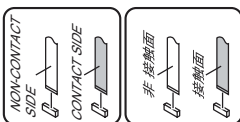


XDJ-1000MK2

EXTERIOR SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	MAIN Assy	DWX3920
	2	USBA Assy	DWX3922
	3	ACIN Assy	DWX3926
	4	PSWB Assy	DWX3929
	5	UTMB Assy	DWX3930
■	⚠ 6	SW POWER SUPPLY	DWR1548
	7	Shielded Conn-Cable	DDA1076
	8	Crimp Connector	DDC1024
	9	Connector Assy	PF03PP-B10
	10	Cushion/PNL	DEC3535
B	11	Leg	DEC3564
	⚠ 12	Sheet	DEC3723
	13	Spacer	AEC1065
	14	Power Knob	DAC2306
	15	Shield Case/ACI	DNH3171
■	16	Stay/USB	DNH3178
	17	Shield Case	DNH3280
	18	Shield Case	DNH3281
	19	Stay	DNH3282
	20	Stay	DNH3283
C	21	Support	DNH3285
	22	Insulator	DNK6394
	⚠ 23	Chassis	DNK6648
	24	Holder	VEC1355
	25	•••••	
■	26	•••••	
	27	•••••	
	28	Screw	BBZ30P060FTB
	29	Screw	BPZ30P080FNI
	30	Screw	BPZ30P100FTC
D	31	Screw (M3*5)	DBA1340
	32	Screw	PPZ30P080FTB
	33	Screw	ABZ30P060FTC
■			
E			
■			
F			

9.3 CONTROL PANEL SECTION

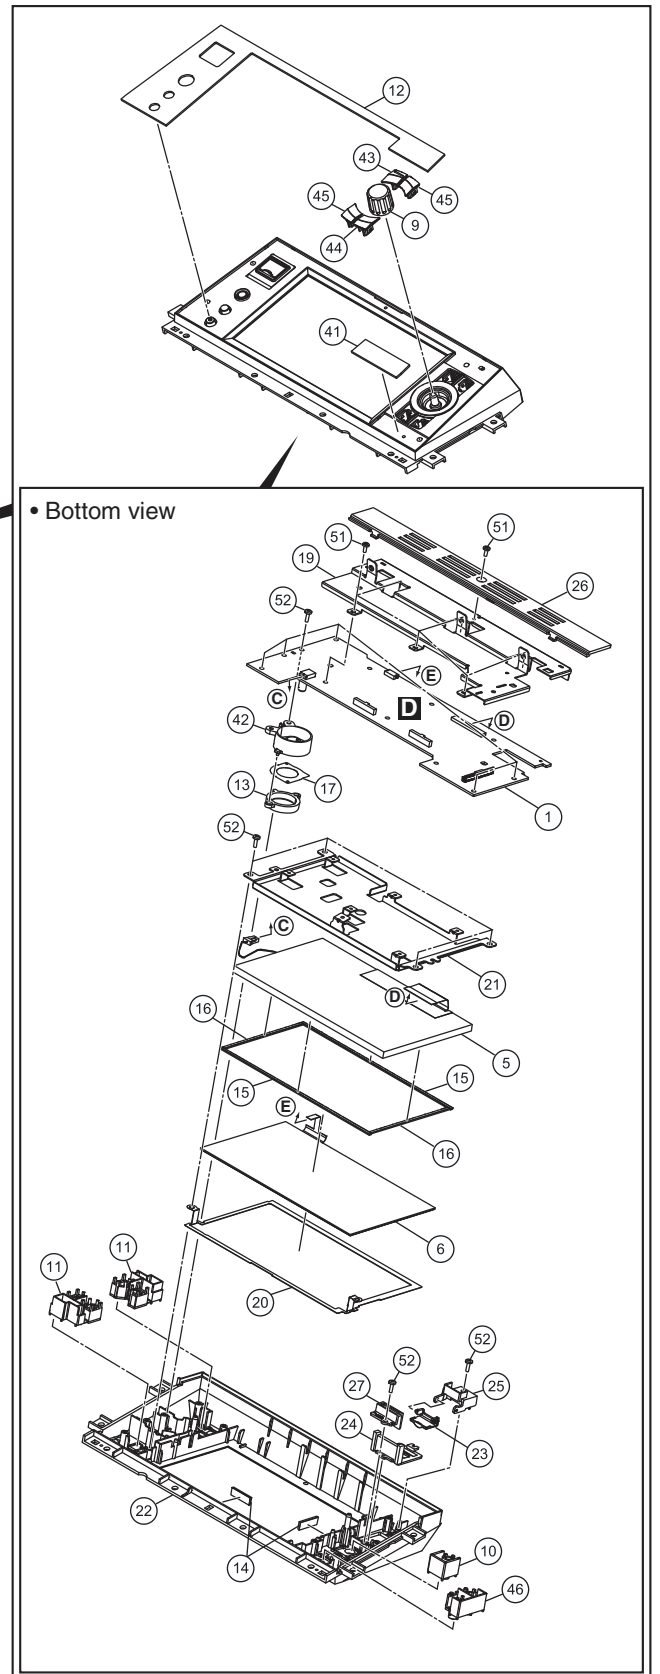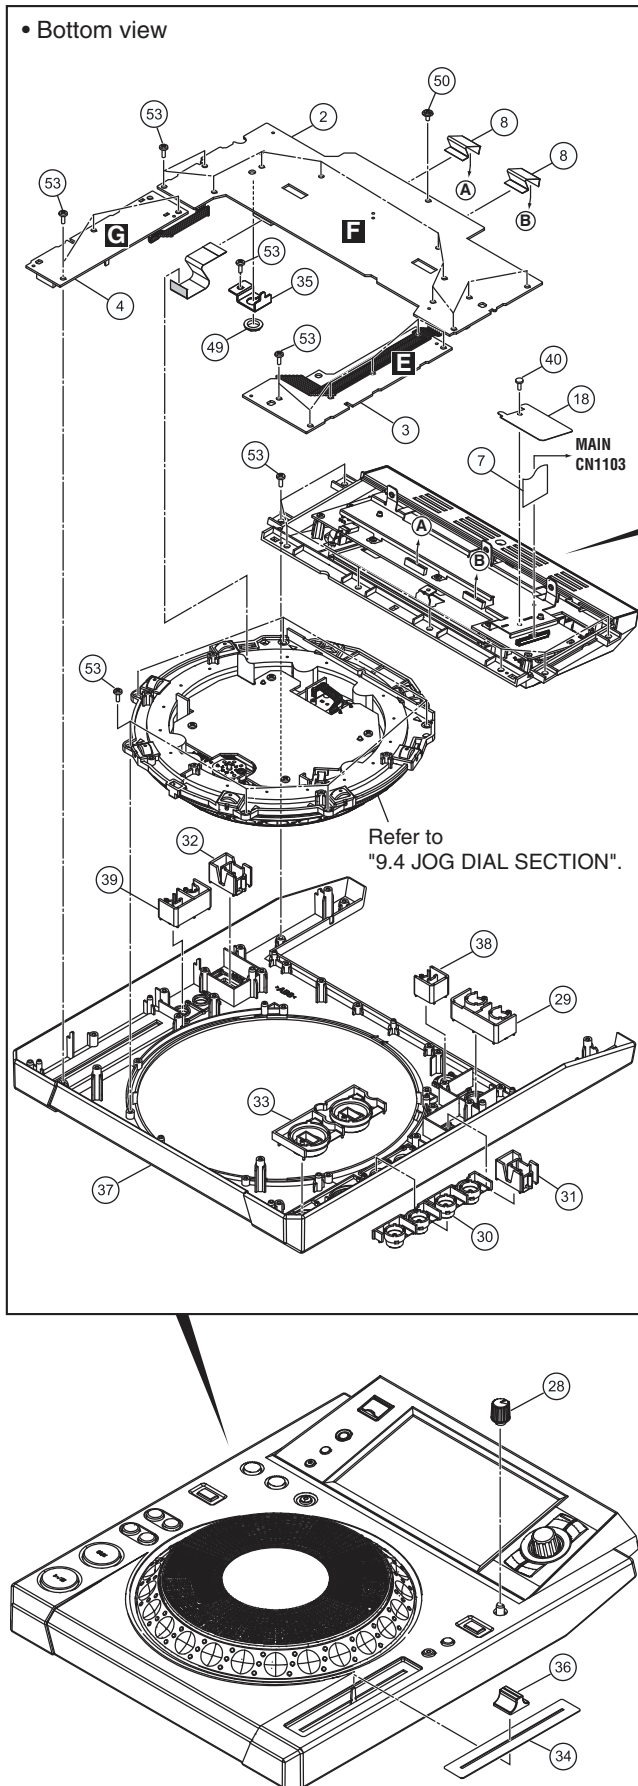

CONTROL PANEL SECTION PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>		<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	LCDB Assy	DWX3921		46	Button	DAC3246
	2	PNLB Assy	DWX3923		47	•••••	
	3	KSWB Assy	DWX3924		48	•••••	
	4	SLDB Assy	DWX3925		49	Flange Nut M9	DBN1008
	5	TFT LCD	CWX4352		50	Screw	ABZ30P060FTC
	6	Touch Panel	DSX1128		51	Screw	BBZ26P060FTB
	7	FFC	DDD1675		52	Screw	BPZ26P080FTC
	8	FFC	DDD1787		53	Screw	BPZ30P080FNI
	9	Knob	DAA1371				
	10	Button/USB	DAC3016				
B	11	Button	DAC3244				
	12	Plate	DAH3122				
	13	Lens	DNK6468				
	14	Packing/LCD	DEC3565				
	15	Packing/L	DEC3568				
	16	Packing/S	DEC3569				
	17	Light-D Sheet	DEC3613				
	18	Sheet/FFC	DEC3577				
	19	Shield Case/LCD	DNH3172				
	20	Plate/GND	DNH3173				
C	21	Stay	DNH3284				
	⚠ 22	Panel	DNK6649				
	23	Door/USB	DNK6379				
	24	Lens/USB	DNK6381				
	25	Holder/DOR	DNK6383				
	26	Cover/R	DNK6395				
	27	Reflector	DNK6400				
	28	Knob	DAA1303				
	29	Button (LOOP)	DAC2470				
	30	Button	DAC3079				
D	31	Button/REV	DAC2938				
	32	Button/VNL	DAC2939				
	33	Button/PLY	DAC3004				
	34	Slide Sheet 1C	DAH2404				
	35	Stay/VR	DNF1928				
	36	Knob/SLD	DNK5981				
	⚠ 37	Control Panel	DNK6647				
	38	Button Assy/RLP	DXB2162				
	39	Button Assy/TMP	DXB2163				
	40	Rivet (Plastic)	RBM-003				
E	41	Plate	DAH3123				
	42	Holder	DNK6650				
	43	Button	DAC3241				
	44	Button	DAC3242				
	45	Button	DAC3243				
F							

9.4 JOG DIAL SECTION

XDJ-1000/SYXJ8 and XDJ-1000MK2/LSYXJ, UXJCB and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	XDJ-1000/ SYXJ8	XDJ-1000MK2/ LSYXJ	XDJ-1000MK2/ UXJCB	XDJ-1000MK2/ AXJ	Remaks
	1	JFLB Assy	DWX3610	DWX3927	DWX3927	DWX3927	
	2	JOGB Assy	DWX3611	DWX3928	DWX3928	DWX3928	
	6	Jog Plate	DAH2839	DAH3121	DAH3121	DAH3121	
	7	Load Spring	DBH1680	DBH1798	DBH1798	DBH1798	
	11	Encoder Plate	DEC2889	DEC3700	DEC3700	DEC3700	
	16	Load Gear	DNK5236	DNK6145	DNK6145	DNK6145	
	18	Gear A	DNK5241	DNK6143	DNK6143	DNK6143	
	19	Gear B	DNK5242	DNK6144	DNK6144	DNK6144	
	23	Roller Assy/A	DXB2118	DXB2178	DXB2178	DXB2178	

