


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

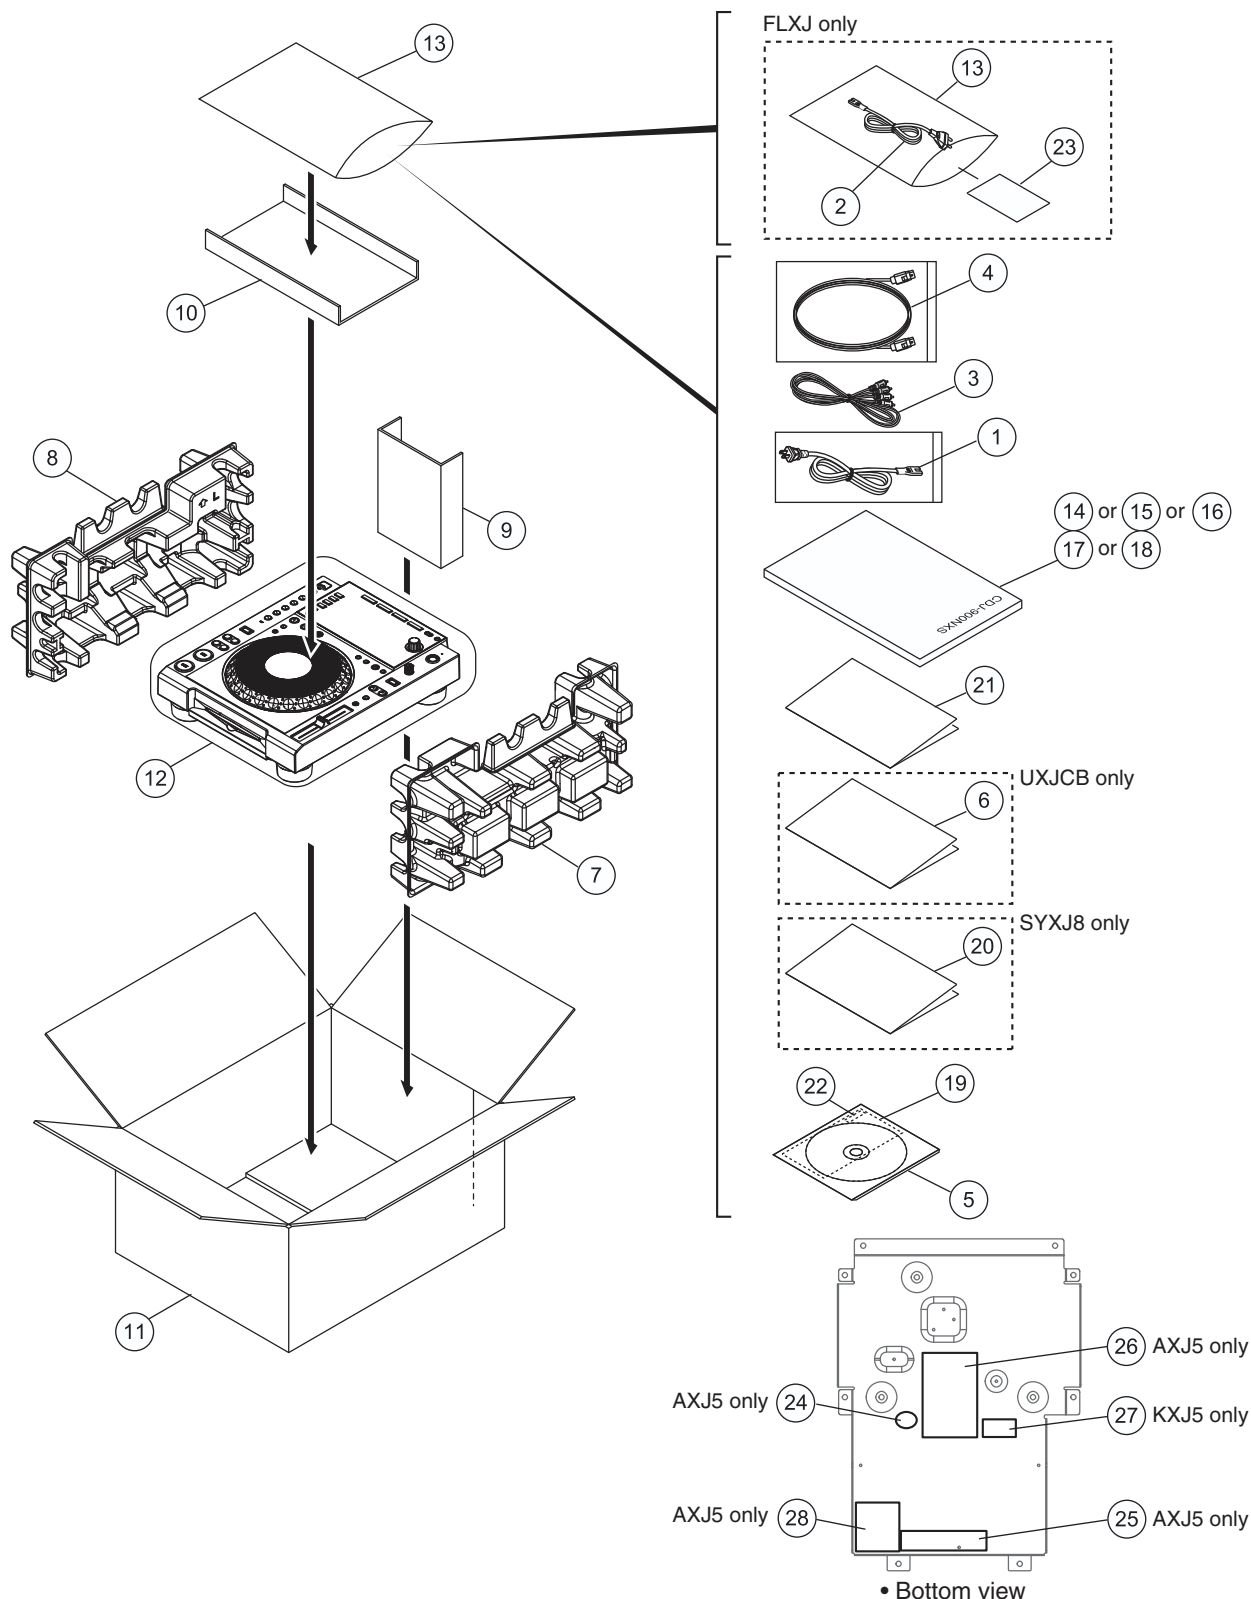

(1) PACKING SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠	1 Power Cord	See Contrast table (2)	15	Read Before Use (Important)/	See Contrast table (2)
⚠	2 Power Cord	See Contrast table (2)		Quick Start Guide	
	3 Audio Cable (L = 1.5 m)	XDE3045	16	Read Before Use (Important)/	See Contrast table (2)
	4 LAN Cable	DDE1141		Quick Start Guide	
	5 CD-ROM	DXX2739	17	Read Before Use (Important)/	See Contrast table (2)
				Quick Start Guide	
NSP	6 Sub Manual/FR2	See Contrast table (2)	18	Read Before Use (Important)/	See Contrast table (2)
	7 Pad (R)	DHA1788		Quick Start Guide	
	8 Pad (L)	DHA1789	NSP	19 License Key Label Assy	DXA2190
	9 Spacer	DHA1802	NSP	20 Warranty	See Contrast table (2)
	10 Spacer	DHA1892	NSP	21 Leaflet	See Contrast table (2)
	11 Packing Case	See Contrast table (2)	NSP	22 Label/L K	DRW2484
	12 Packing Sheet	RHC1023		23 Caution Card SB	See Contrast table (2)
NSP	13 Polyethylene Bag	AHG7117	NSP	24 CCC S&E Label	See Contrast table (2)
	14 Read Before Use (Important)/	See Contrast table (2)		25 Caut Label/CN	See Contrast table (2)
	Quick Start Guide		NSP	26 Name Label/CN	See Contrast table (2)
				27 Label/KC	See Contrast table (2)
				28 Label/CN	See Contrast table (2)

(2) CONTRAST TABLE

CDJ-900NXS/UXJCB, SYXJ8, FLXJ, AXJ5 and KXJ5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>CDJ-900NXS</u> <u>/UXJCB</u>	<u>CDJ-900NXS</u> <u>/SYXJ8</u>	<u>CDJ-900NXS</u> <u>/FLXJ</u>	<u>CDJ-900NXS</u> <u>/AXJ5</u>	<u>CDJ-900NXS</u> <u>/KXJ5</u>
⚠	1	Power Cord	ADG7022	ADG1154	ADG1154	ADG7079	ADG7113
⚠	2	Power Cord	Not used	Not used	ADG7097	Not used	Not used
NSP	6	Sub Manual/FR2	DRM1390	Not used	Not used	Not used	Not used
	11	Packing Case	DHG3286	DHG3295	DHG3296	DHG3297	DHG3298
	14	Read Before Use (Important)/Quick Start Guide (En)	DRH1228	Not used	Not used	Not used	Not used
	15	Read Before Use (Important)/Quick Start Guide (En, Fr, De, It, NI, Es, Po, Ru)	Not used	DRH1229	Not used	Not used	Not used
	16	Read Before Use (Important)/Quick Start Guide (En, Es, Zhtw)	Not used	Not used	DRH1230	Not used	Not used
	17	Read Before Use (Important)/Quick Start Guide (Zhcn)	Not used	Not used	Not used	DRH1231	Not used
	18	Read Before Use (Important)/Quick Start Guide (Ko)	Not used	Not used	Not used	Not used	DRH1232
NSP	20	Warranty	Not used	ARY7158	Not used	Not used	Not used
NSP	21	Leaflet	DRH1245	DRH1245	DRH1245	Not used	DRH1244
	23	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used
NSP	24	CCC S&E Label	Not used	Not used	Not used	DRW2310	Not used
	25	Caut Label/CN	Not used	Not used	Not used	DRW2596	Not used
NSP	26	Name Label/CN	Not used	Not used	Not used	DAL1268	Not used
	27	Label/KC	Not used	Not used	Not used	Not used	DRW2601
	28	Label/CN	Not used	Not used	Not used	DRW2606	Not used

9.2 EXTERIOR SECTION

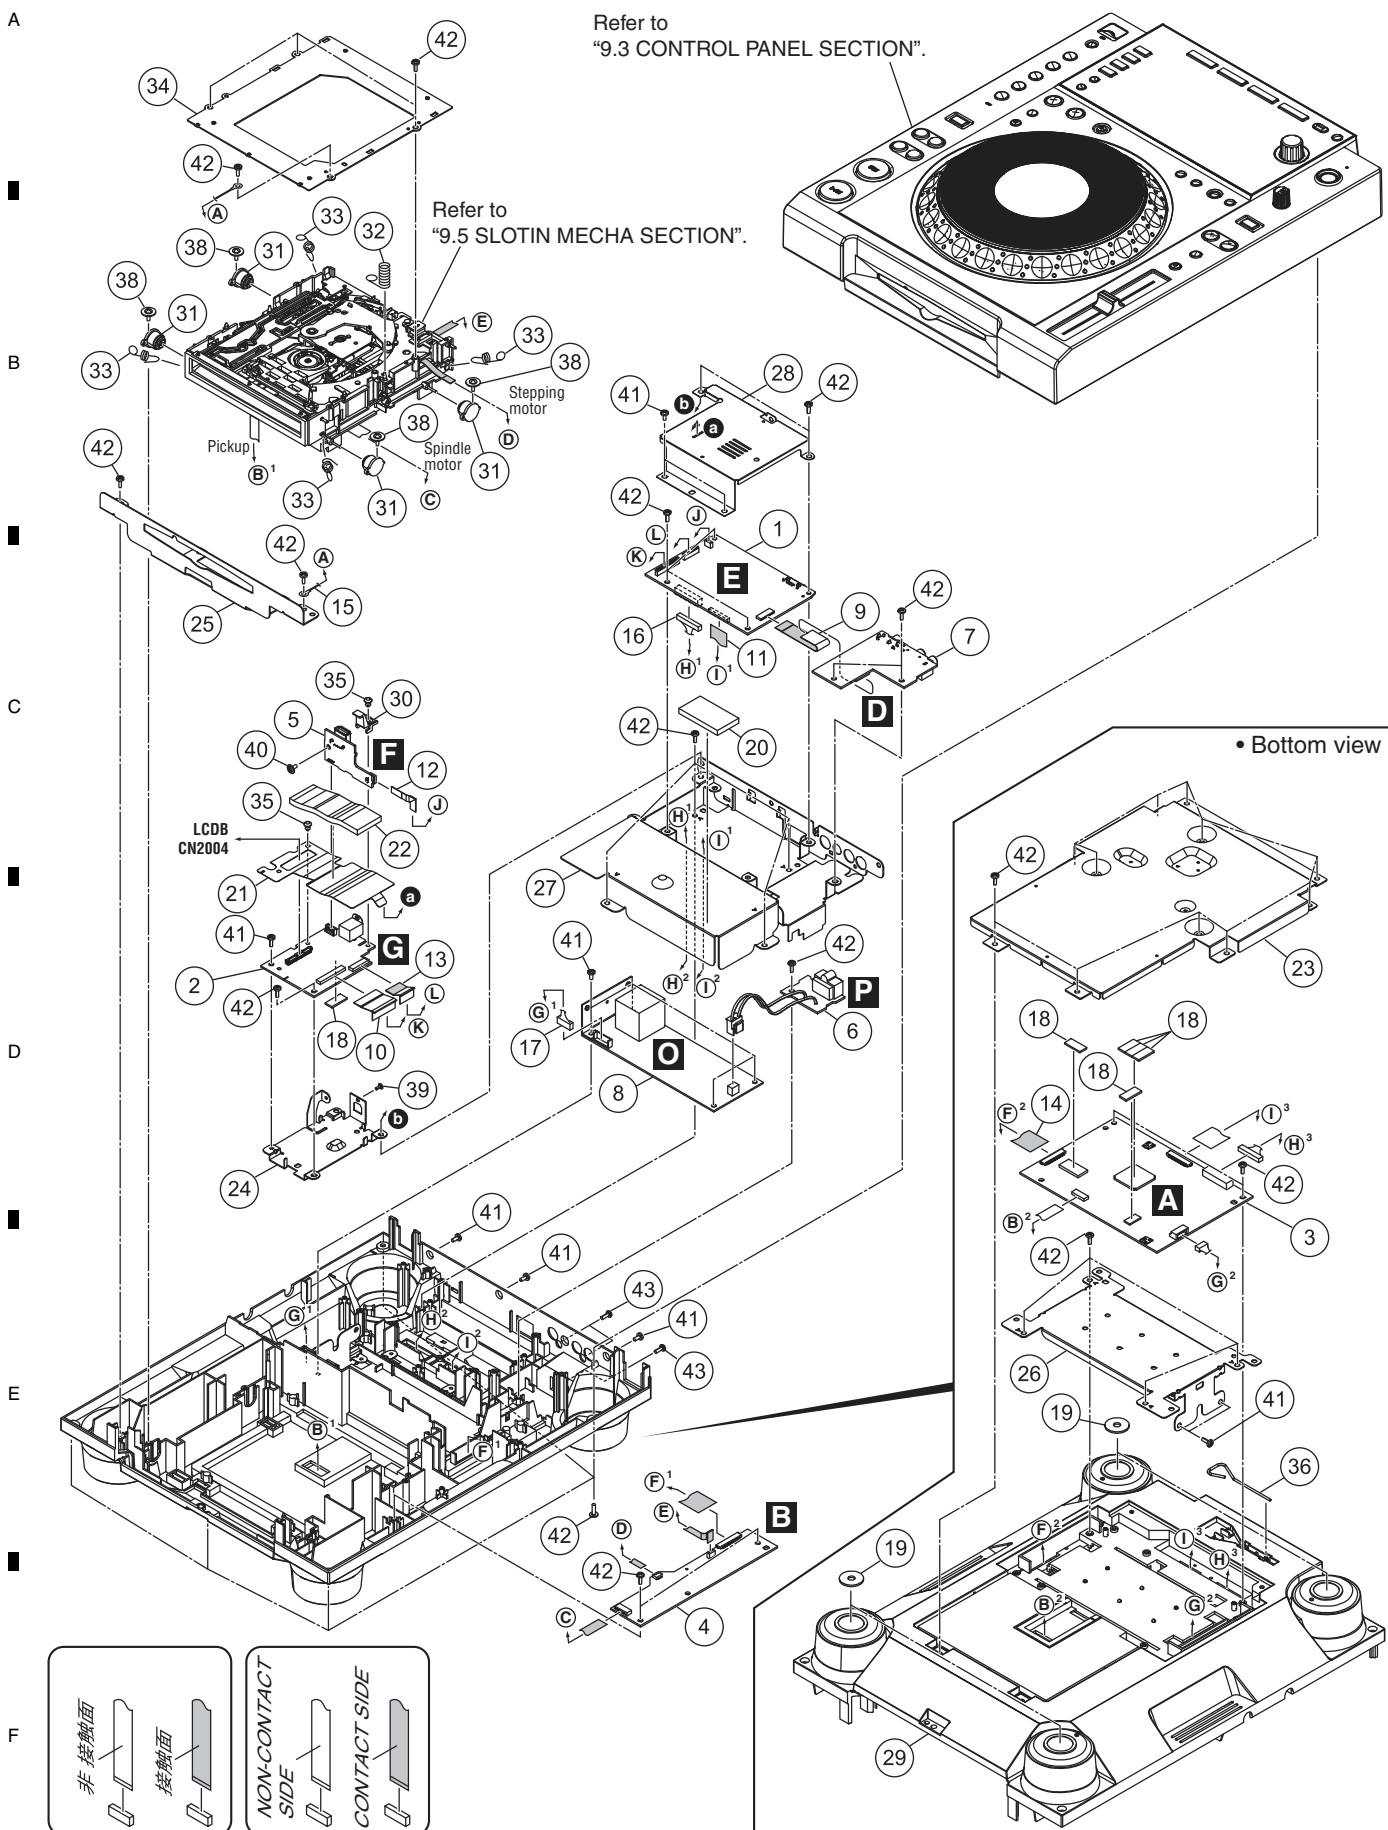

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 MAIN Assy	DWX3500	
	2 DDCB Assy	DWX3517	A
	3 SRVB Assy	DWX3519	
	4 JINT Assy	DWX3520	
	5 USBB Assy	DWX3518	
	6 ACIN Assy	DWX3529	■
	7 JACB Assy	DWX3532	
⚠	8 POWER SUPPLY Assy	DWR1463	
	9 13P FFC	DDD1484	
	10 FFC/50P	DDD1644	
	11 FFC/40P	DDD1646	B
	12 FFC/5P	DDD1648	
	13 FFC/15P	DDD1649	
	14 FFC/21P	DDD1655	
	15 Cord With Plug	DE007VE0	■
	16 Crimp Connector/12P	DKP3946	
	17 Crimp Connector/6P	DKP3947	
	18 Silicon Rubber D5 L	DEB1456	
	19 Cushion	DEC3177	
	20 Cushion/FFC	DEC3430	C
	21 Sheet/FFC	DEC3510	
	22 Cushion/FFC	DEC3531	
	23 Plate	DNH3118	
	24 Stay/USB	DNH3119	
	25 Plate/FR	DNH3120	■
	26 Stay/PSA	DNH3121	
	27 Stay/PCB	DNH3122	
	28 Shield Case/MIN	DNH3124	
⚠	29 Chassis	DNK6263	D
	30 Holder/PCB	DNK6284	
	31 Damper	CNV7618	
	32 Earth Spring	DBH1398	
	33 Float Spring (G5)	DBH1494	■
	34 Mecha Plate	DNH2642	
	35 Rivet	RBM-003	
	36 Disc Force Eject Pin	DEX1023	
	37 ●●●●●		
	38 DM Screw (FTC)	DBA1260	E
	39 Screw (M3*5)	DBA1340	
	40 Screw	ABZ30P060FTC	
	41 Screw	BBZ30P060FTB	
	42 Screw	BPZ30P080FNI	■
	43 Screw	PPZ30P080FTB	

9.3 CONTROL PANEL SECTION

A

• Bottom view





B

C

D

E

F

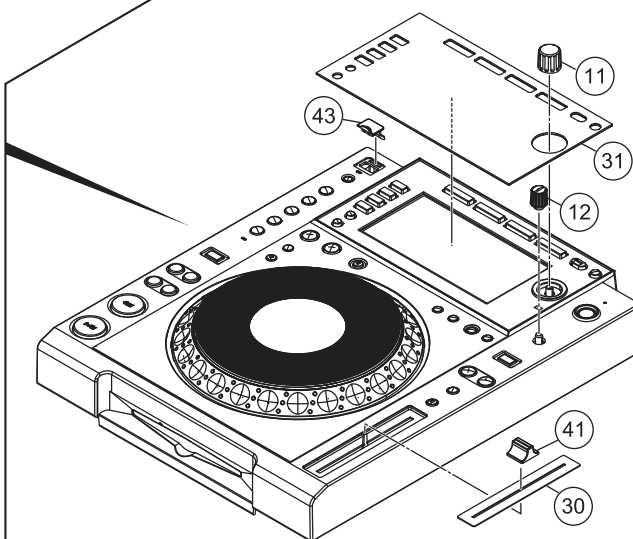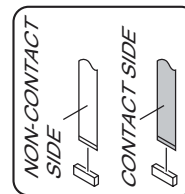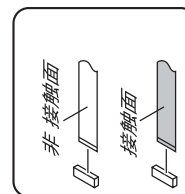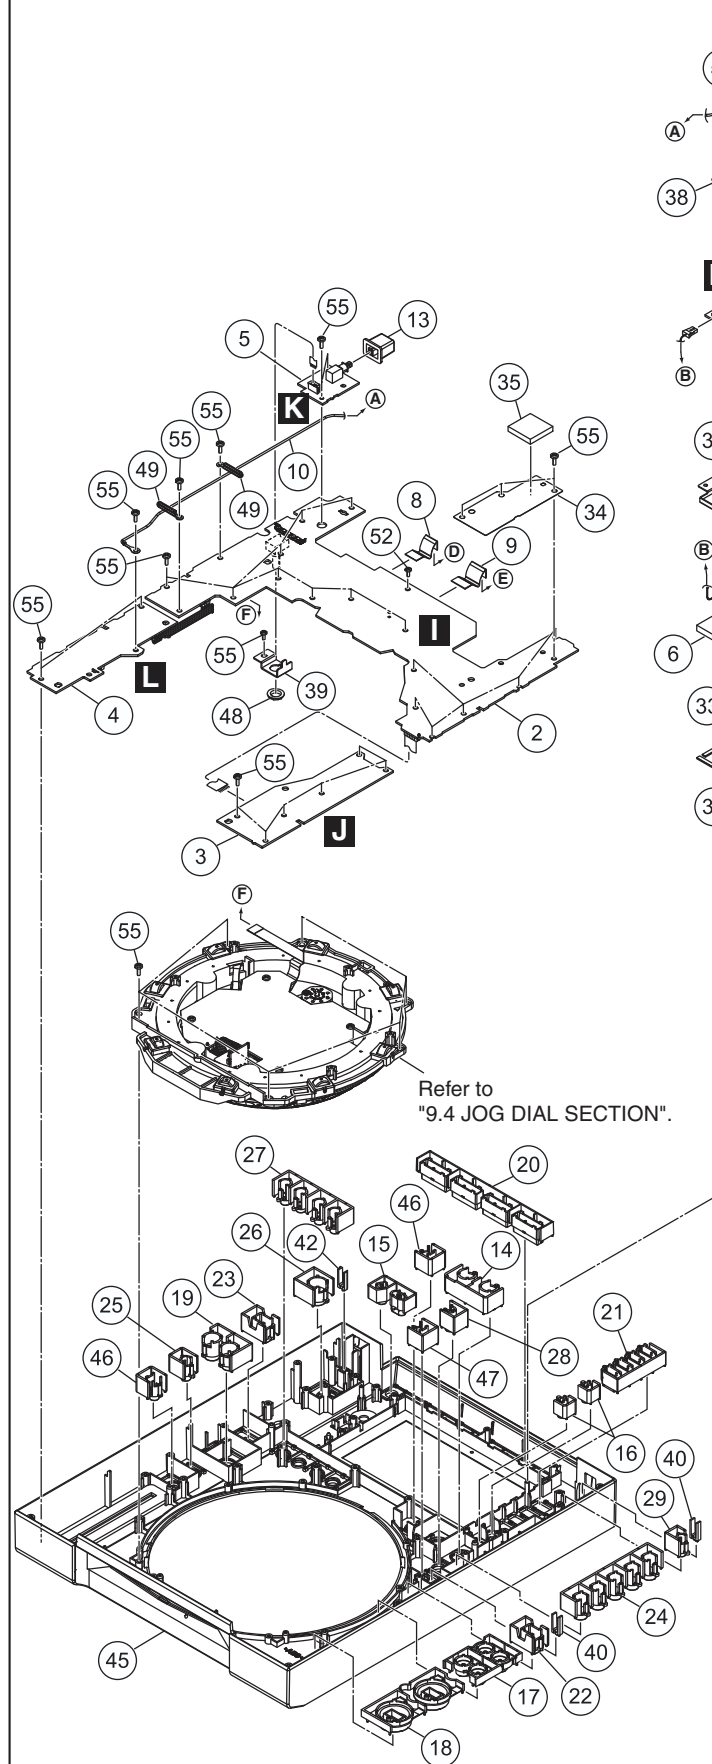

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	LCDB Assy	DWX3516	46	Button Assy/RLP	DXB2142	
2	PNLB Assy	DWX3522	47	Button Assy/SLP	DXB2143	A
3	KSWB Assy	DWX3523	48	Flange Nut M9	DBN1008	
4	SLDB Assy	DWX3526	49	Cord Clamper	RNH-184	
5	PSWB Assy	DWX3527	50	•••••		
6	TFT LCD	CWX4352	51	•••••		
7	FFC/50P	DDD1645	52	Screw	ABZ30P060FTC	
8	FFC/12P	DDD1650	53	Screw	BBZ26P060FTB	
9	FFC/15P	DDD1651	54	Screw	BPZ26P080FTC	
10	Earth Lead Wire	DDX1286	55	Screw	BPZ30P080FNI	
11	Dial Knob	DAA1259	56	Screw	BSZ30P060FTC	B
12	Knob	DAA1303				
13	Power Knob	DAC2306				
14	Button (LOOP)	DAC2470				
15	Button (MENU)	DAC2480				
16	Button (TIME)	DAC2483				
17	Set Button (SEARCH)	DAC2495				
18	Play Knob	DAC2596				
19	Button/BSY	DAC2934				
20	Button/MOD	DAC2936				C
21	Button/DEV	DAC2937				
22	Button/REV	DAC2938				
23	Button/VNL	DAC2939				
24	Button/BD	DAC2940				
25	Button/TMP	DAC2942				
26	Button/EJT	DAC2943				
27	Button/CAL	DAC2945				
28	Button/4BL	DAC2946				
29	Button/USB	DAC2947				D
30	Slide Sheet 1C	DAH2404				
31	Panel/DIS	DAH2978				
32	Packing/FR	DEC3493				
33	Packing/LR	DEC3494				
34	Cover/PNL	DEC3509				
35	Cushion/PNL	DEC3535				
36	Cushion/LCD	DEC3538				
37	Stay/LCD	DND1277				
38	Bracket/LCD	DND1278				E
39	Stay/VR	DNF1928				
40	Device Lens	DNK5318				
41	Knob/SLD	DNK5981				
42	Lens/EUP	DNK6040				
43	Cover/USB	DNK6041				
44	Cover/R	DNK6264				
⚠ 45	Control Panel	DNK6266				F

1 2 3 4

9.4 JOG DIAL SECTION

A


B

C

D

E

F

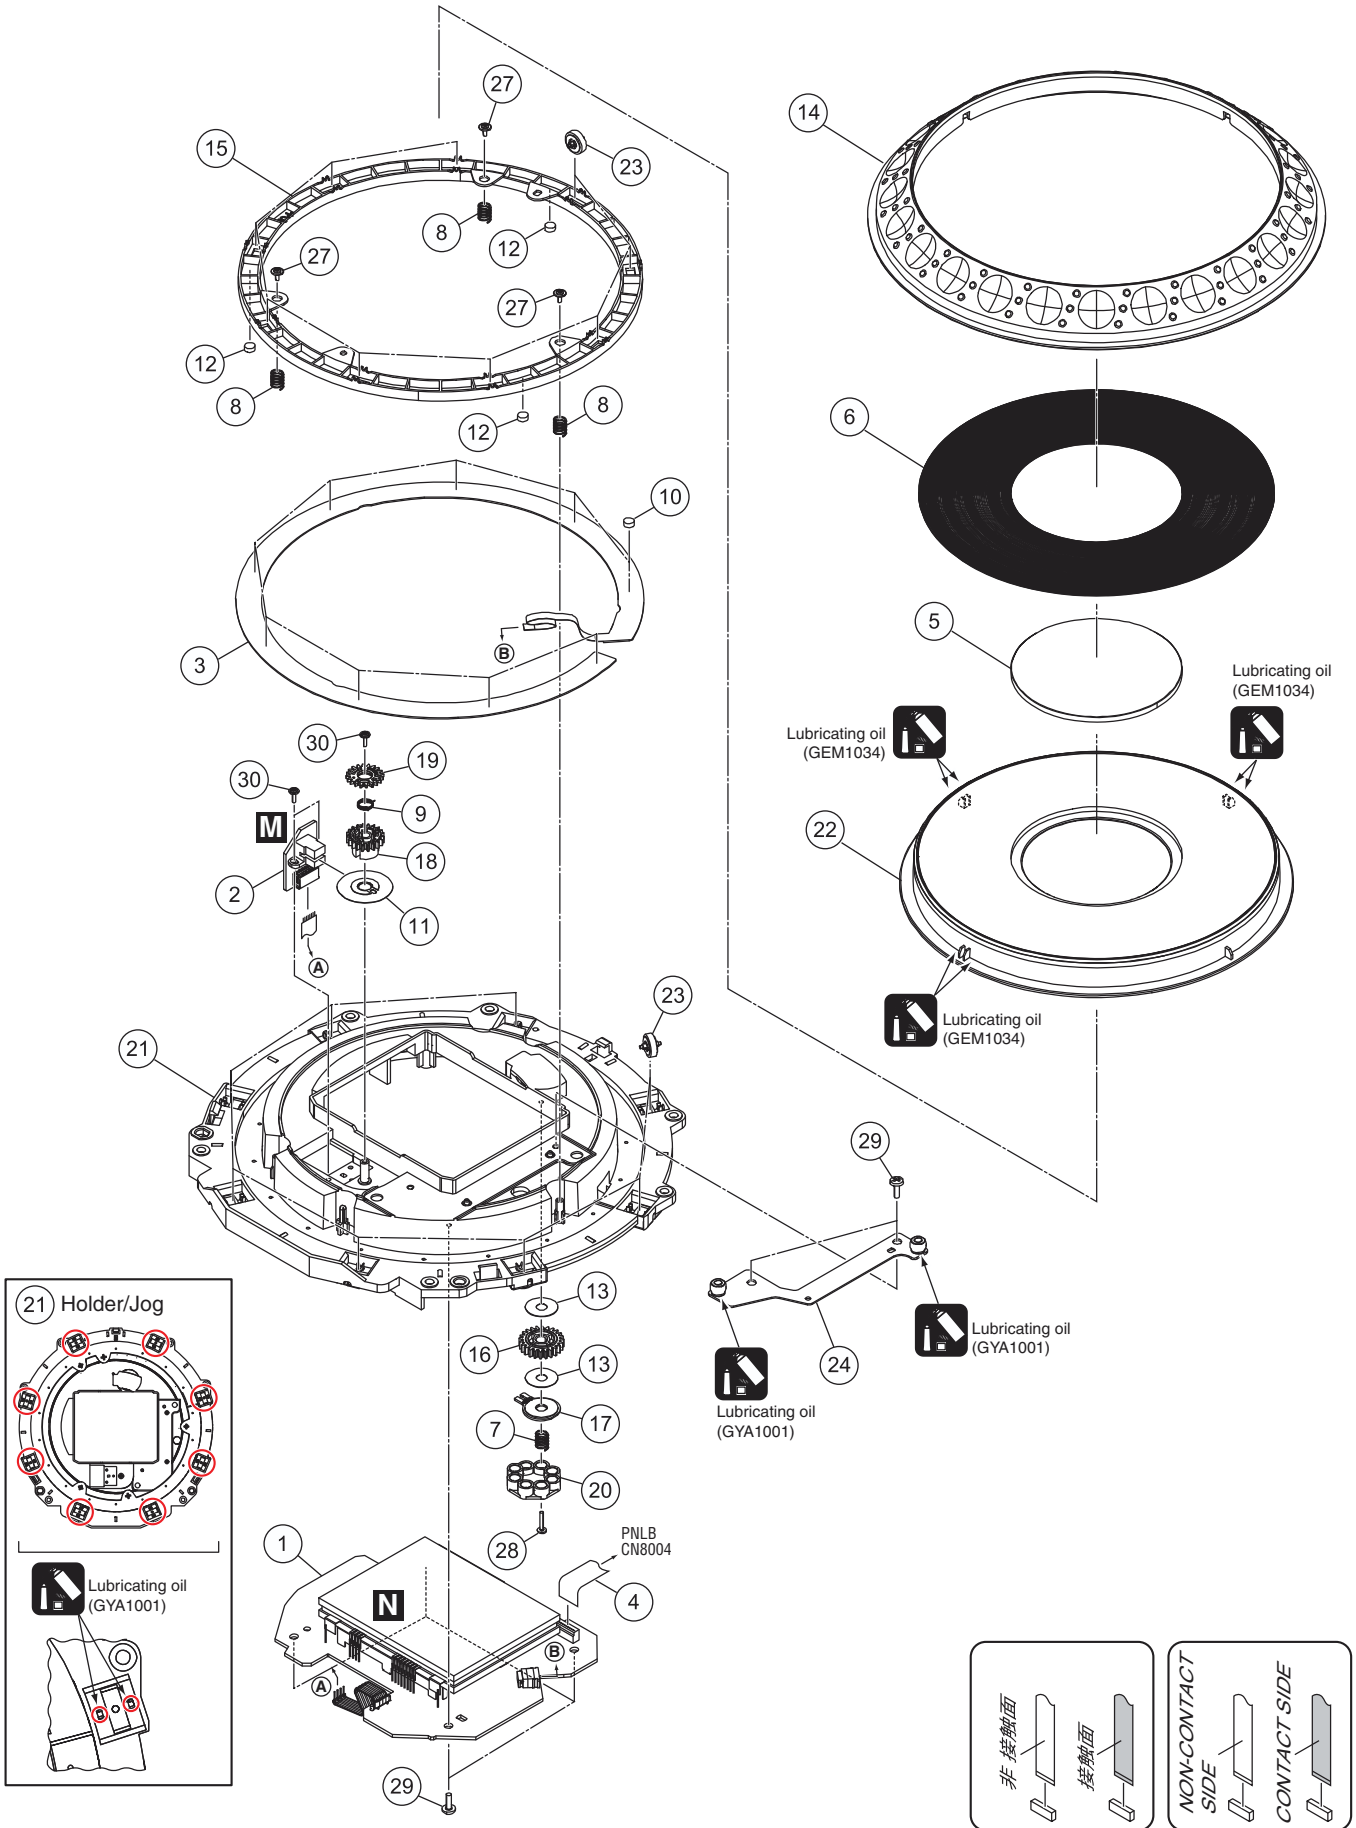

JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JFLB Assy	DWX3530	
2	JOGB Assy	DWX3531	A
3	Sheet SW	DSX1078	
4	FFC/10P	DDD1652	
5	Jog Panel	DAH2609	
6	Jog Plate	DAH2839	
7	Load Spring	DBH1680	
8	SW Spring	DBH1681	
9	Encoder Spring	DBH1710	
10	SW Cushion HH48/2	DEC2538	
11	Encorder Plate	DEC2889	B
12	Ring Cushion L24/2.0	DEC2958	
13	Washer	DEC3137	
14	Jog B	DNK4068	
15	SW Ring	DNK5233	
16	Load Gear	DNK5236	
17	Smoother	DNK5237	
18	Gear A	DNK5241	
19	Gear B	DNK5242	
20	Adjust Plate	DNK5300	C
21	Holder/JOG	DNK6265	
22	Jog Dial A	DNK5357	
23	Roller Assy/A	DXB2118	
24	Stay Assy/JOG	DXB2133	
25			
26			
27	Screw (FE)	DBA1265	
28	Screw	BPZ20P100FTC	
29	Screw	BPZ30P080FNI	D
30	Screw	IPZ20P060FTC	

9.5 SLOT IN MECHA SECTION

A


B

C

D

E

F

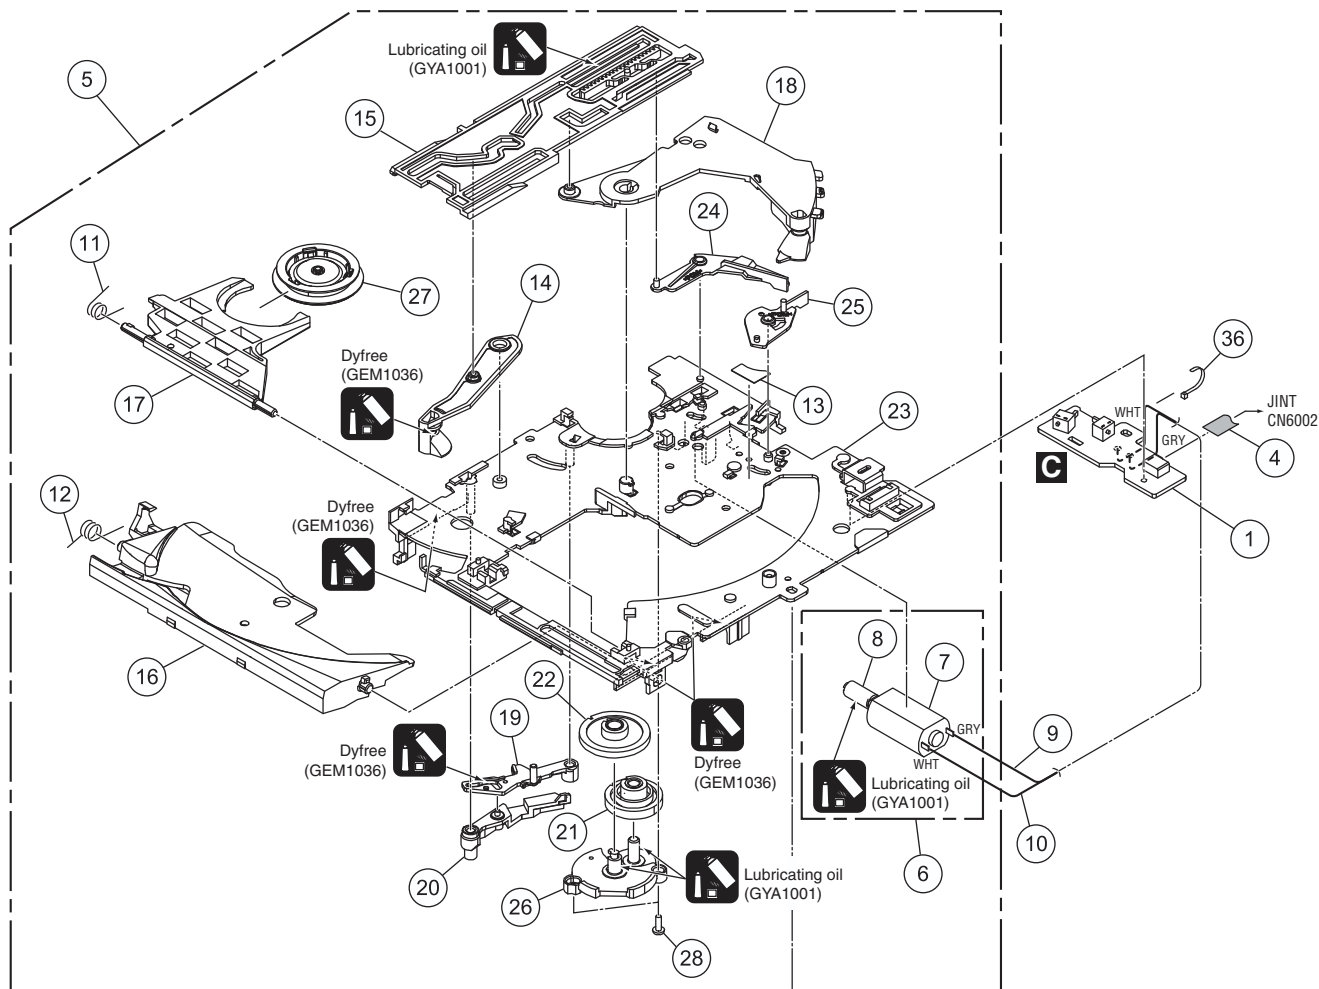


Cleaning liquid (GEM1004)
Cleaning paper (GED-008)

Note:

The TM Assy-S (VTM091) is supplied only in assembly form, not as a single parts.

注意:

TM Assy-S (VTM091) は Assy 品でのみ供給されます。個々の部品では供給しません。

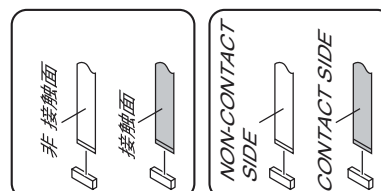

SLOT IN MECHA SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 SLMB Assy	DWX3528	
	2 TM Assy-S (VTM-091)	DXX2616	A
	3 FFC/24P	DDD1654	
	4 FFC/5P	DDD1653	
NSP	5 SLOTIN MECHA Assy	DXA2206	
	6 DC Motor Assy-S	DXX2615	
NSP	7 DC Motor	DXM1384	
NSP	8 Worm Gear	DNK3910	
	9 Lead Wire	ZWNN1007G28-8-06A	
	10 Lead Wire	ZWNN1007G28-9-06A	
	11 Clamp Spring	DBH1374	B
	12 Guide Spring	DBH1375	
	13 SW Lever Spacer SV	DEC2831	
	14 Loading Lever	DNK3406	
	15 Main Cam	DNK3407	
	16 Disc Guide	DNK3478	
	17 Clamp Arm	DNK3576	
	18 Eject Lever	DNK3684	
	19 Lever AP	DNK3835	
	20 Lever BP	DNK3836	C
	21 Loading Gear	DNK3911	
	22 Drive Gear	DNK3912	
	23 Loading Base SV	DNK4369	
	24 SW Lever SV1	DNK4370	
	25 SW Lever SV2	DNK4371	
	26 Gear Holder SV	DNK4372	
	27 Clamper Assy-S	DXX2661	
	28 Screw	BPZ20P060FTC	
	29 Spacer POR (T3)	DEB1566	D
	30 Vessel Cushion A	DEC2852	
	31 Vessel Cushion B	DEC2853	
	32 Vessel Cushion C	DEC2854	
	33 Front Sheet	DED1132	
	34 Float Base 05 Assy	DXB2068	
	35 Floating Rubber (SI)	VEB1351	
	36 Binder	ZCA-SKB90BK	E