

2.3 CONTROL PANEL SECTION

A


B

C

D

E


F

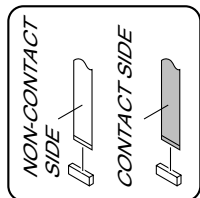

*1; Grease: GYA1001 (ZLB-PN397B)

*2; Lubricant Agent: (ZLB-HFD1600)

CDJ-1000MK3

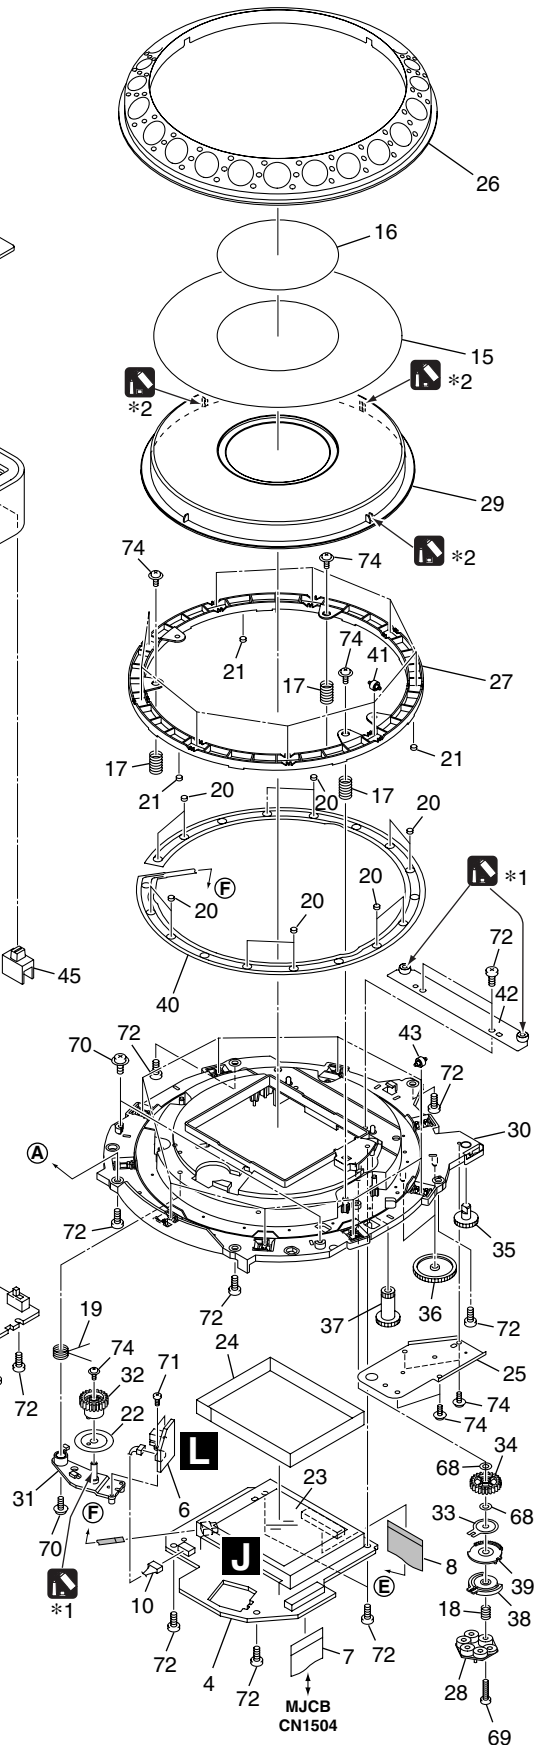

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	MFLB Assy	DWG1606	46	Set Knob (HS)	DAC1986	
2	SLDB Assy	DWS1367	47	Set Knob (MT)	DAC1987	A
3	RSWB Assy	DWS1368	48	Set Knob (TIME)	DAC1991	
4	JFLB Assy	DWG1602	49	Tempo Reset Knob	DAC1993	
5	KSWB Assy	DWS1365	50	Set Knob (MEMO)	DAC1994	
6	JOGB Assy	DWG1603	51	Set Knob (LOOP)	DAC1995	
7	22P Flexible Cable	DDD1302	52	Re-Loop Button	DAC2347	
8	25P Flexible Cable	DDD1303	53	Adjust Knob	DAC2350	
9	10P Flexible Cable	DDD1304	54	Eject Knob	DAC2365	
10	Connector Assy	PF04PP-B07	55	Mode Select Knob	DAC2366	
11	LED Guard	DEC2932	56	Set Knob (SC)	DAC2368	B
12	Protect Cushion	DEC2938	57	Slide Sheet 1C	DAH2404	
13	VR Stay	DNF1663	58	Display Panel	DAH2435	
14	Earth Plate P	DNH2714	59	Ring Lens	DNK3880	
15	JOG Plate	DAH2052	60	Tempo Lens	DNK3882	
16	JOG Panel	DAH2182	61	Card Lens	DNK3885	
17	SW Spring 25	DBH1514	62	Eject Guard	DNK3958	
18	Gear Spring 200	DBH1525	63	Control Panel	DNK4568	
19	Arm Spring	DBH1566	64	Slide Knob	DNK4656	
20	SW Cushion HH48/2	DEC2538	65	Mode Lens	DNK4701	
21	Ring Cushion L24/2.0	DEC2958	66	Set Knob (PLAY) Assy	DXB1909	C
22	Encoder Plate	DEC2889	67	•••••		
23	Protect Sheet	DEC2945	68	Washer	WA52D120D25	
24	FL Sheet	DEC2946	69	Screw	BPZ20P100FTC	
25	Gear Plate	DNH2713	70	Screw	IPZ30P100FTC	
26	JOG B	DNK4068	71	Screw	BPZ20P060FTC	
27	SW Ring	DNK4070	72	Screw	BPZ30P080FTB	
28	Adjust Plate	DNK4178	73	Flange Nut M9	DBN1008	
29	JOG A	DNK4556	74	Screw	DBA1265	
30	JOG Holder 1000	DNK4558				D
31	Gear Arm	DNK4559				
32	Gear	DNK4560				
33	Smoother	DNK4561				
34	Gear A	DNK4562				
35	Joint Gear 1	DNK4563				
36	Joint Gear 2	DNK4564				
37	Joint Gear 3	DNK4565				
38	Compressor Plate	DNK4566				E
39	Cam Plate	DNK4567				
40	Sheet SW	DSX1065				
41	Roller A Assy	DXB1825				
42	JOG Stay Assy	DXB1876				
43	Roller B Asssy	DXB1877				
44	Rotary Knob C	DAA1194				
45	Slide SW Knob	DAC1926				